












i GP037-0172,3

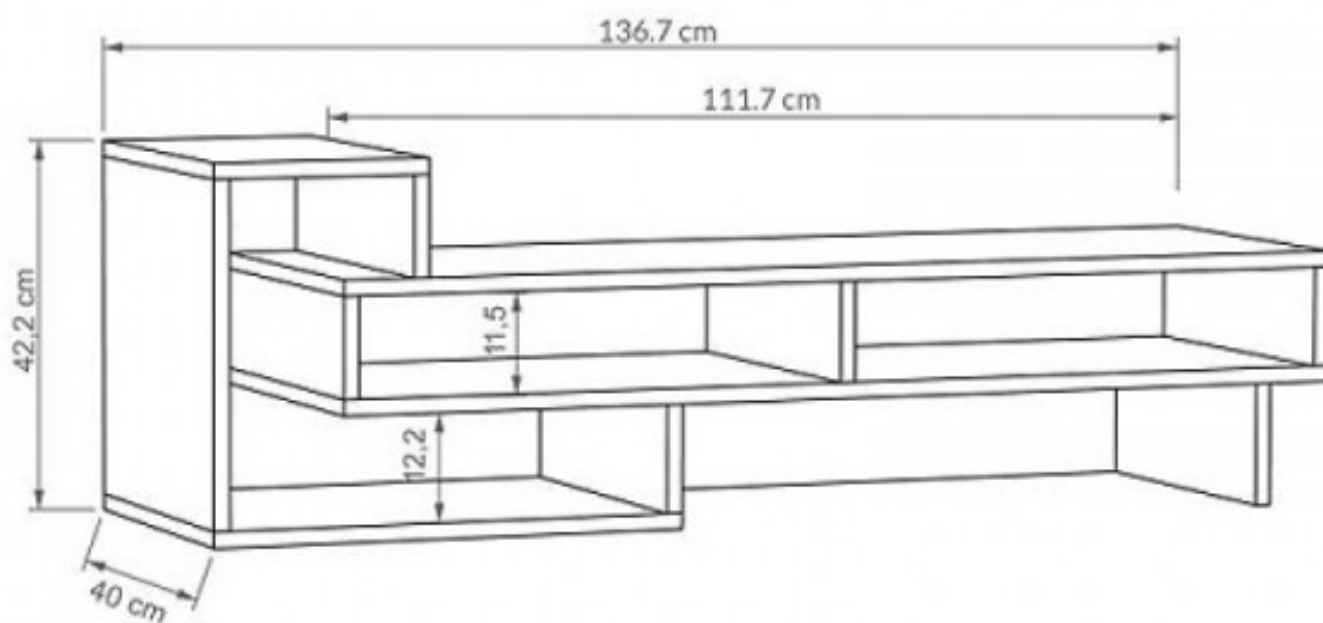


A04  Ø8 30x	A06  18mm 30x	A12  Allen 1x	A22  Minifix k18 30x	A23  Minifix M10 30x
PB01  Kece 6x				



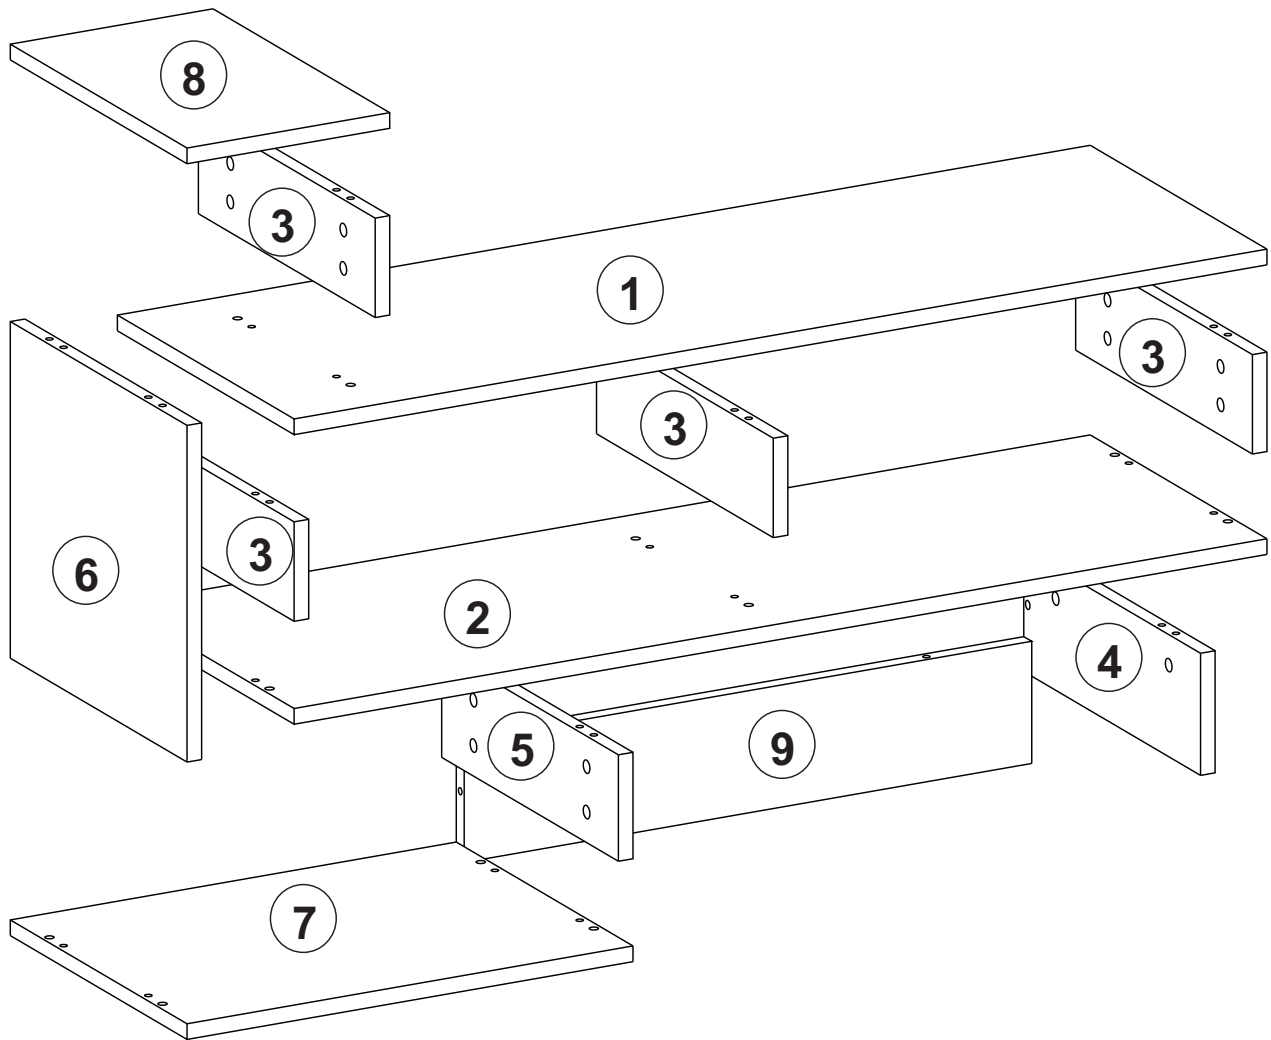
1. step

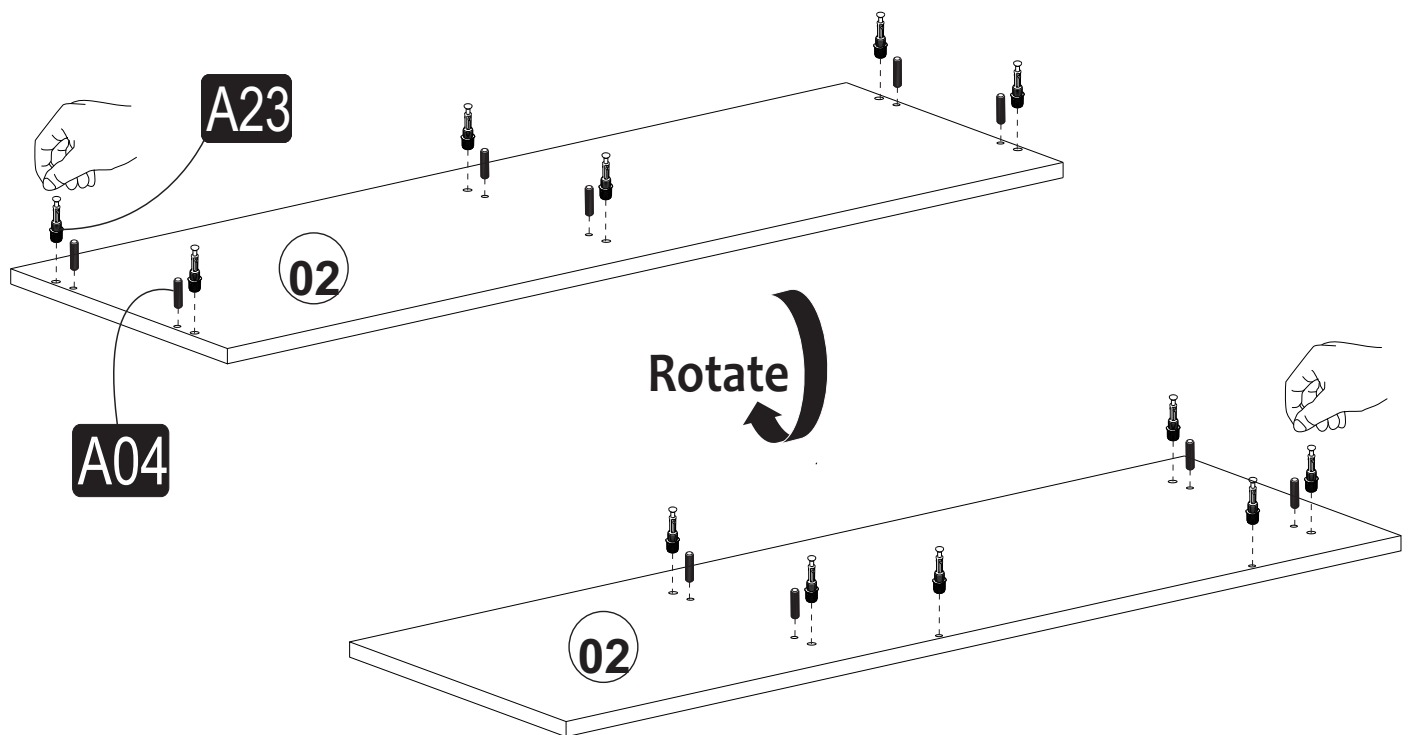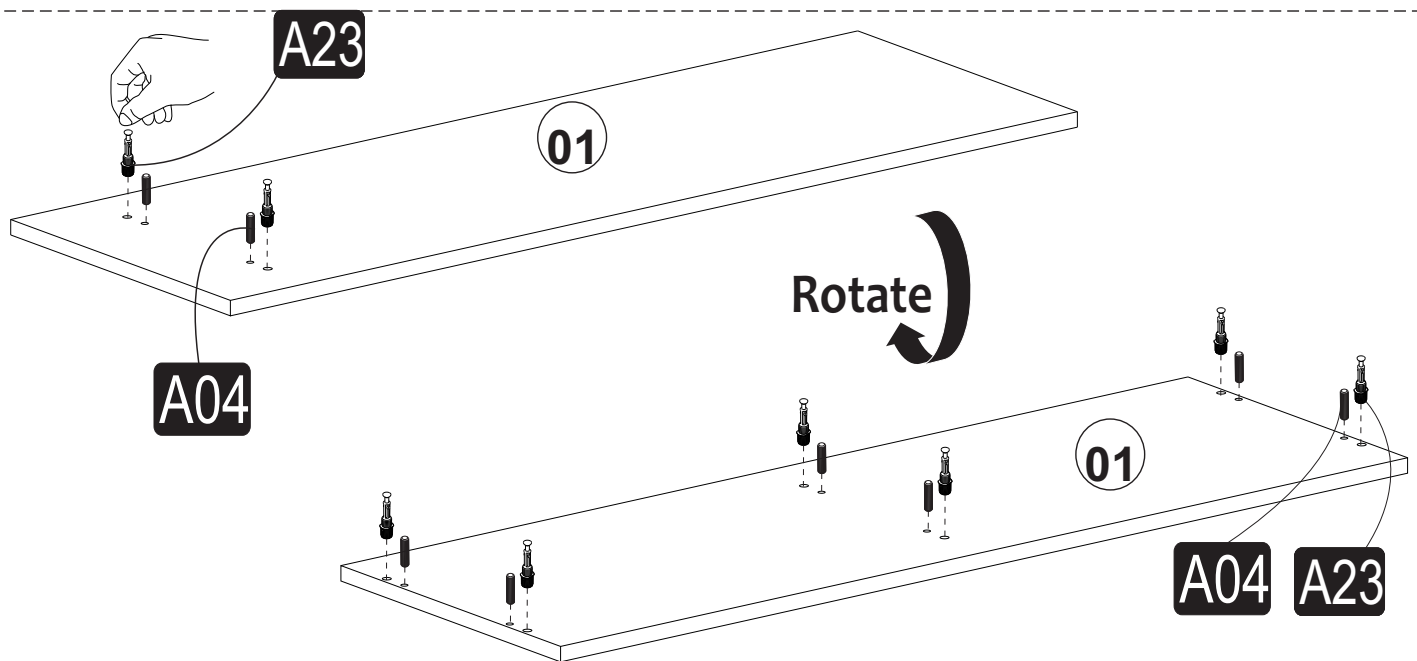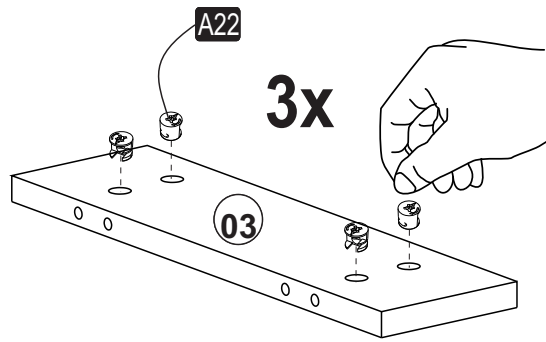




2^{step}

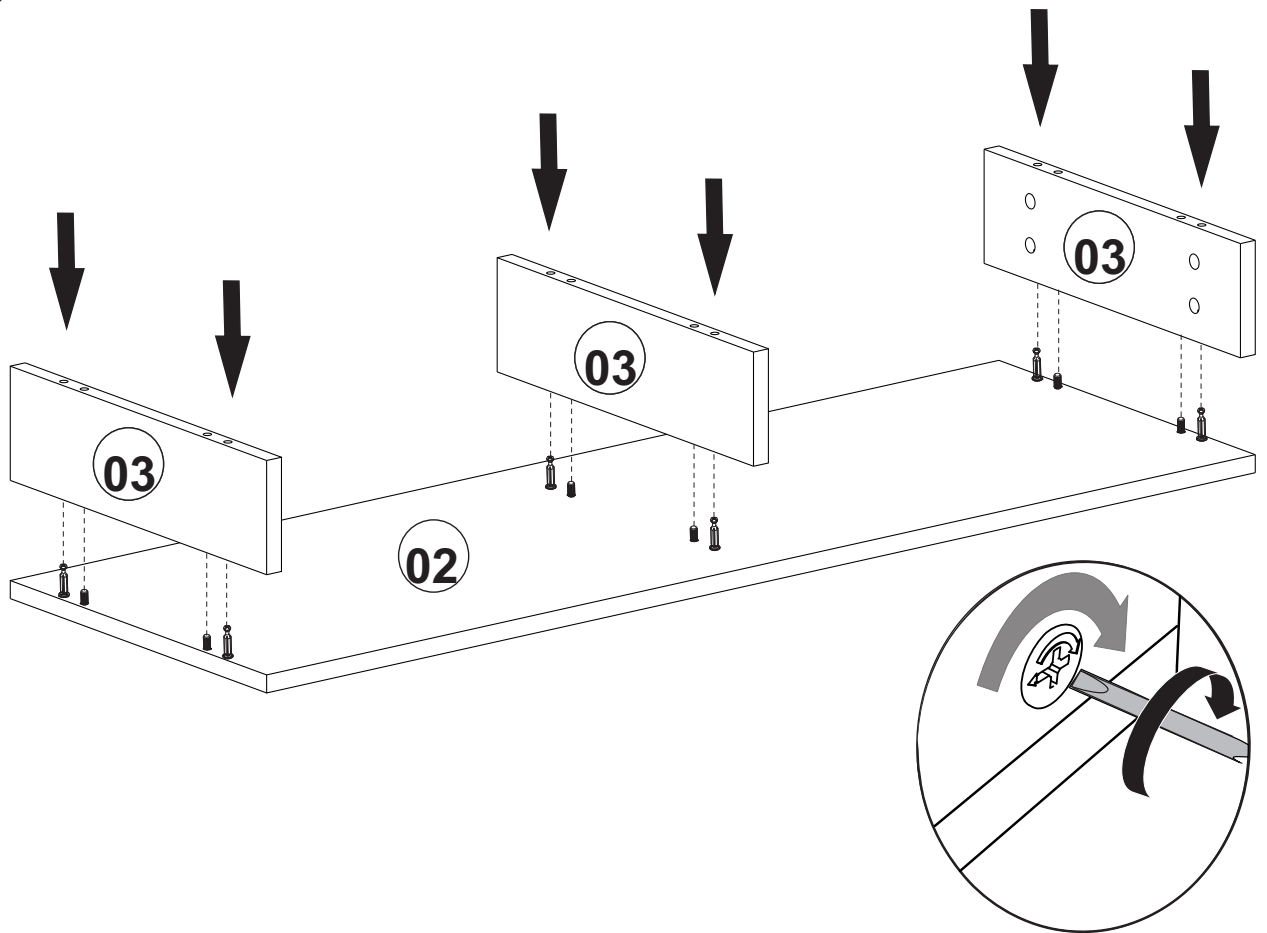


3^{step}

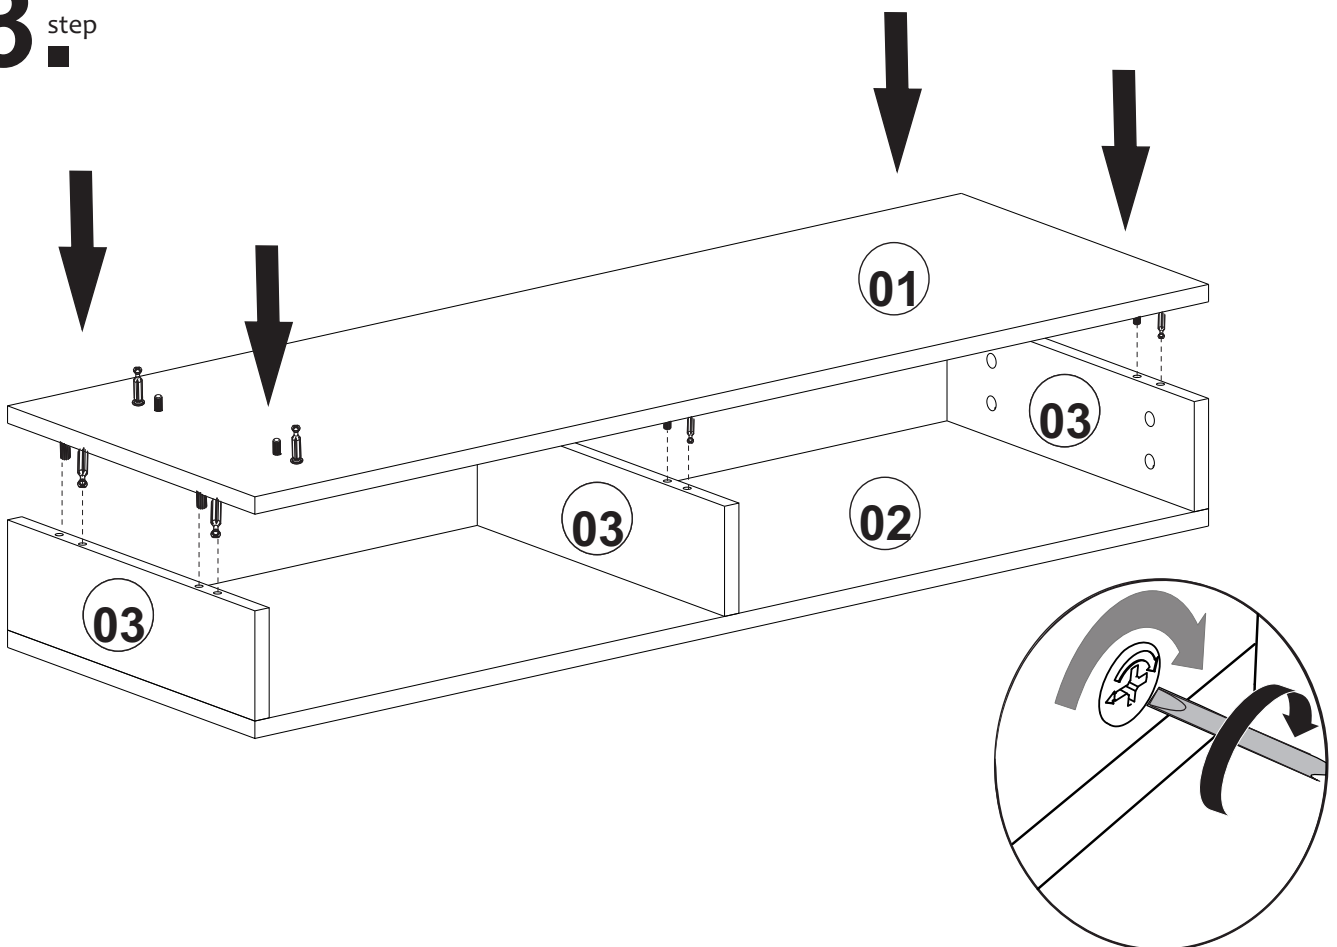


4. step

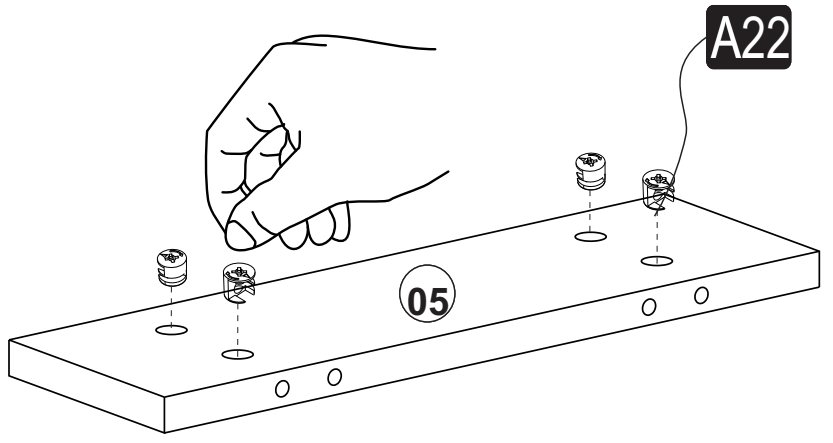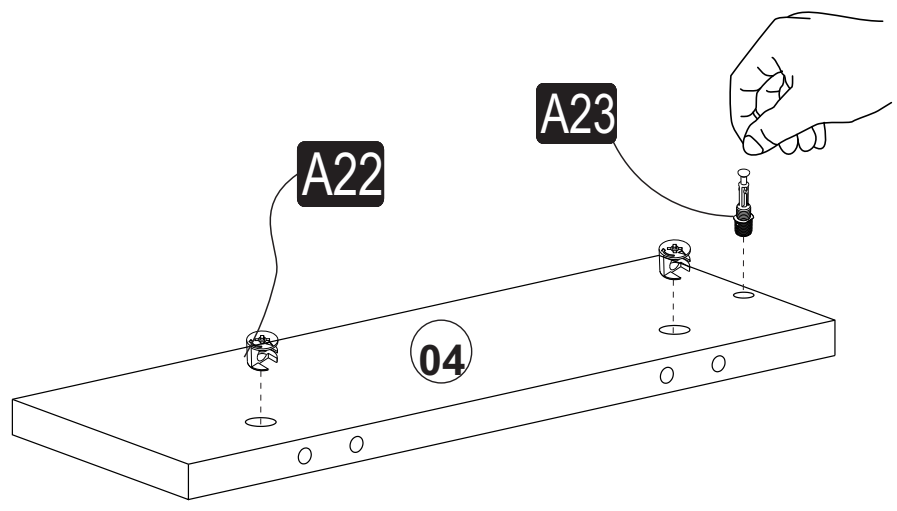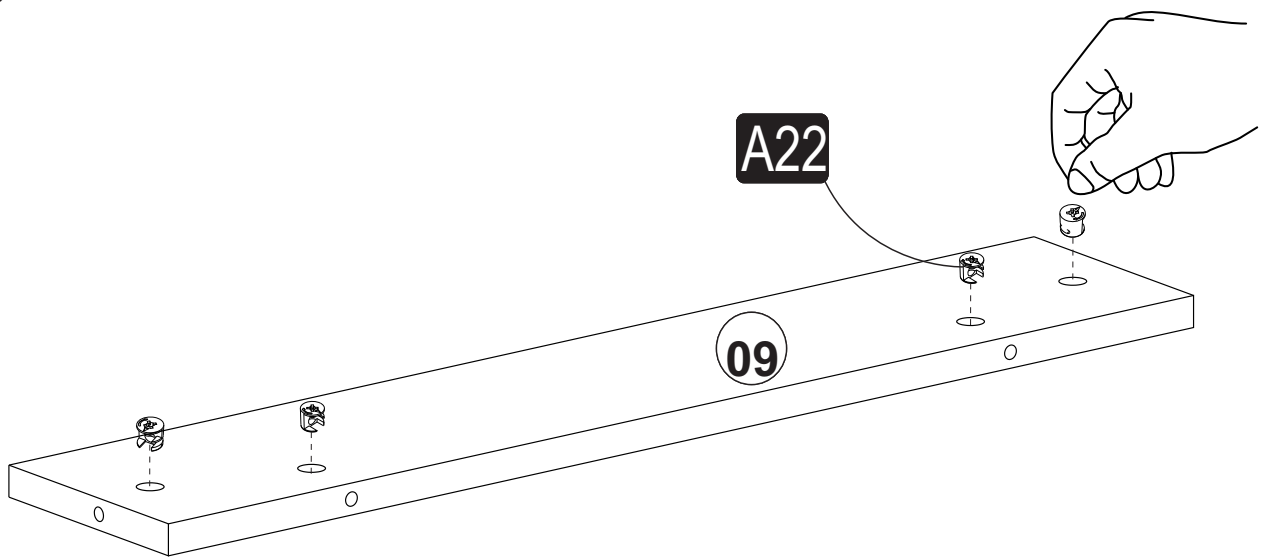


5^{step}

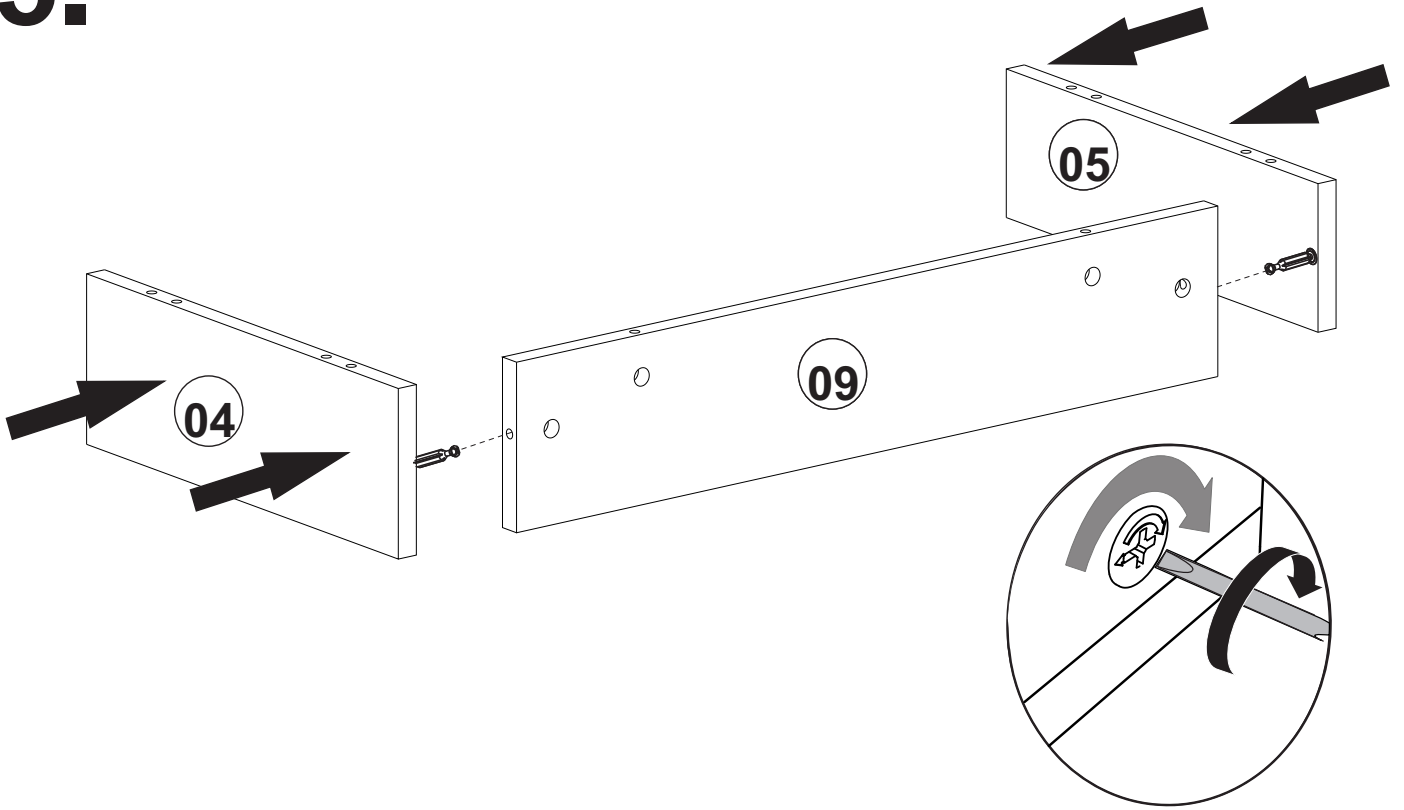


6^{step}

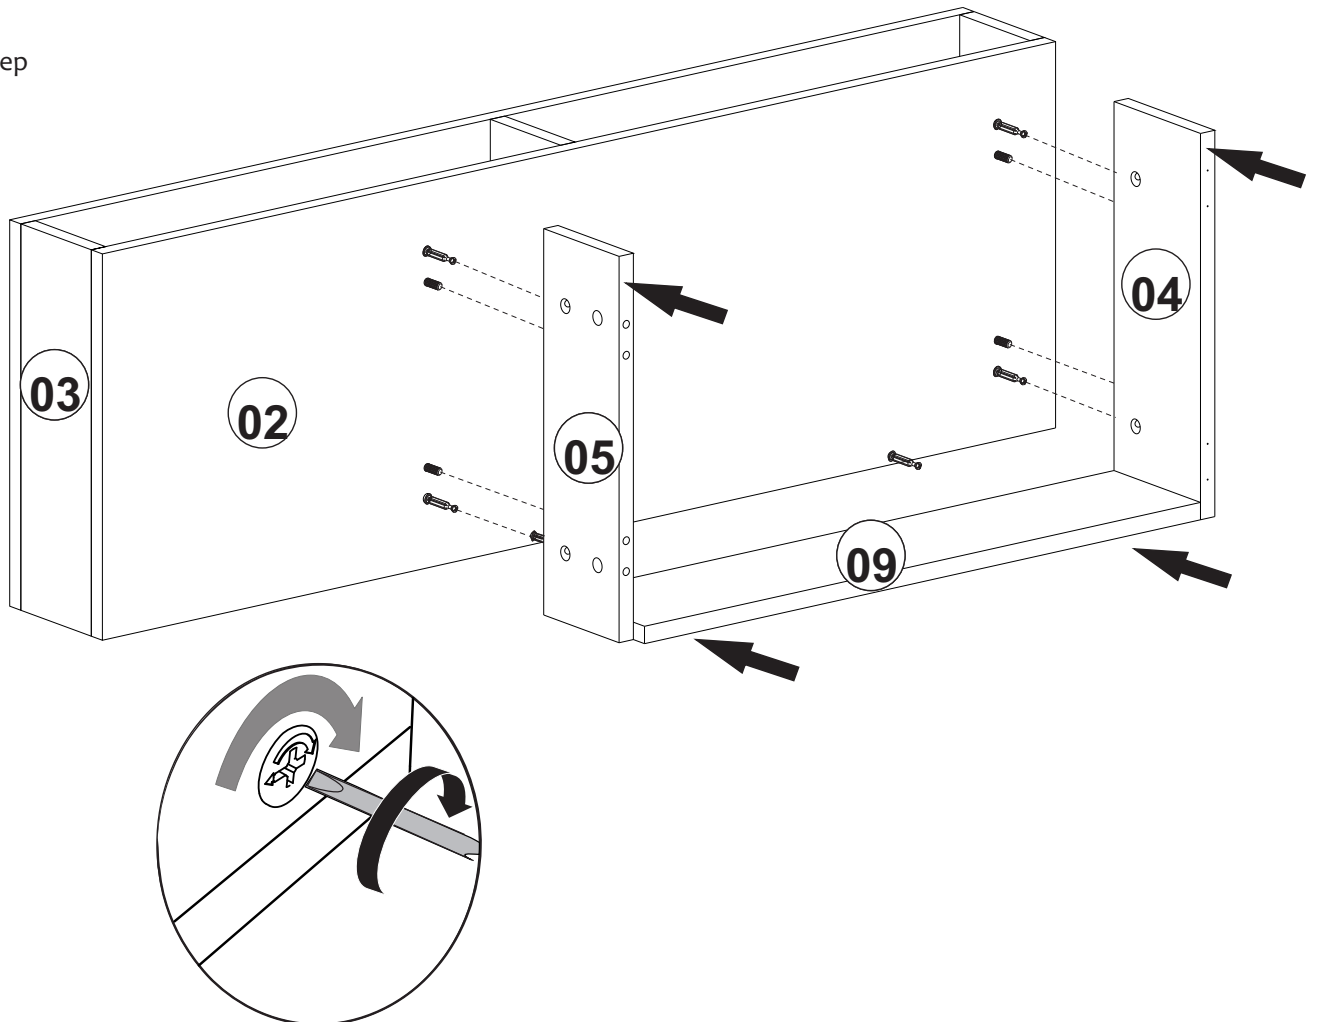


7^{step}

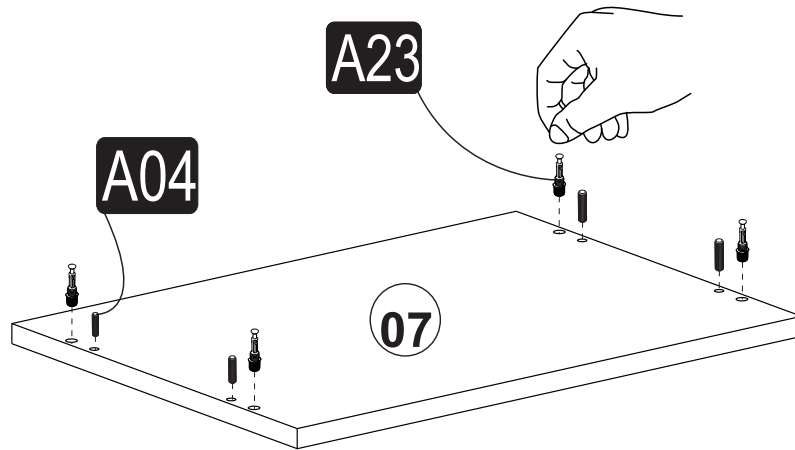


8^{step}

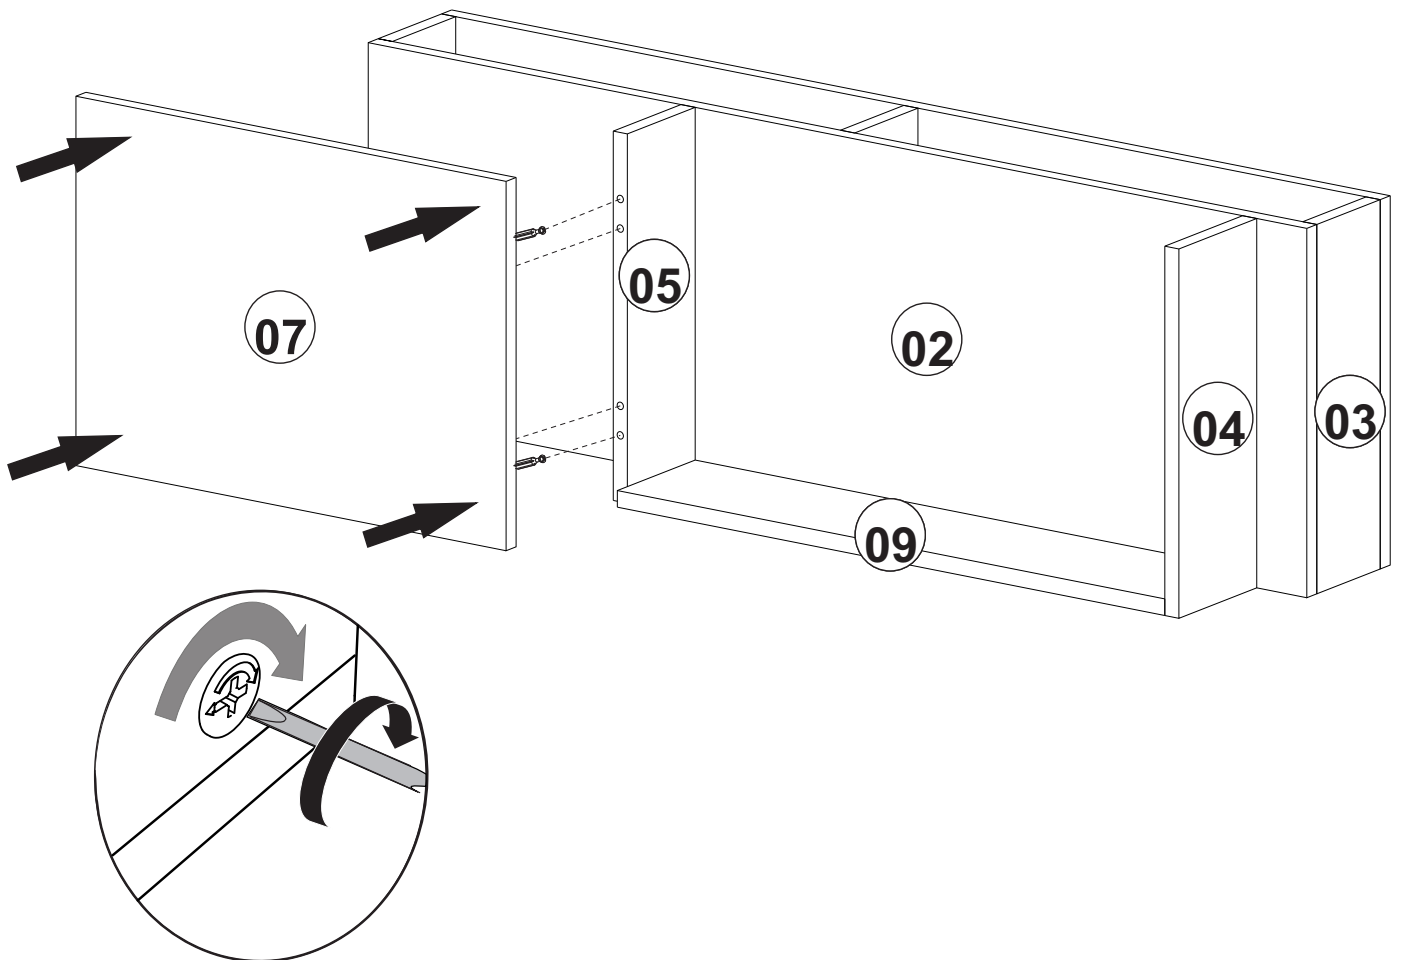


9.^{step}

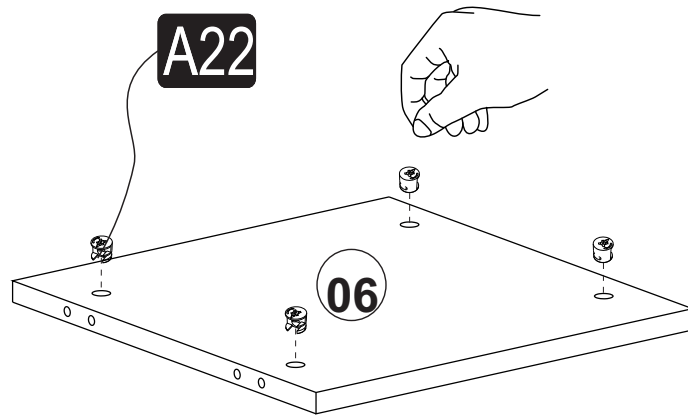


10.^{step}

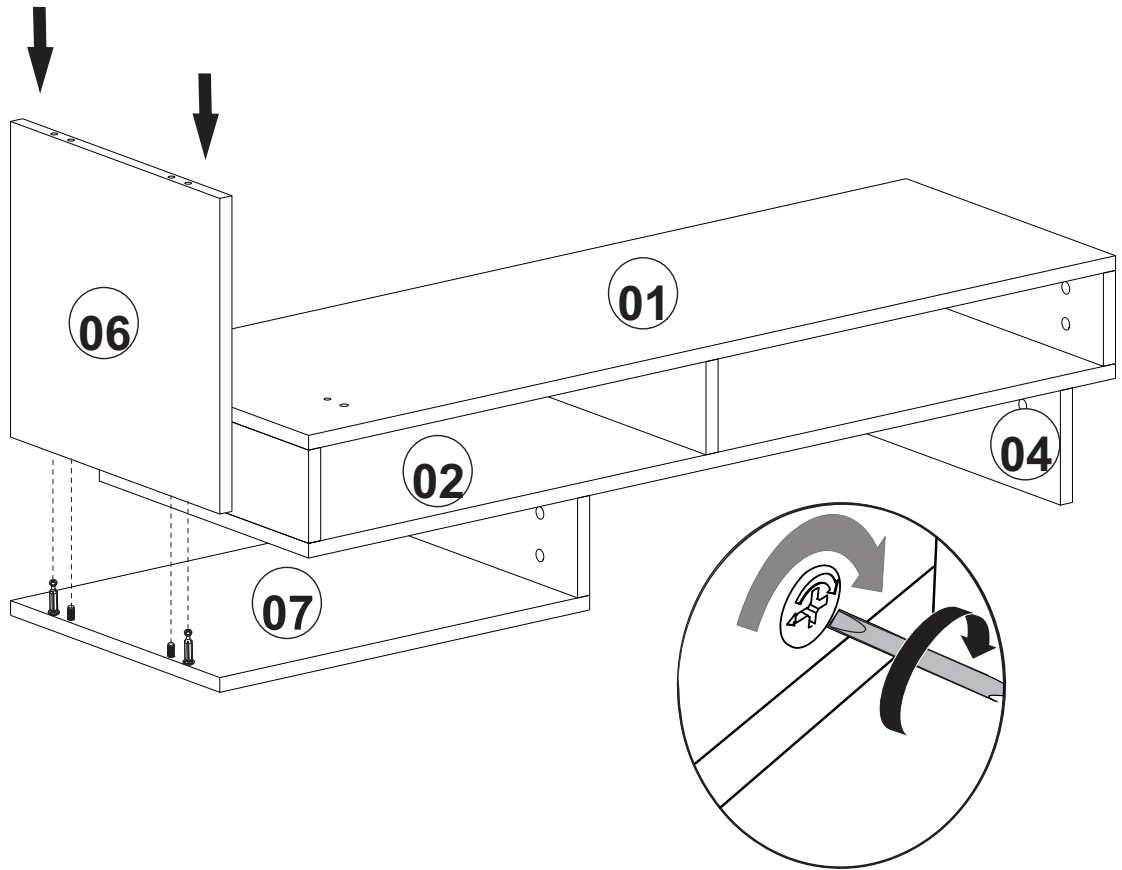


11.^{step}

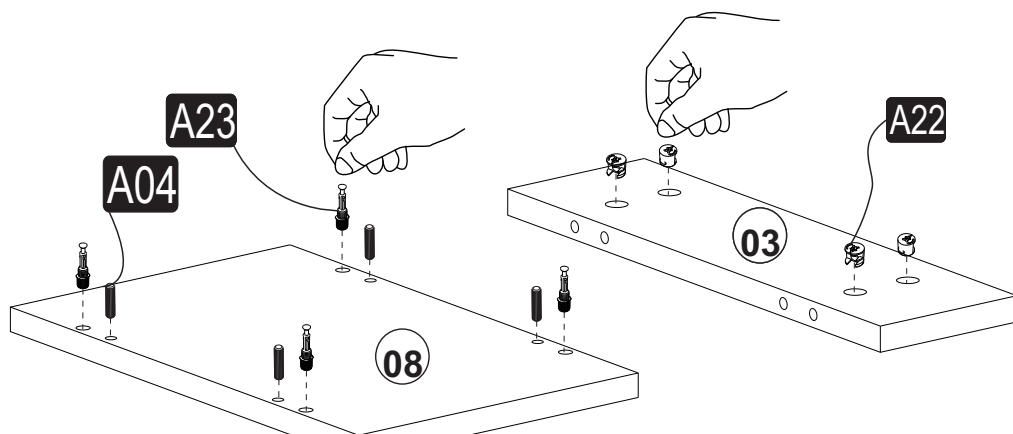


12.^{step}

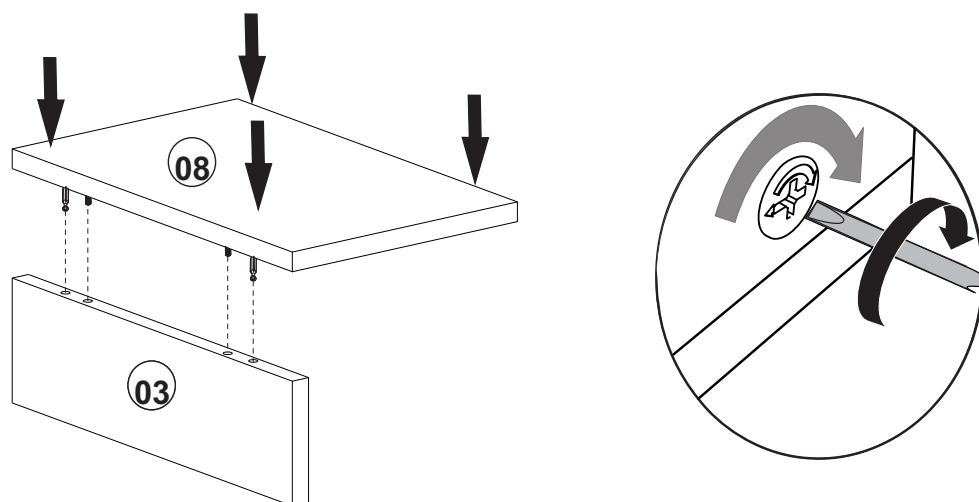

13.^{step}

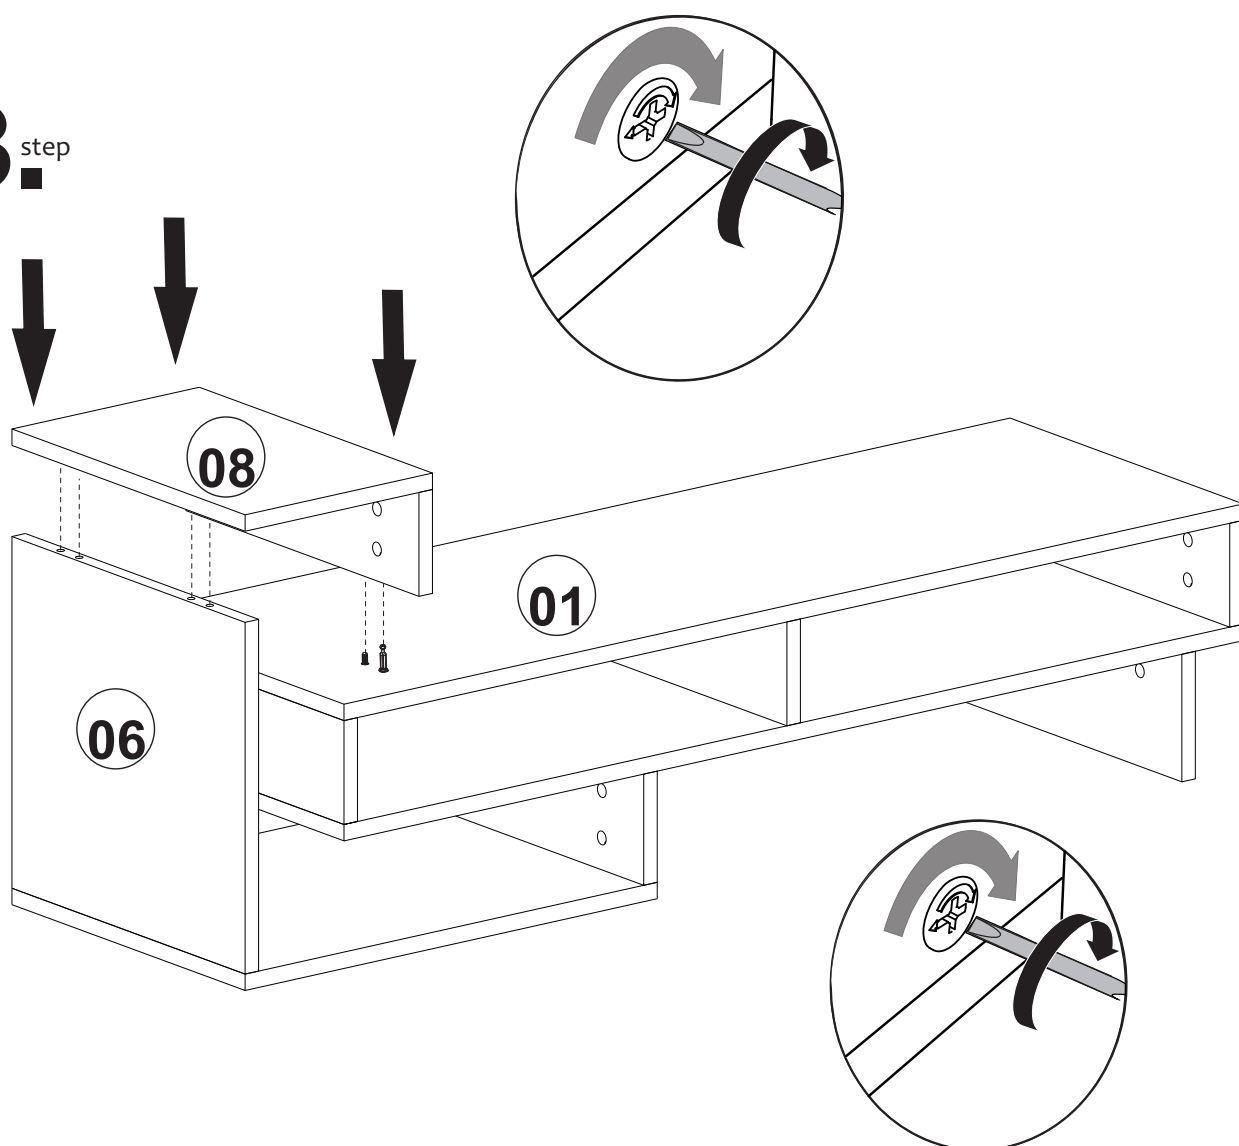

14.^{step}

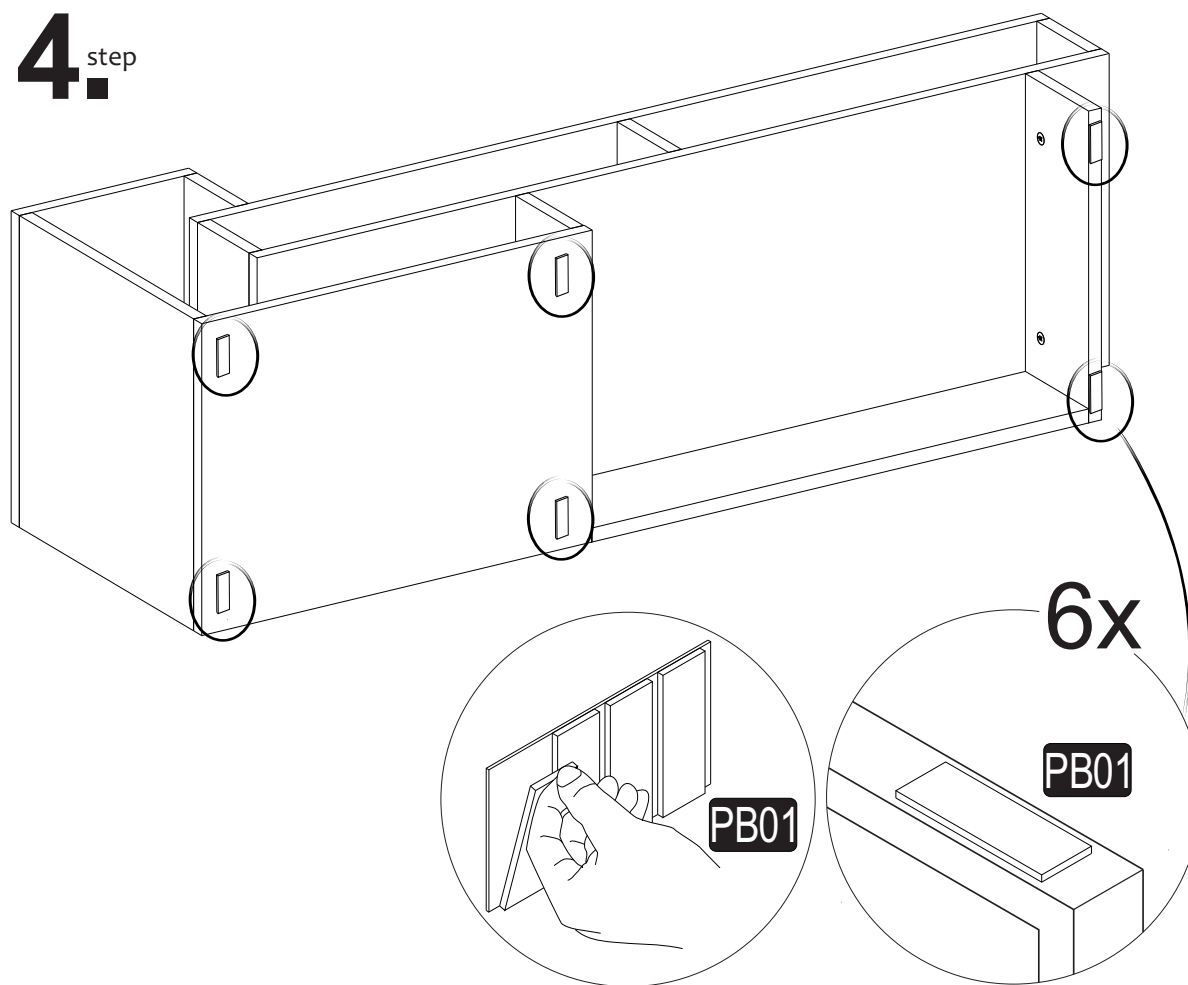

15.^{step}

