



GP037-0188,4

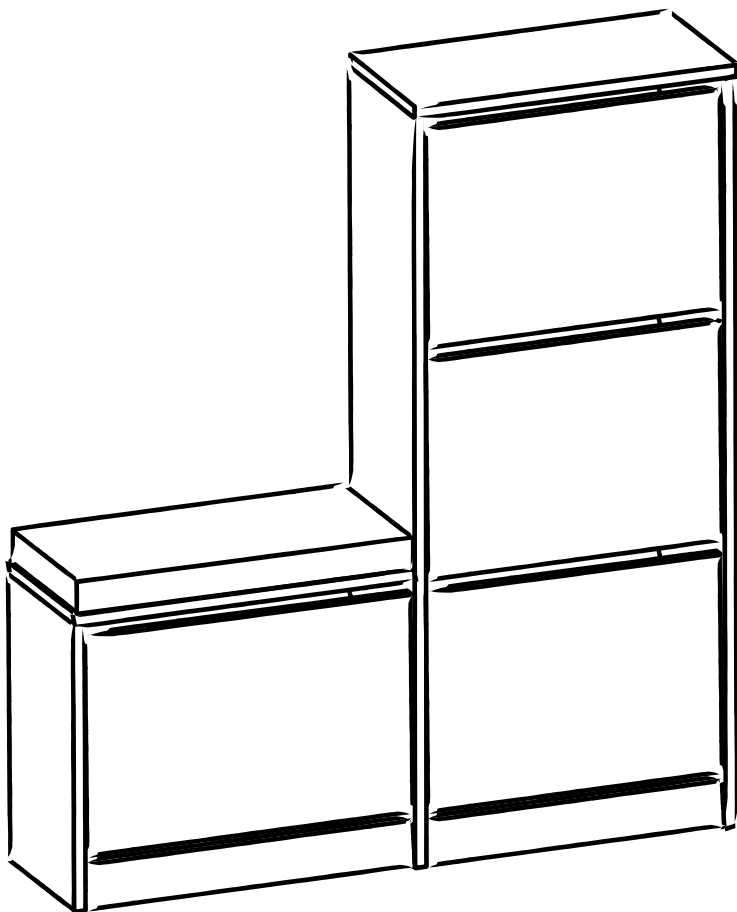


ATTENTION !!

Minifix is the main connection material used in our products.
Before starting assembly, please check the drawings below.

A04




A23

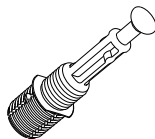


A22




A12

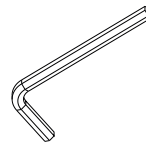


1

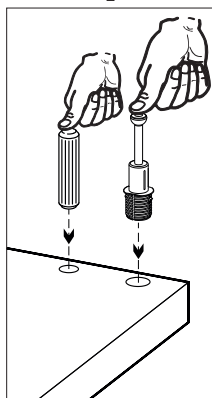


2

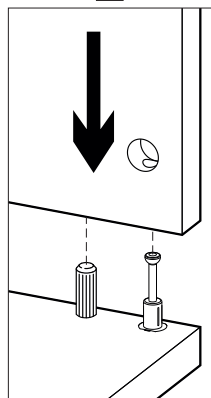

3

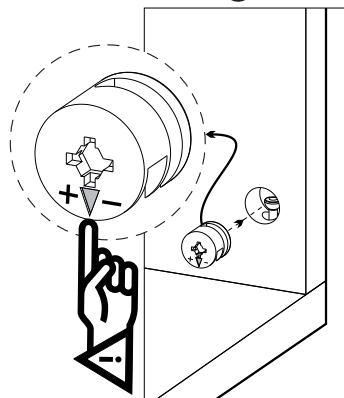


4

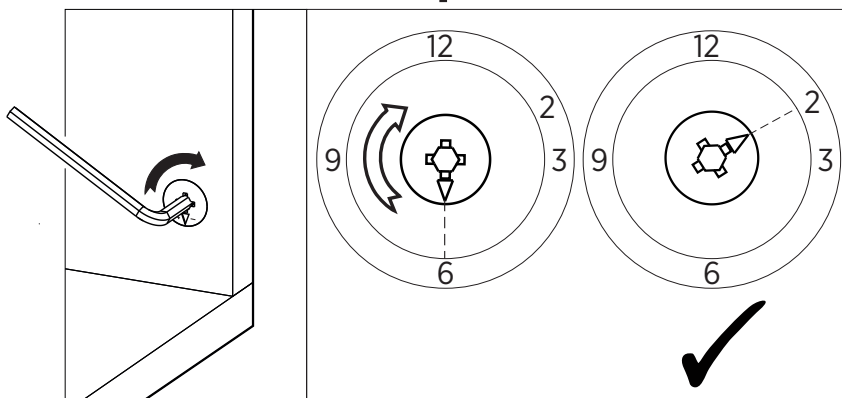

ATTENTION !!

Our products are screw system. Before you proceed with installation try to understand the following

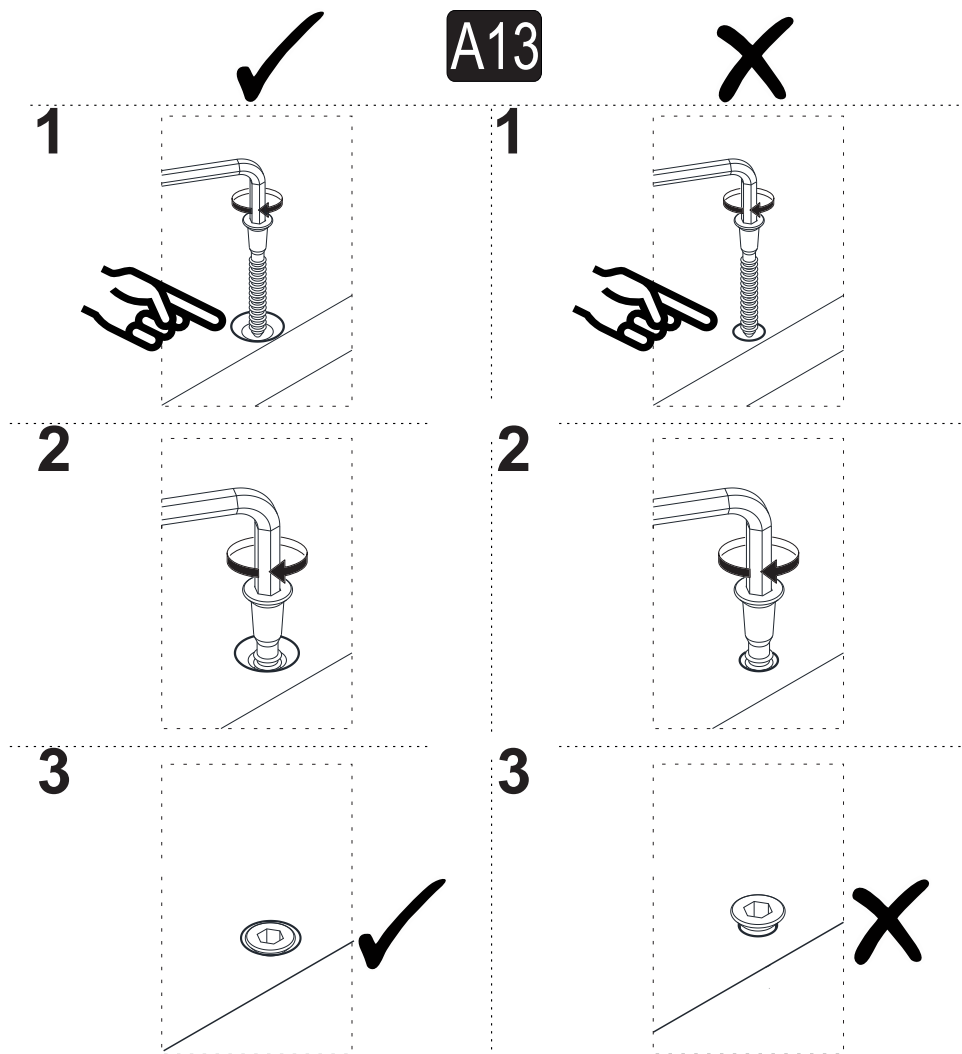





Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.




HARDWARE LIST

A04 Ø8 8x	A06 18mm C1-32x	A12 Allen 1x	A14 DFM6-86 4x	A16 DbØ8 1x
A17 4x50 1x	A18 3,5x18 66x	A22 Minifix k18 32x	A23 Minifix M10 24x	A87 15x90x30 1x
Mattress 540x260x50 1x	PB01 Kece 6x	Z79 SHOCAP 2 4x		


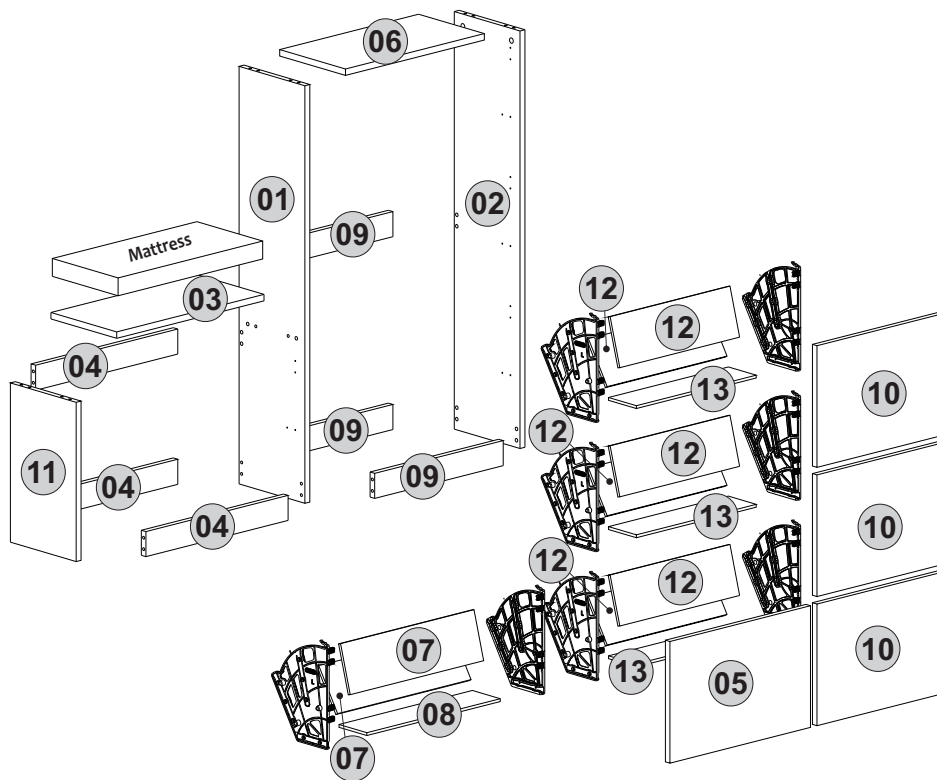



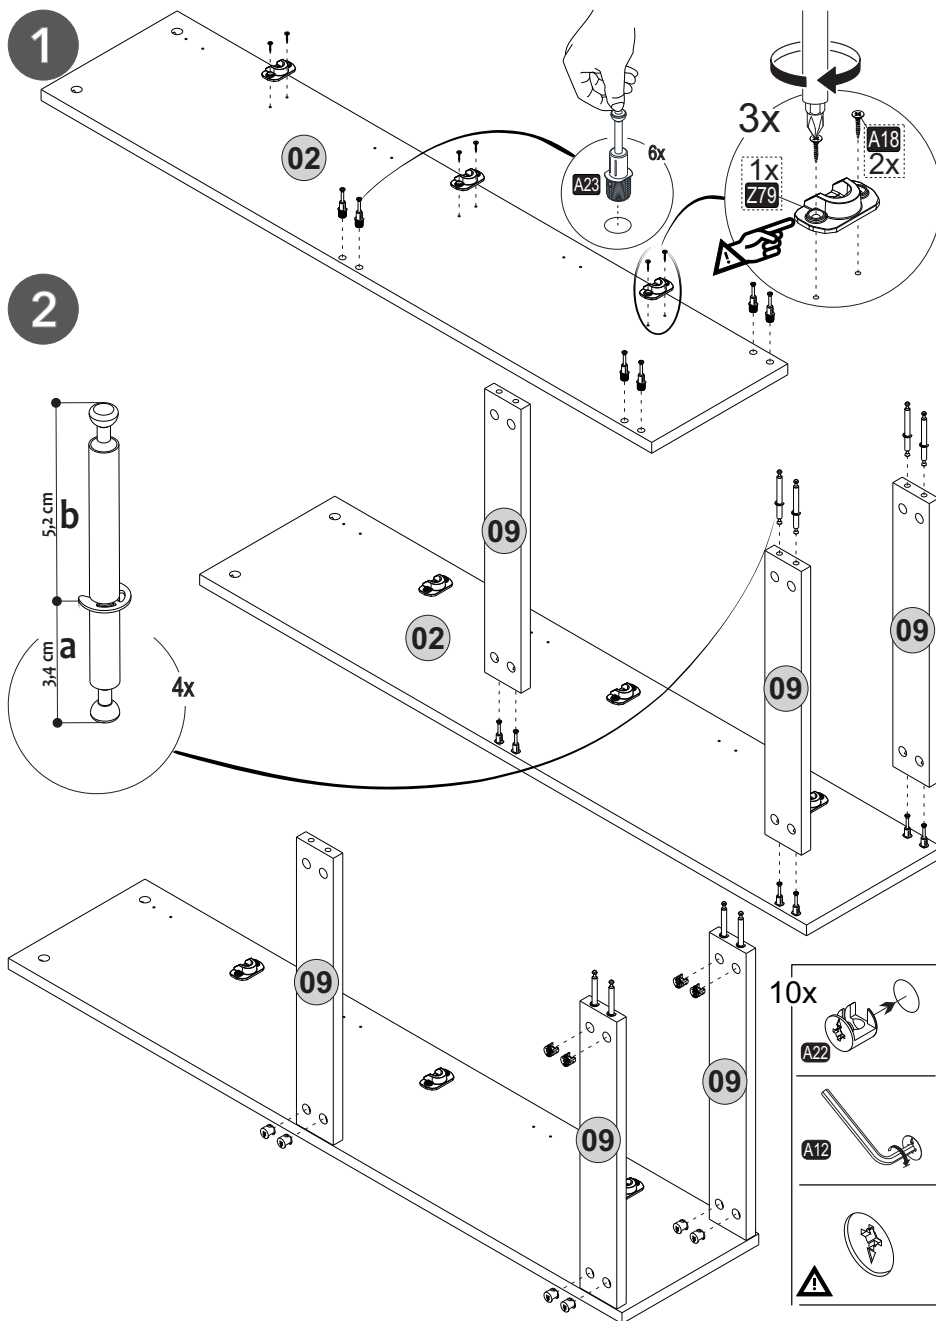


5






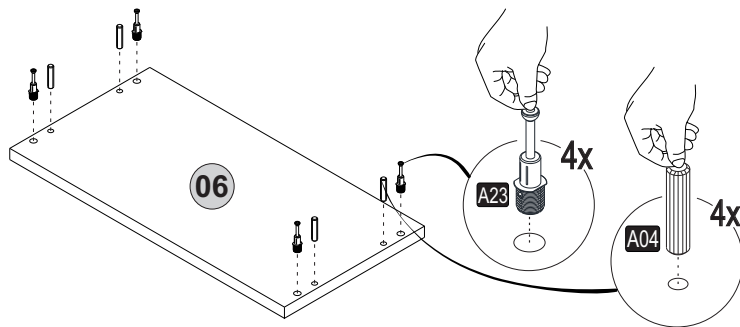


6

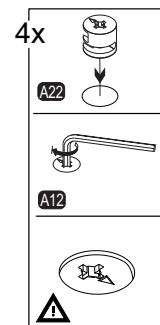
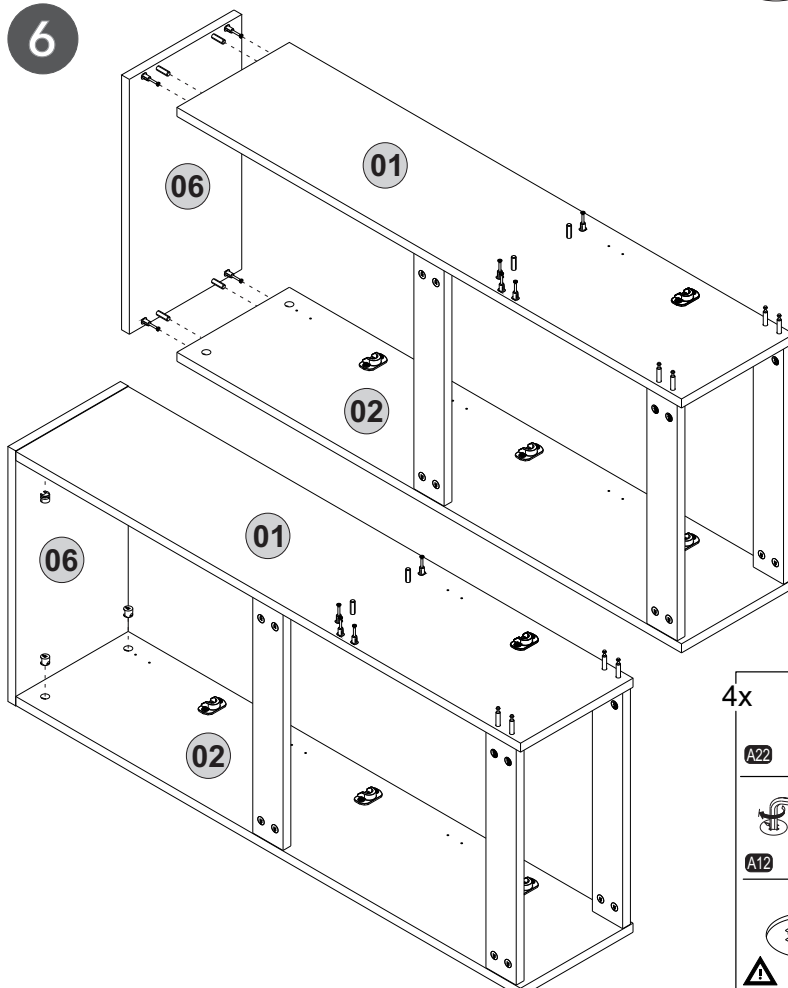


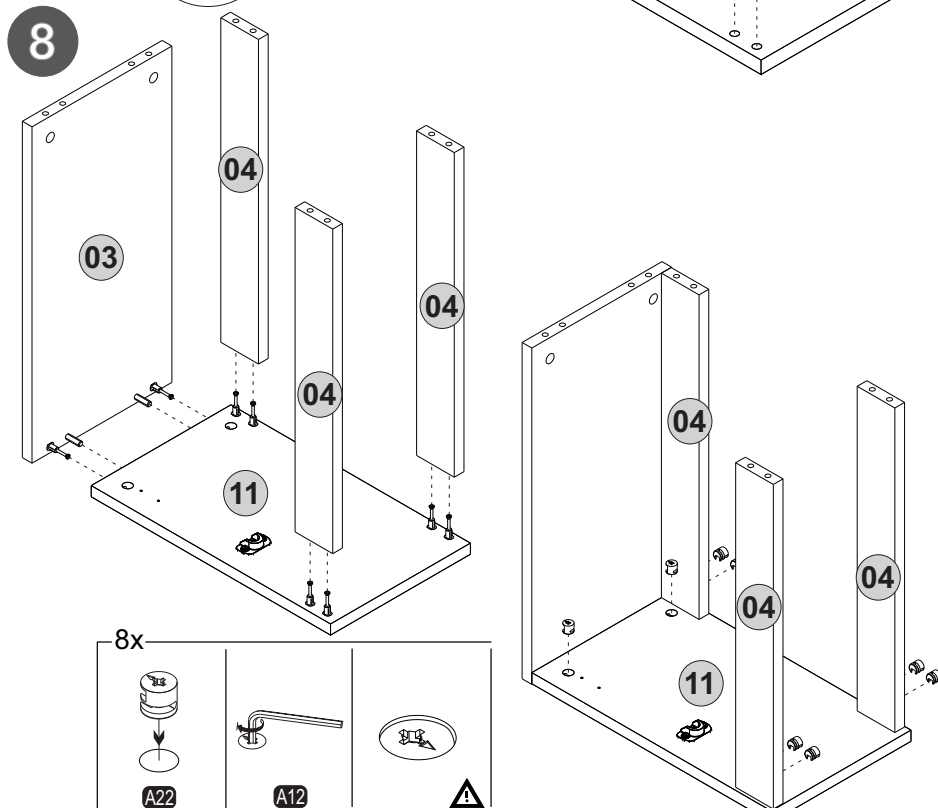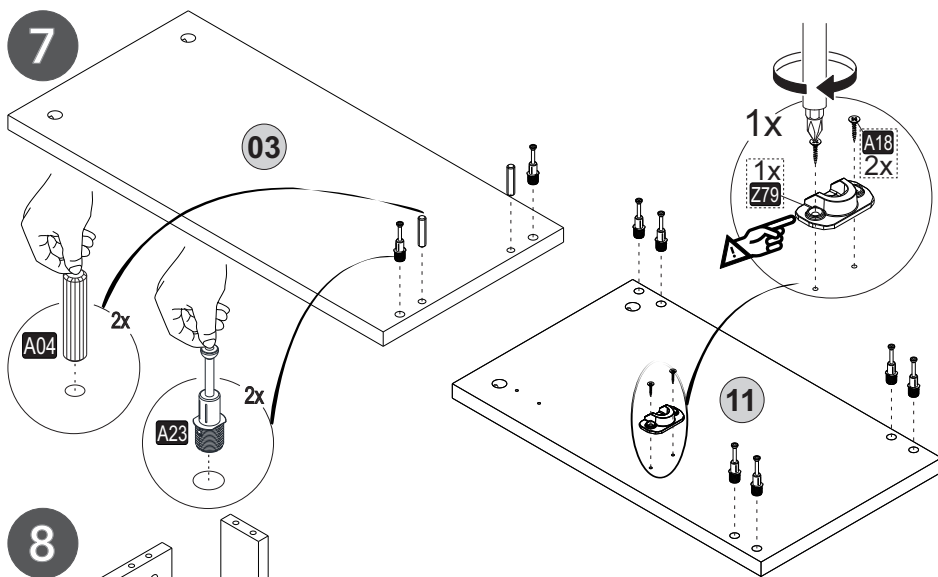



9

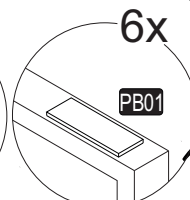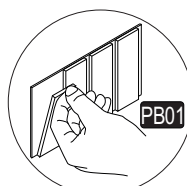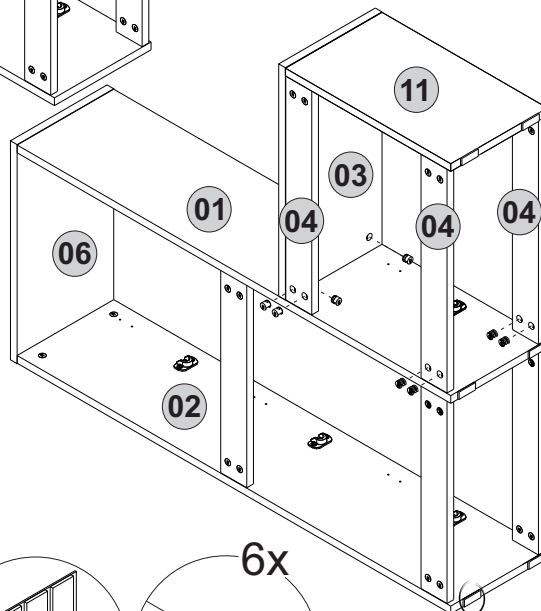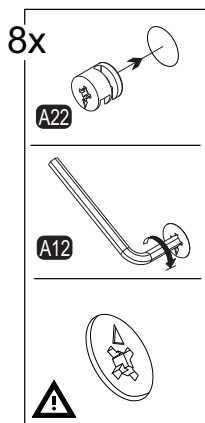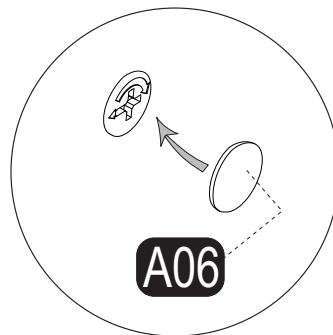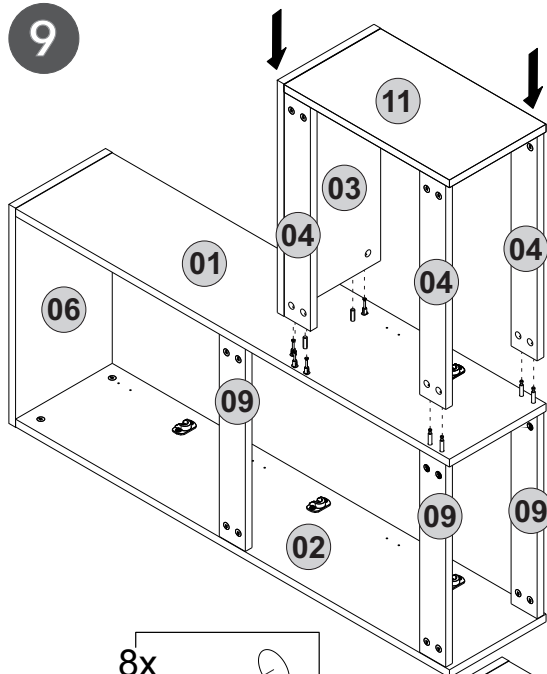


10

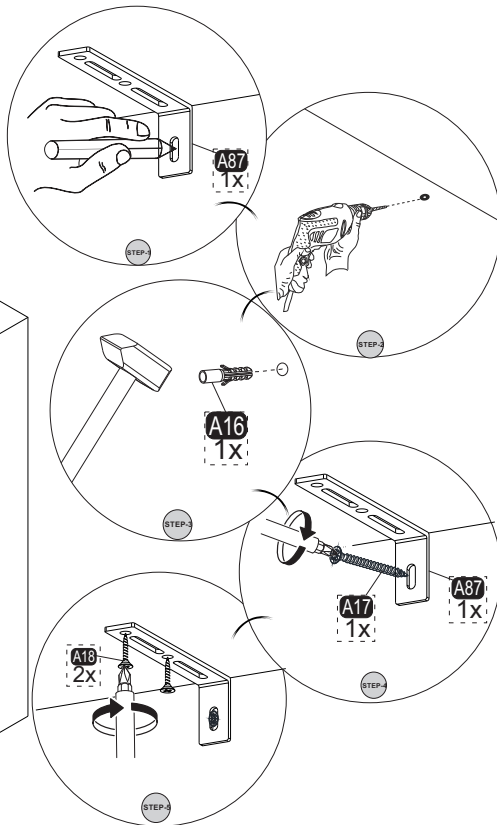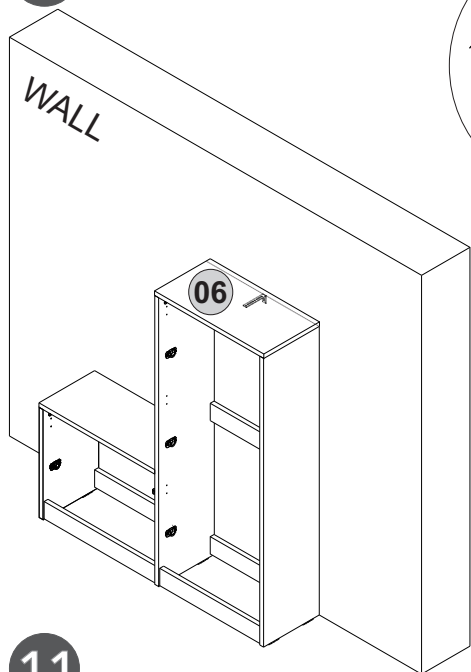


11

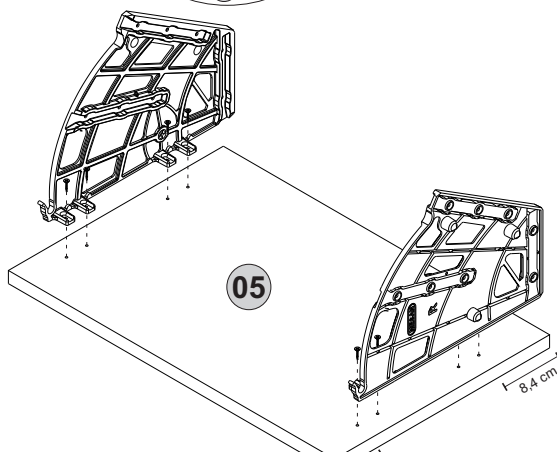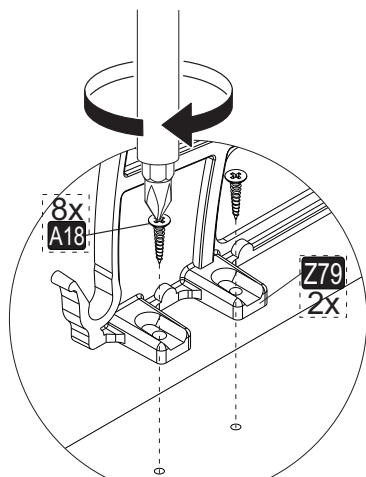


12

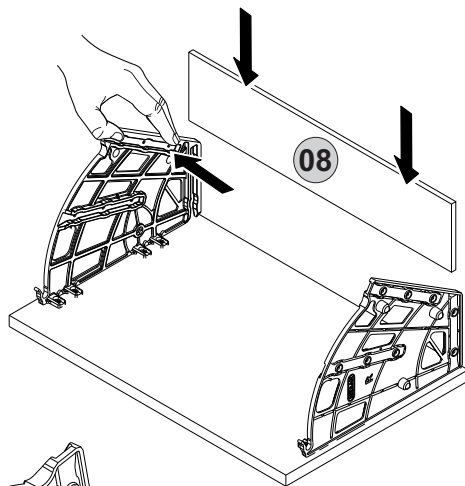


13


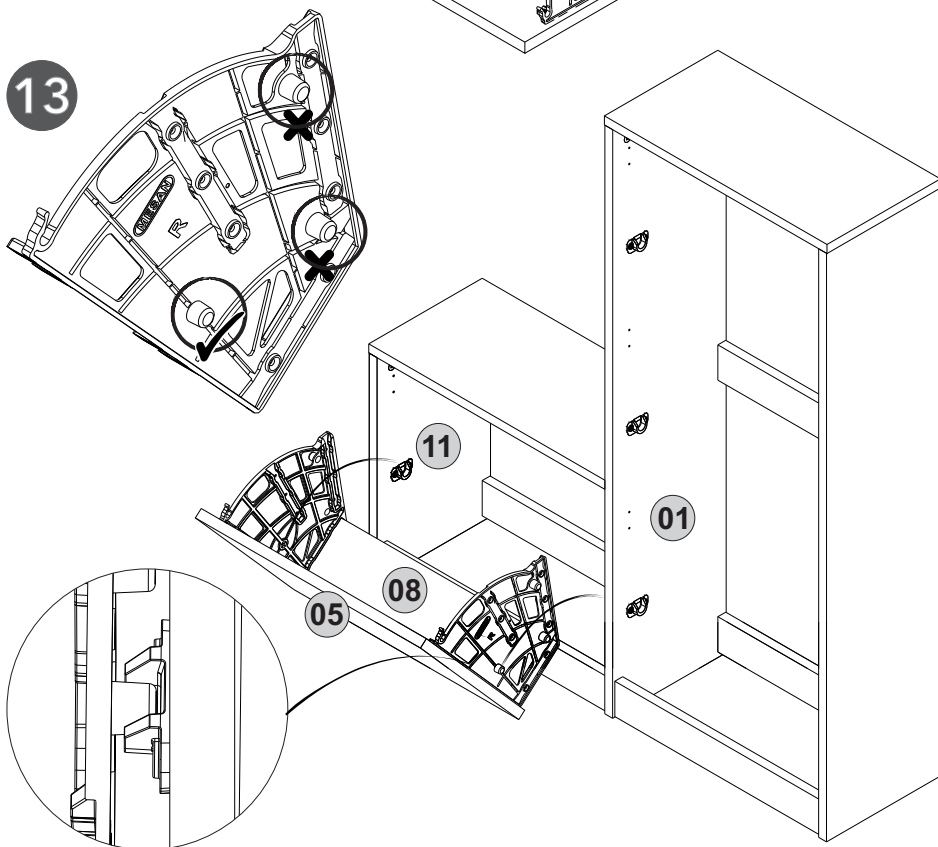


14

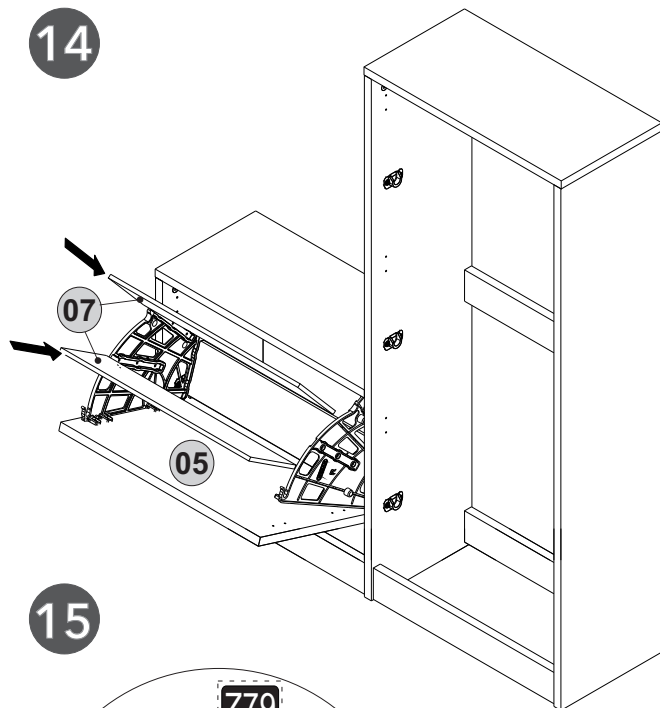


15

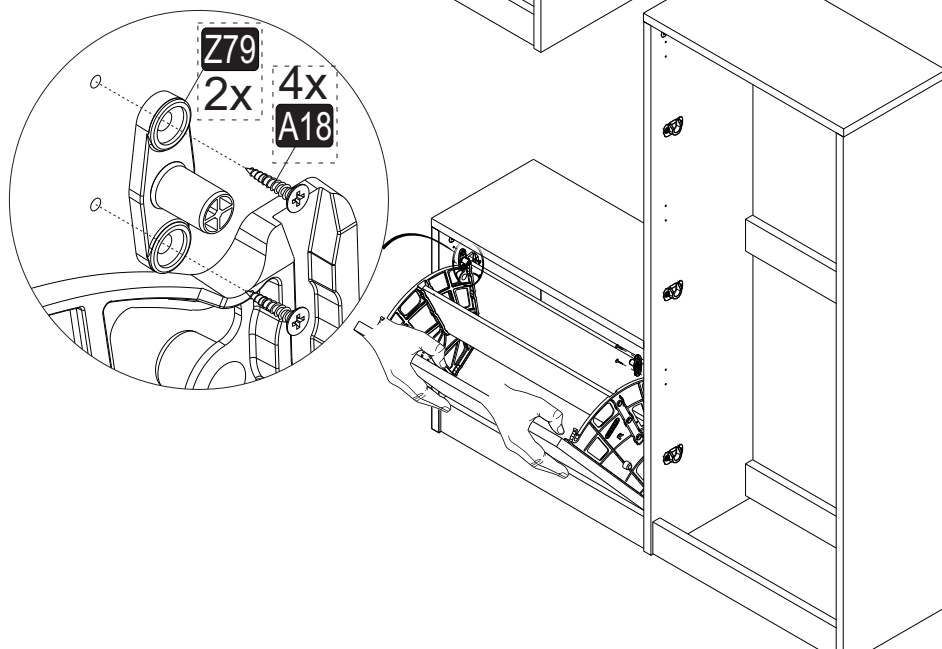

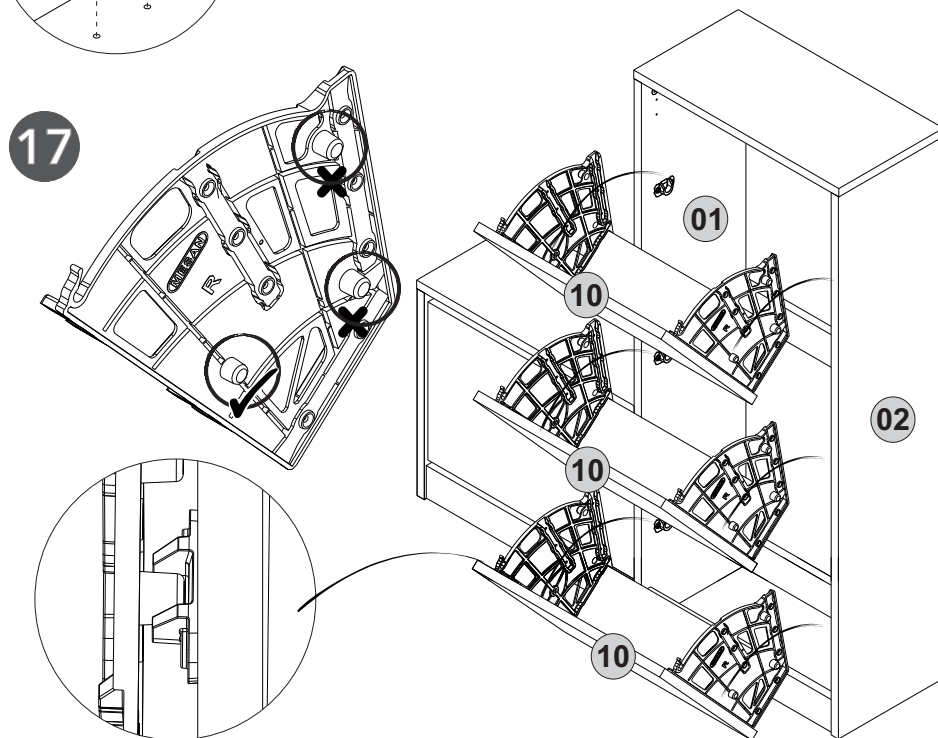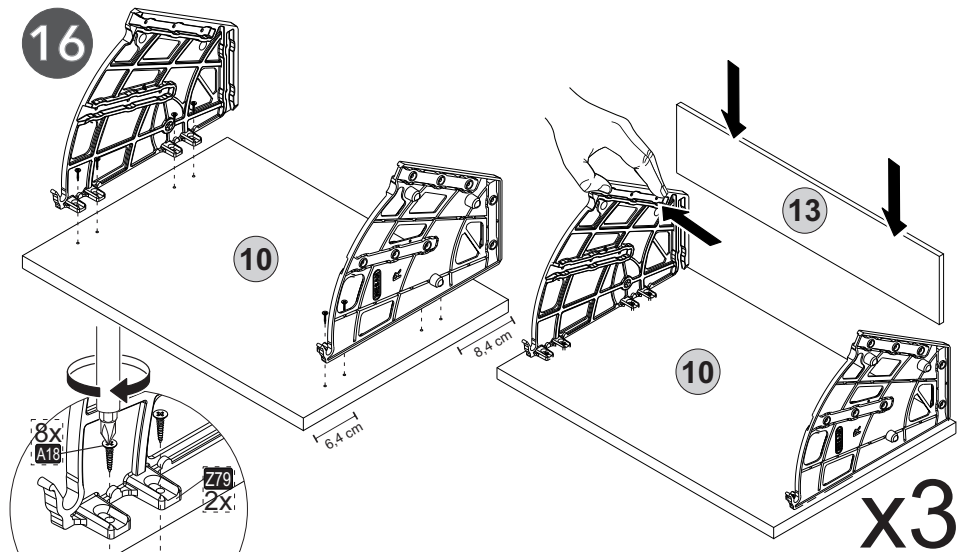

18

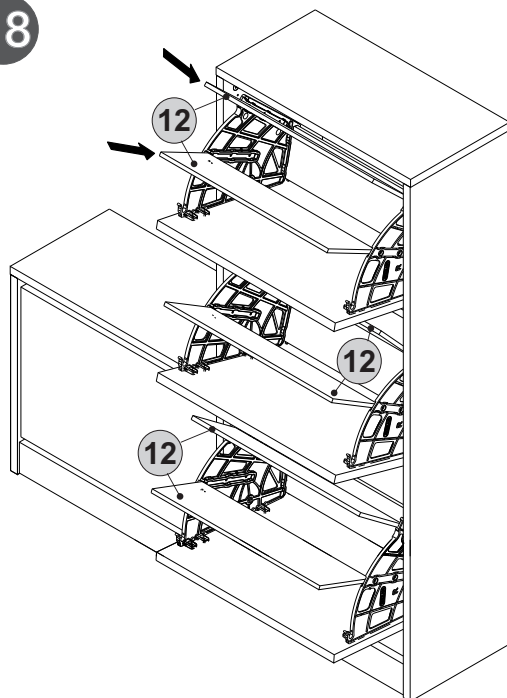

19

