







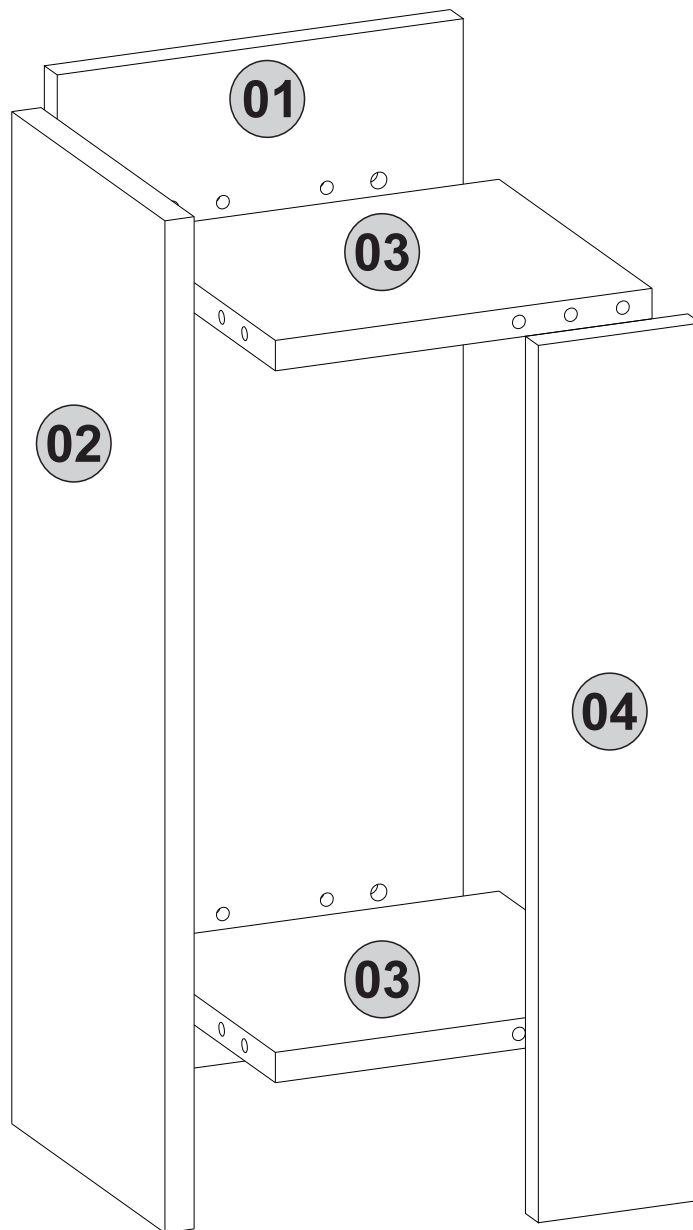






GP037-0248,2

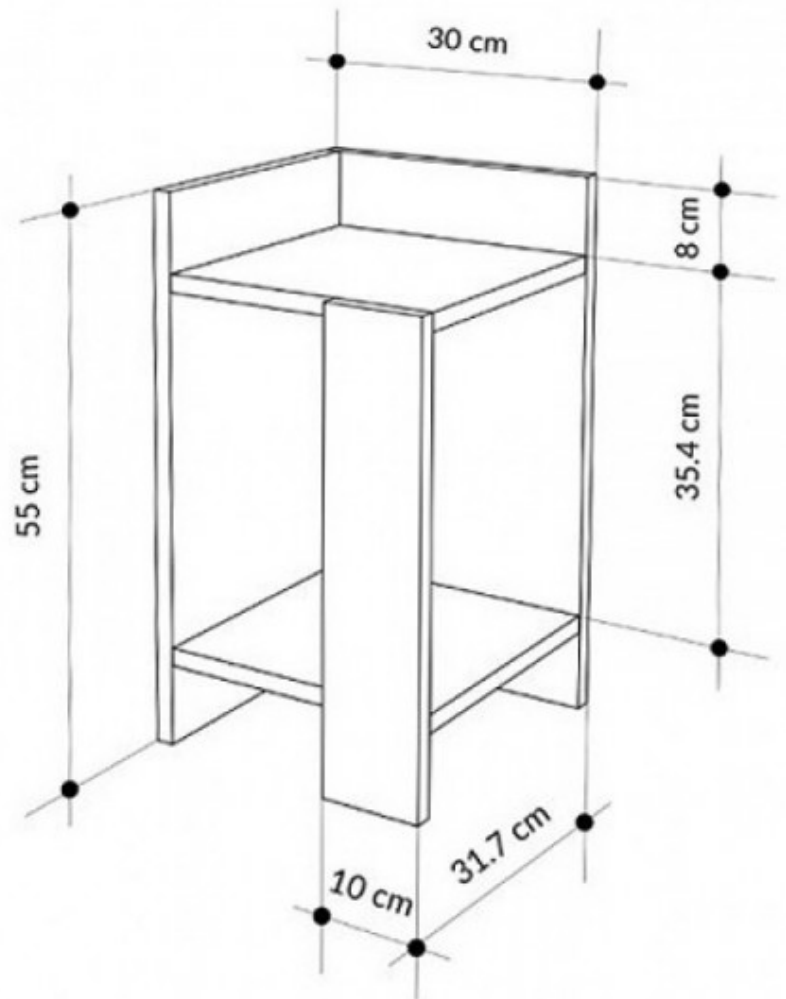



A04  10x	A06 18mm  C1-15x	A12 Minifix k18  1x	A13 50mm  3x	A22  12x
A23  12x	PB01 Kece  4x			






1. step

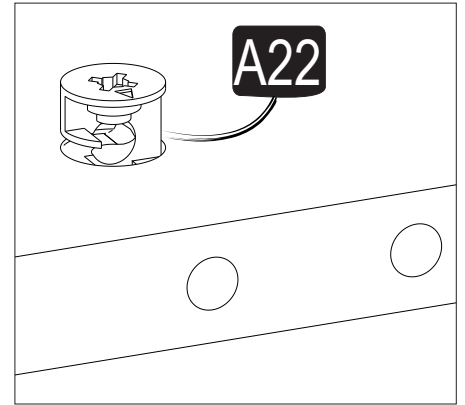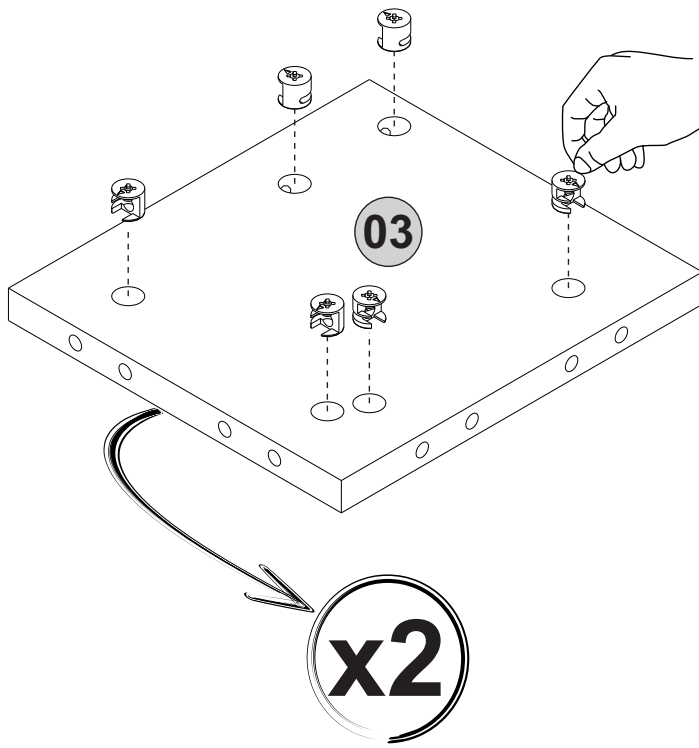



2. step

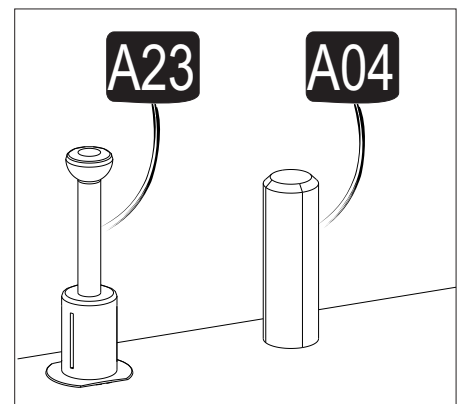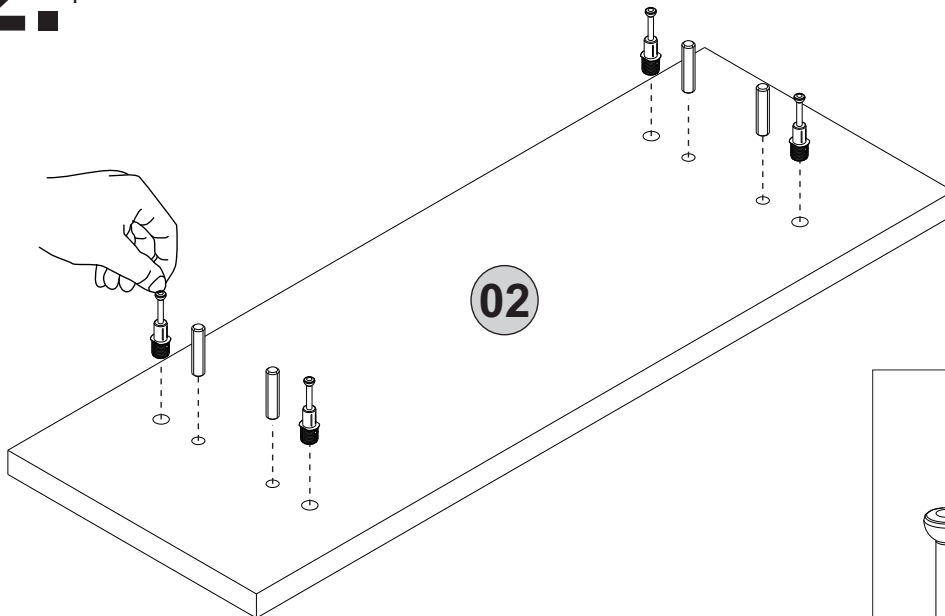




3 step

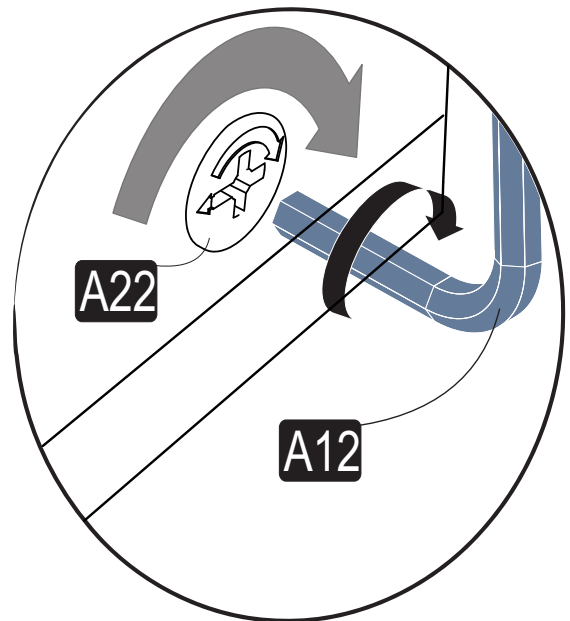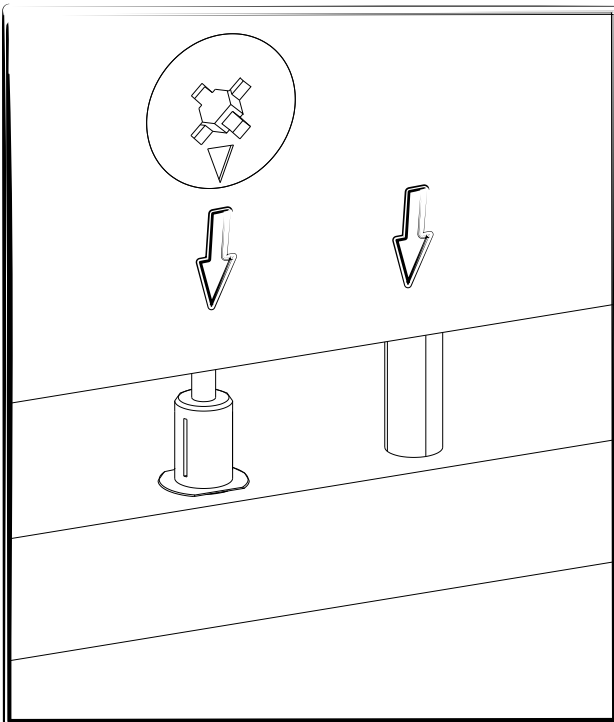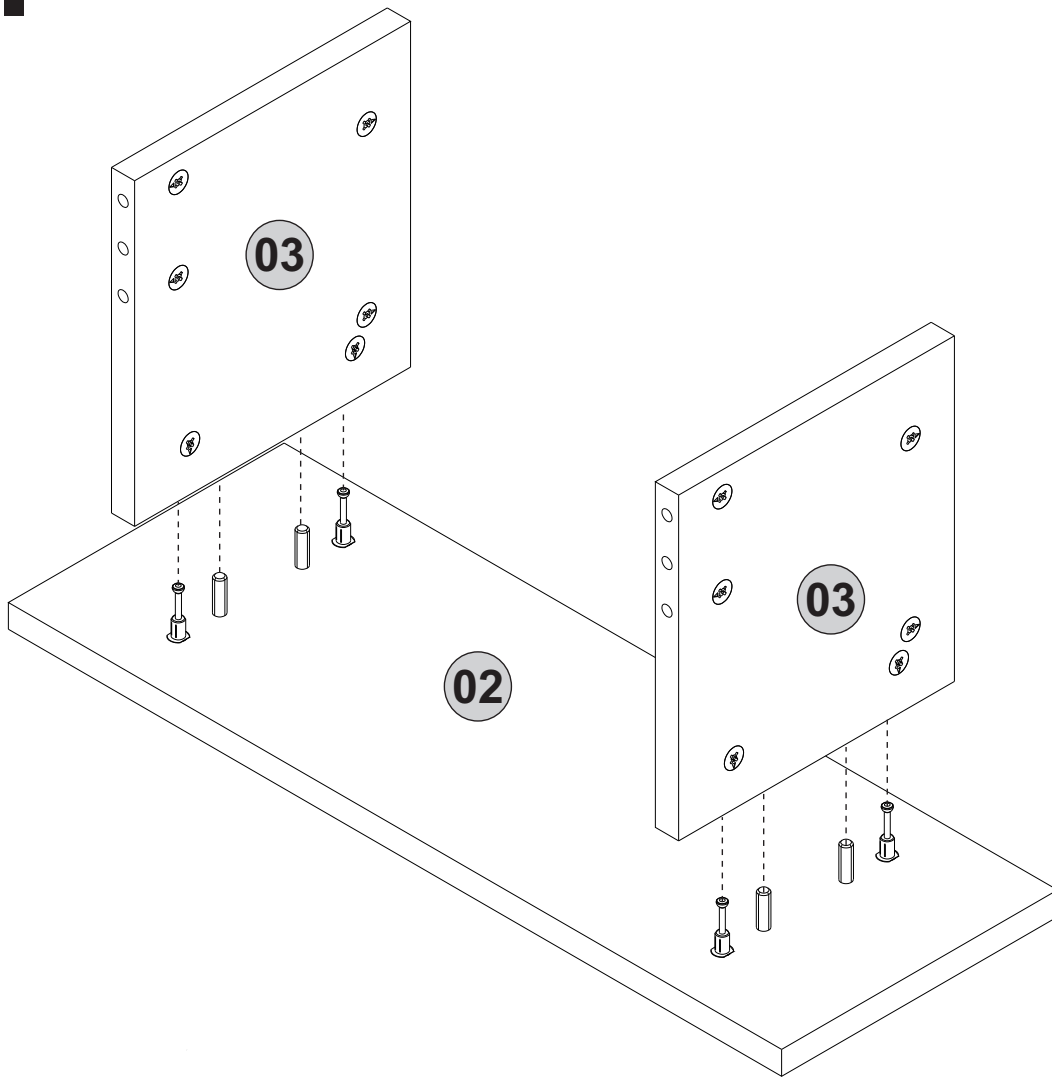


4^{step}

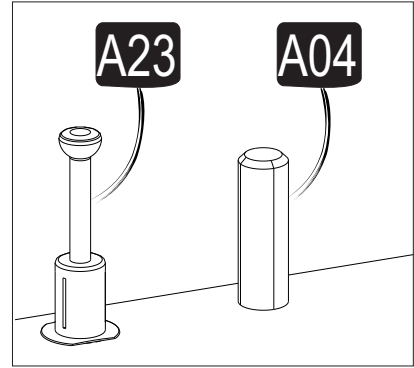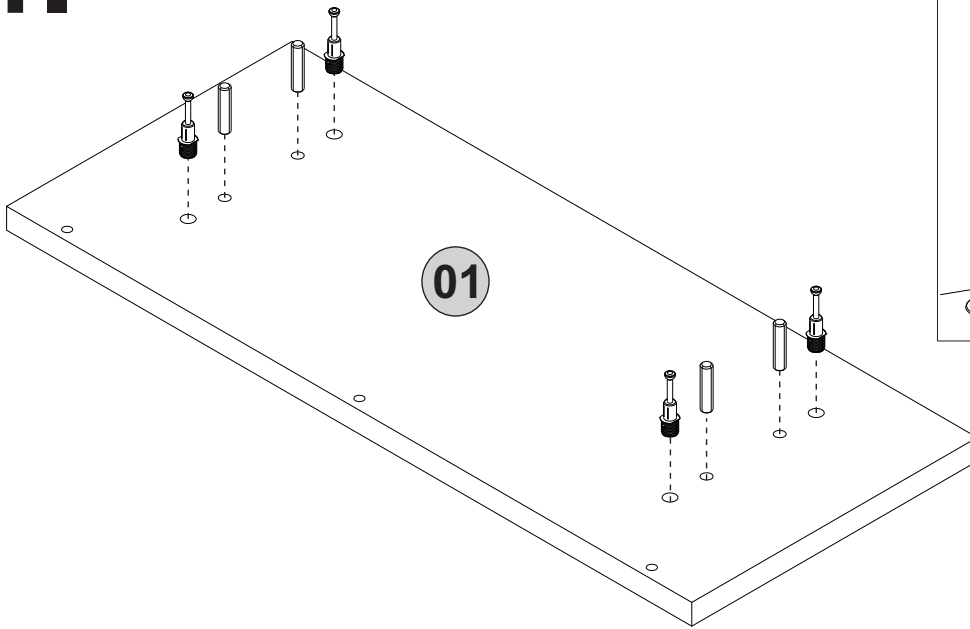



5^{step}

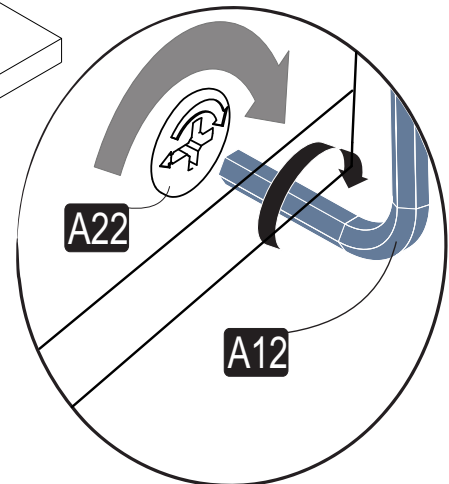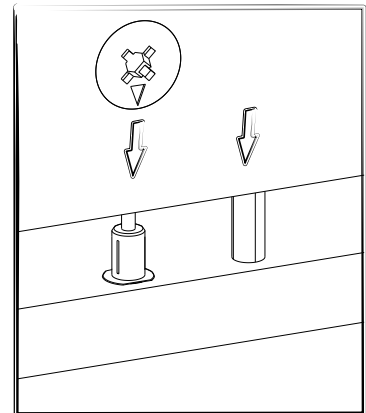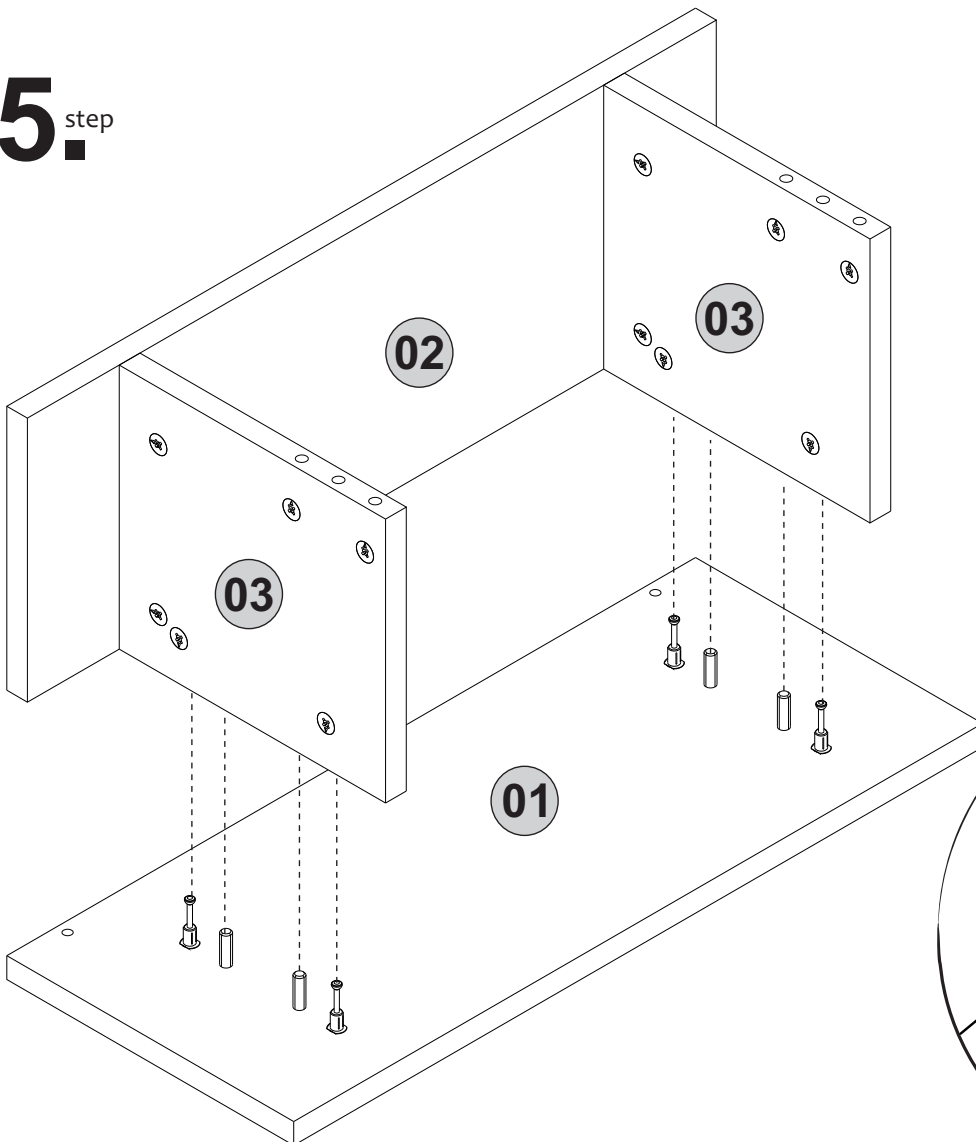




6^{step}

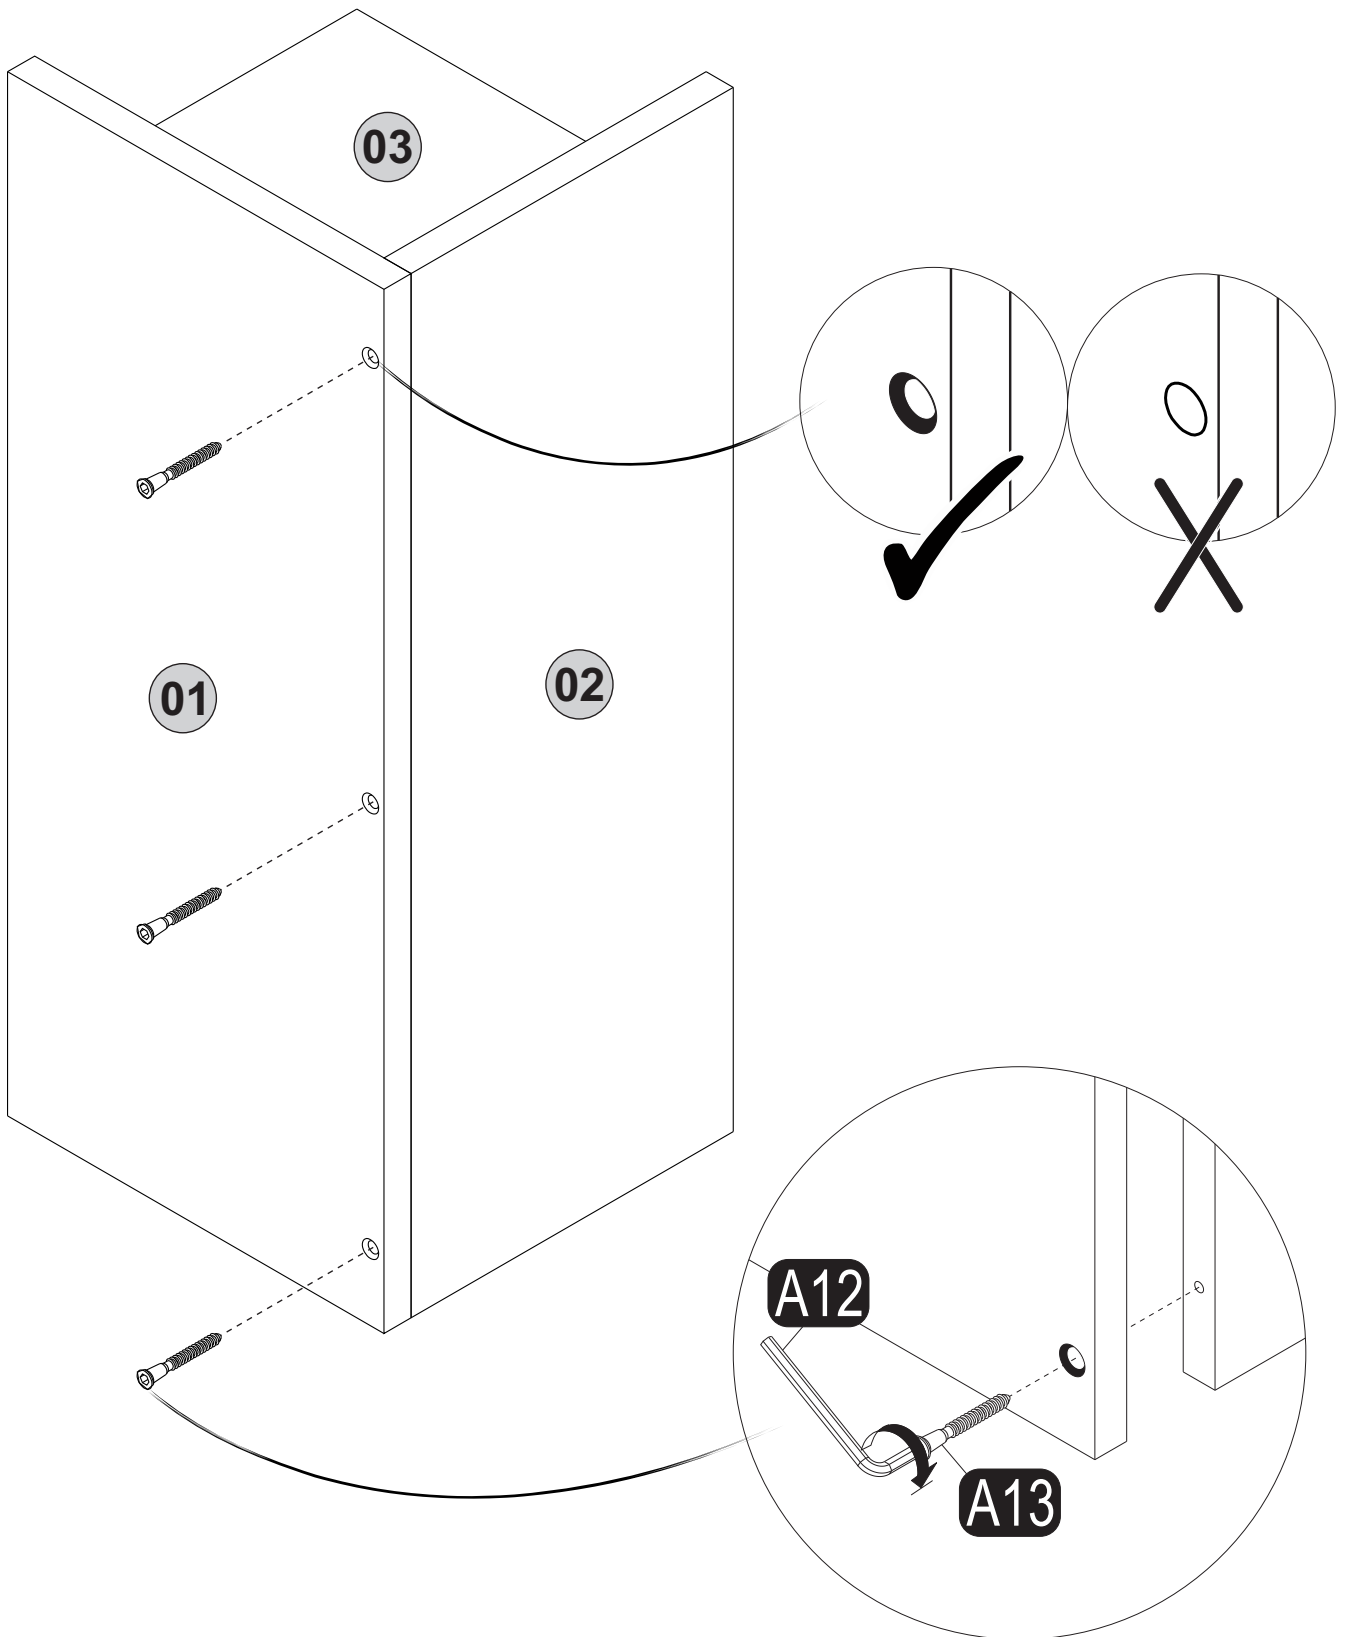




7^{step}

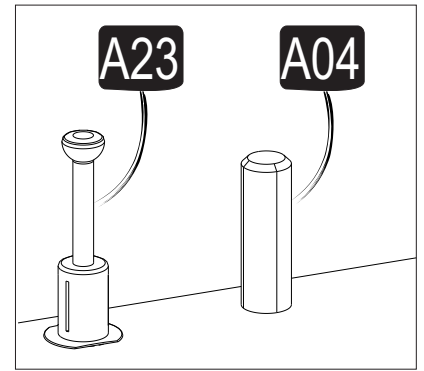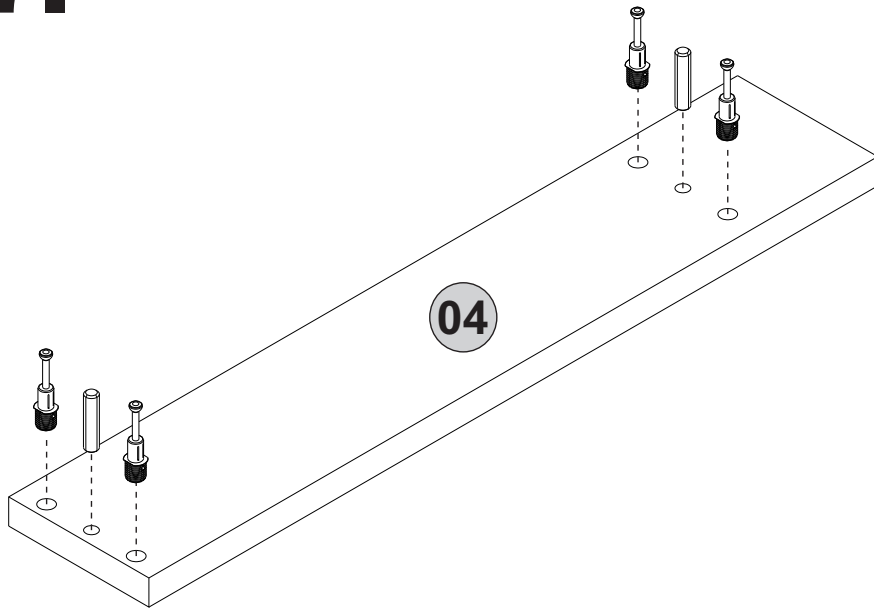

8^{step}

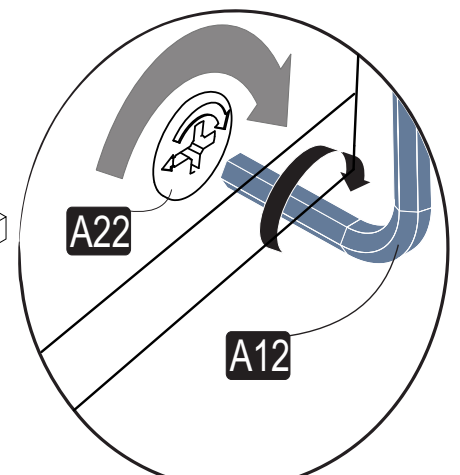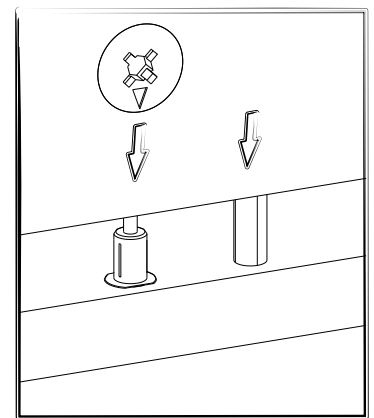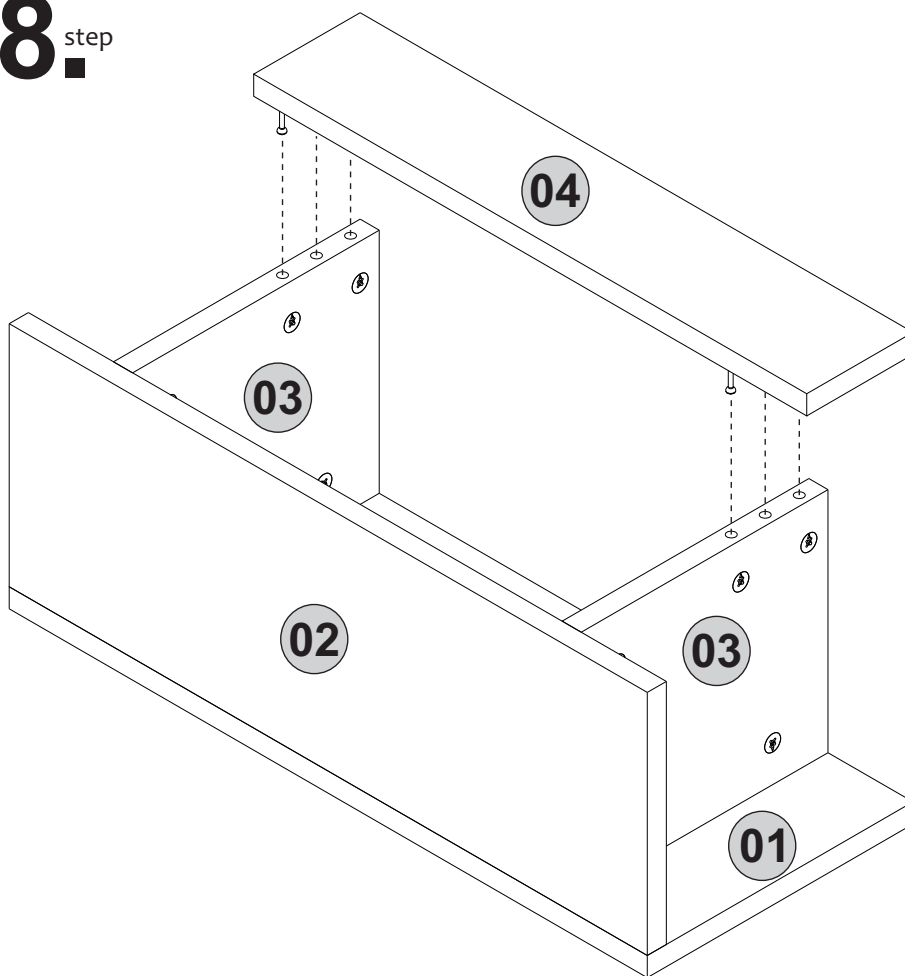

9. step

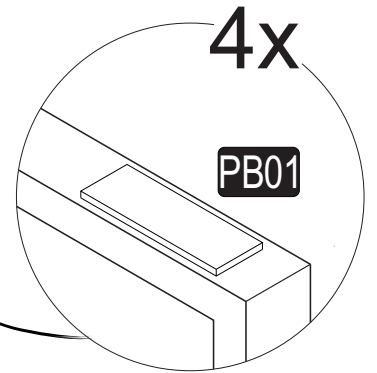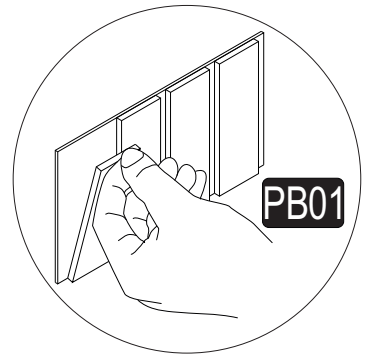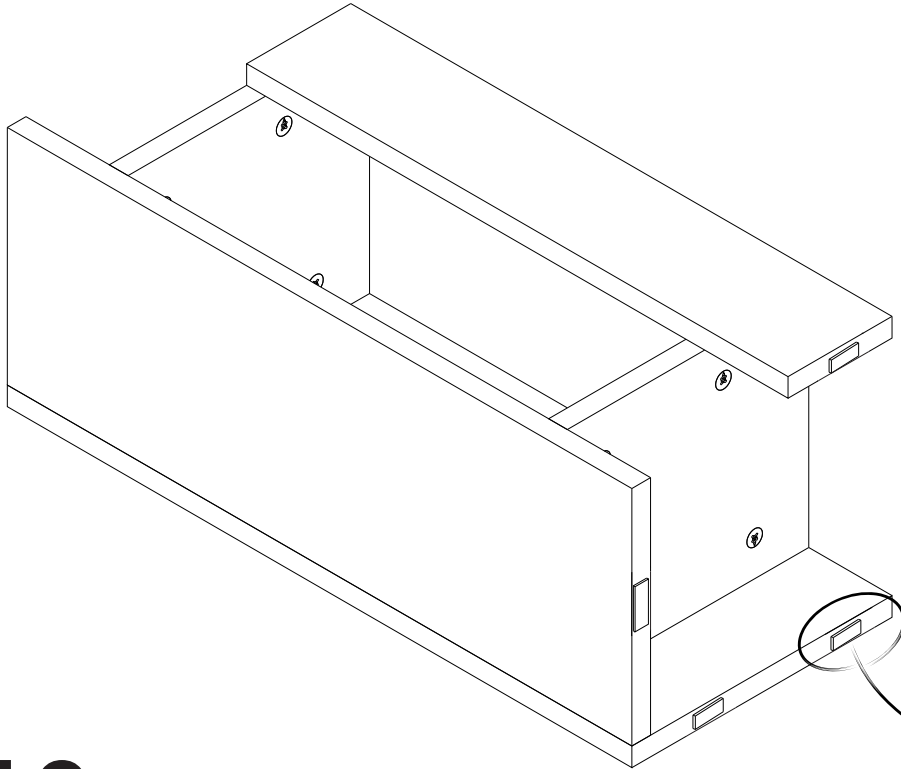

10. step

