



# GP037-0256,1

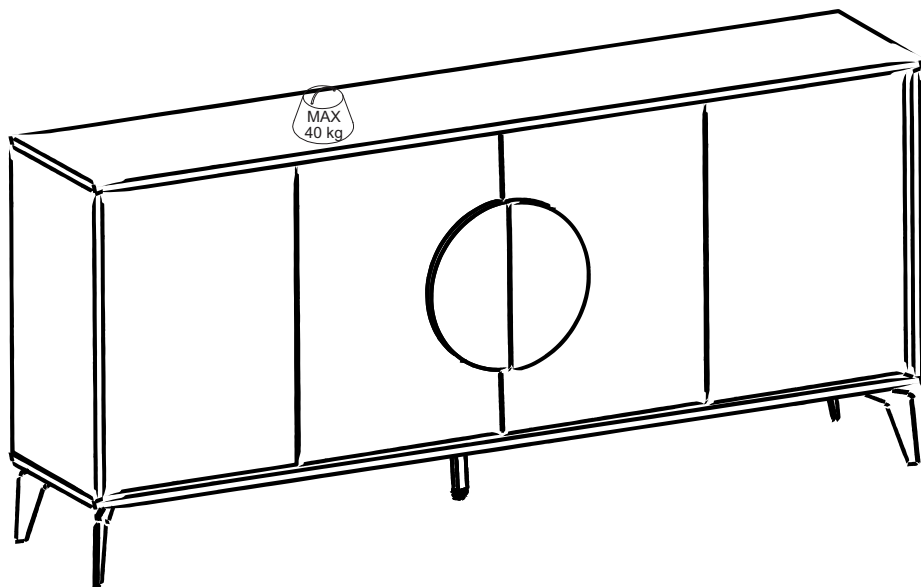


# ATTENTION !!

Minifix is the main connection material used in our products.  
Before starting assembly, please check the drawings below.

A04




A23

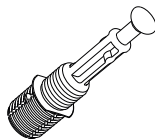


A22




A12

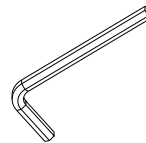


1

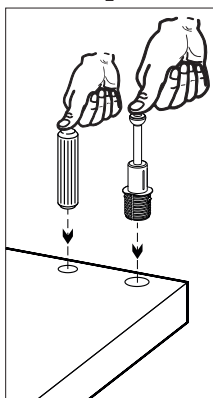


2

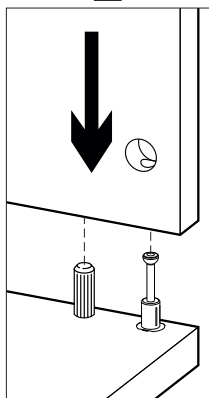

3

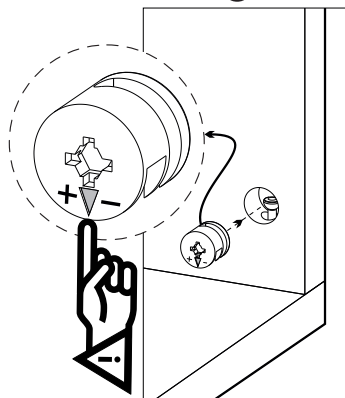



4

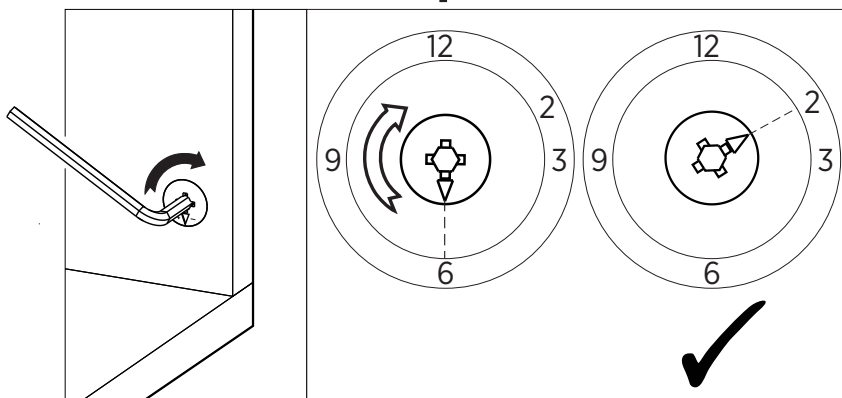

# ATTENTION !!

Our products are screw system. Before you proceed with installation try to understand the following

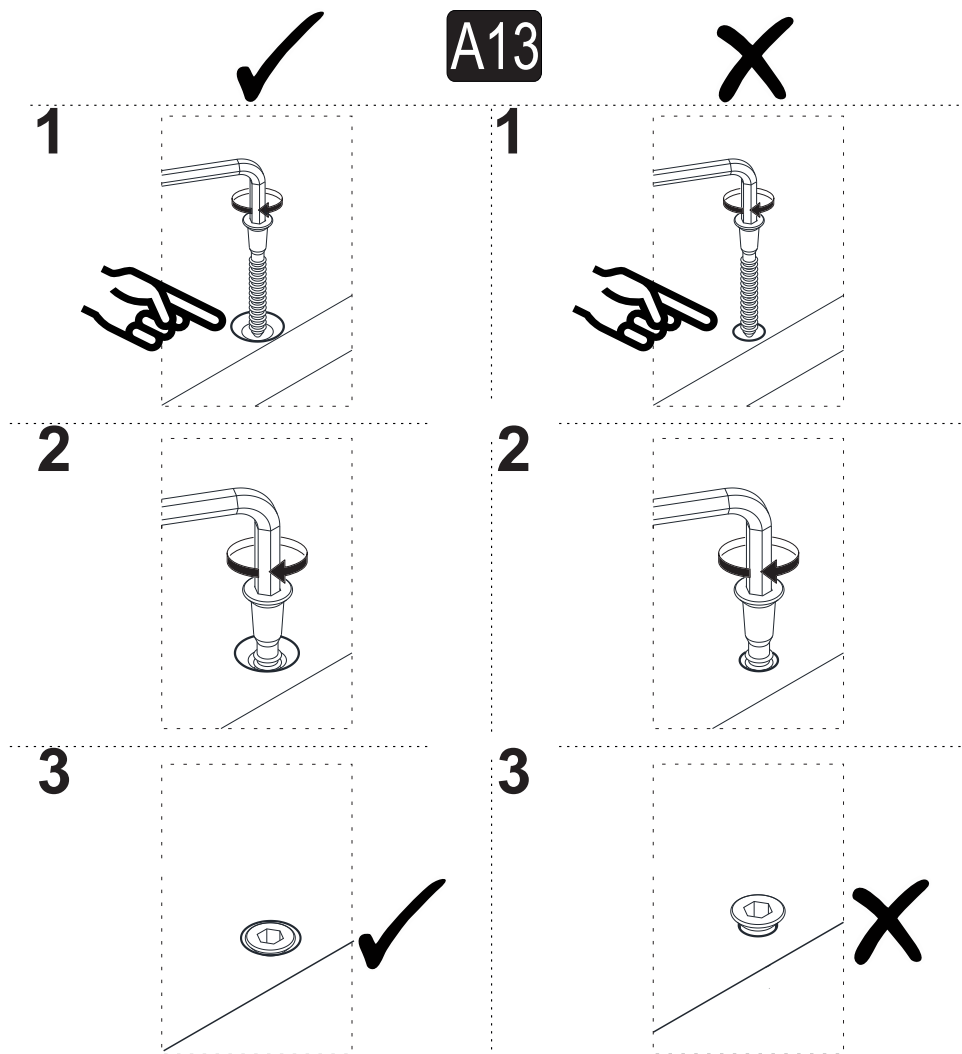

























80MN


Follow the installation steps in the order as shown.  
Position the parts as shown in the installation guide steps.






## HARDWARE LIST

<b>A22</b> Minifix k18  10x	<b>A23</b> Minifix M10  10x	<b>A04</b> Ø8  10x	<b>A12</b> Allen  1x	<b>A13</b> 50mm  10x
<b>A25</b> ARK.PL  32x	<b>A18</b> 3,5x18  80x	<b>C16</b> Sdb(S)  2x	<b>C19</b> SdbF(S)  2x	<b>C20</b> Mtk(S)  8x
<b>A06</b> 18mm  C1-20x C2-06x	<b>A48</b> Raf Pimi  16x	<b>A17</b> 4x50  6x	<b>C15</b> YdbF(S)  2x	<b>C18</b> YdbF(S)  2x
<b>Z71</b> LEG  4x	<b>Z102</b> A.M.A 160mm  1x	<b>B15</b> 15 (black)mm  19x	<b>A69</b> P.D.  19x	<b>A75</b> 5x13  6x
<b>A80</b> bas ac  2x				

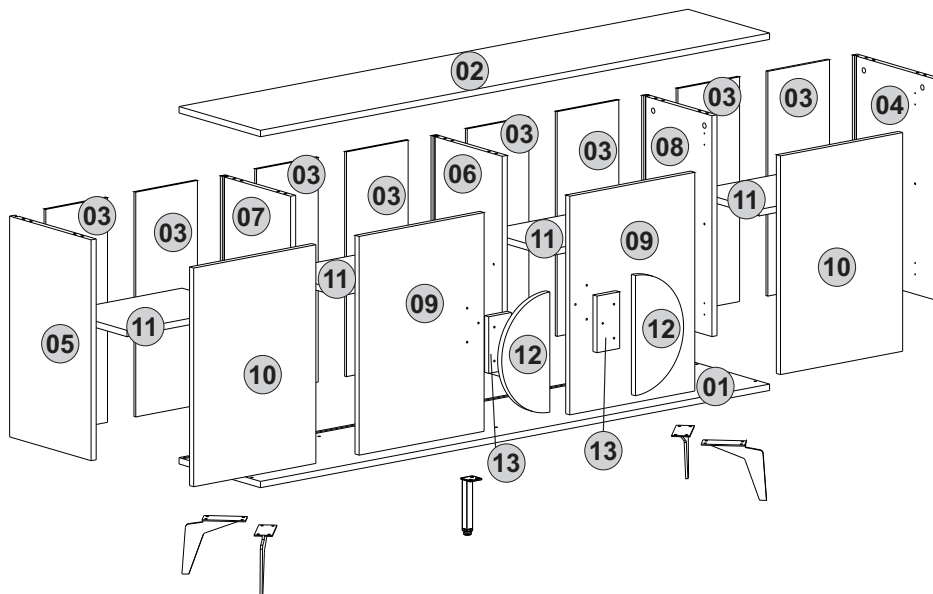

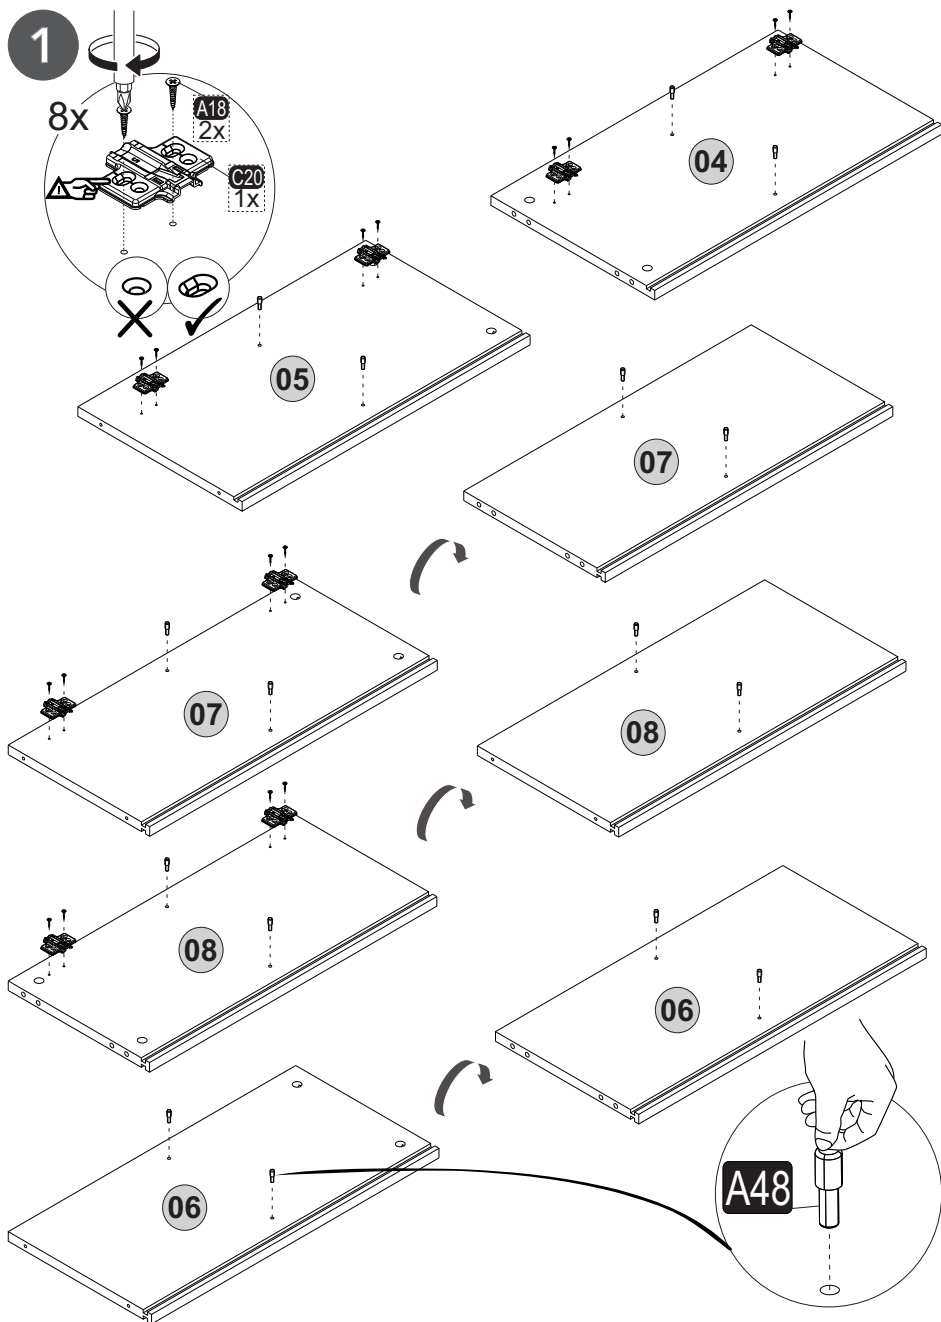

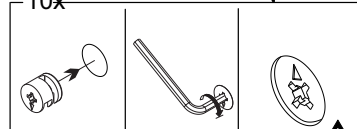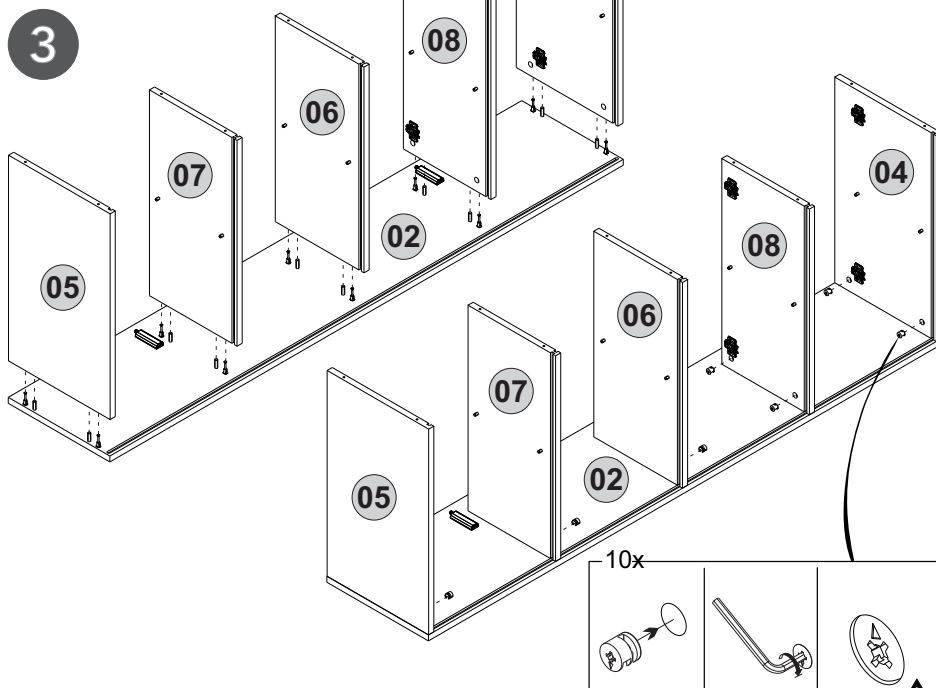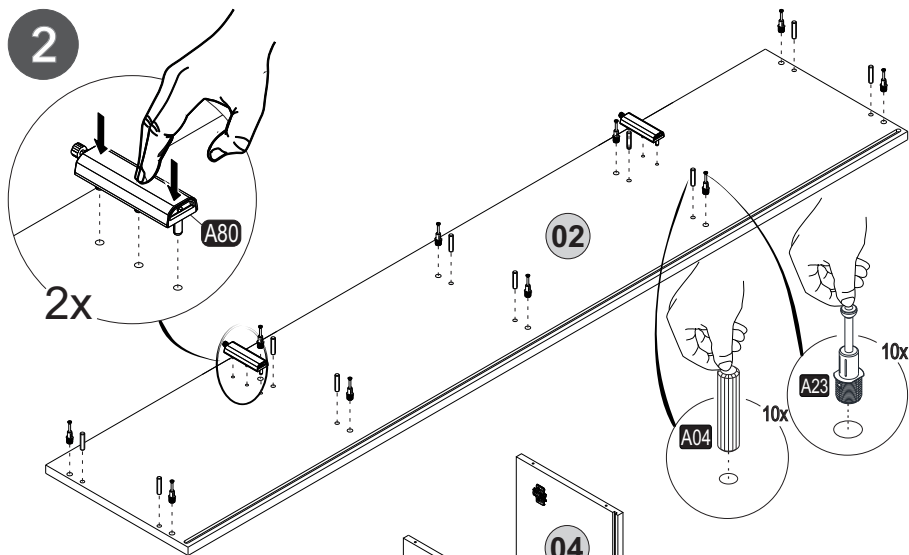

A69





10x






A12

A13








A12

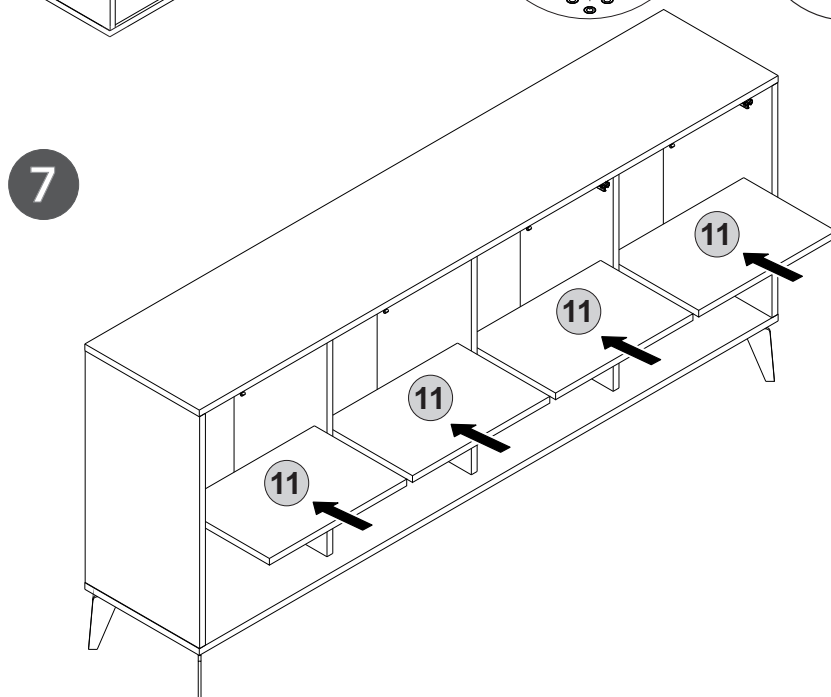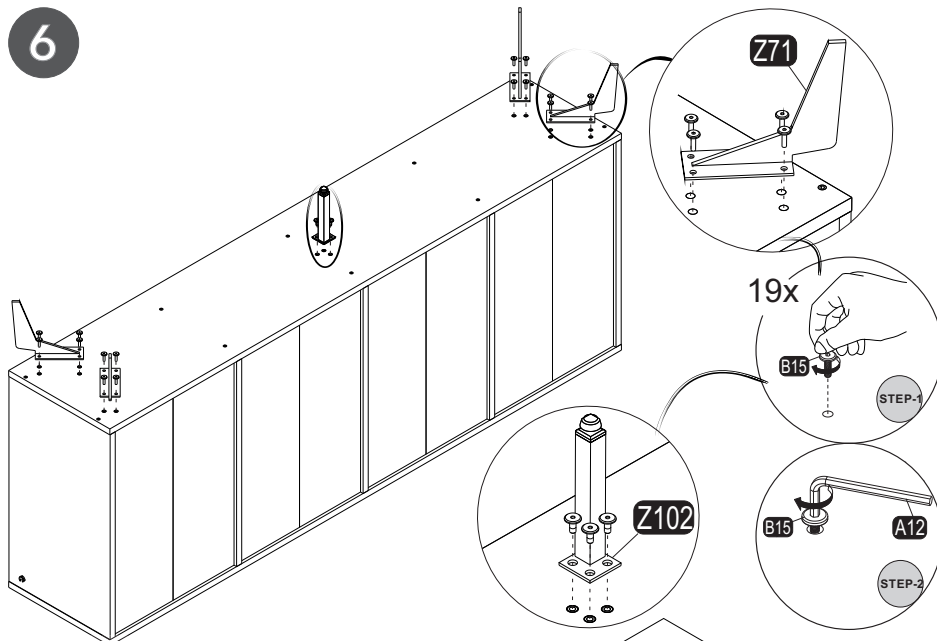











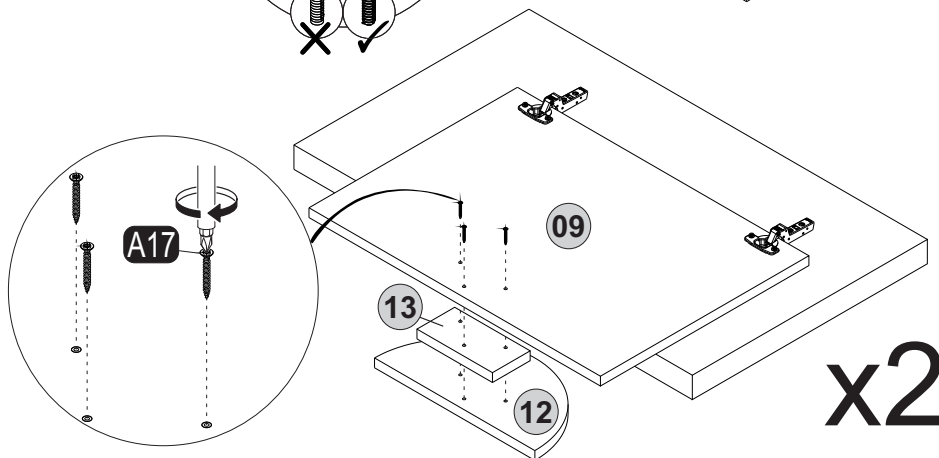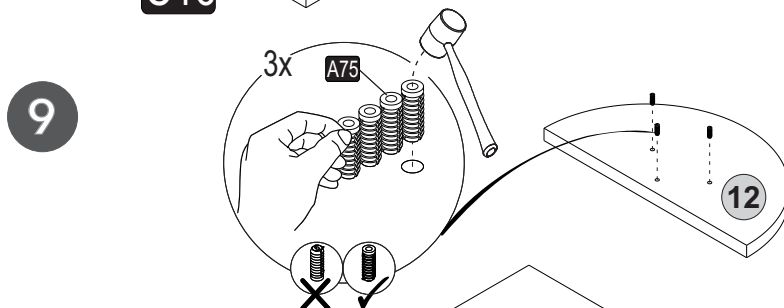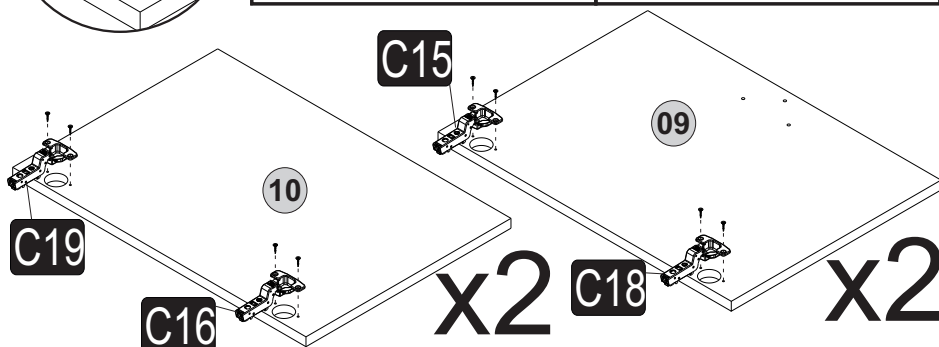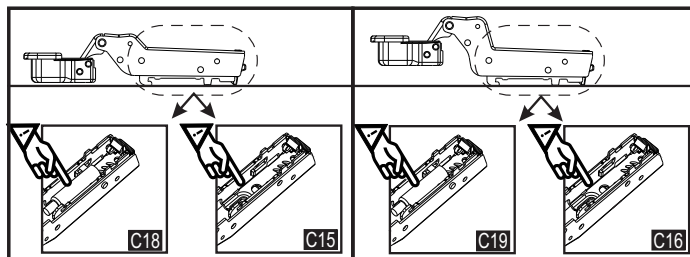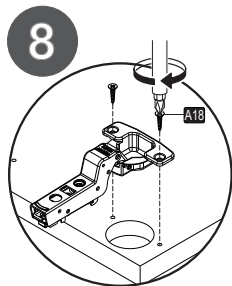


10

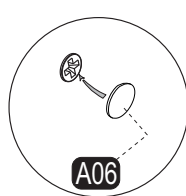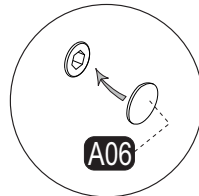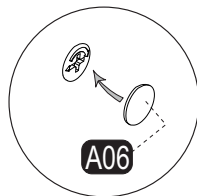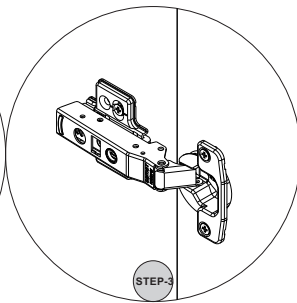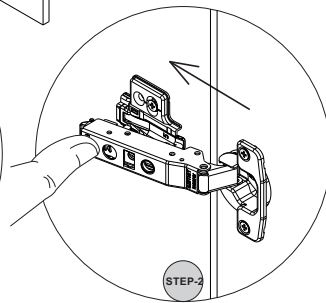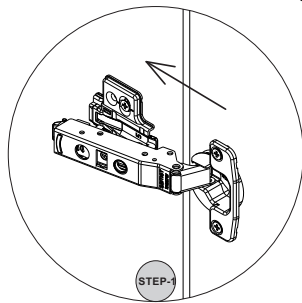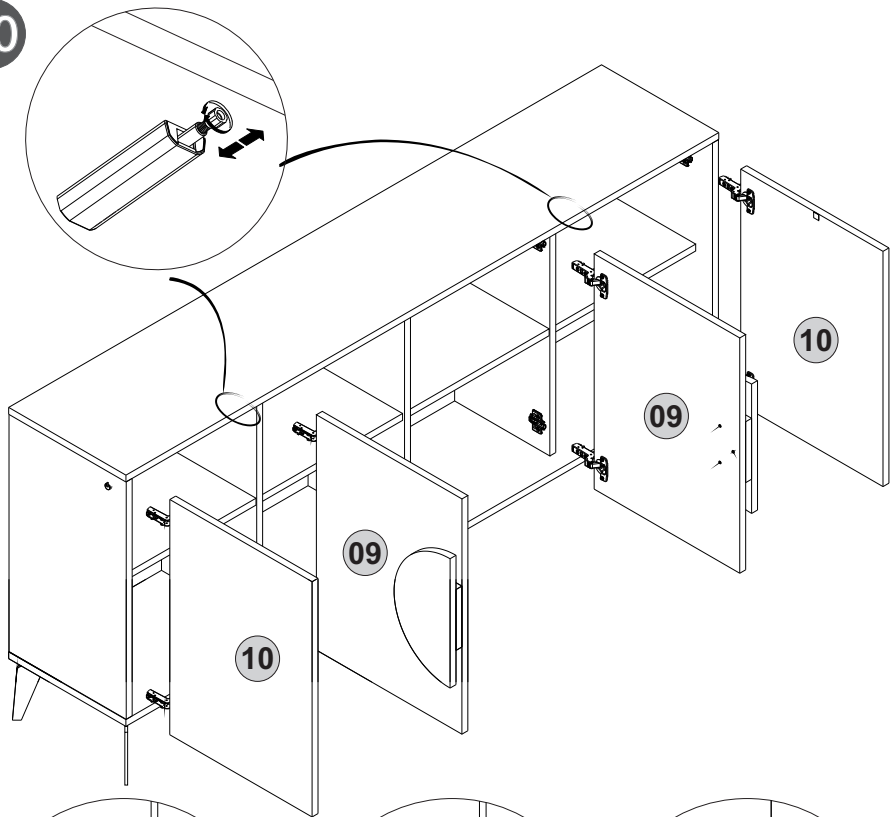

11

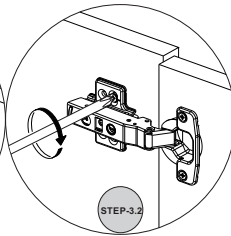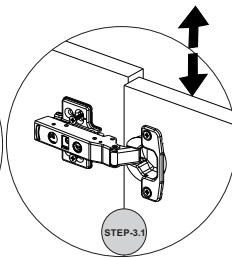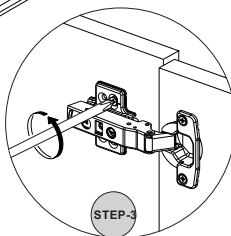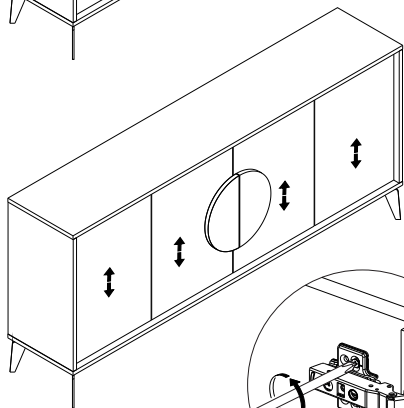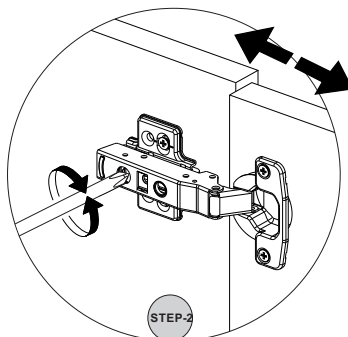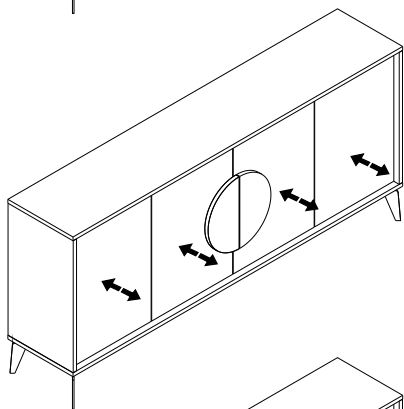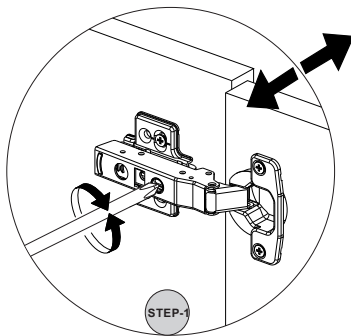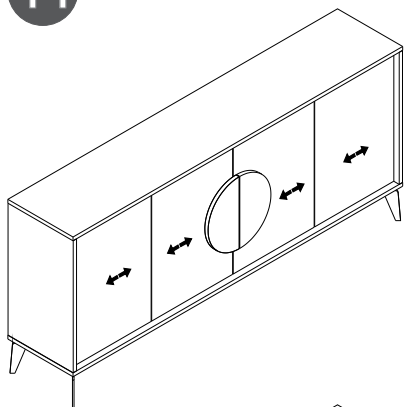

12

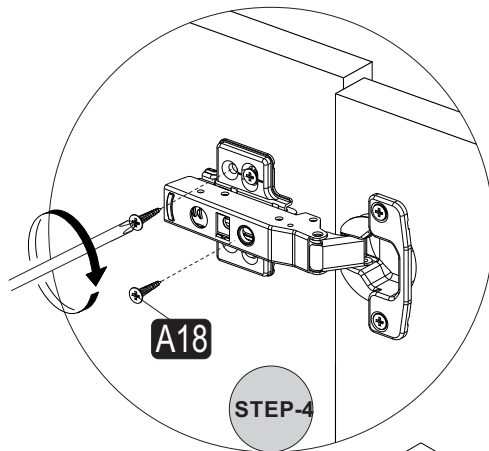

13

