

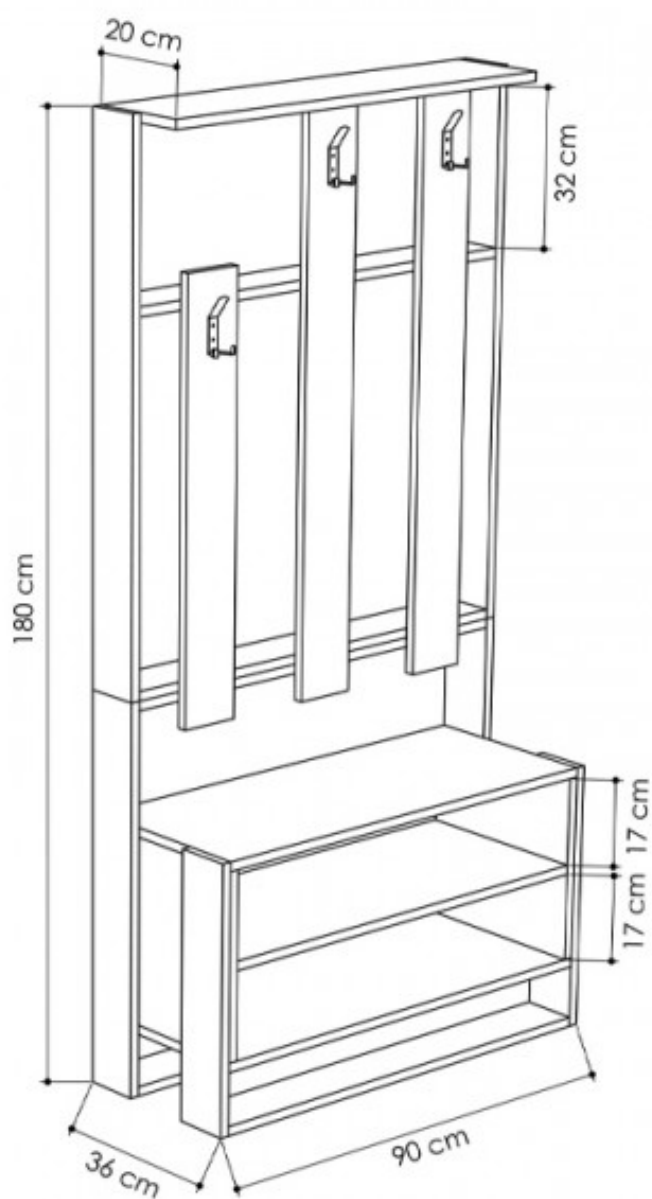







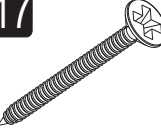



i GP037-0003,1




A22 Minifix k18  62x	A23 Minifix M10  62x	A04 Ø8  32x	B03 25 mm  12x	A12 4 sw  1x
A26  1x	A08 Pabuç  6x	Y03 Ctpb  6x	A87 15x90x30  1x	A16 Ø8  1x
A17 4x50  1x	A18 3,5x18  2x	A06 18 mm  C1 44x C2 30x	Z40 20X3  3x	A69 P.D.  12x
A50 3,5x16(black)  6x				

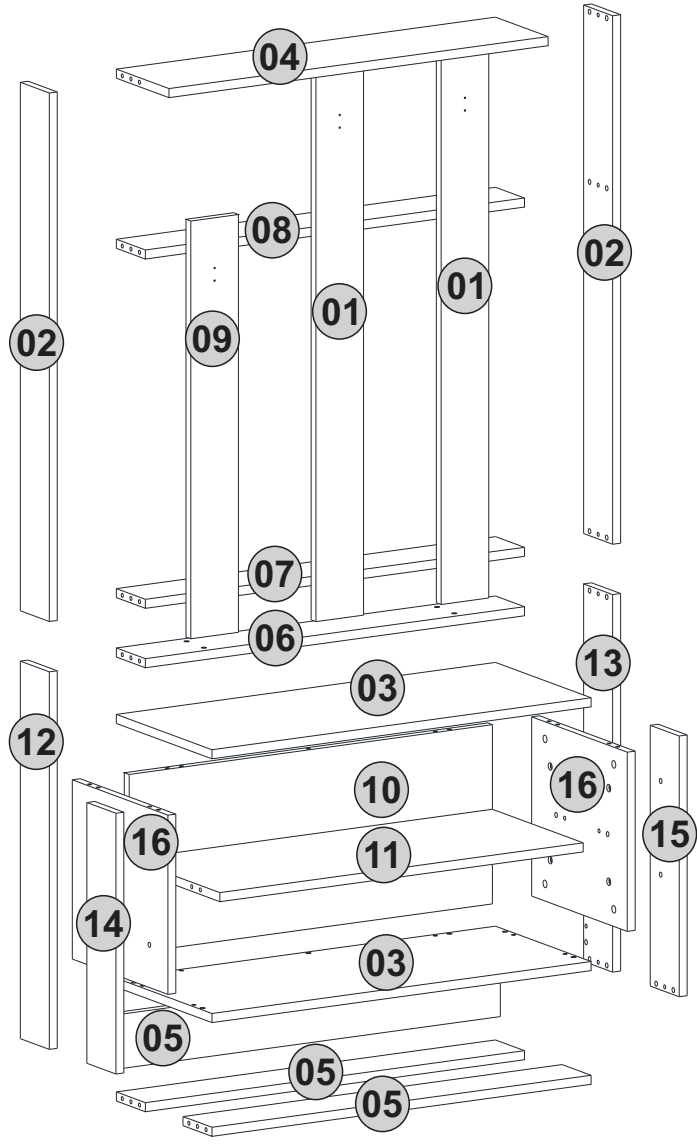


1. step

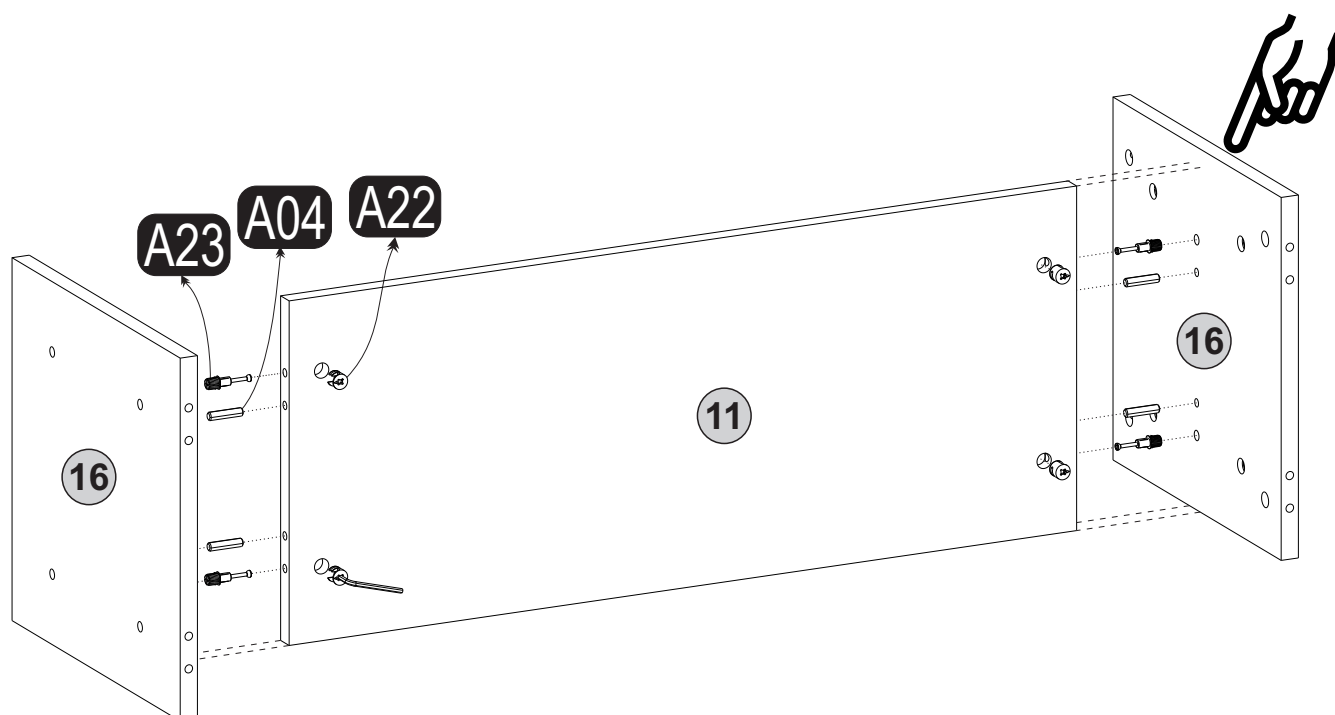



2. step

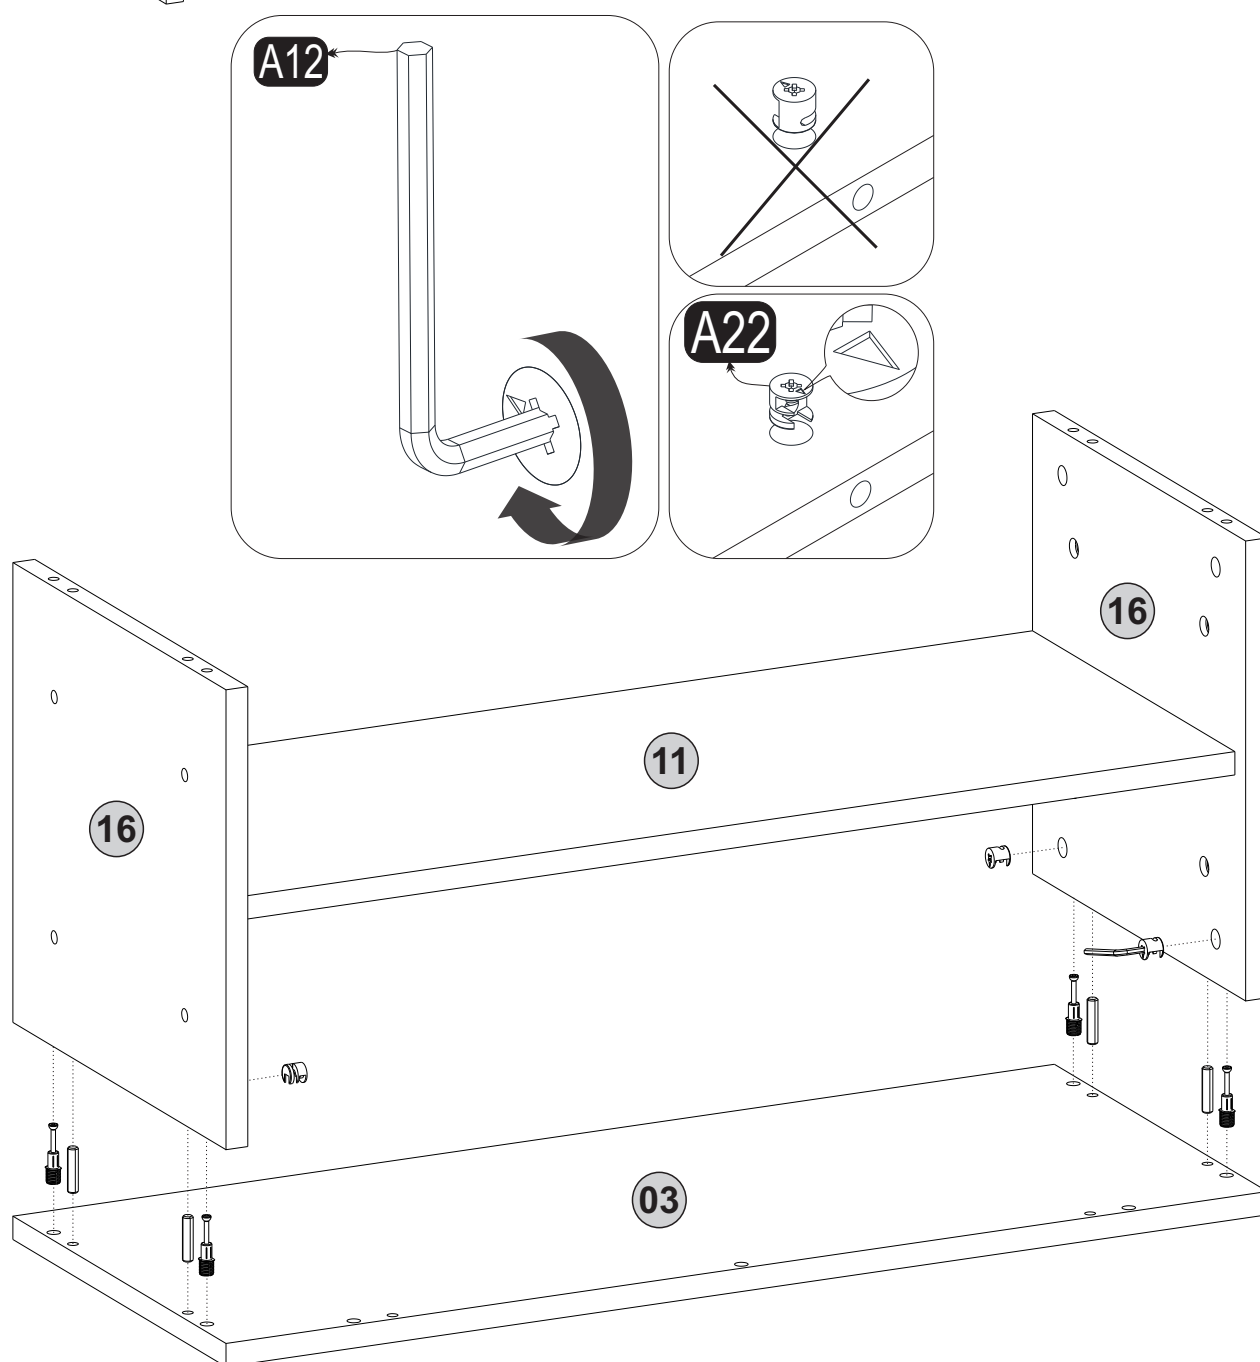



3. step

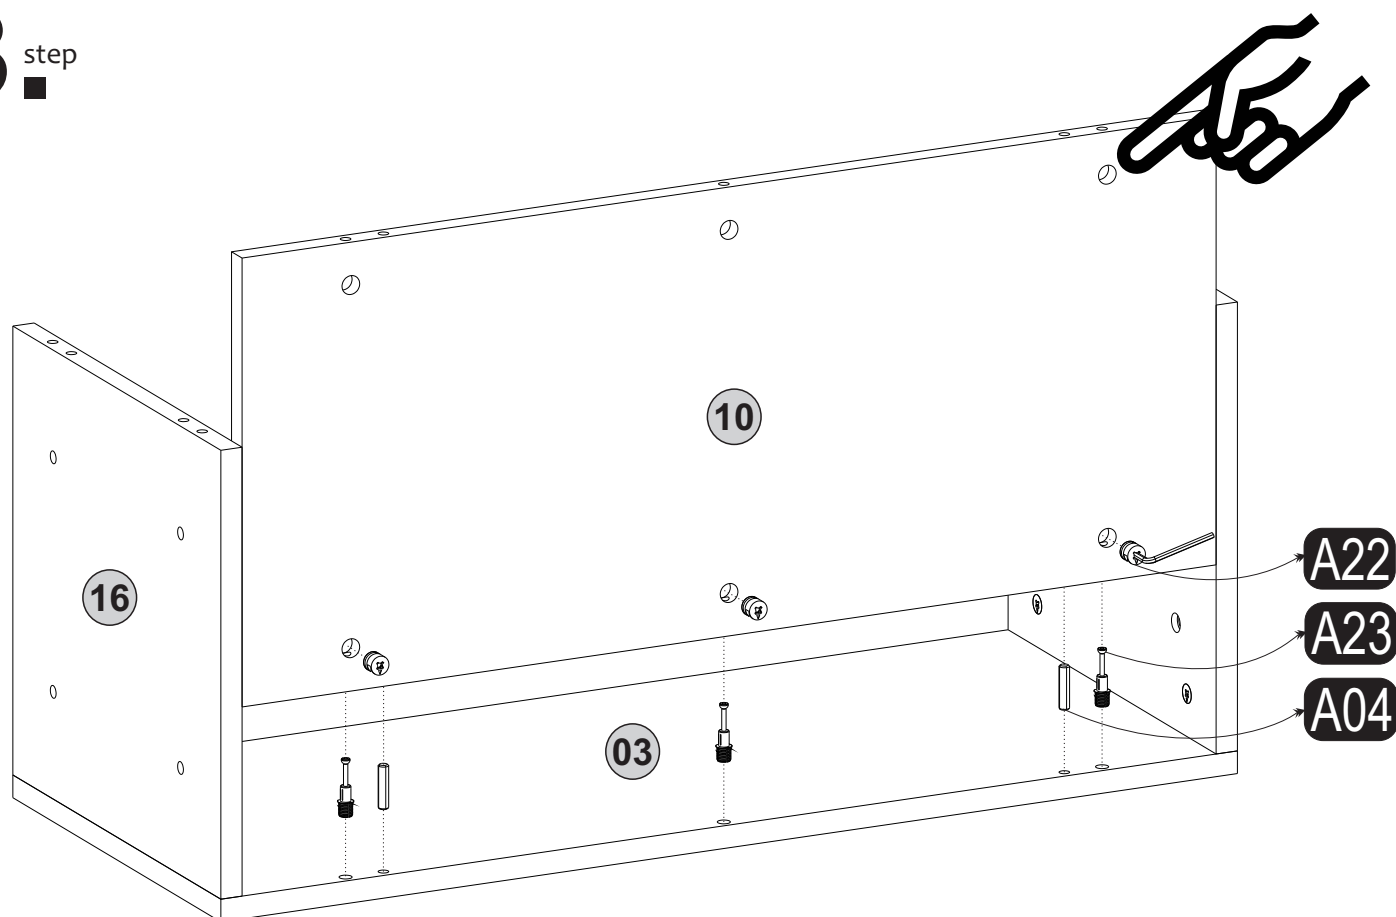






4. step

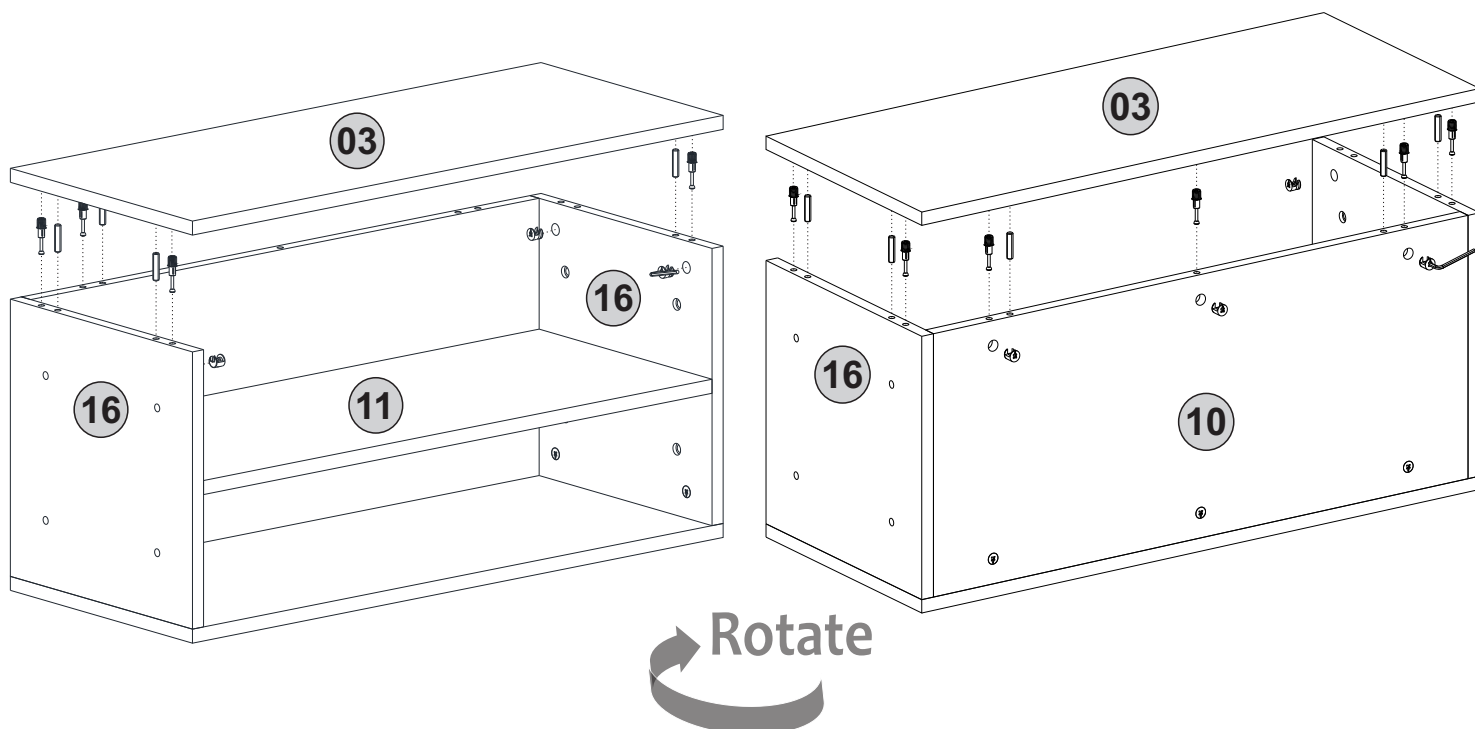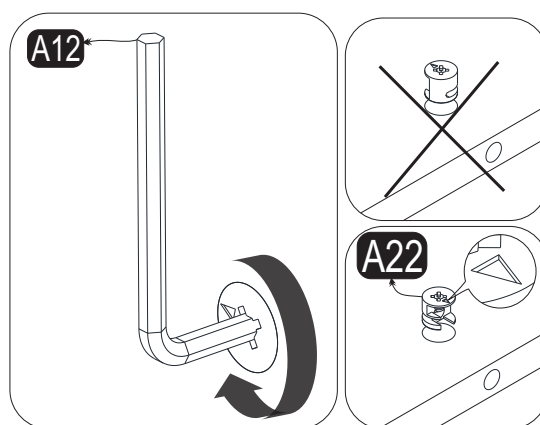



5^{step}

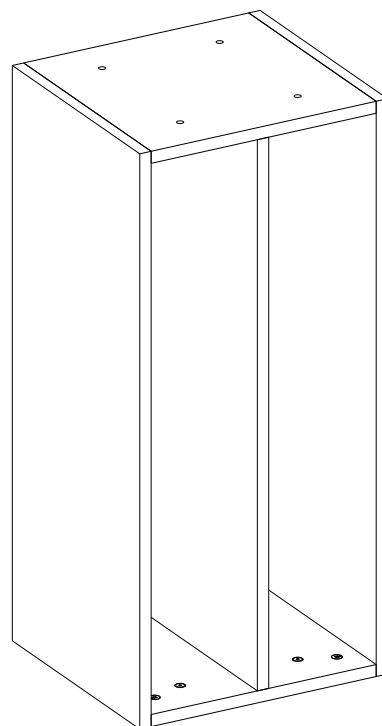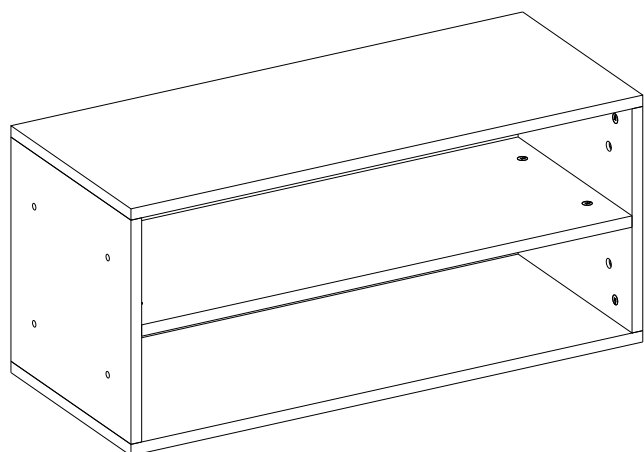

6^{step}

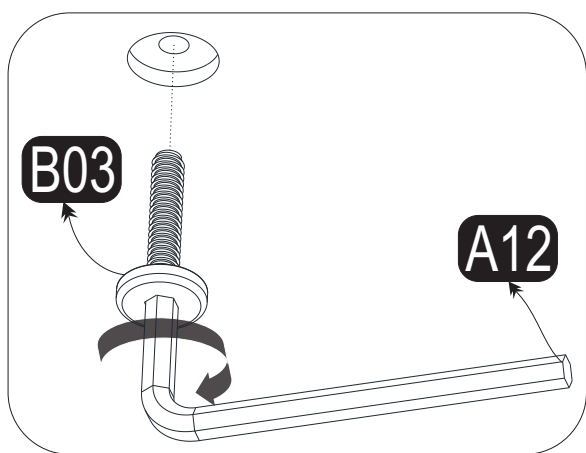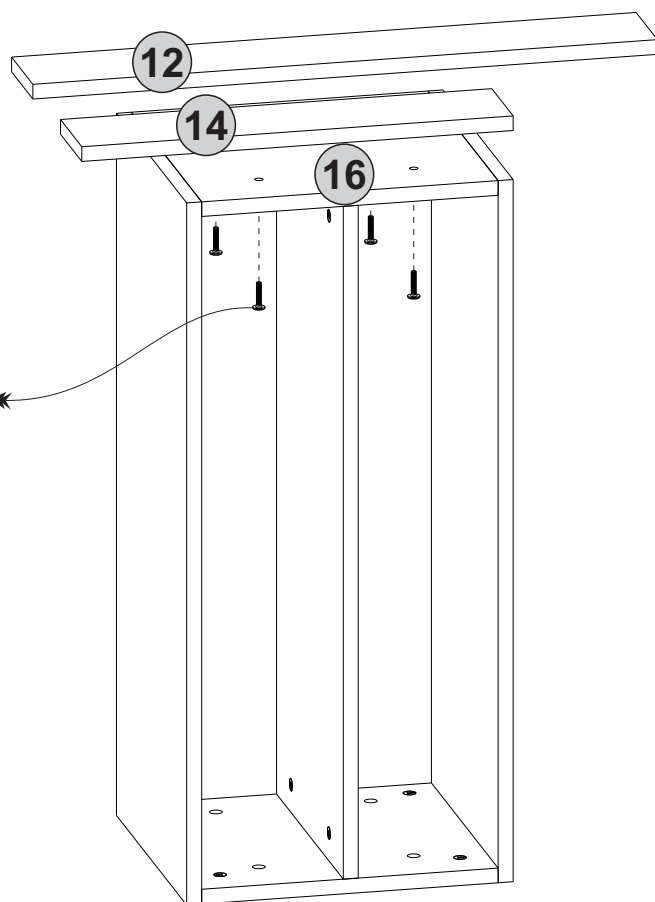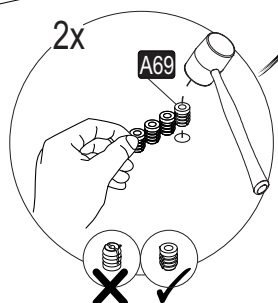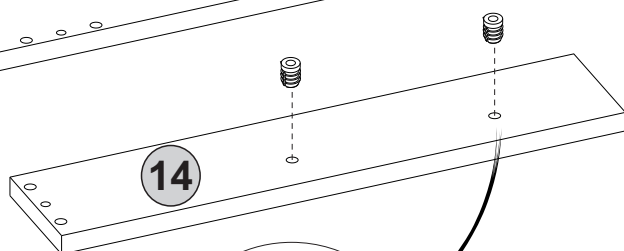
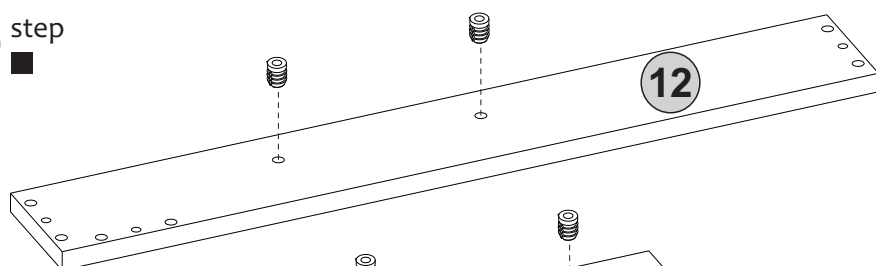


7 step

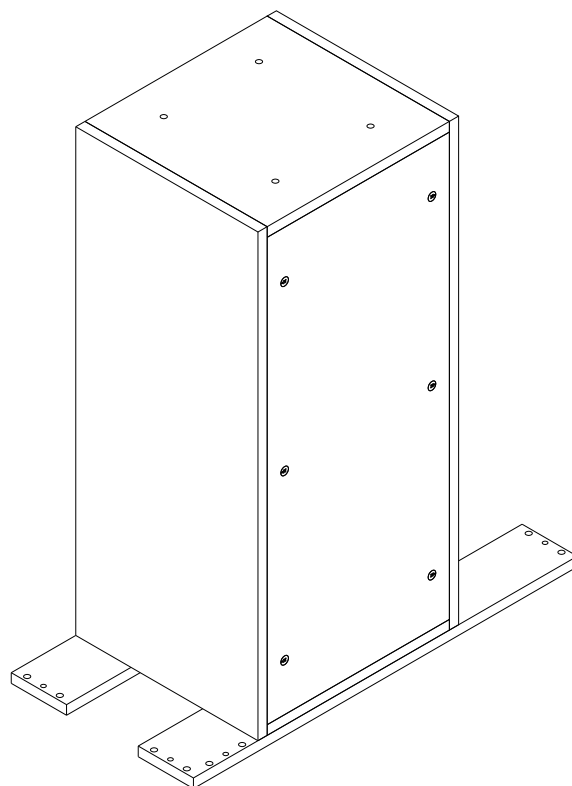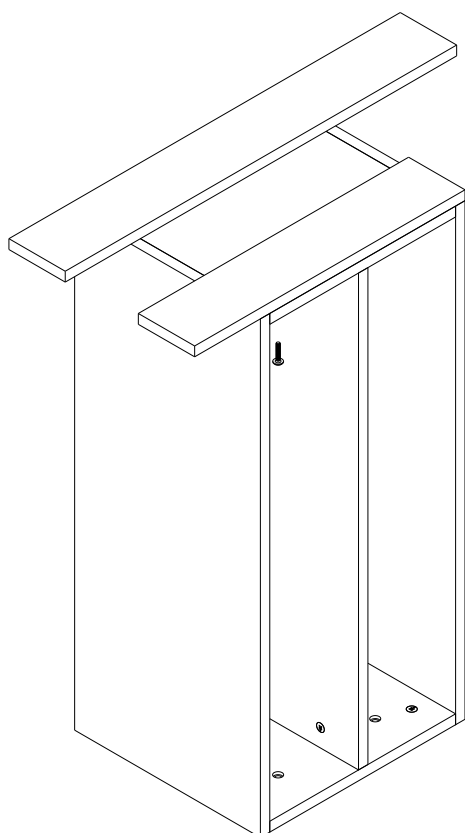


Rotate





8 step

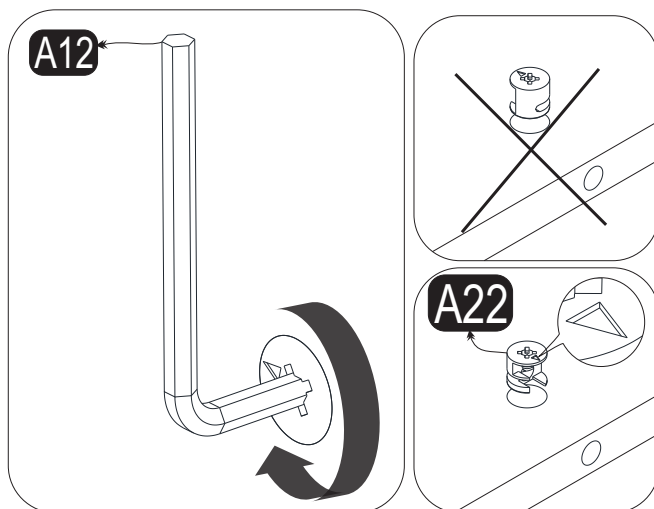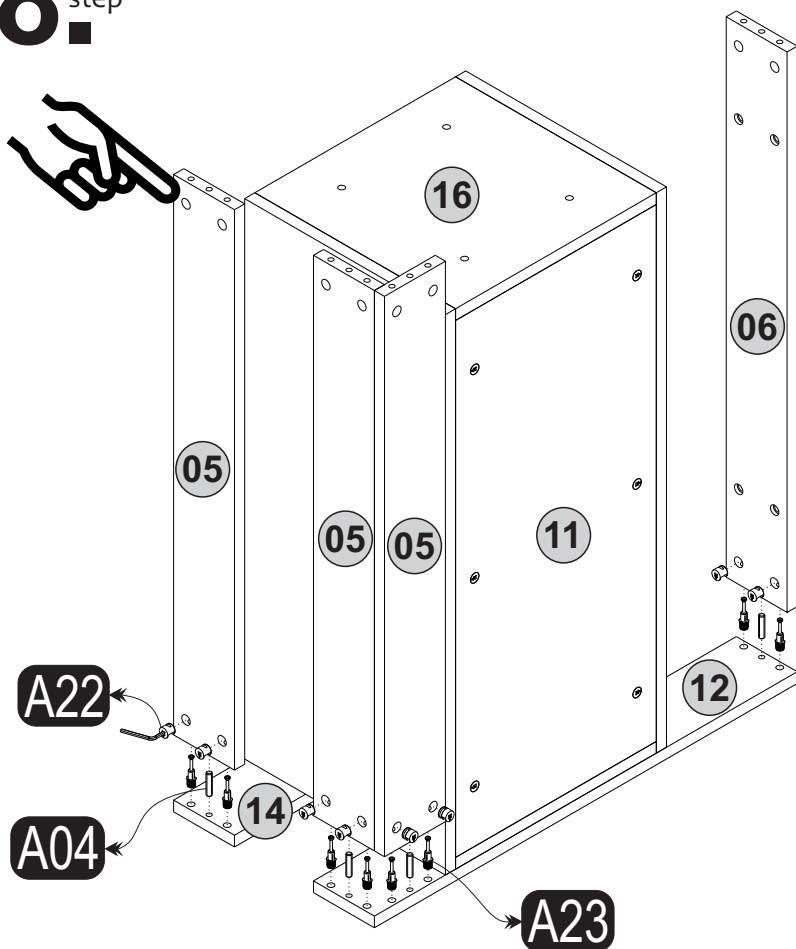


9_{step}

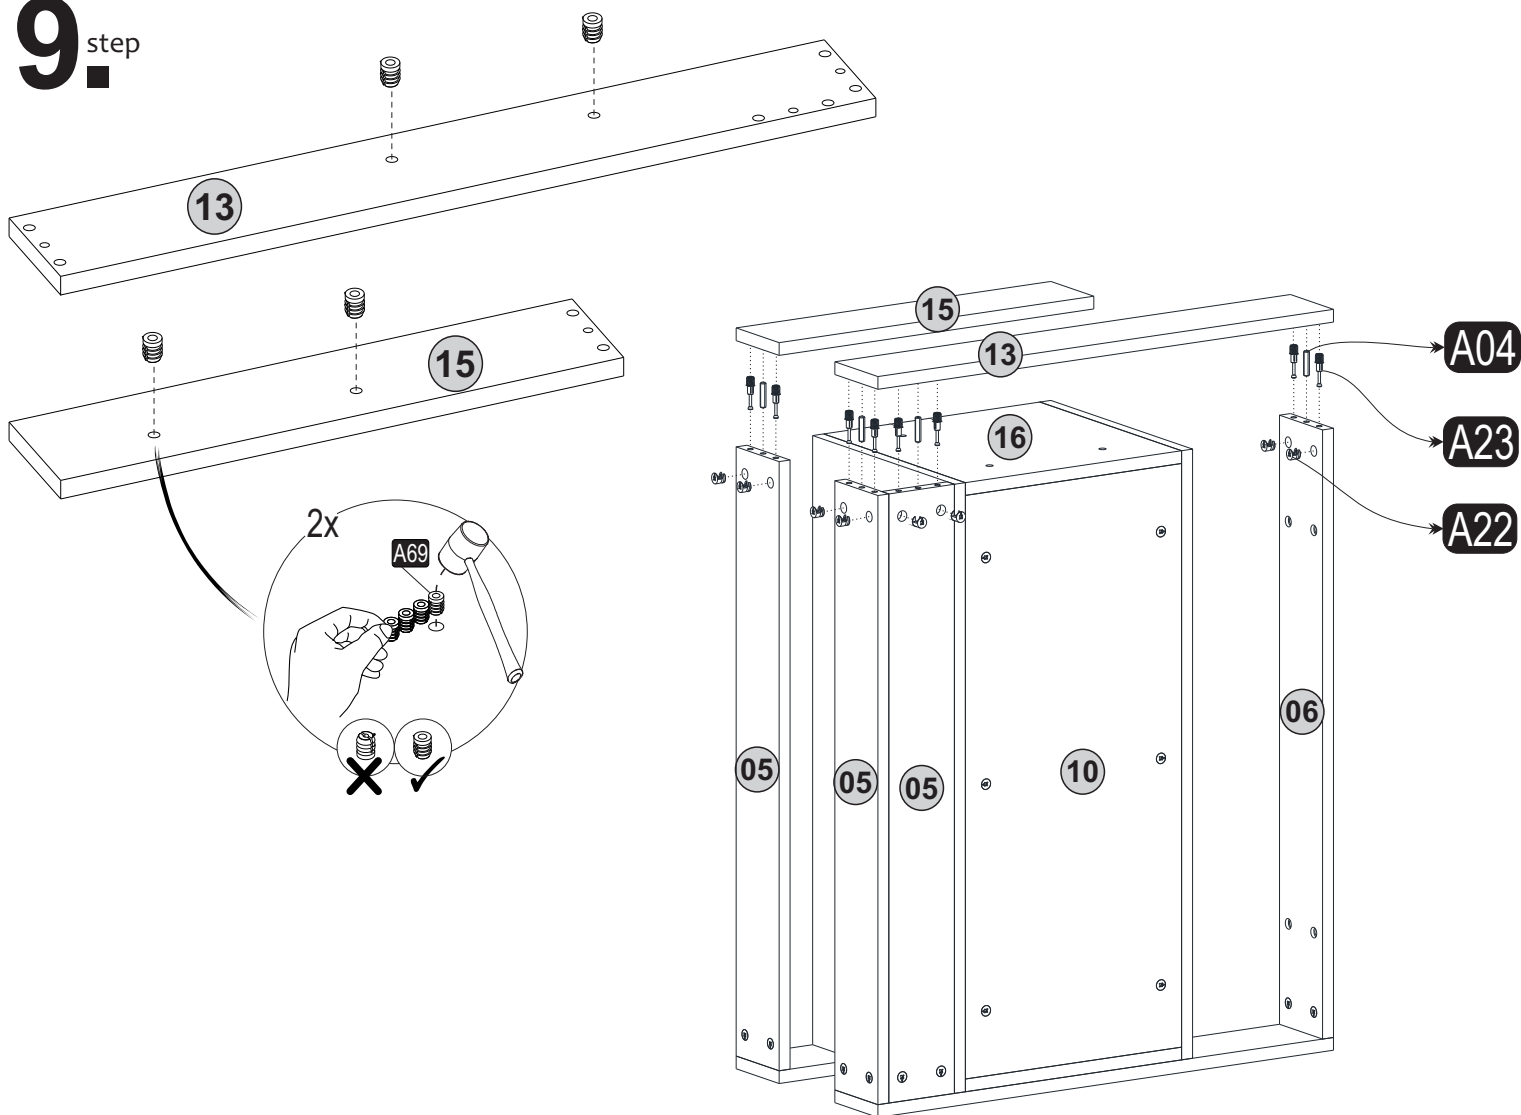


10_{step}

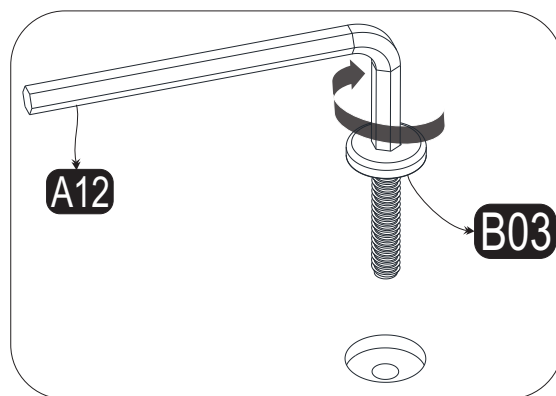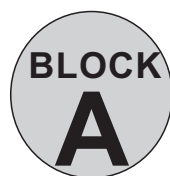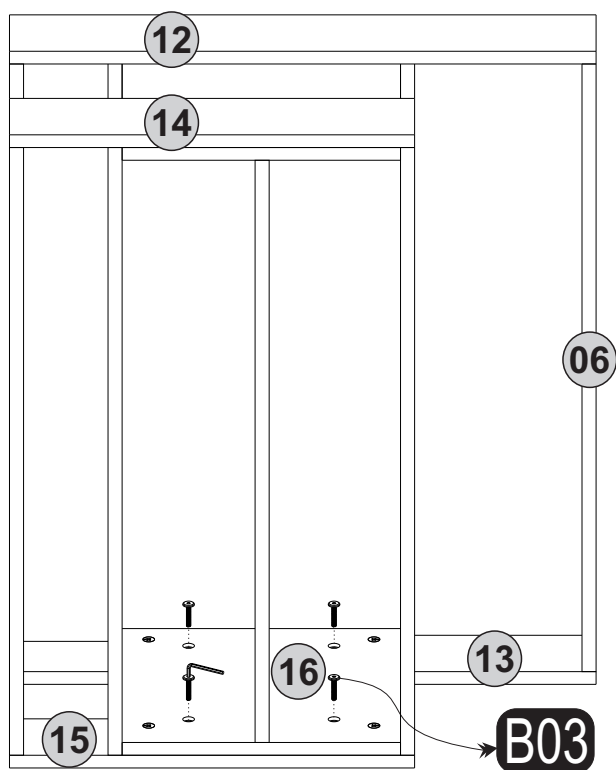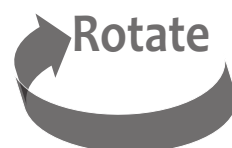




11^{step}

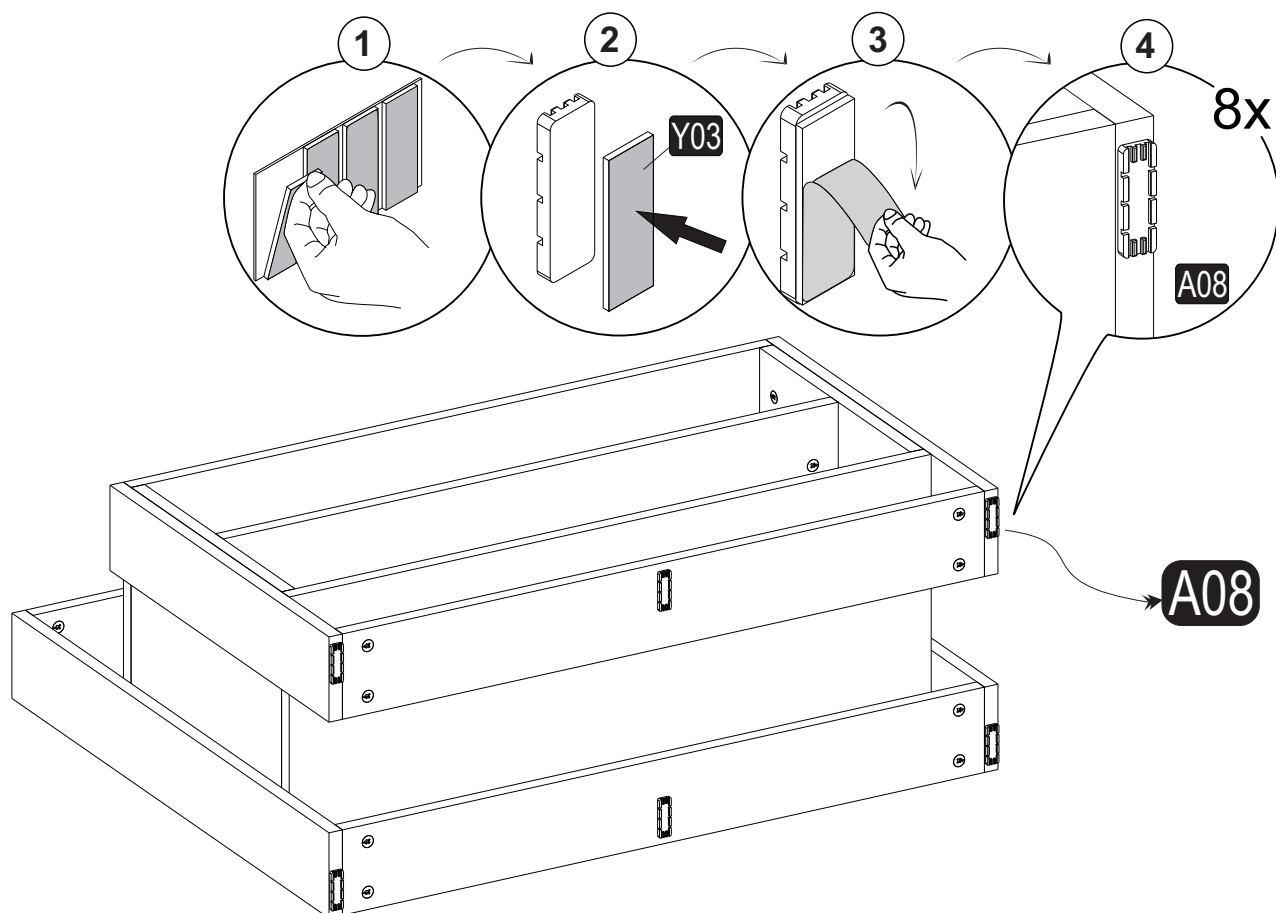




12^{step}

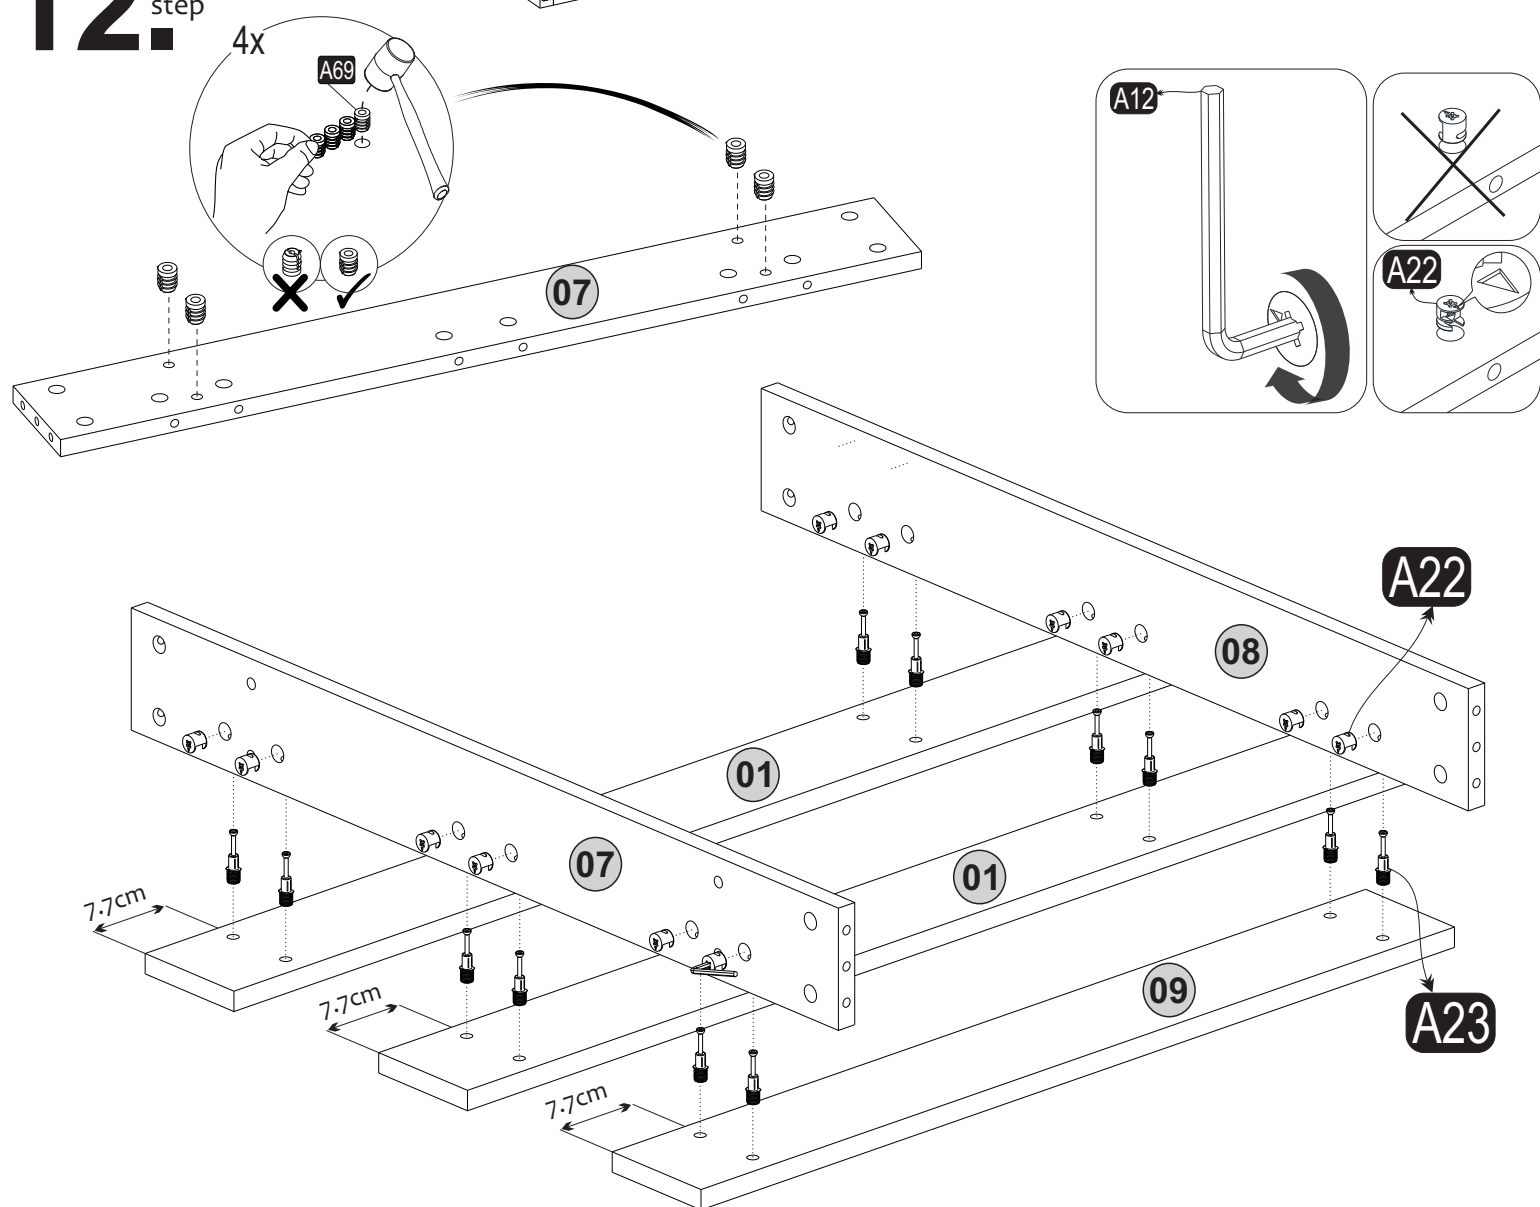



13.^{step}

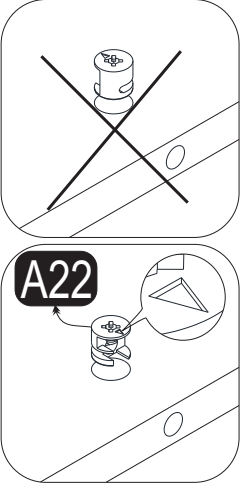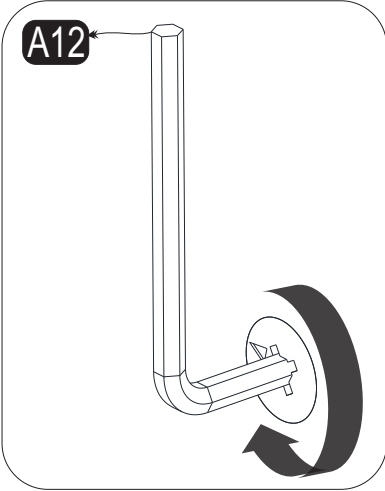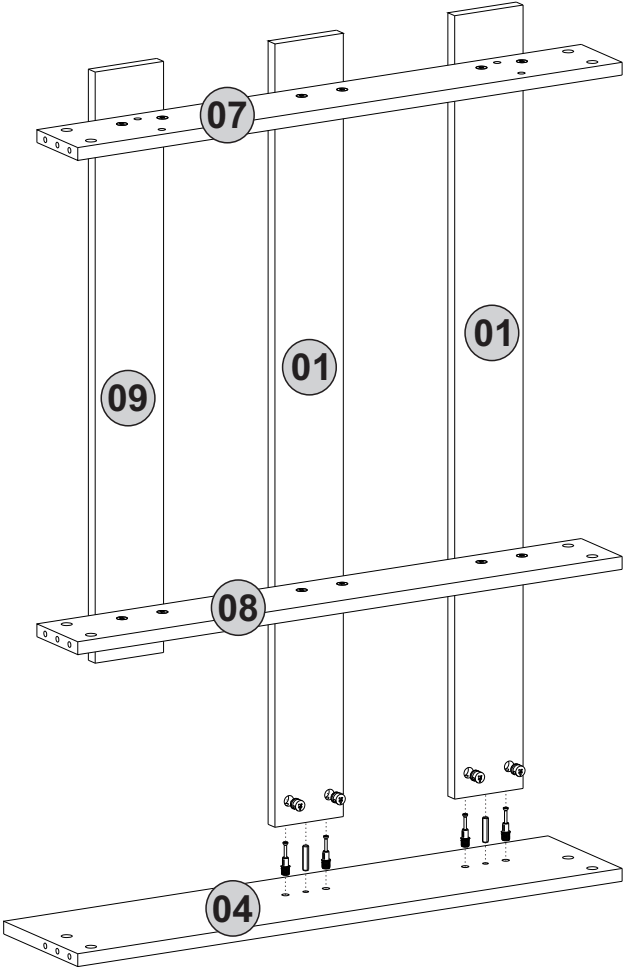





14.^{step}

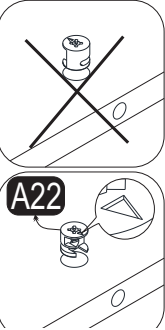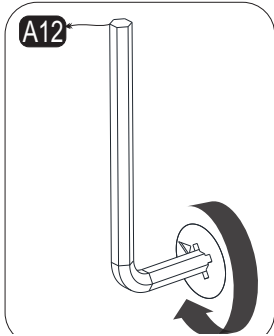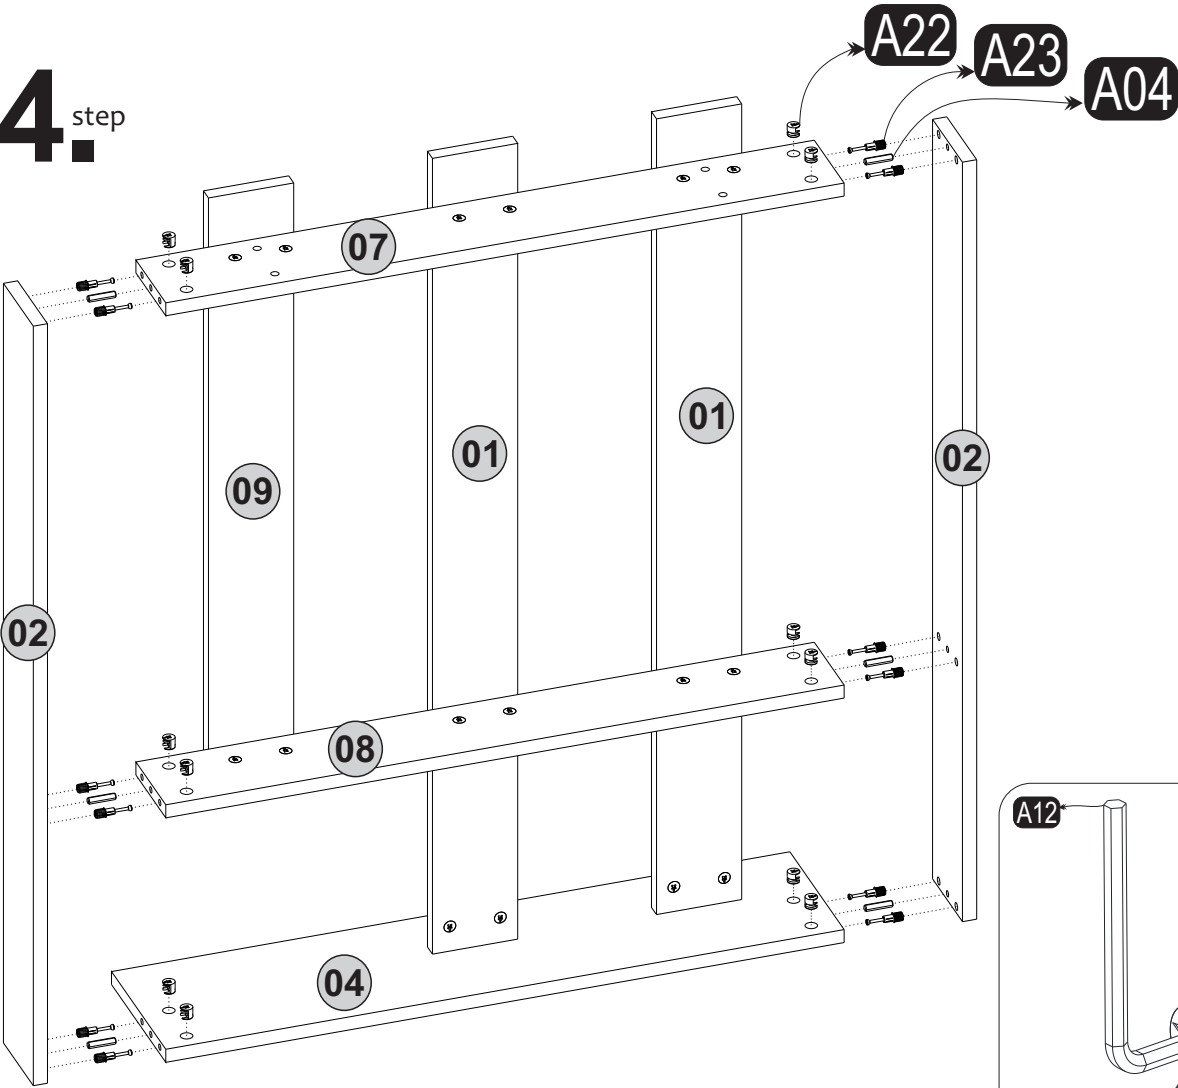

15.^{step}

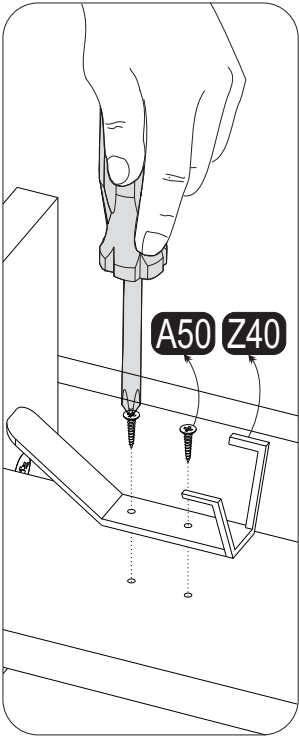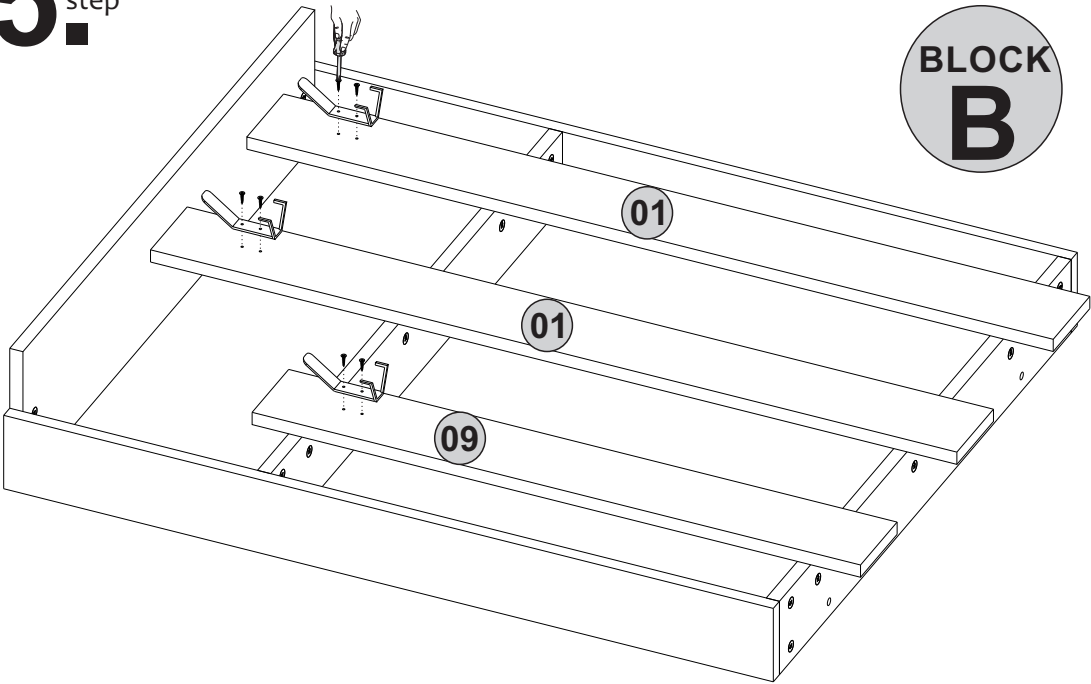

16.^{step}

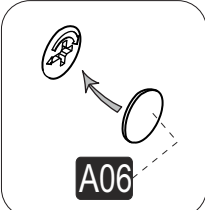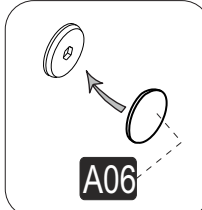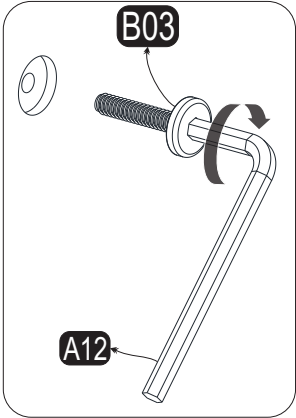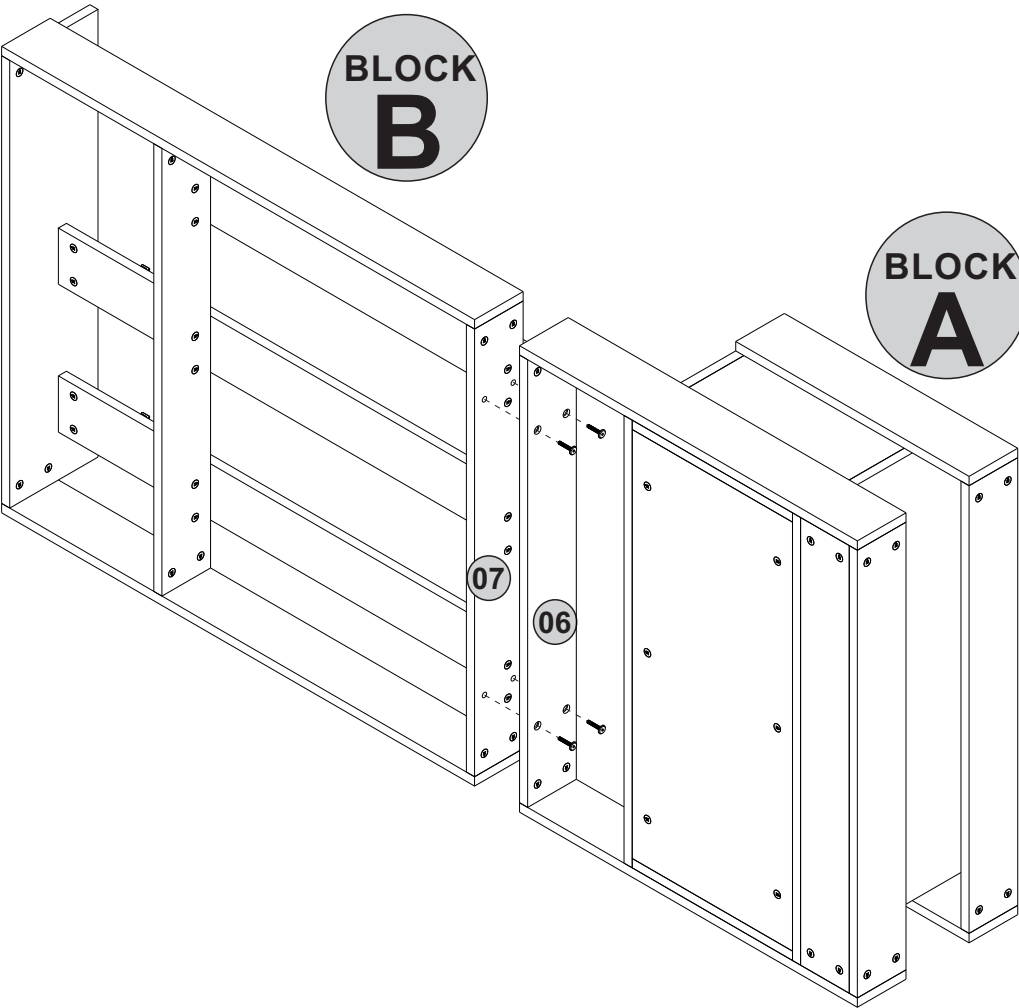

17. step

