










GP037-0019,4




Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.





ACCESSORY LIST




A22 Minifix k18  24x Allen	A23 Minifix M10  16x 5mm	A05 Minifix M6  8x 18mm	A04 Ø8  16x P.D.	B03 25 mm  8x
A12  1x	A08  C2-8x	A06  C2-32x	A69  16x	

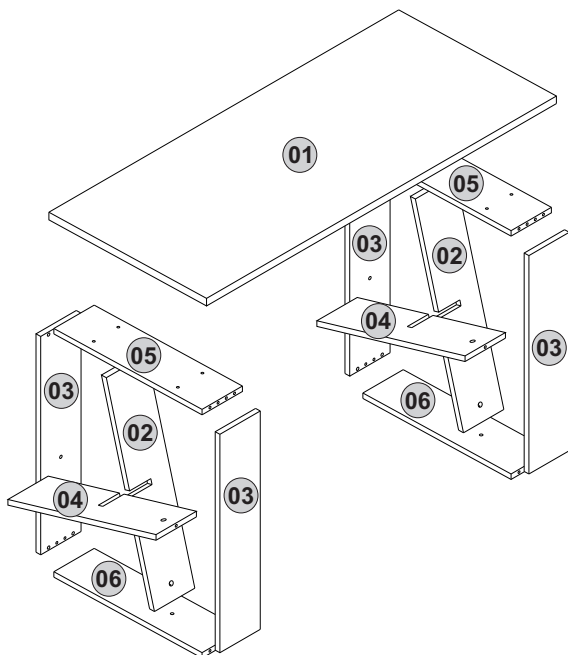


1. step

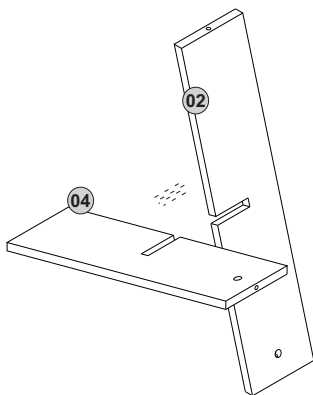


2. step

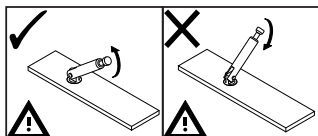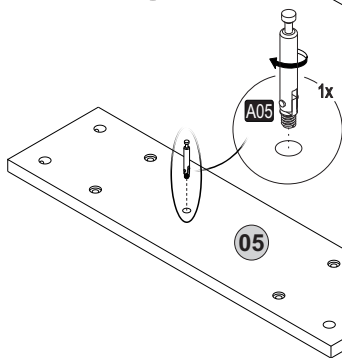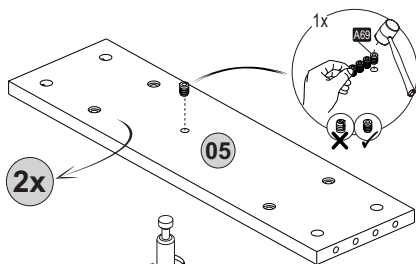


3. step

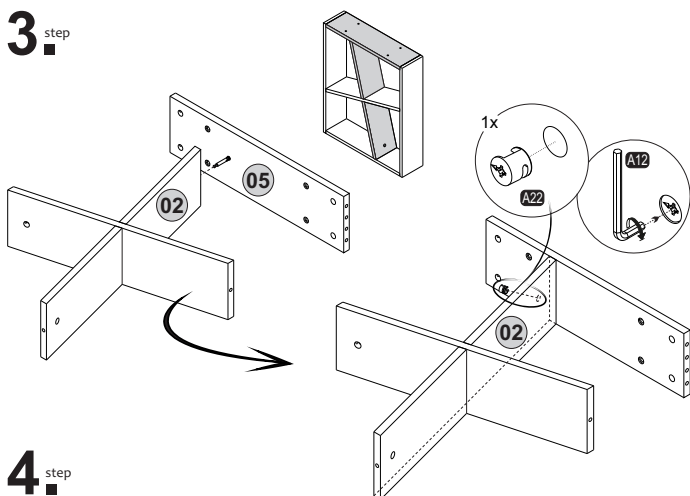


4. step

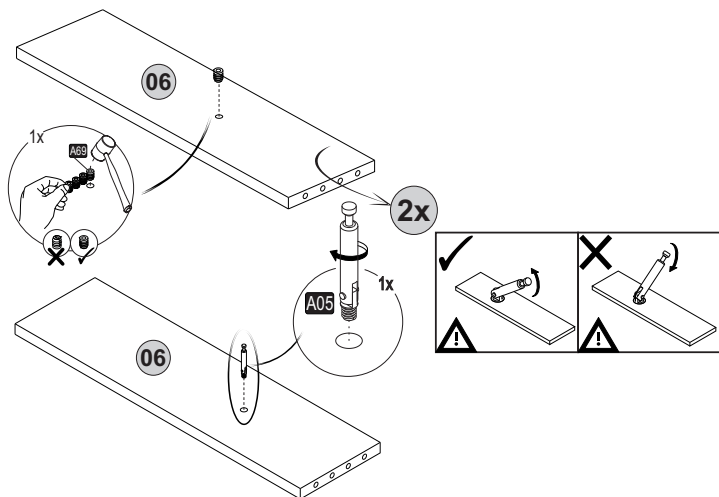



5^{step}

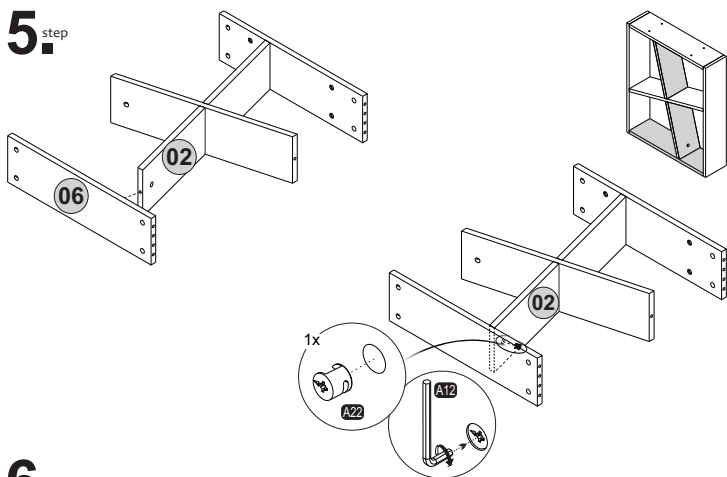


6^{step}

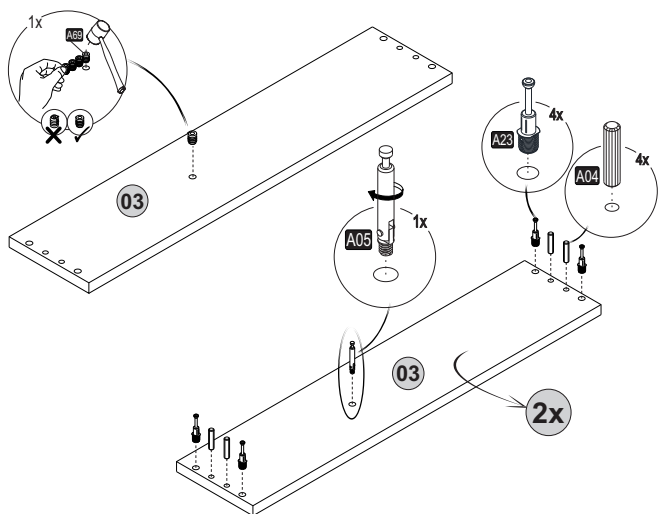


7^{step}

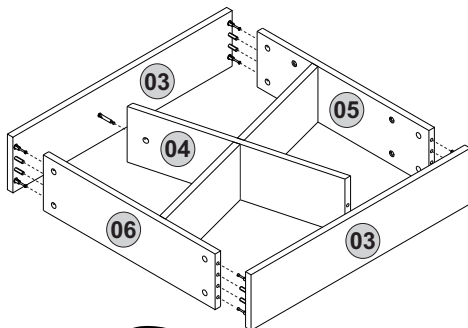

8^{step}

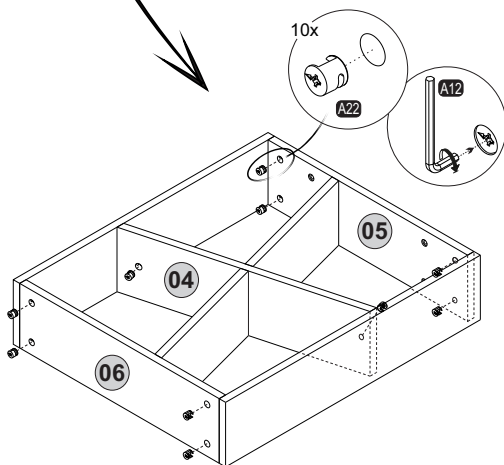

9.^{step}

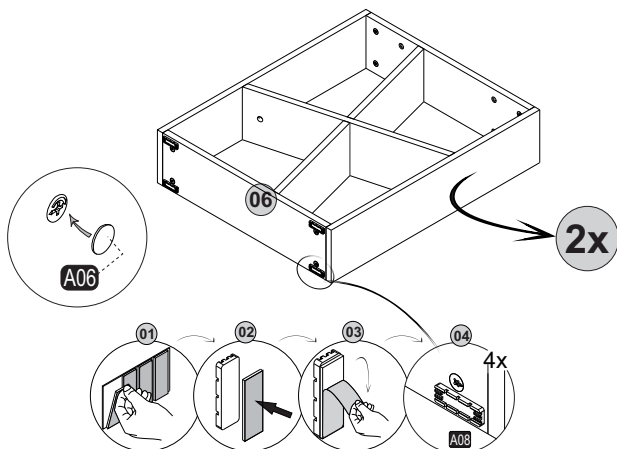

10.^{step}

