


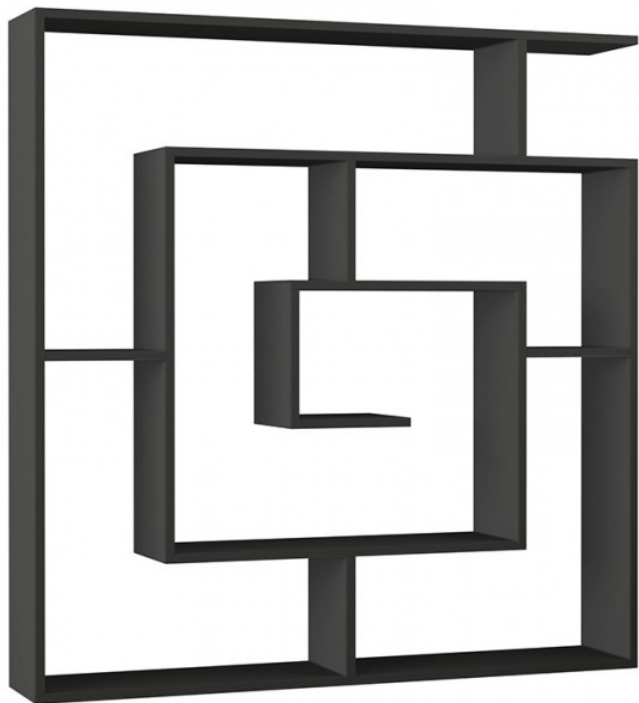









GP037-0022,3




Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.




ACCESSORY LIST


A13  50mm 40x 15x90x30 1x	A12  4 SW 1x	A26  Allen 1x Db08	A08  Pabuç 6x 3,5x18	Y03  Ctpb 6x 18mm
A87  1x	A17  4x50 1x	A16  1x	A18  2x	A06  40x

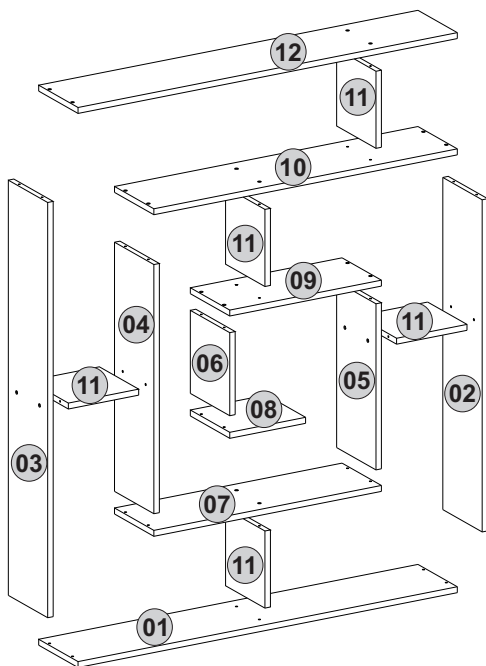


1. step

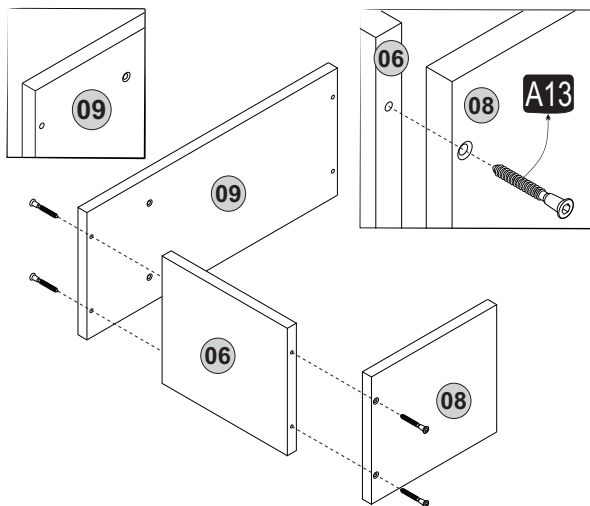


2. step

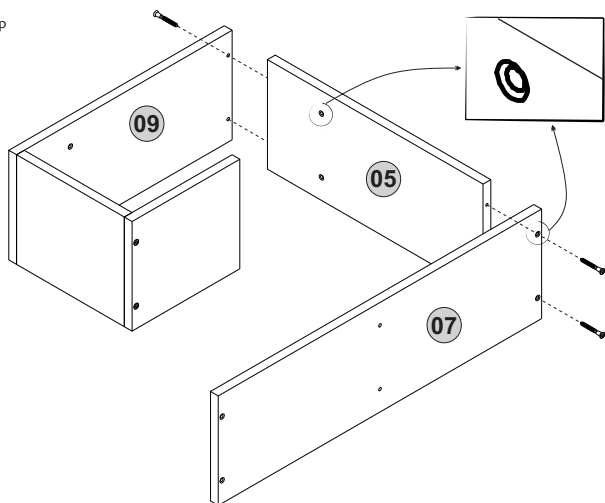


3. step

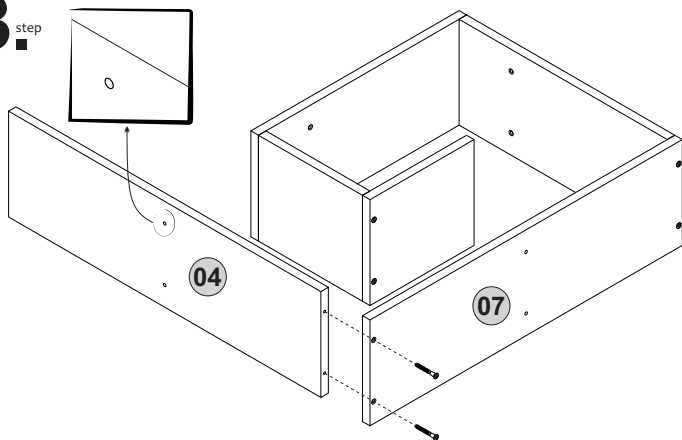


4. step

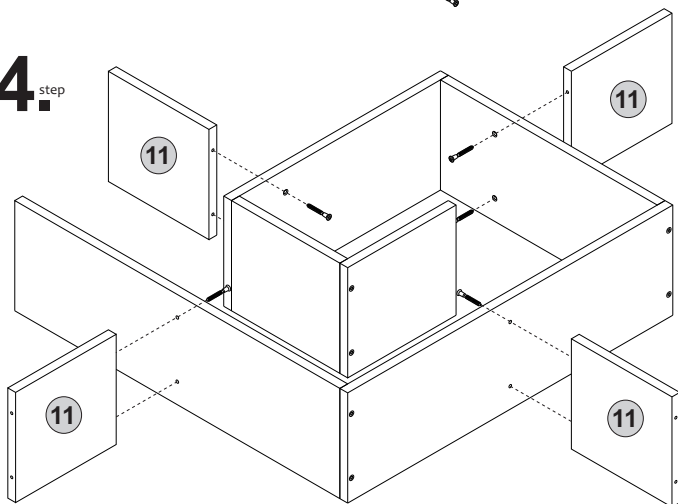







5. step

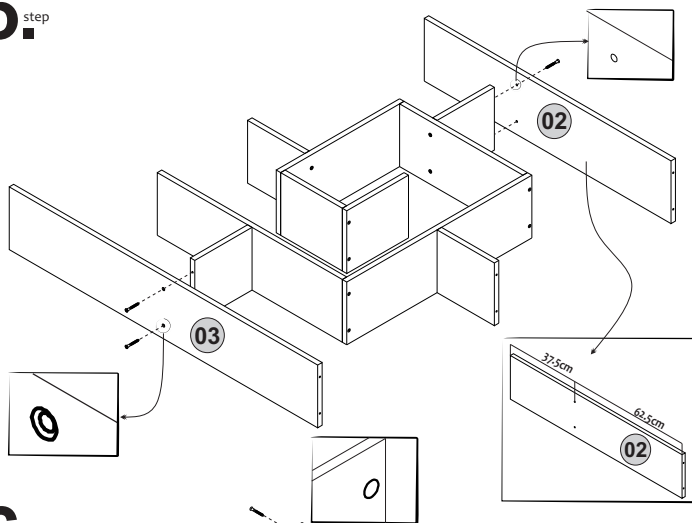

6. step

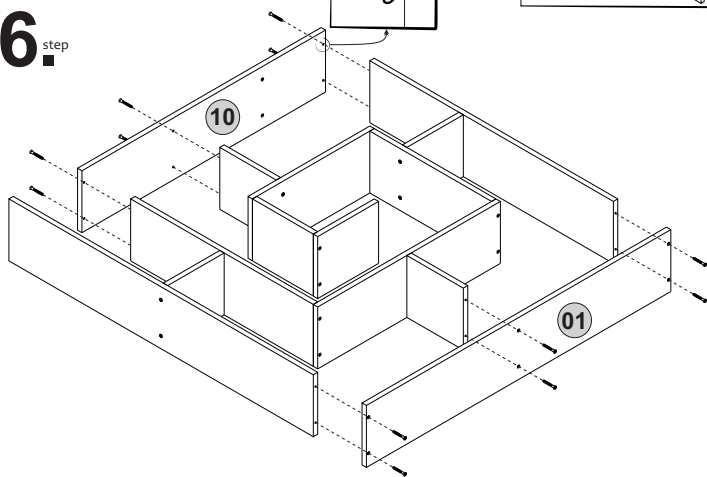

7
step

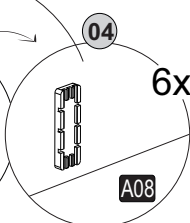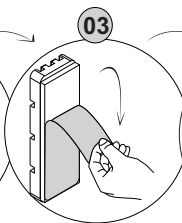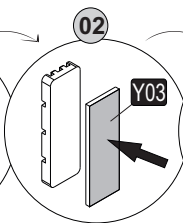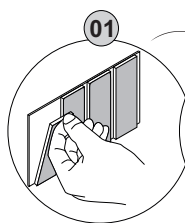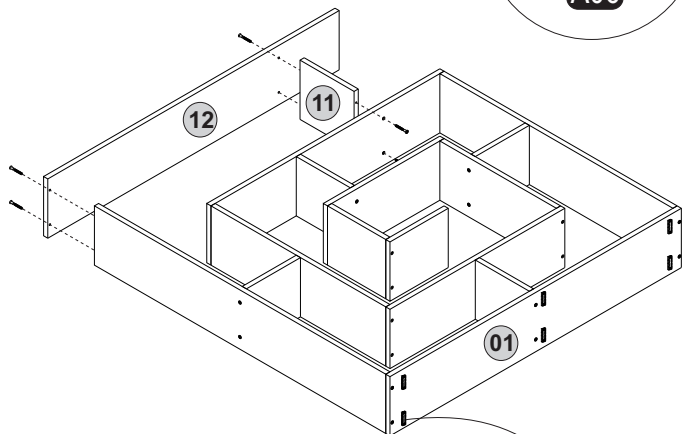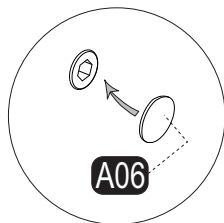

8 step

