







**GP037-0030,4**




Follow the installation steps in the order as shown.  
Position the parts as shown in the installation guide steps.




## ACCESSORY LIST


<b>A22</b>  Minifix k18 <b>32x</b>	<b>A23</b>  Minifix M10 <b>32x</b>	<b>A04</b>  Ø8 <b>16x</b>	<b>A12</b>  4 SW <b>1x</b>	<b>A08</b>  <b>6x</b>
<b>A06</b>  18 mm <b>32x</b> Ci				

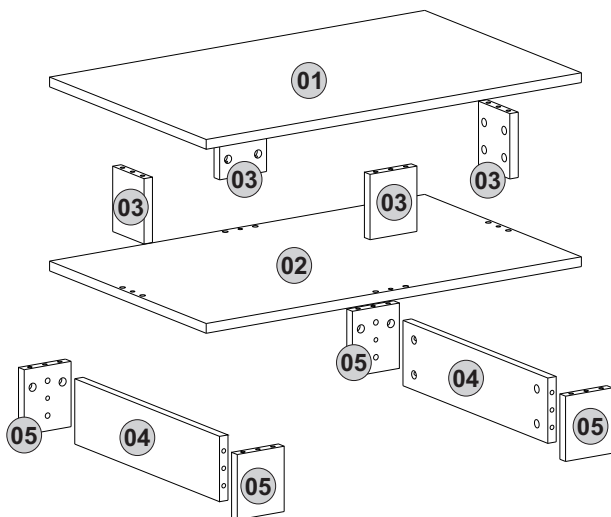


**1.**step

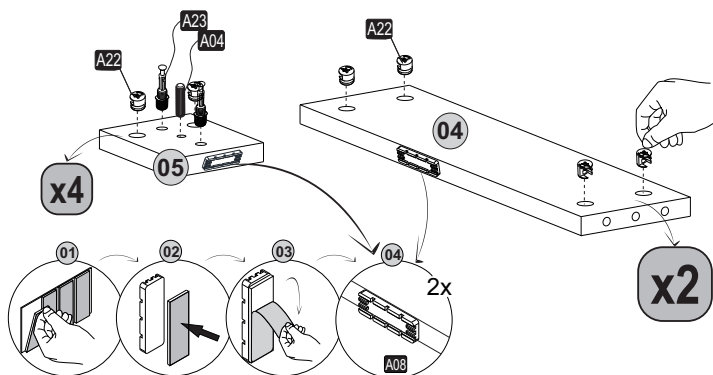


**2.**step

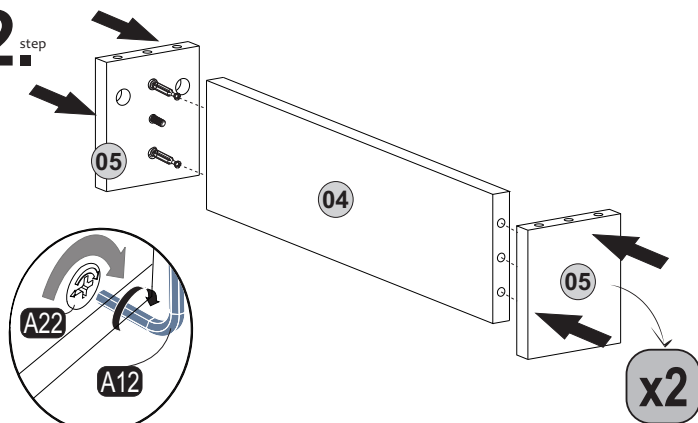


**3.**step

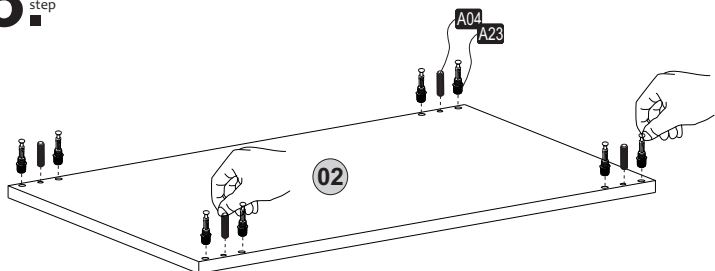


**4.**step

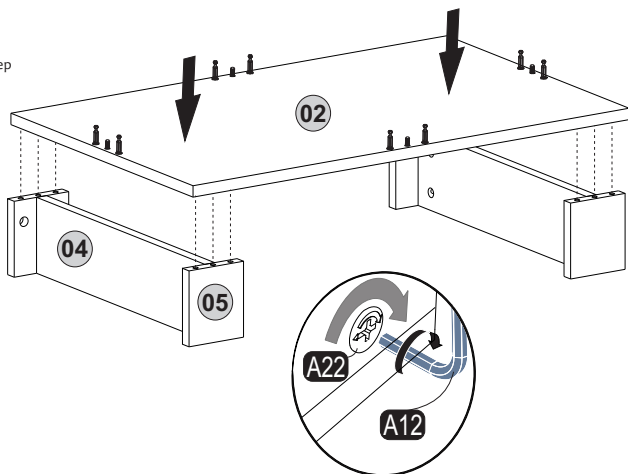



# 5<sup>step</sup>

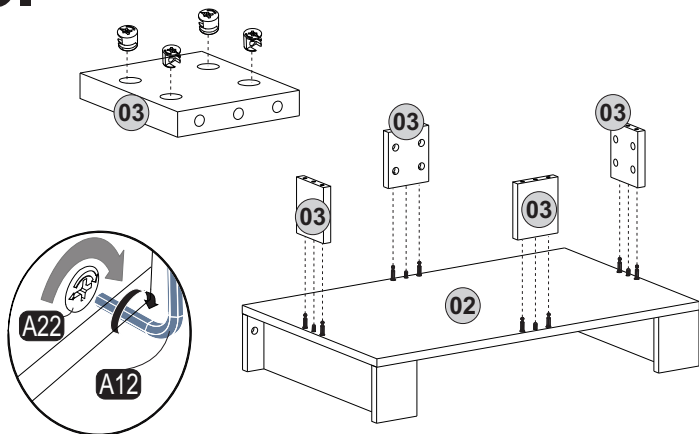

# 6<sup>step</sup>

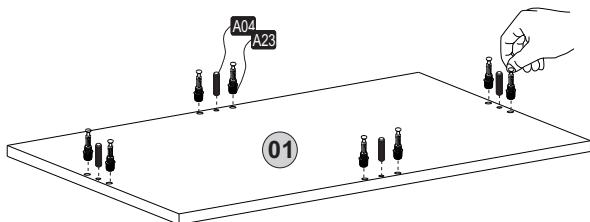

# 7<sub>step</sub>

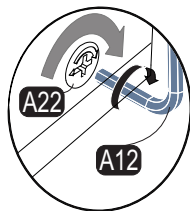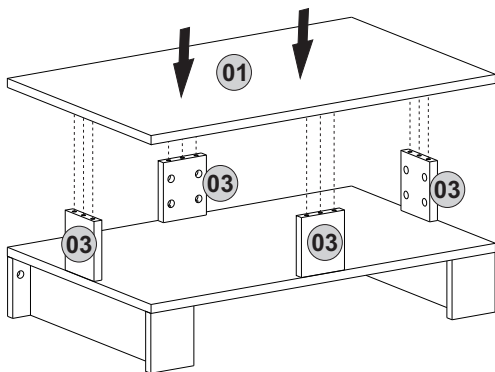

# 8<sub>step</sub>

