

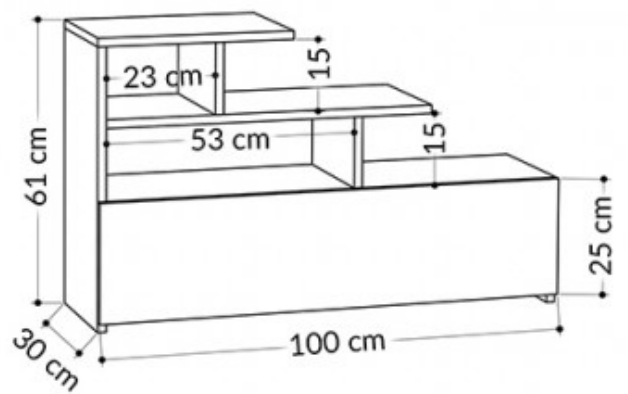
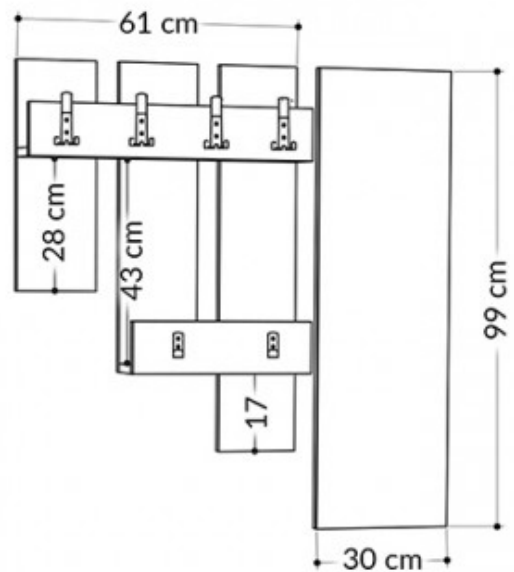










i GP037-0043,4




A22  Minifix k18 28x	A23  Minifix M10 28x	A04  Ø8 28x	A13  50mm 10x	A12  4 SW 1x
A26  Allen 1x	Z40  20x35x105 4x	Z39  20x30x45 2x	A50  3,5x16(black) 12x	C01  DM 2x
C04  Mtk 2x	A18  3,5x18 24x	A32  60/16 8x	Z18  Gbody 8x	A16  DbØ8 8x
A17  4X50 8x	A06  C1 28x C2 8x C3 2x	A08  5mm 4x		


Module 2

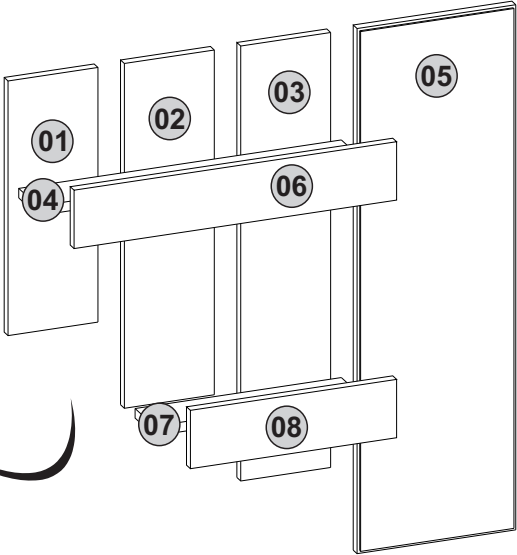



Module 1

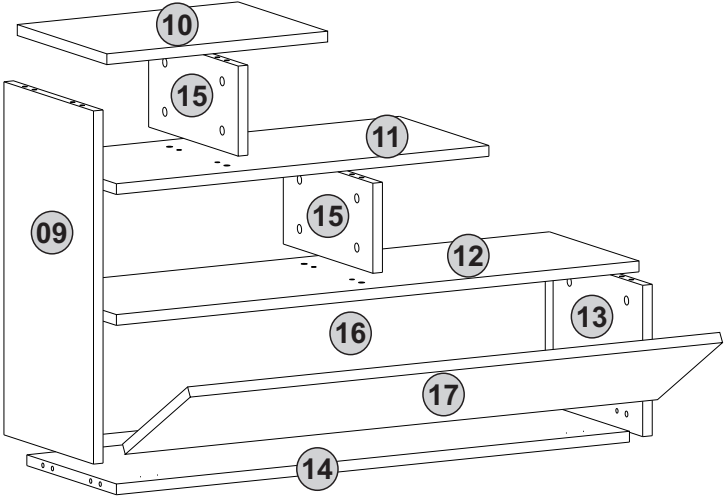





1. step

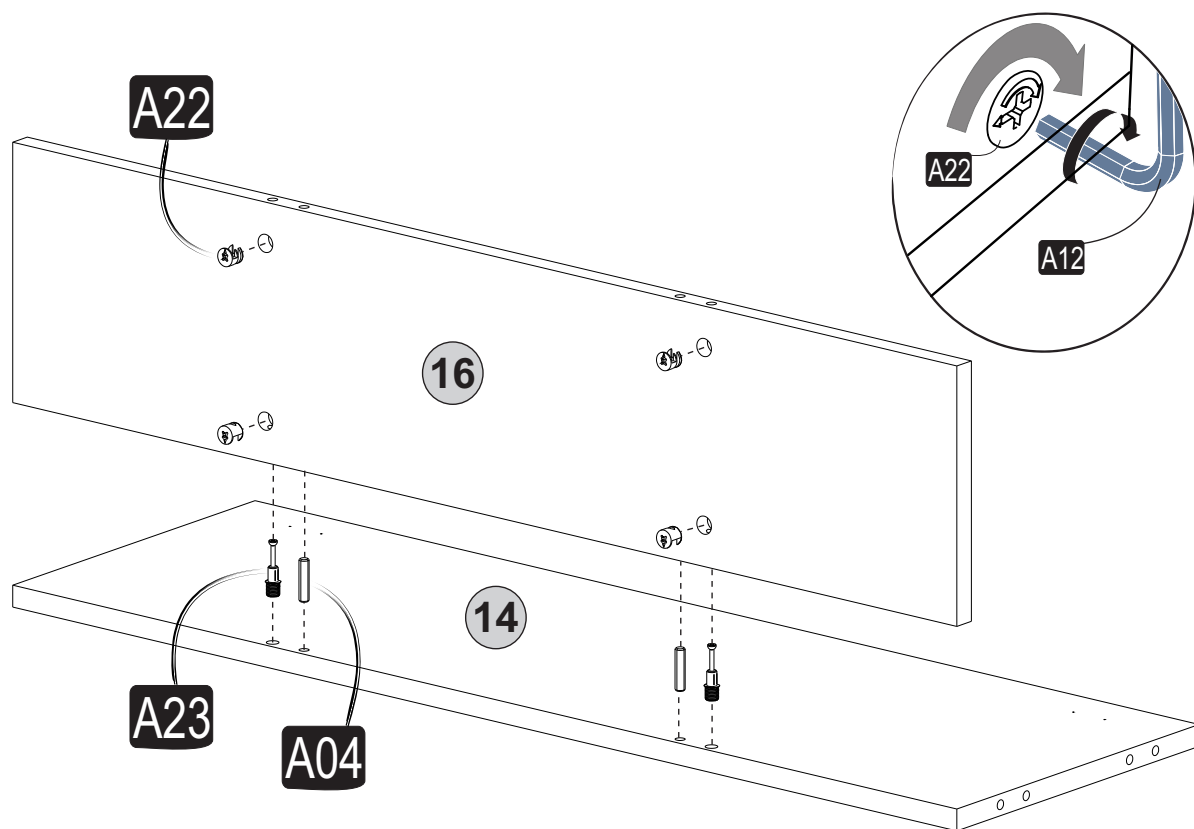


2. step

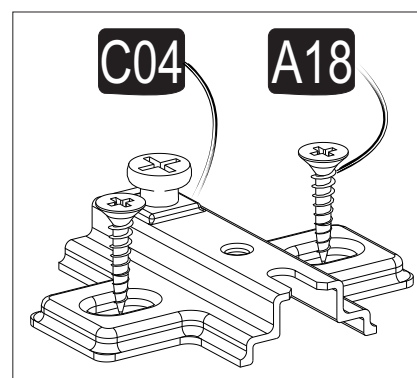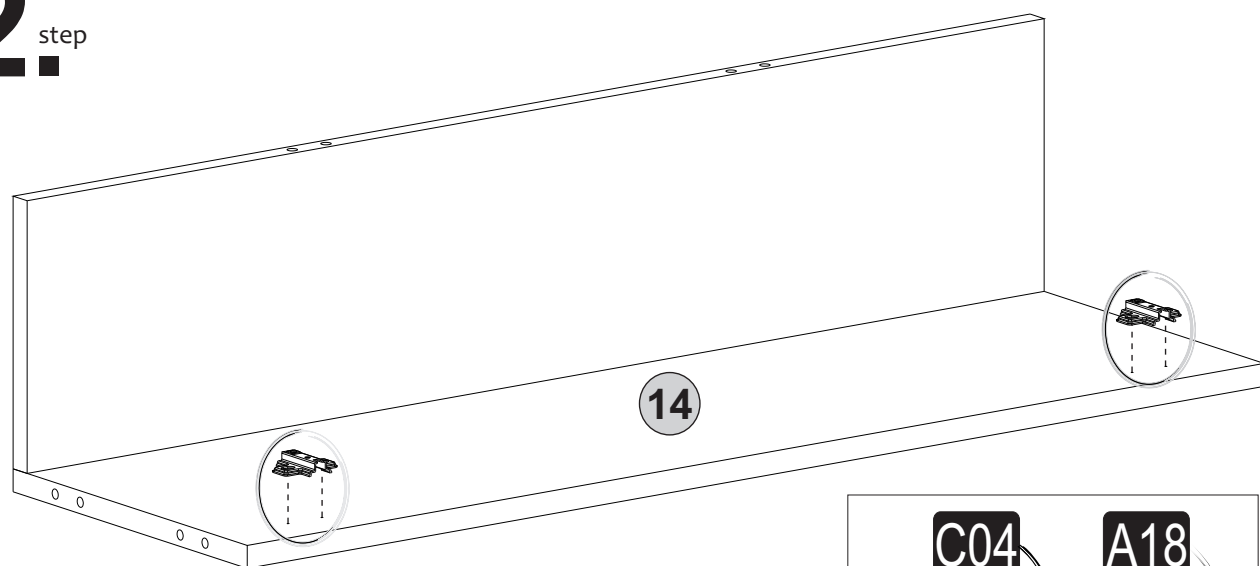


3 step

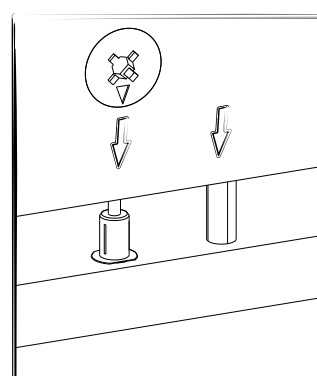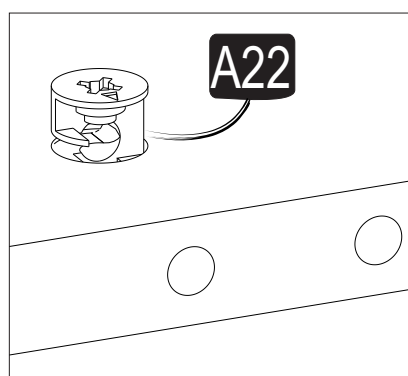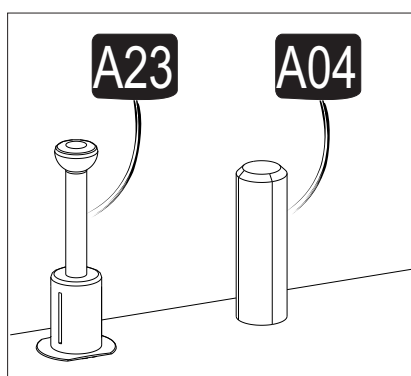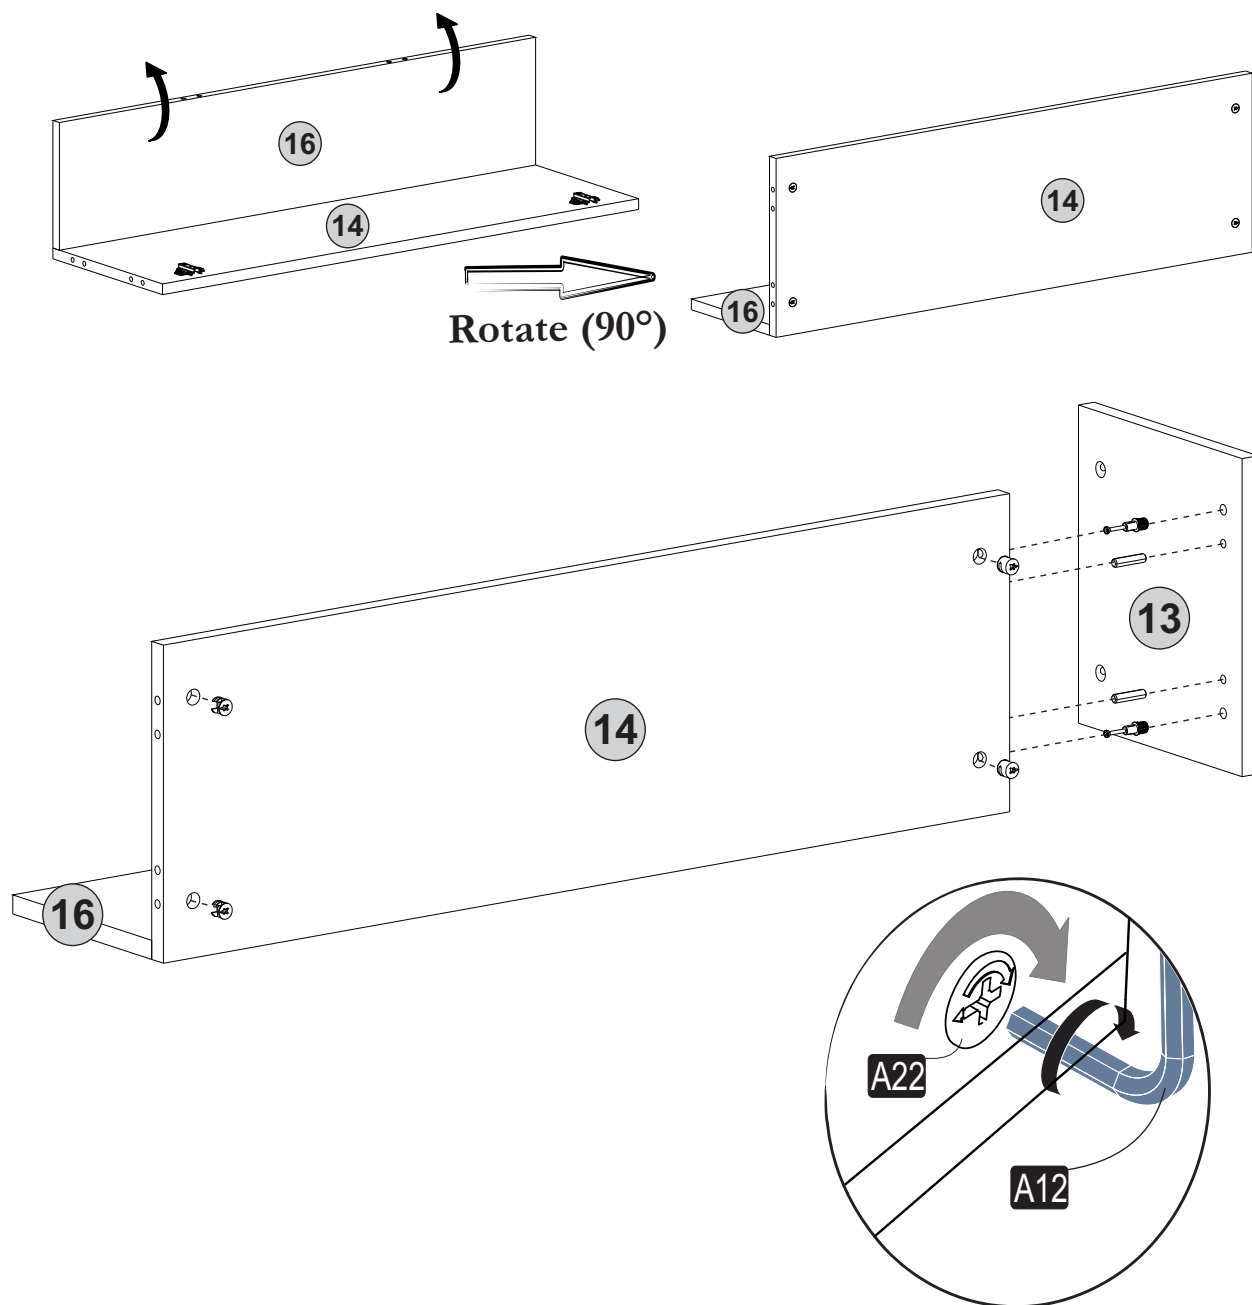


4.^{step}

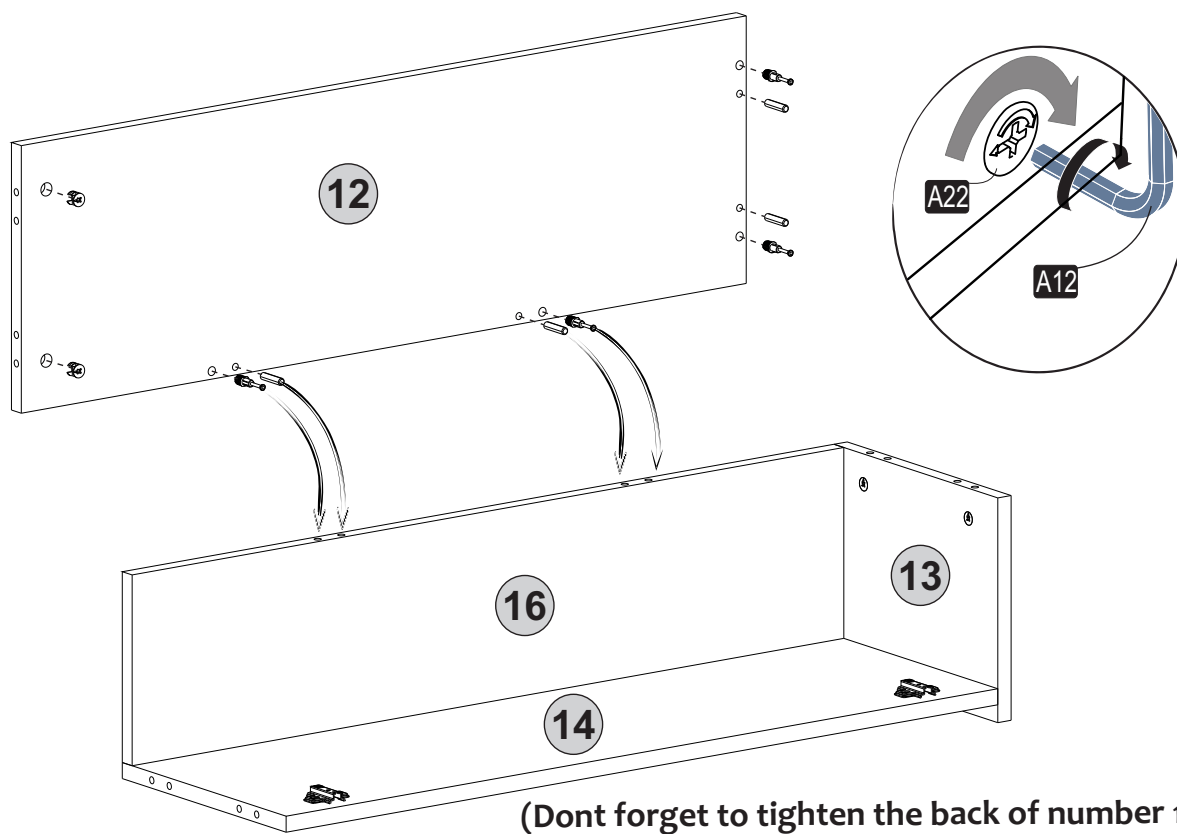


5.^{step}

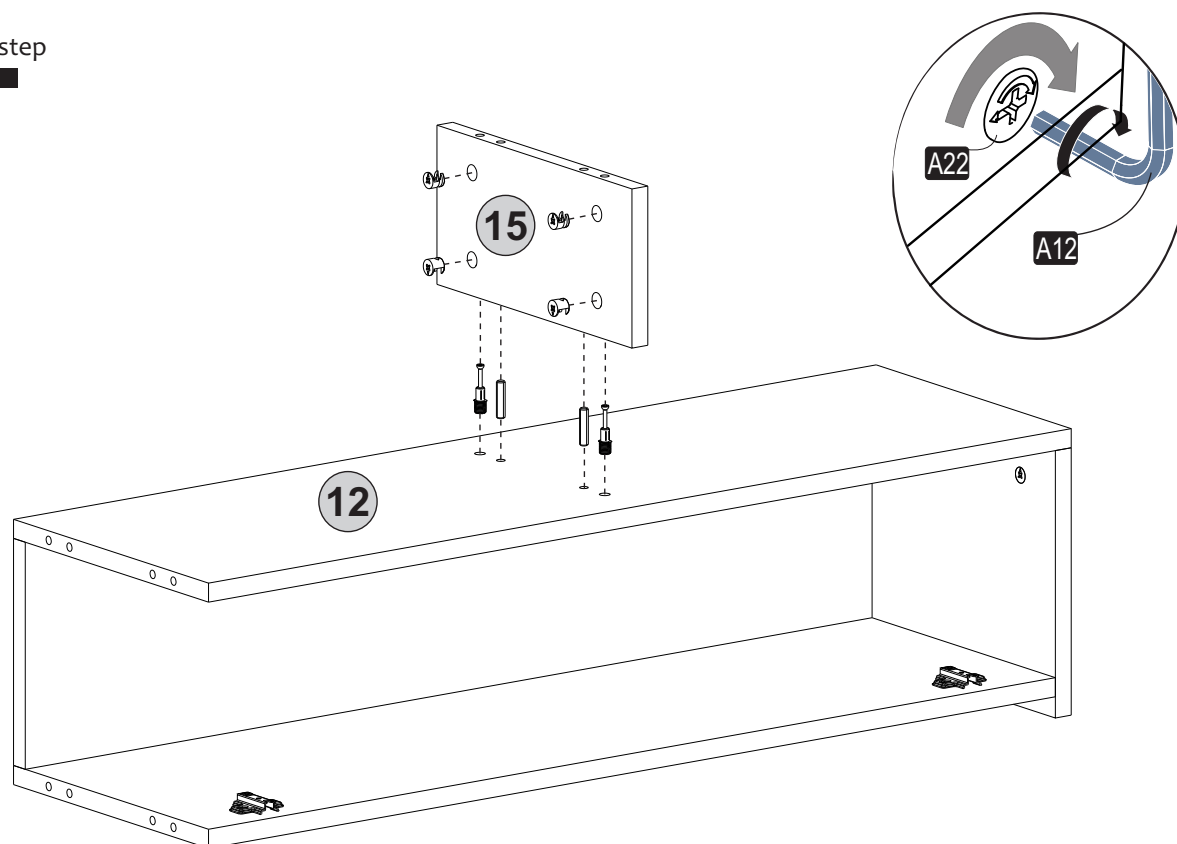


6. step

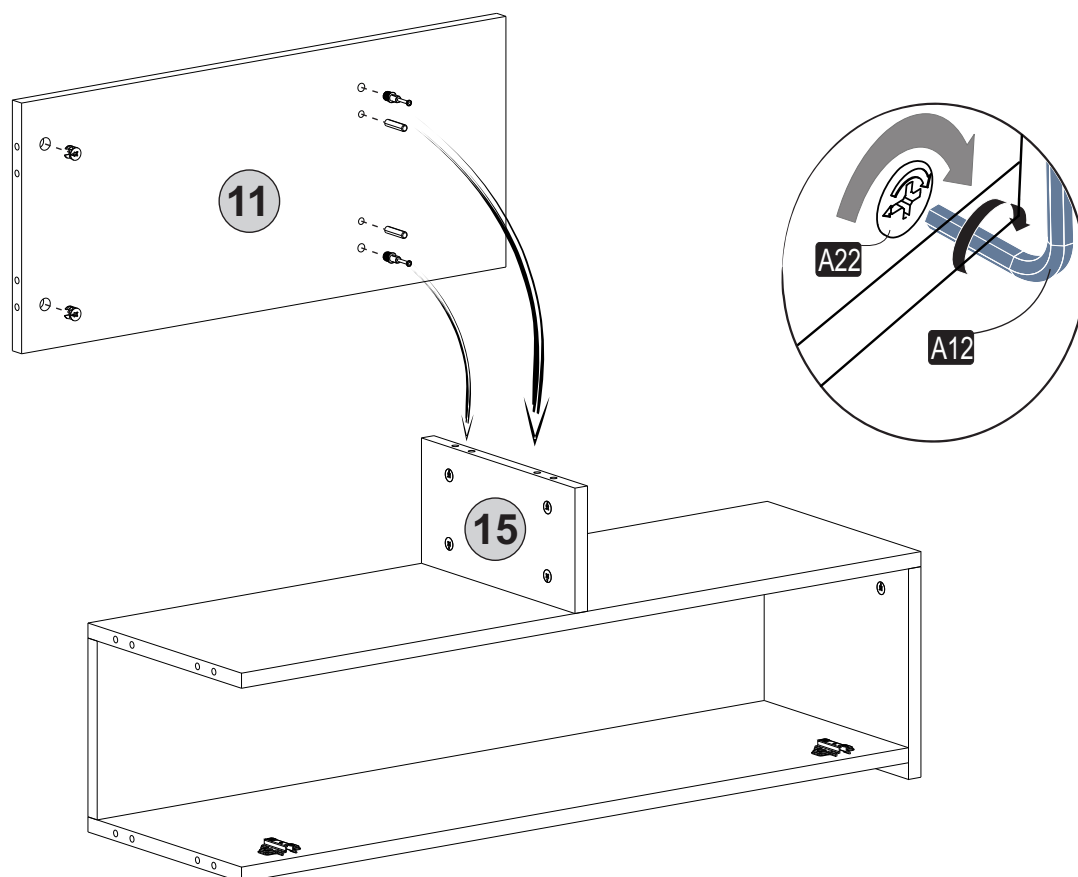


7. step

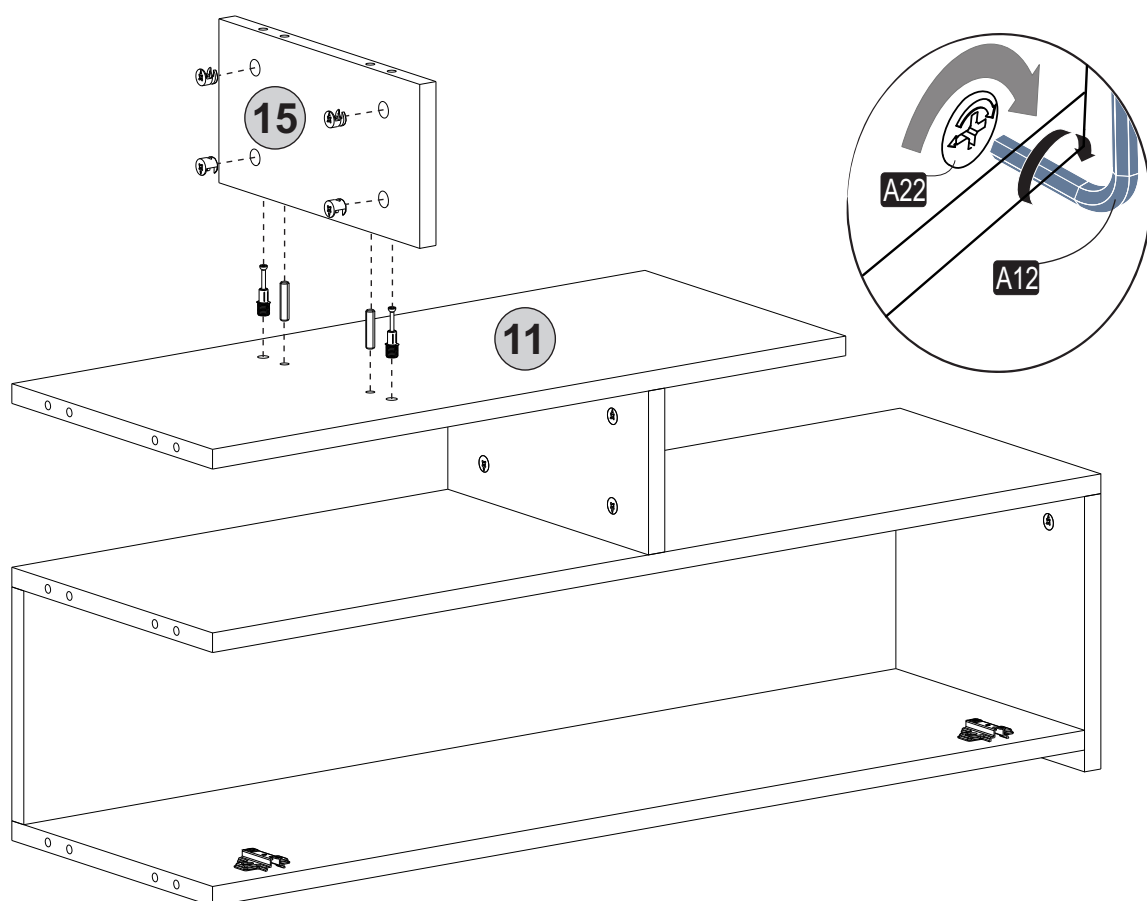







8 step

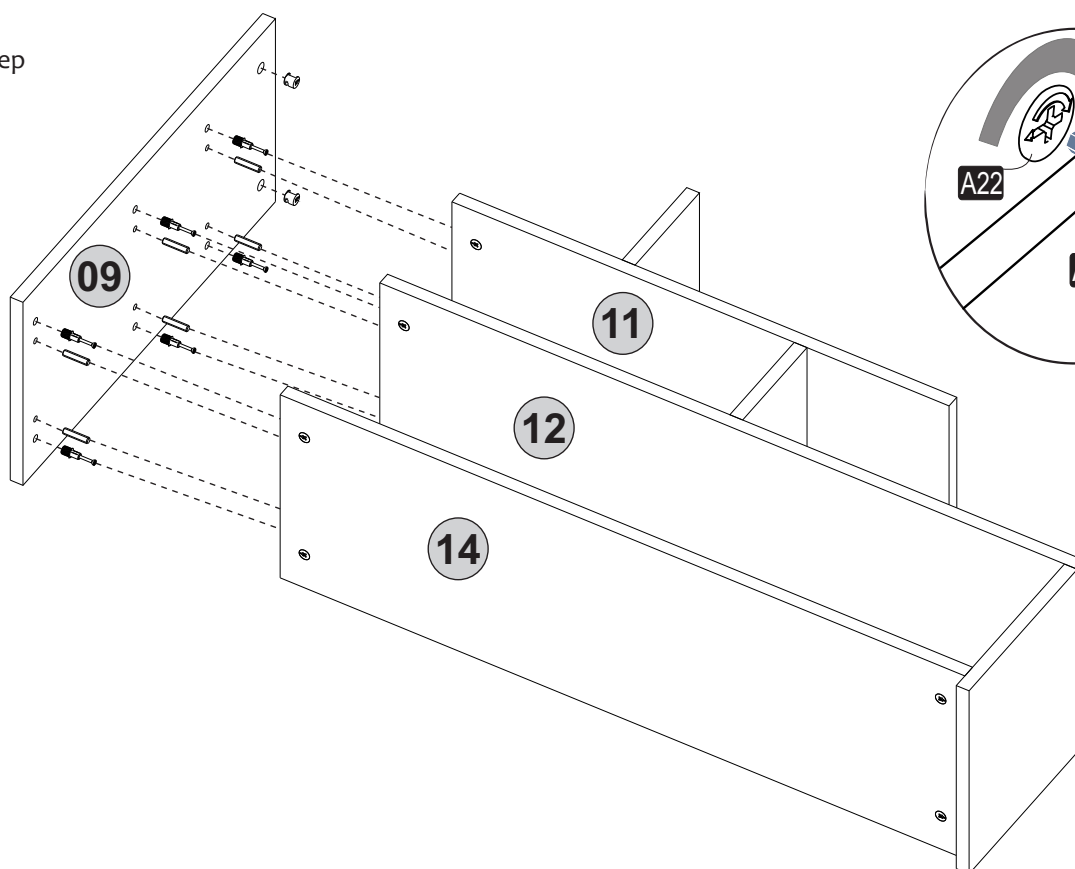




9 step

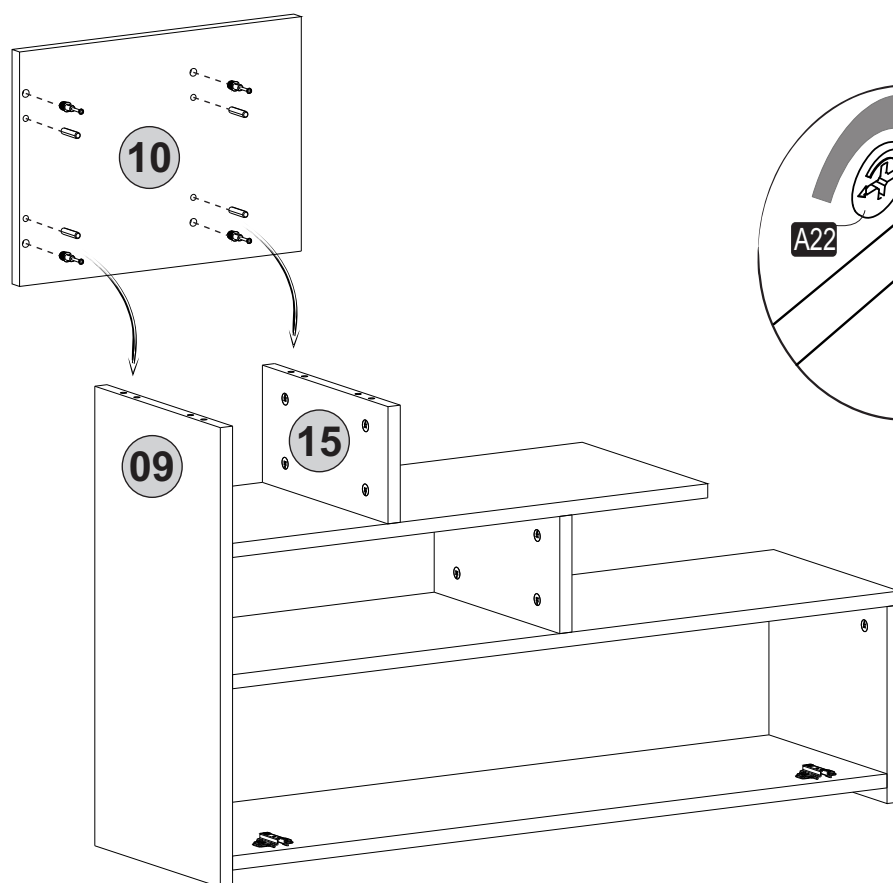

10.^{step}

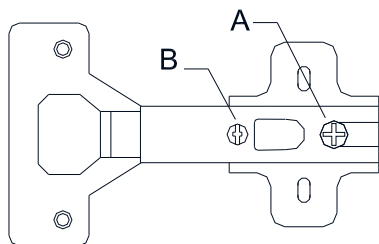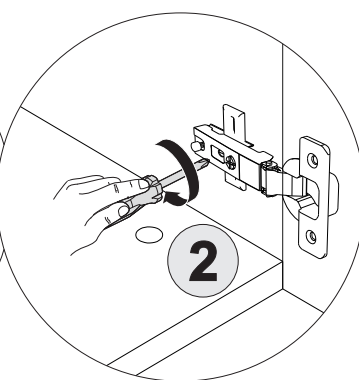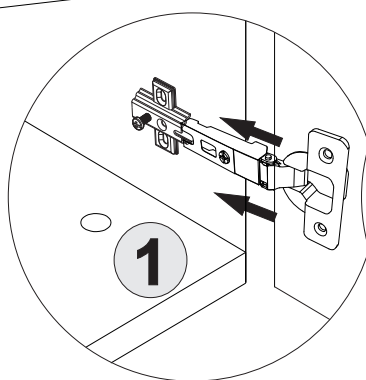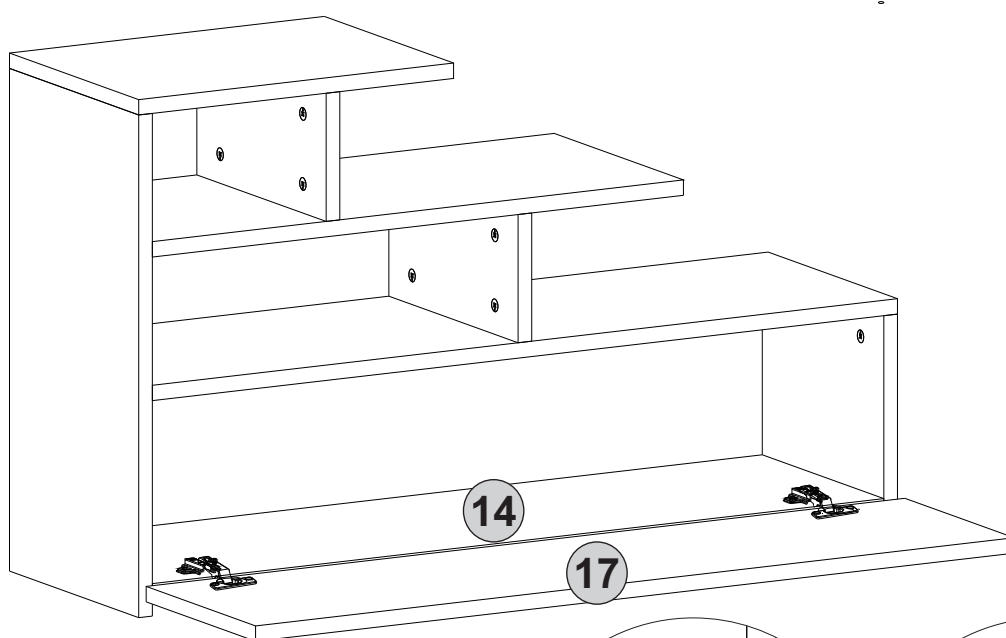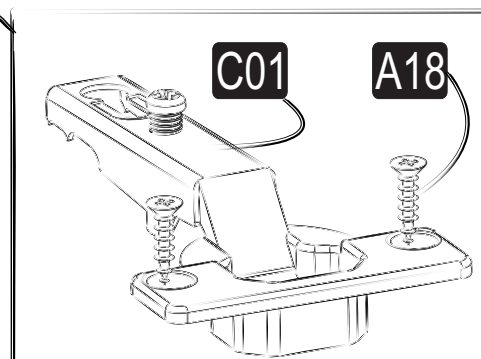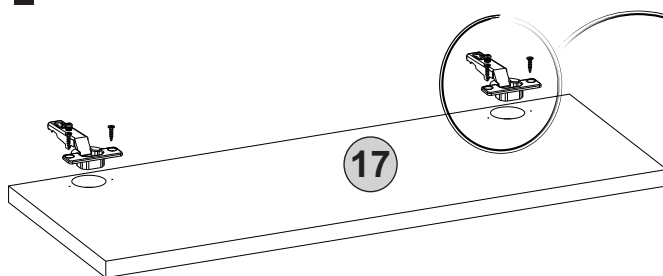


A = to connect the hinge to the door
B = to arrange the door

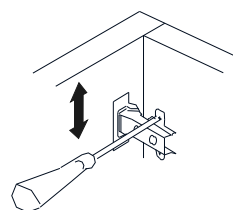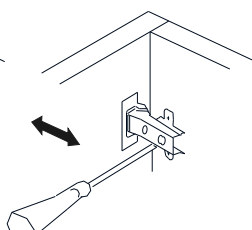
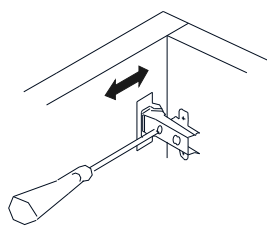


Arrows to show the directions for arrangement of doors

11.^{step}

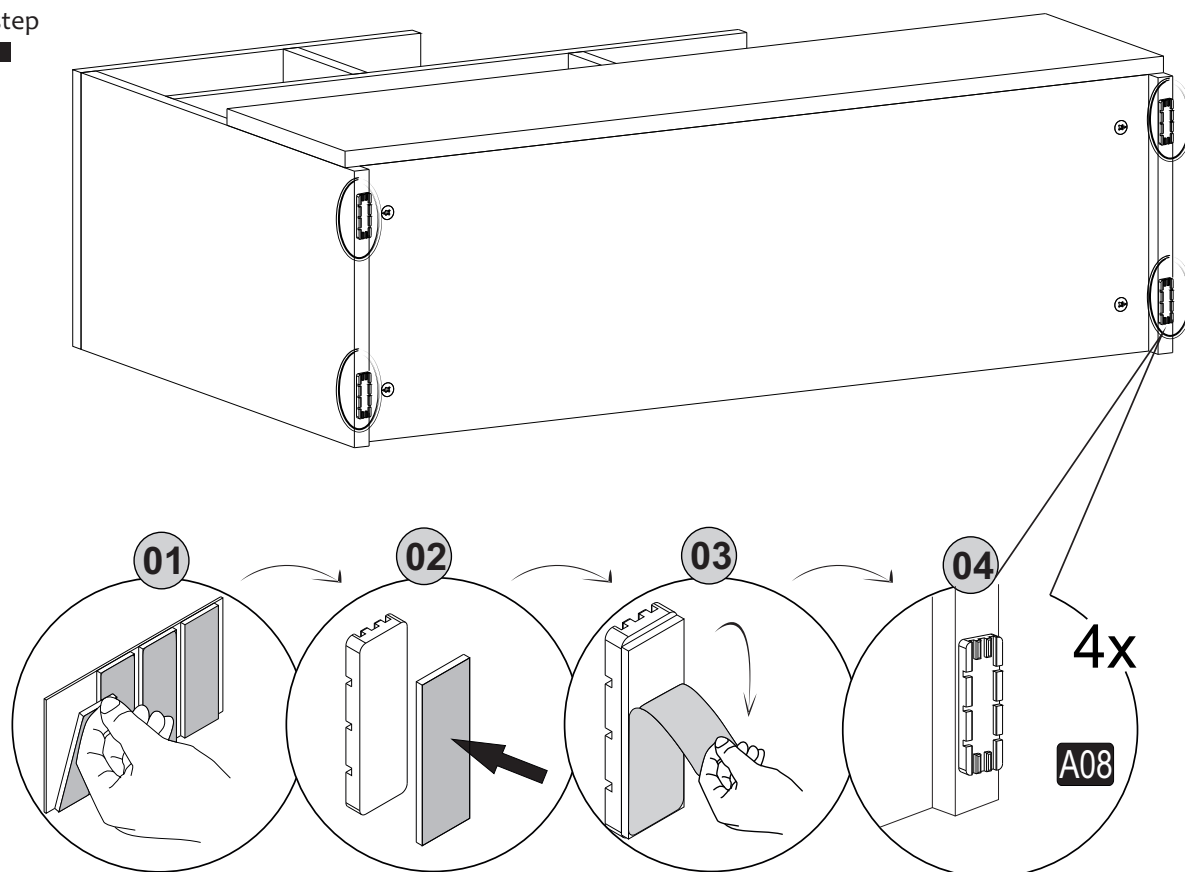



12.^{step}

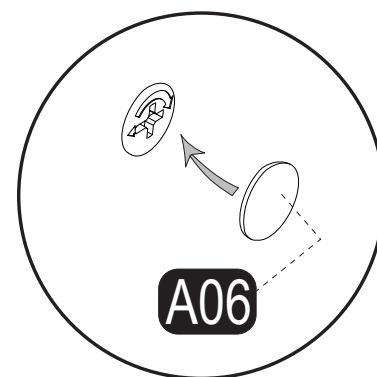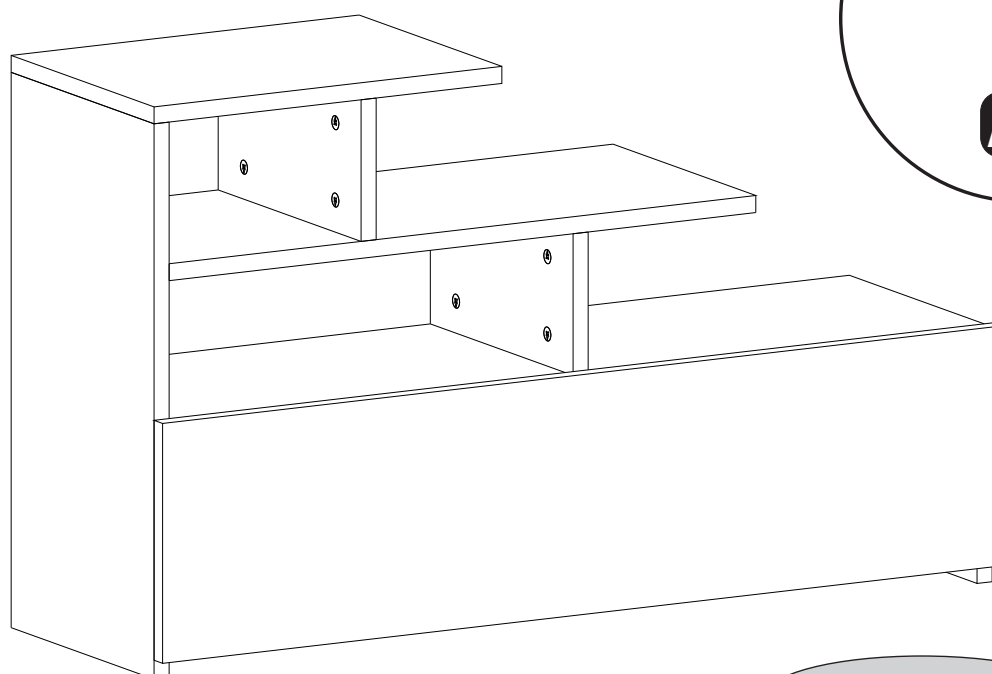




Module 1





13.^{step}

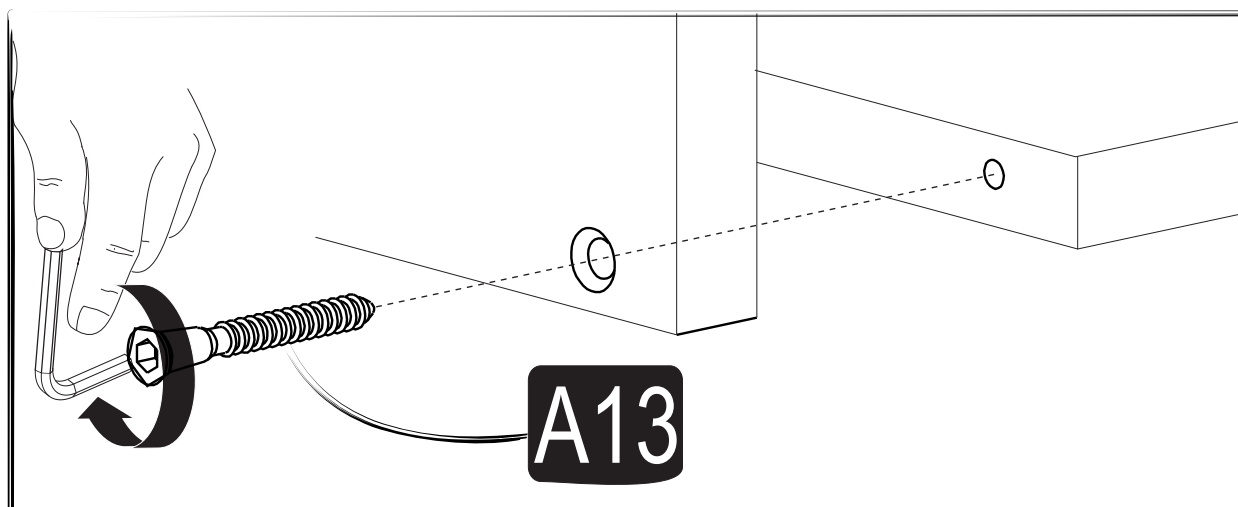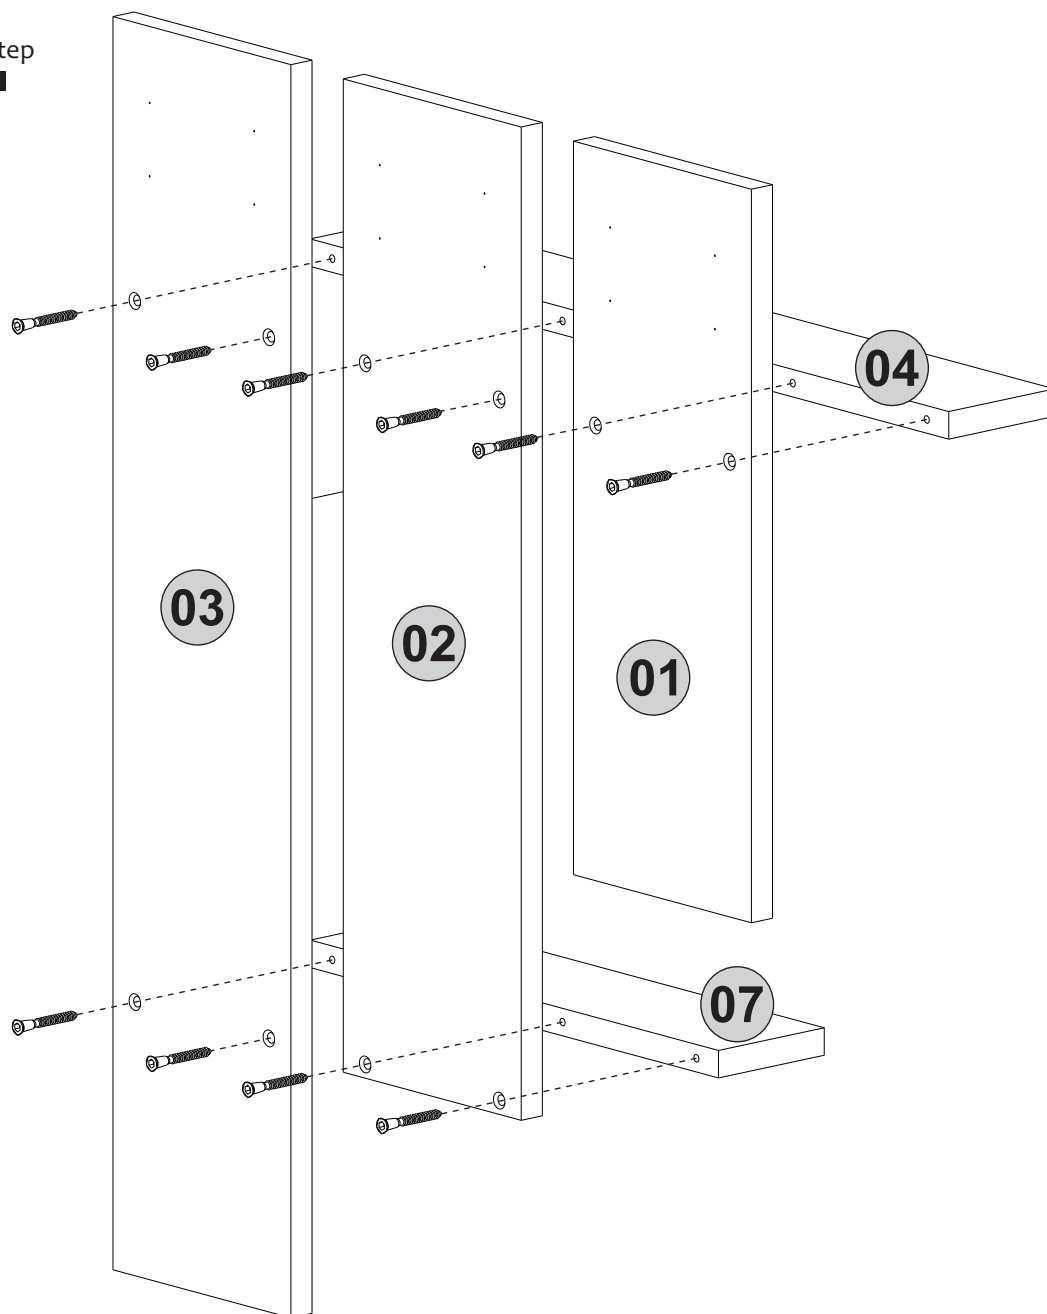



14.^{step}

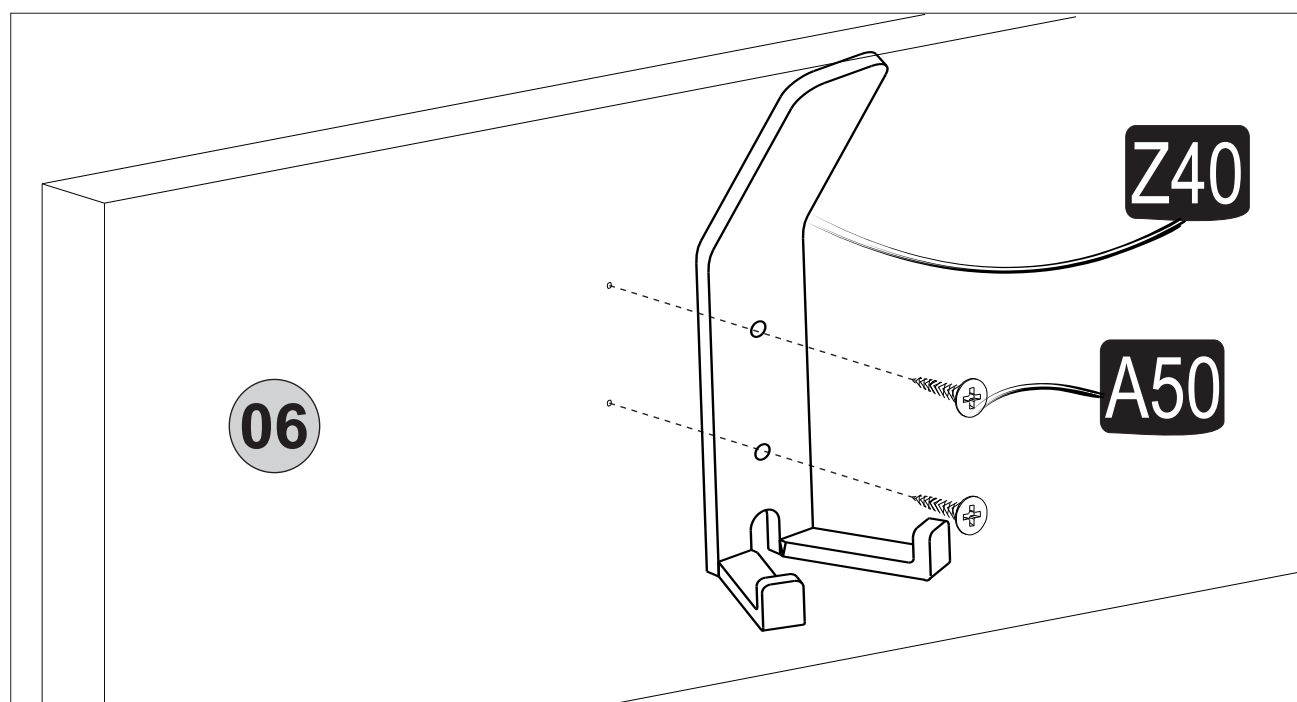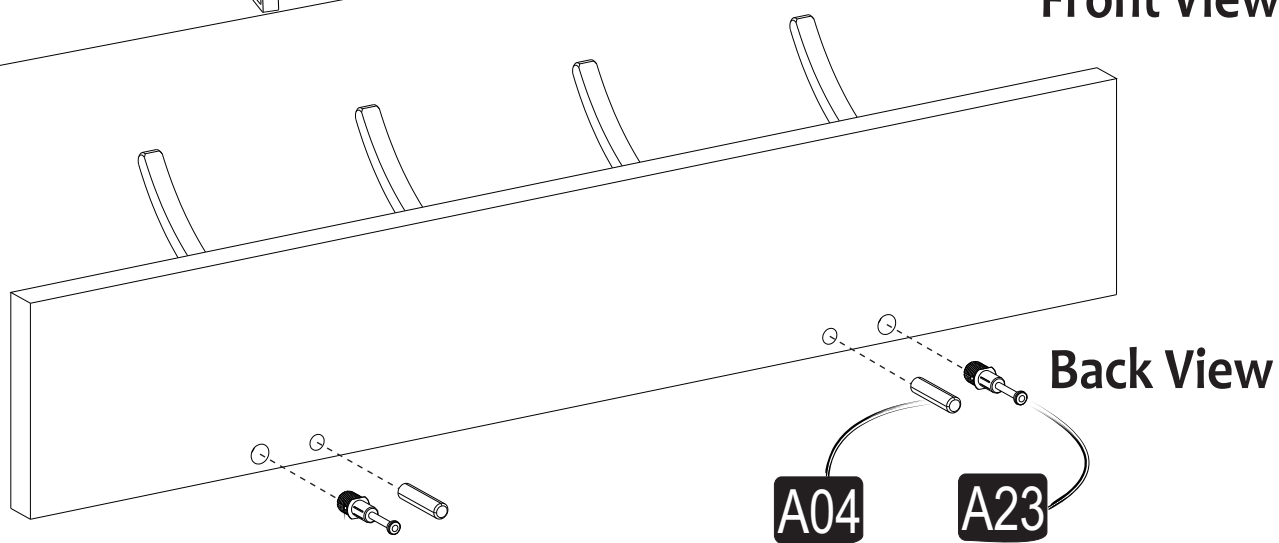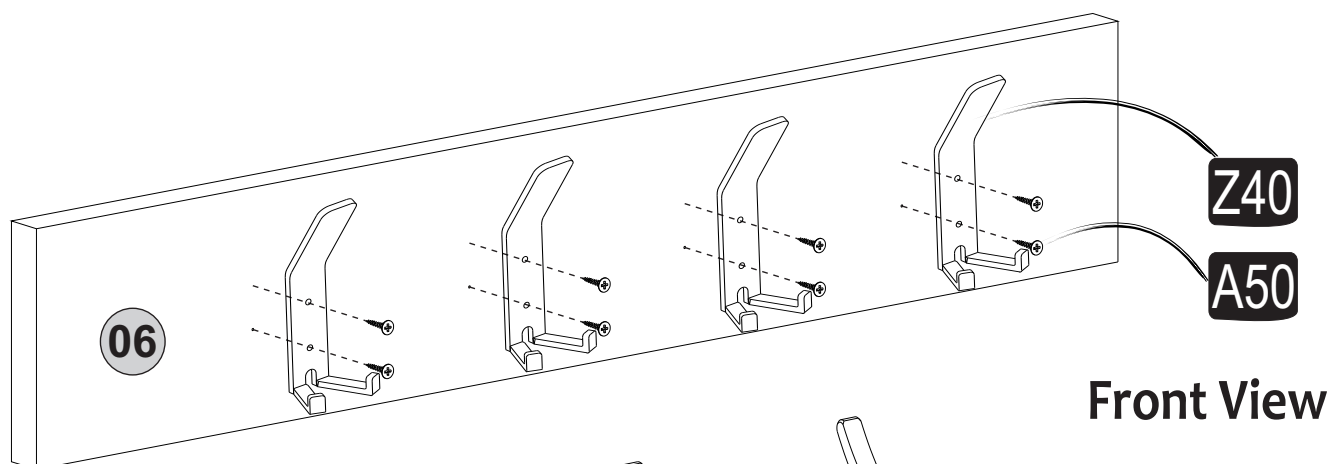


15.^{step}

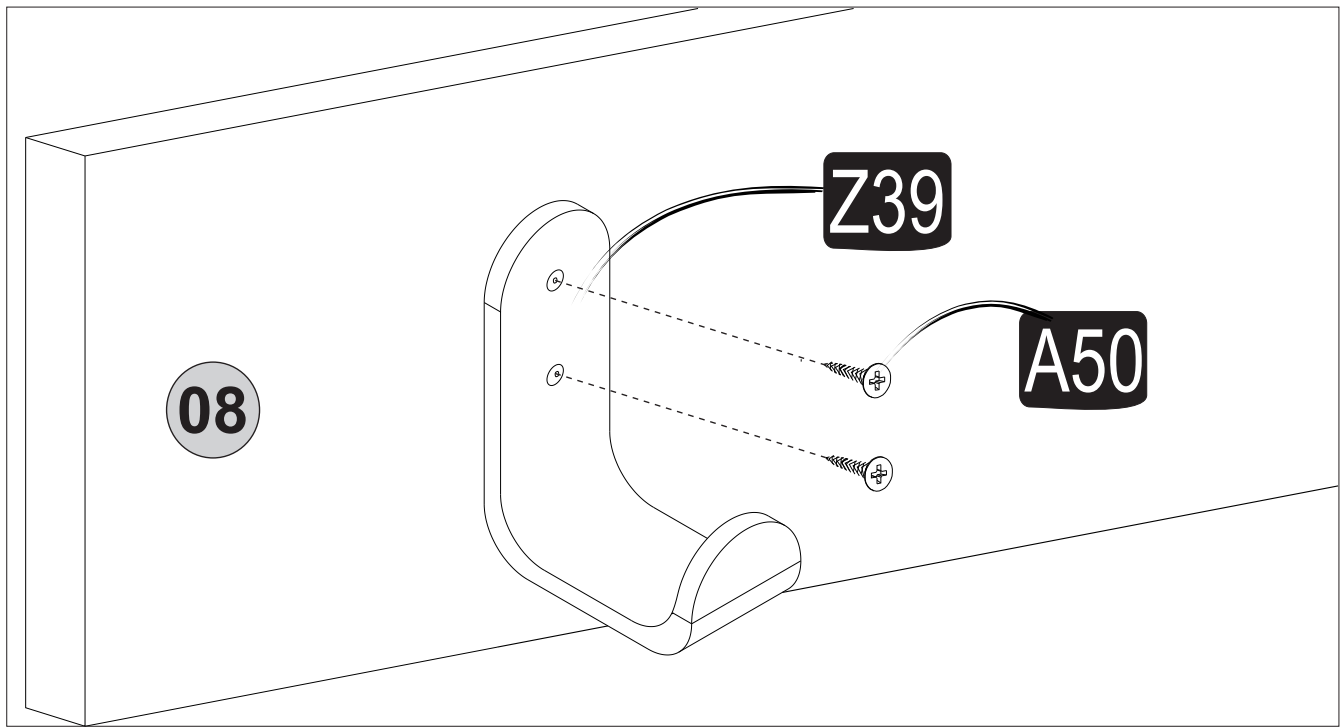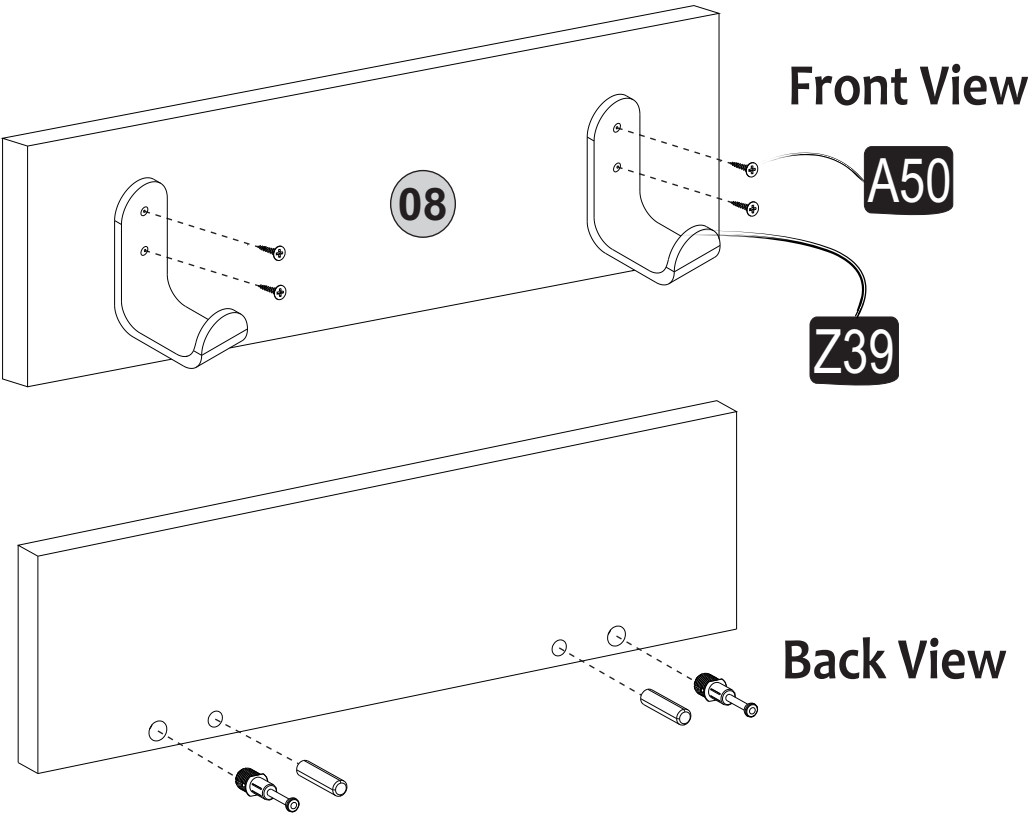



16.^{step}

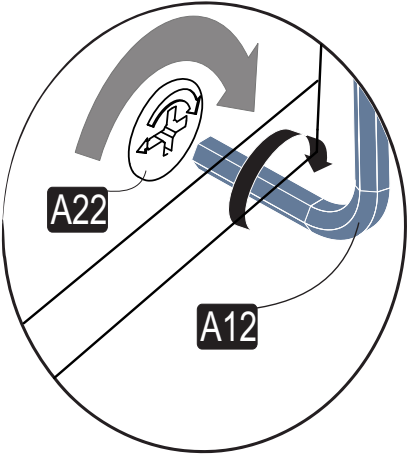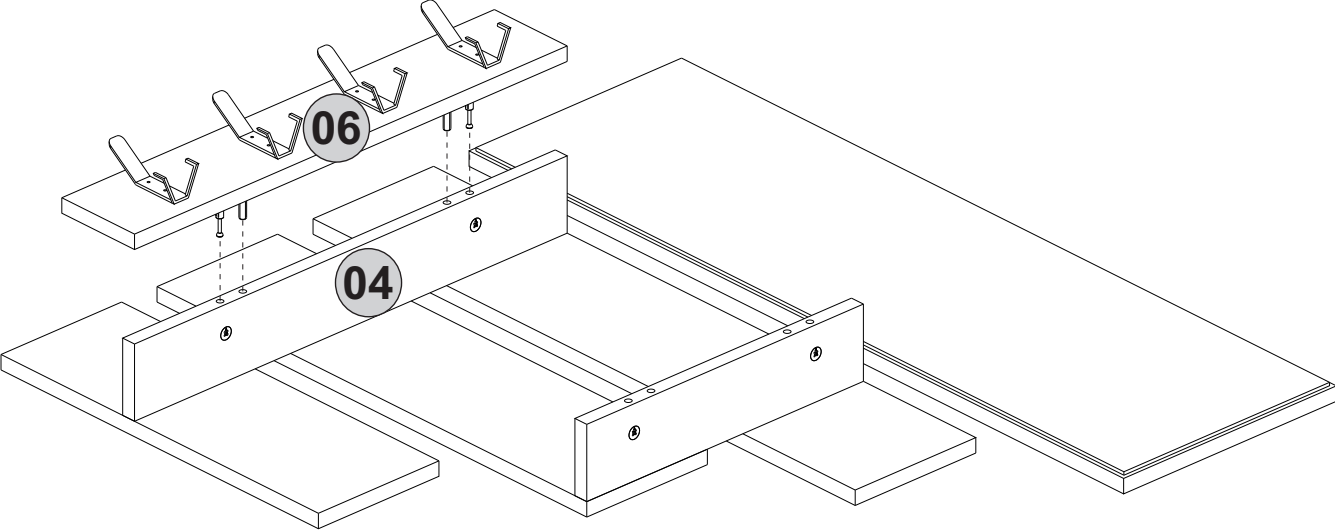



17.^{step}

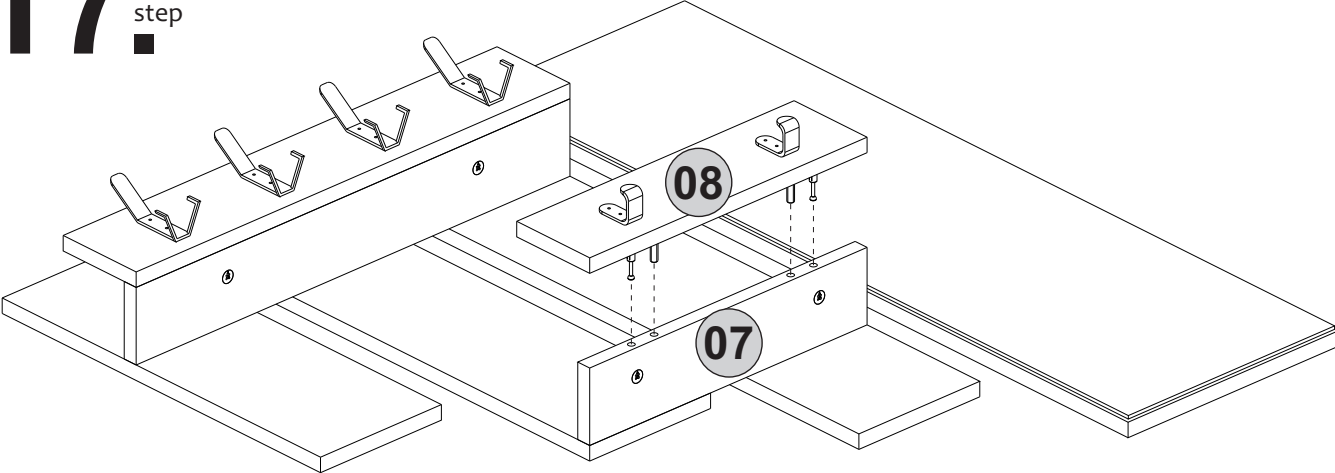



18.^{step}

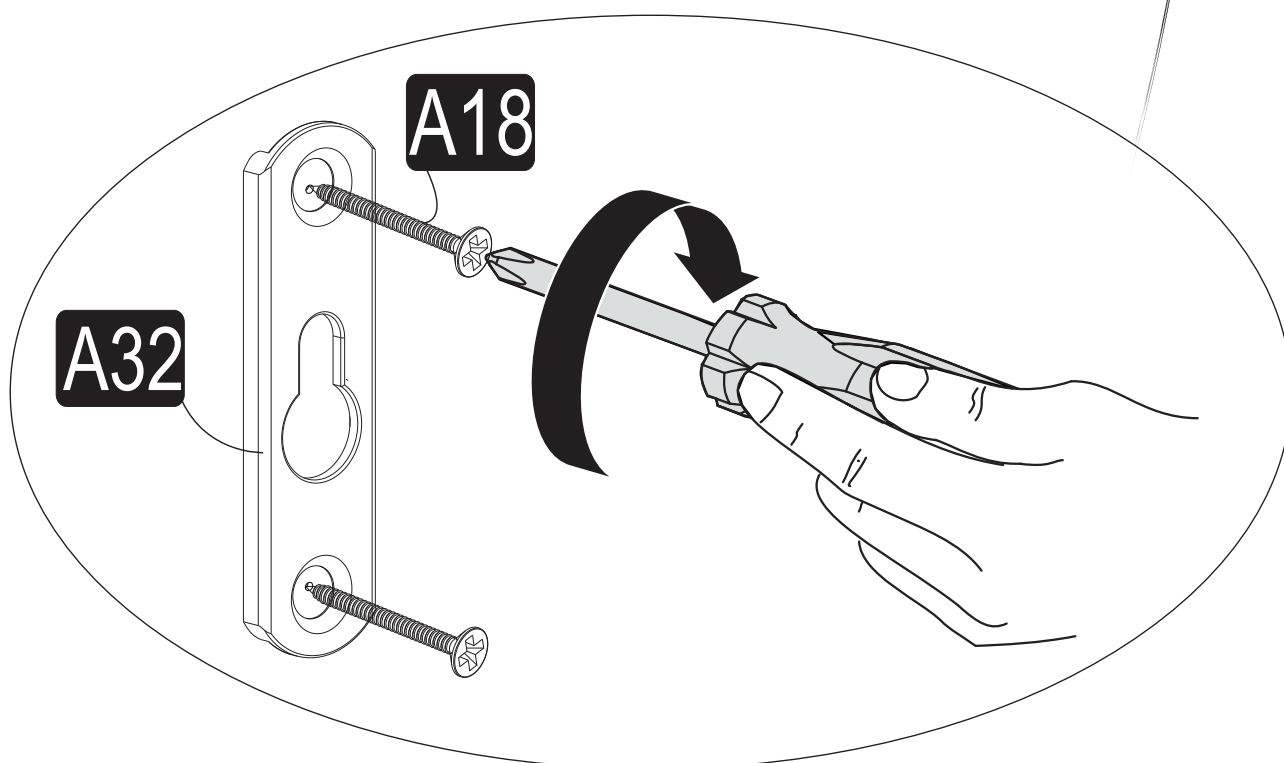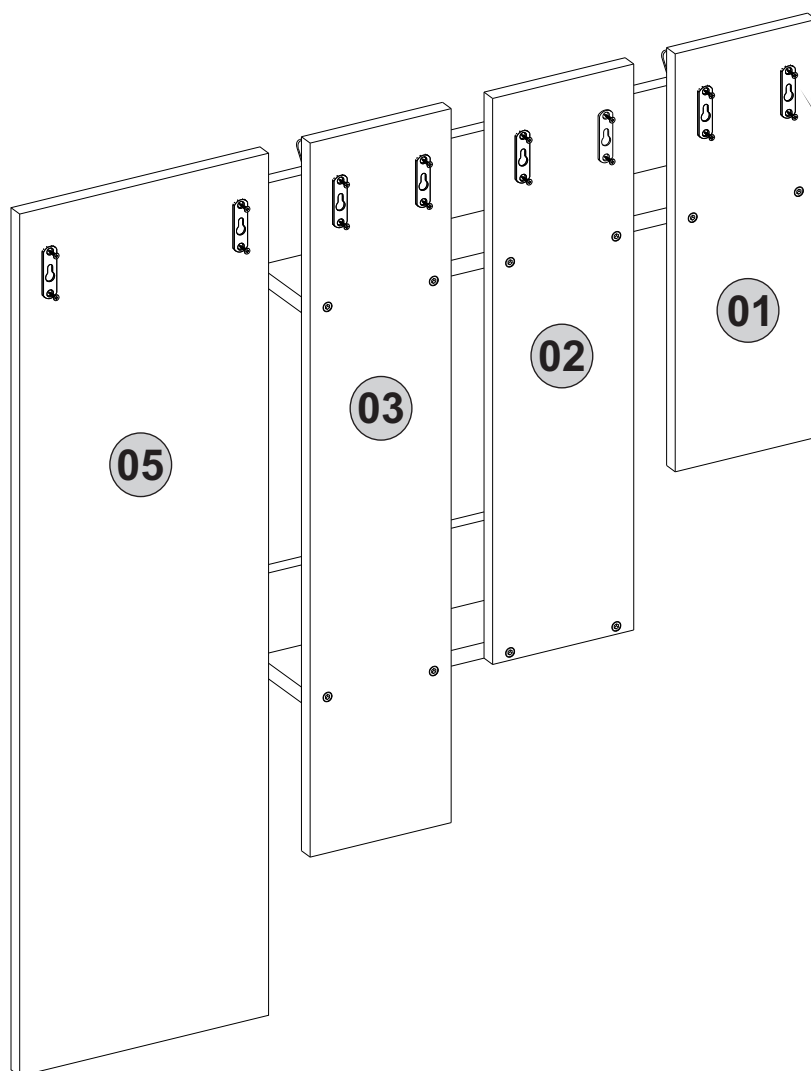


19.^{step}

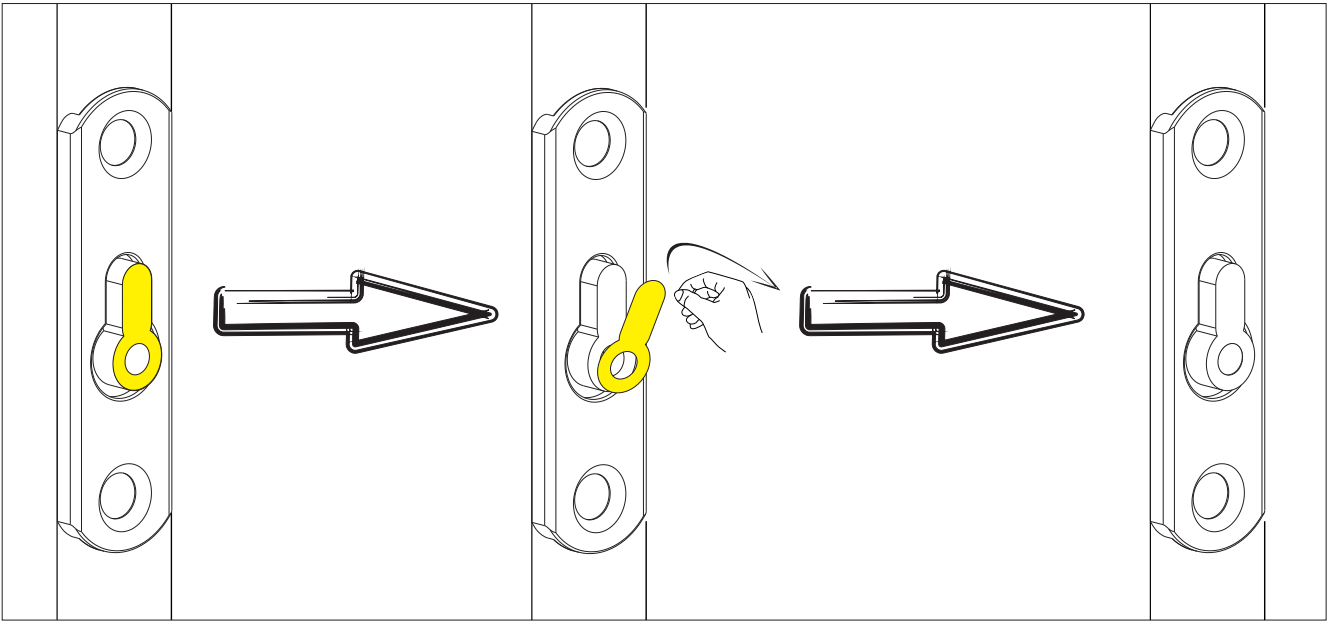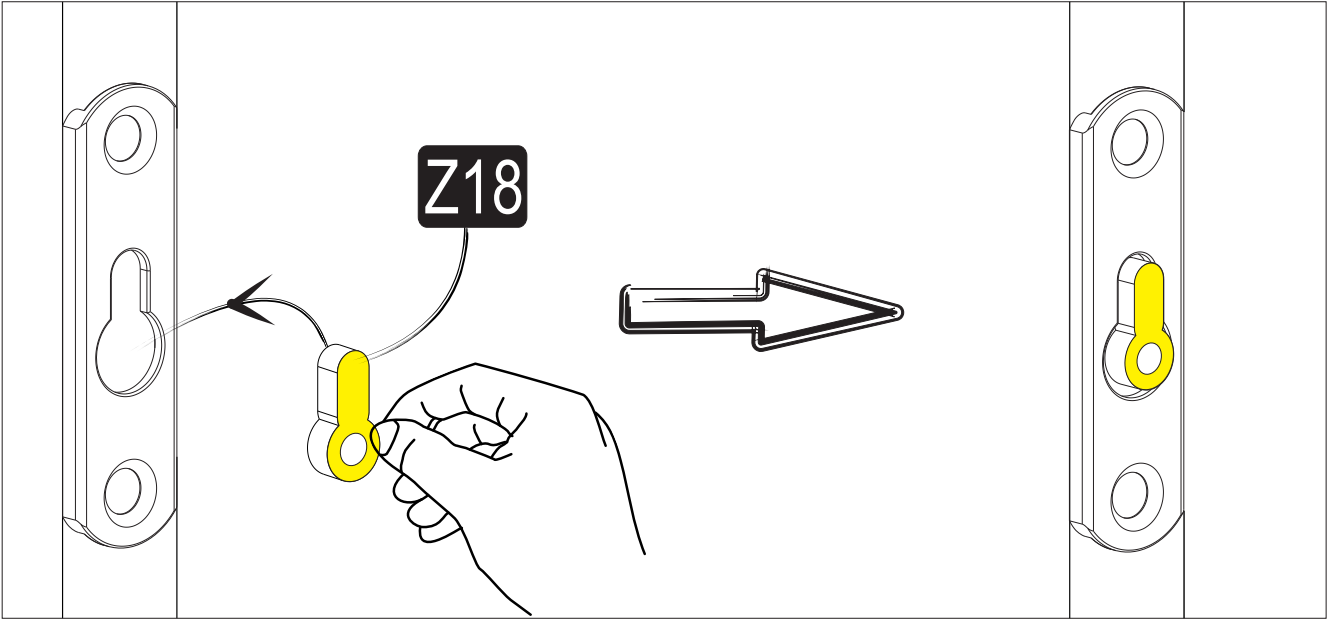


20_{step}

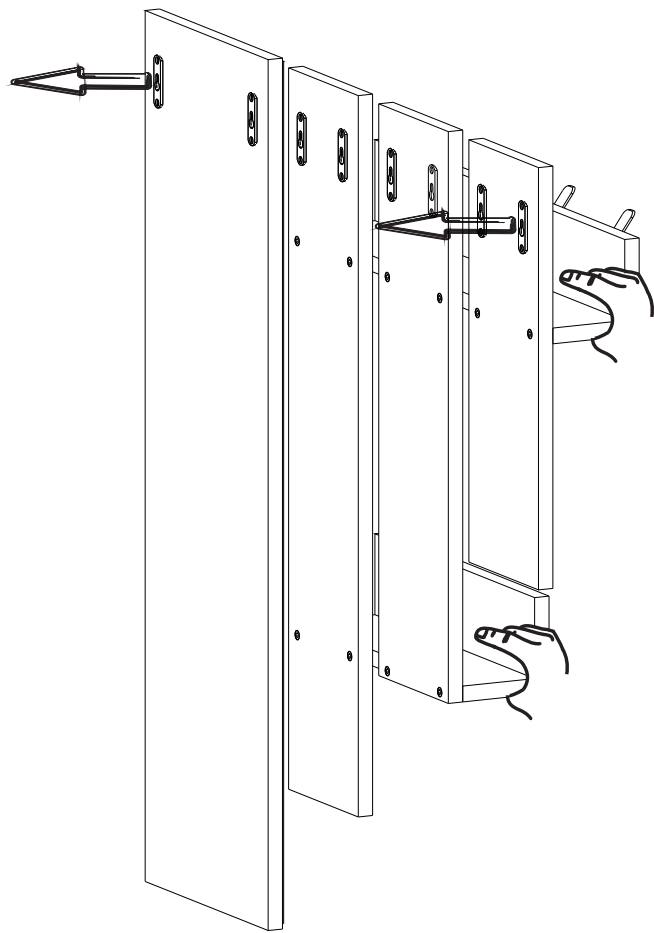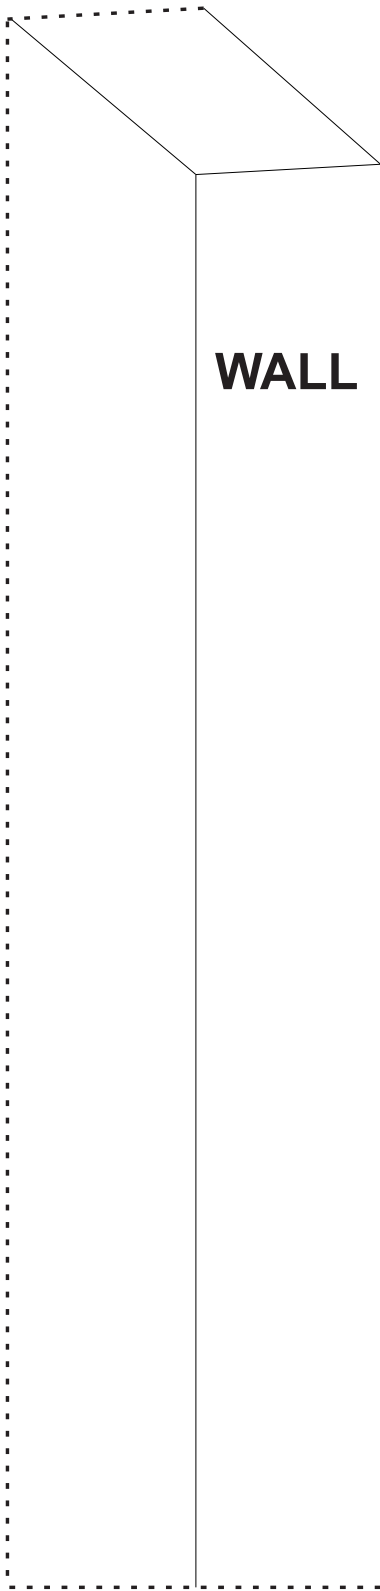


21.^{step}

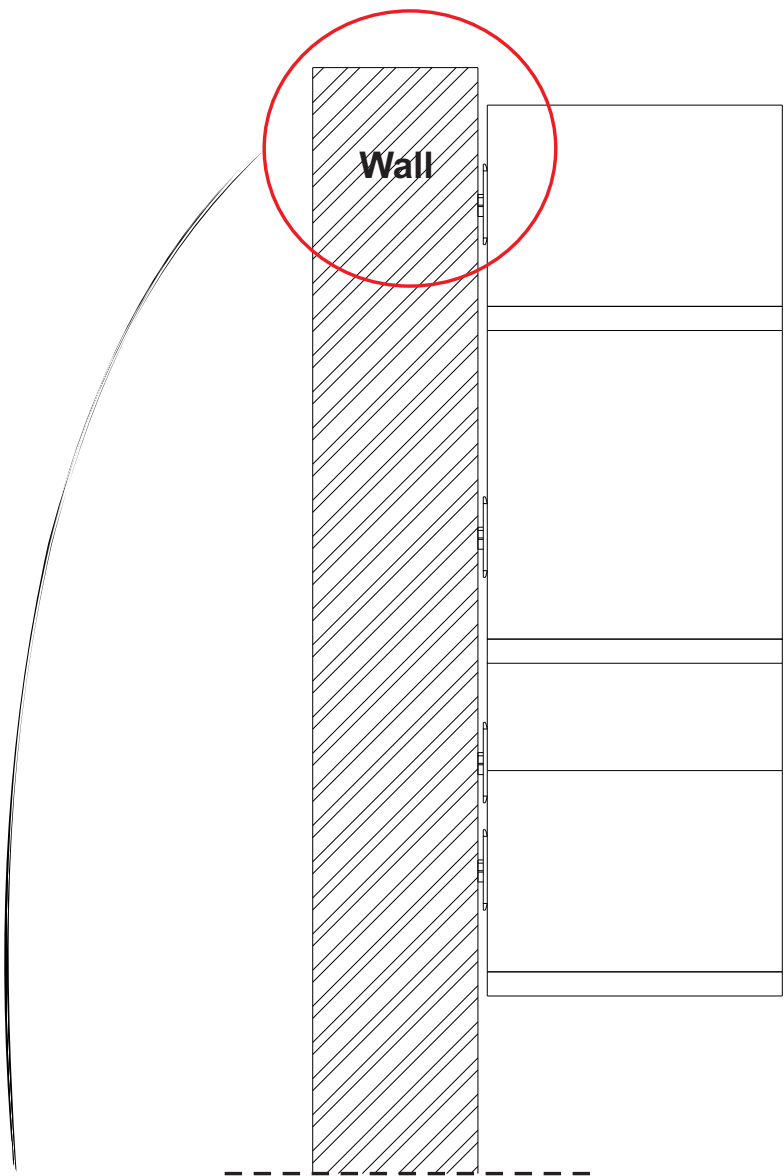






Step - 1

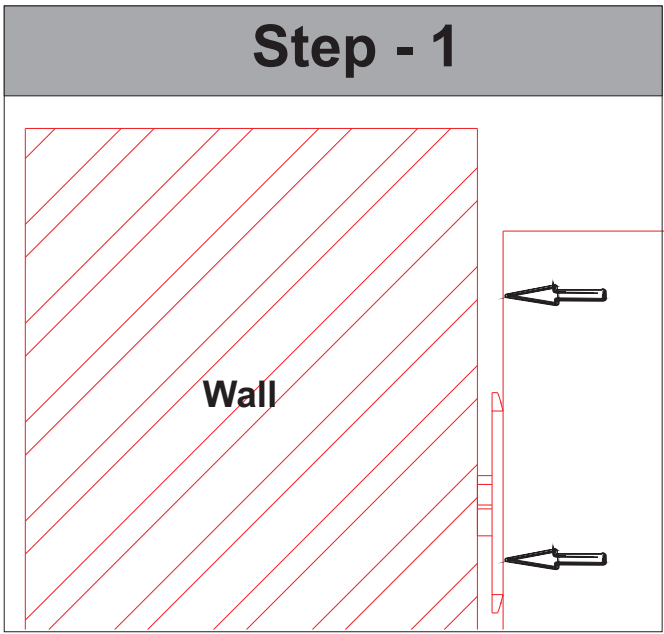


Step - 2

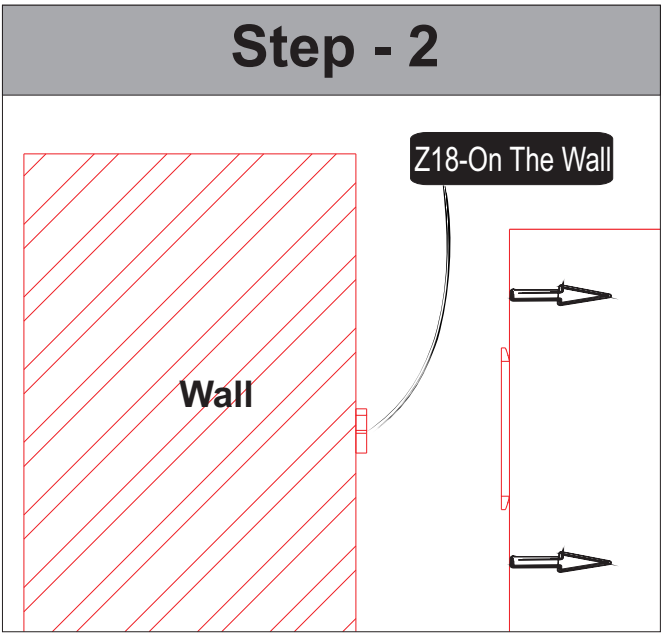

22_{step}

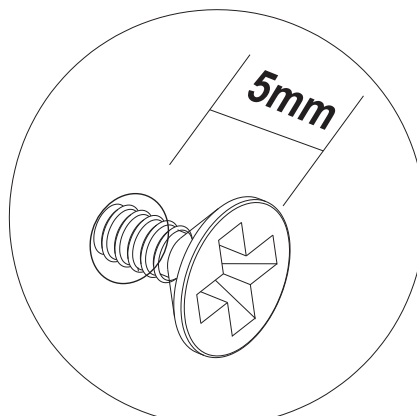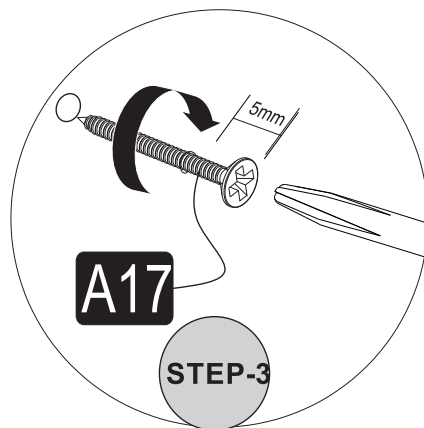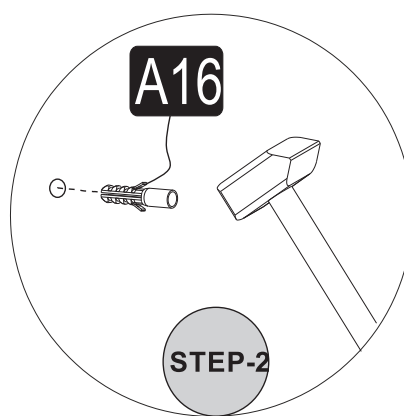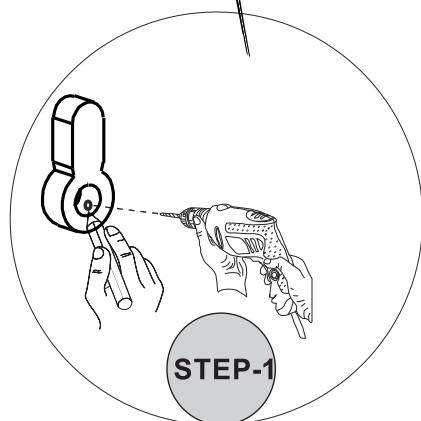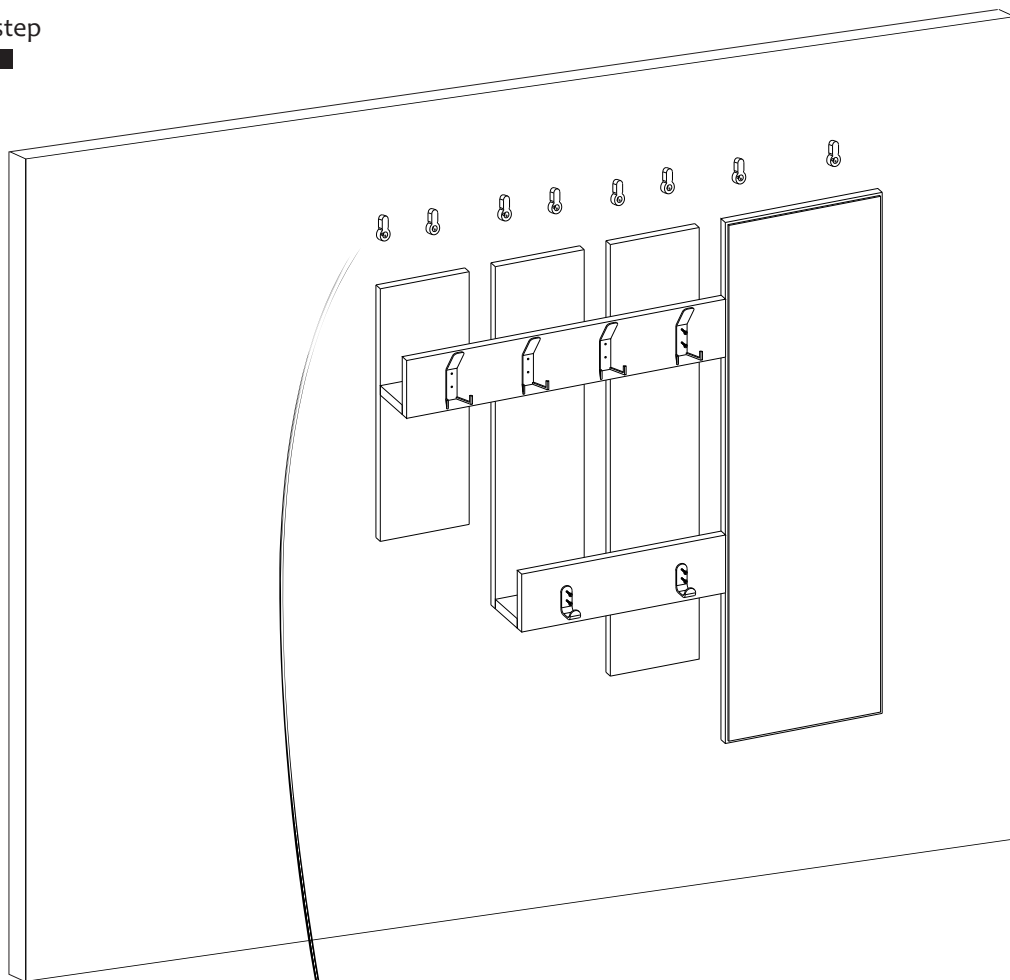

23^{step}

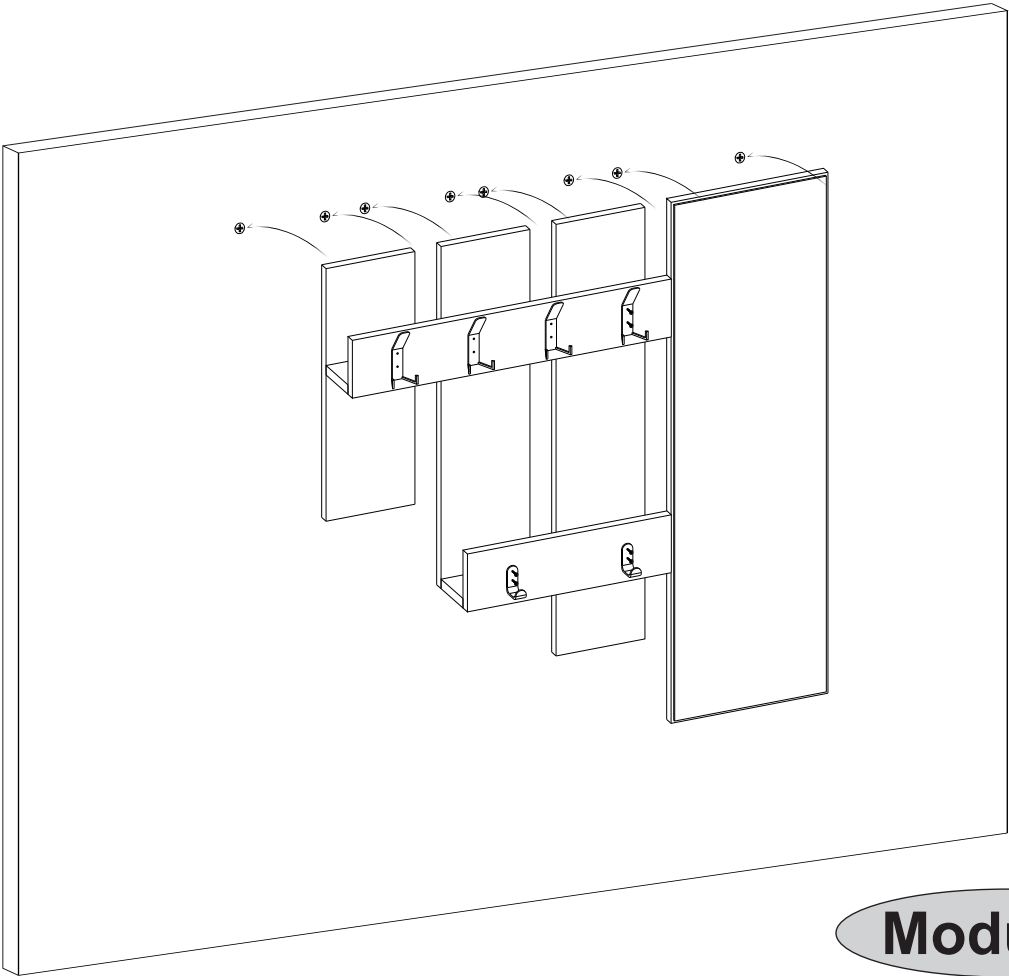

Module 2 ✓

