


**GP037-0222,2**












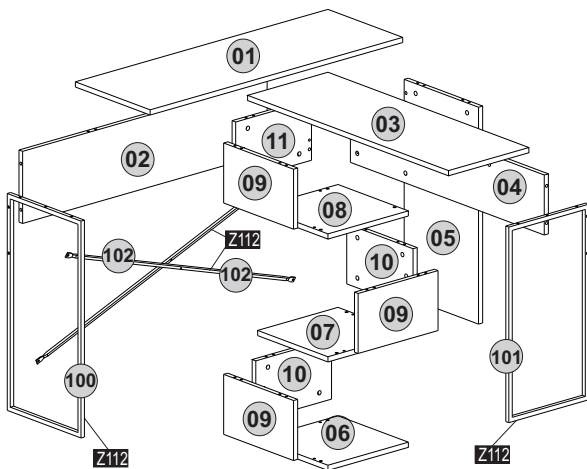


Follow the installation steps in the order as shown.  
Position the parts as shown in the installation guide steps.




## HARDWARE LIST


<b>A04</b>  Ø8x30 32x	<b>A22</b>  Minifix kit 38x	<b>A23</b>  Minifix M5x8 38x	<b>A12</b>  Allen 1x	<b>A06</b>  Ø8mm C1-38x
<b>B15</b>  Ø8x15 (black)/mm 4x	<b>Z112</b>  BDM 75x39x50 52/80x54 1x	<b>A69</b>  BDM 75x39x50 52/80x54 12x	<b>B13</b>  Ø8x25 (black)/mm 10x	




1

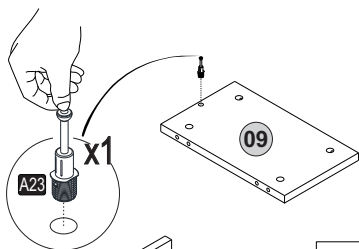



2

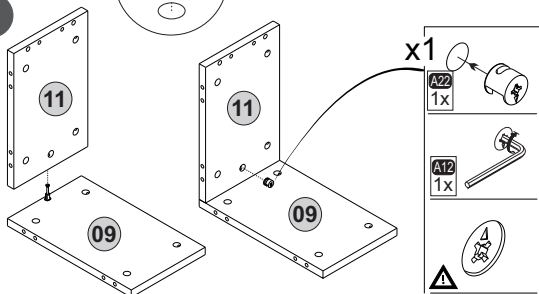



3

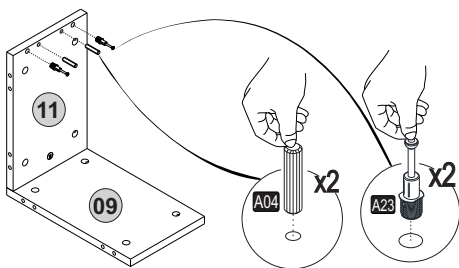



4

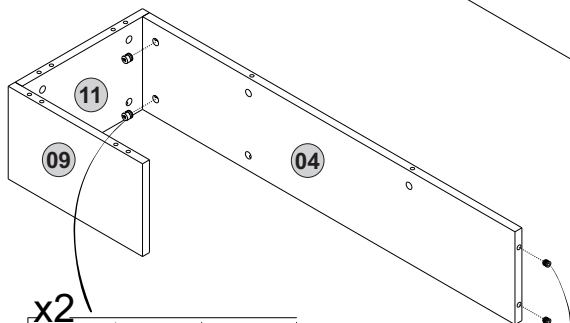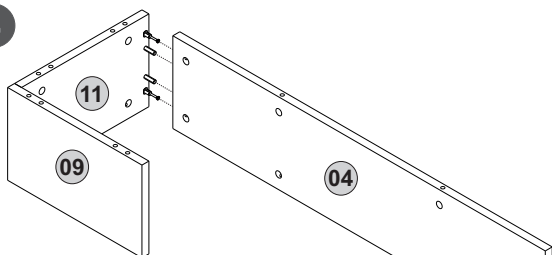


x2

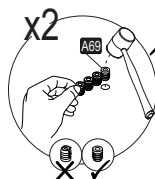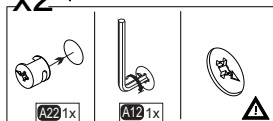

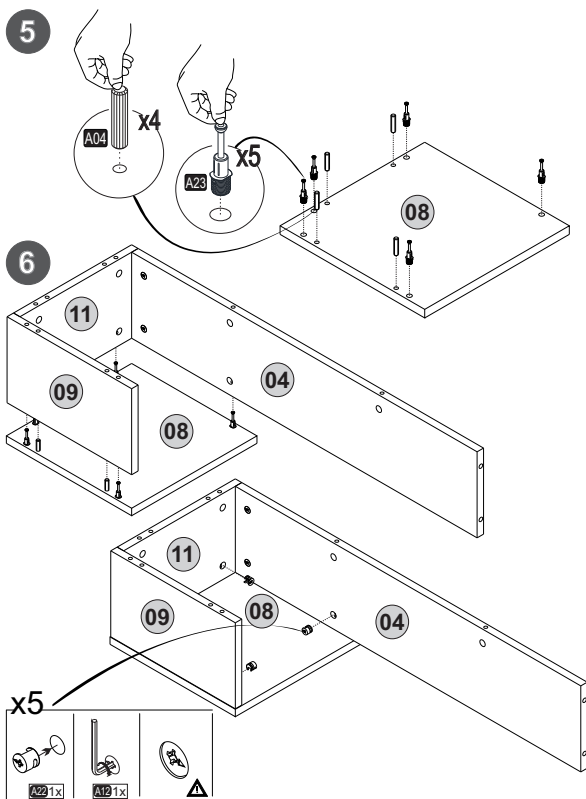


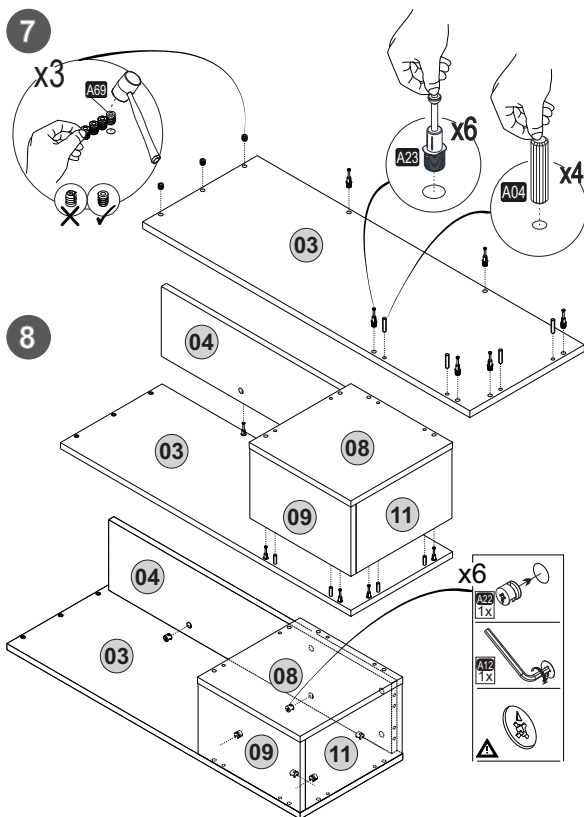


9

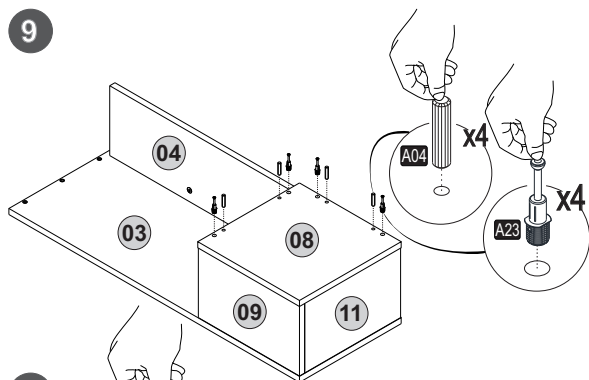


10

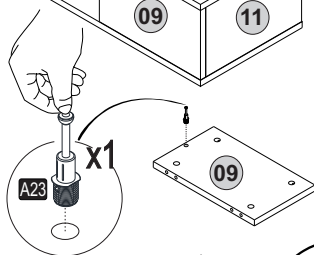


11

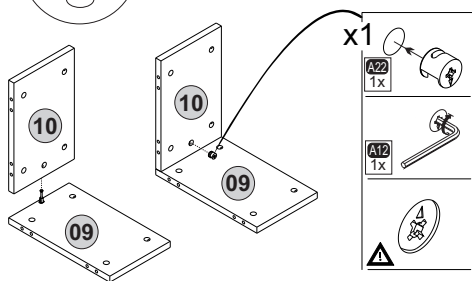

12


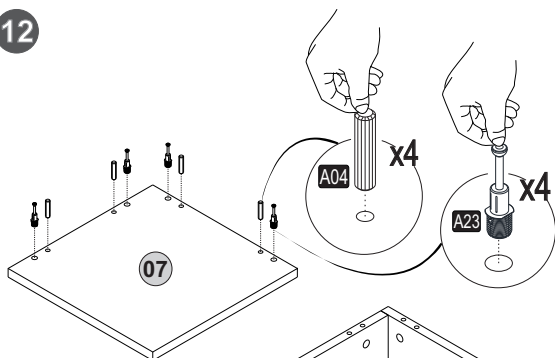


13

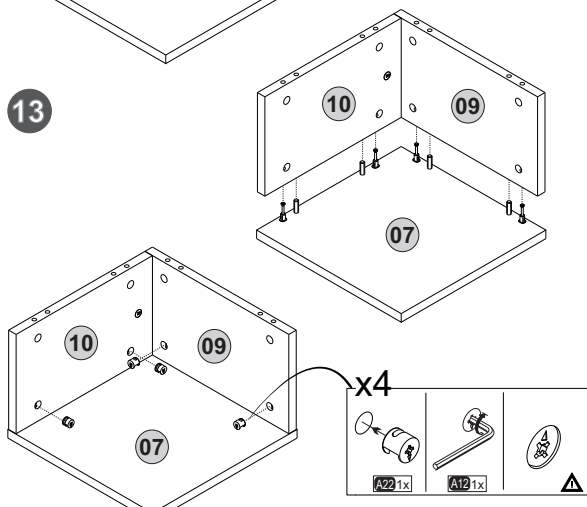




14

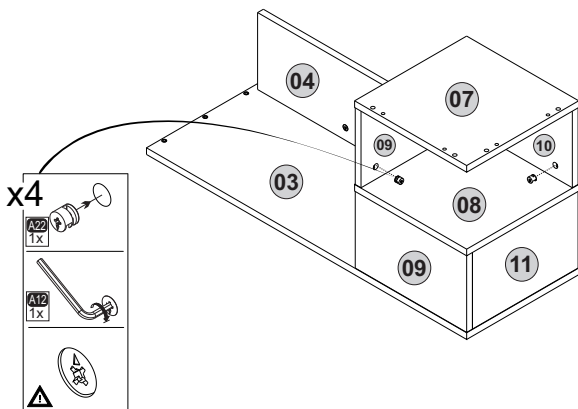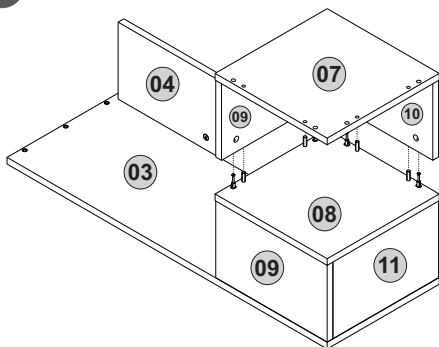





18

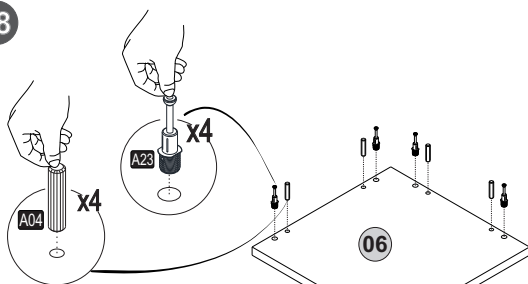


19

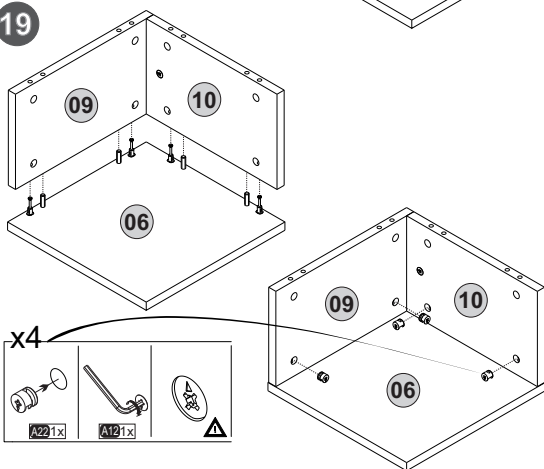


20

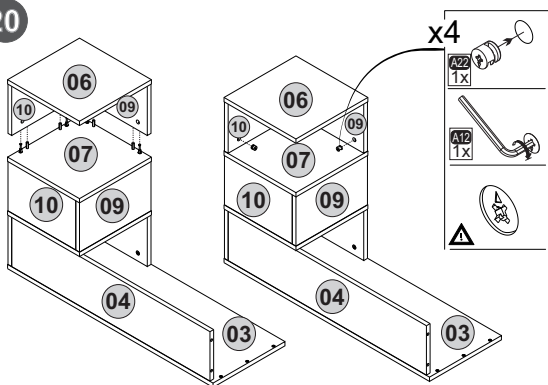


21

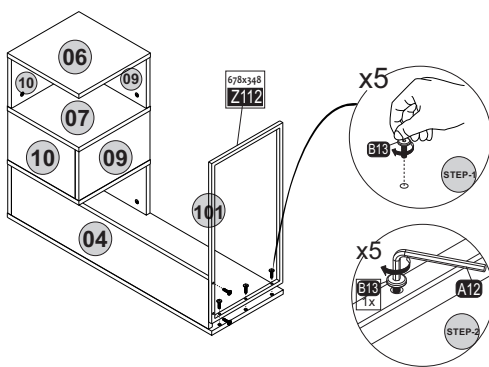


22

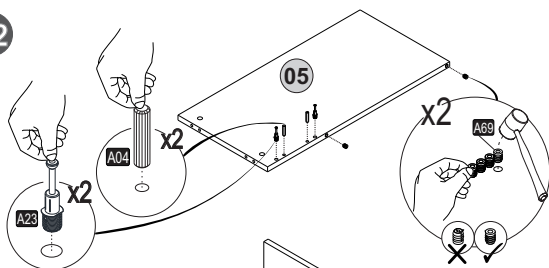


23

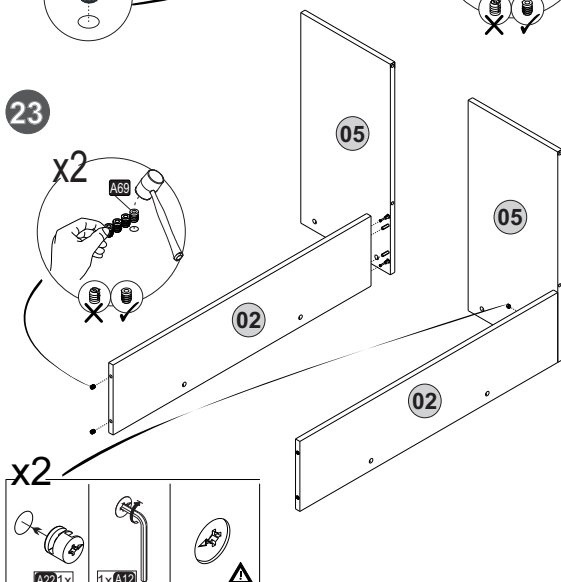

24

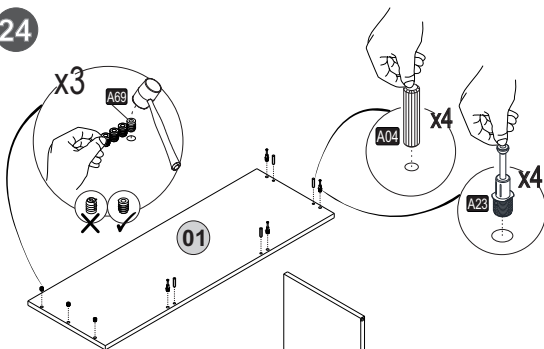


25

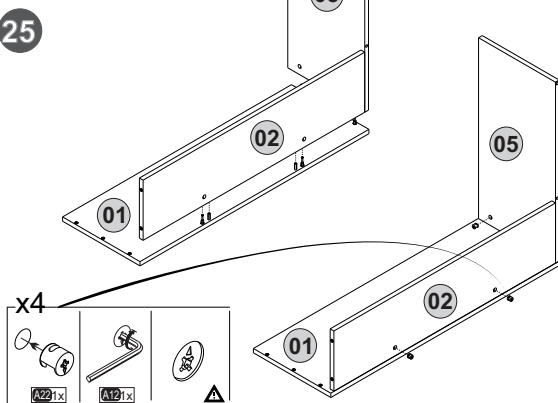


26



**Z112**  
752x367

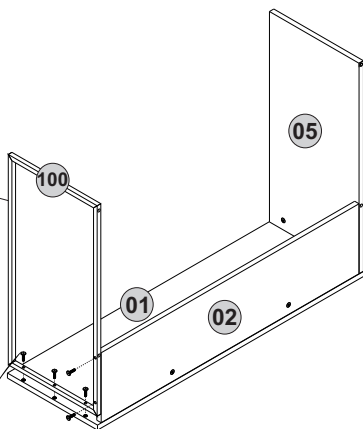

x5

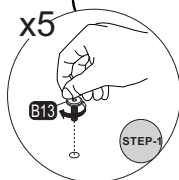

x5

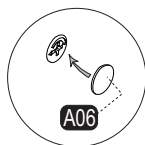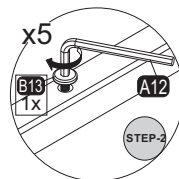

27

