


GP037-0252,1






Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.





HARDWARE LIST



A04  Ø8x30 10x	A12  Allen 1x	A06  18mm C1-8x C2-12x P.D. 2x	A22  Minifix k18 20x Kece	A23  Minifix M10 20x Jokii white
A18  3,5x18 4x	B07  30 mm 2x	A69  2x	PB01  4x	Z210  1x

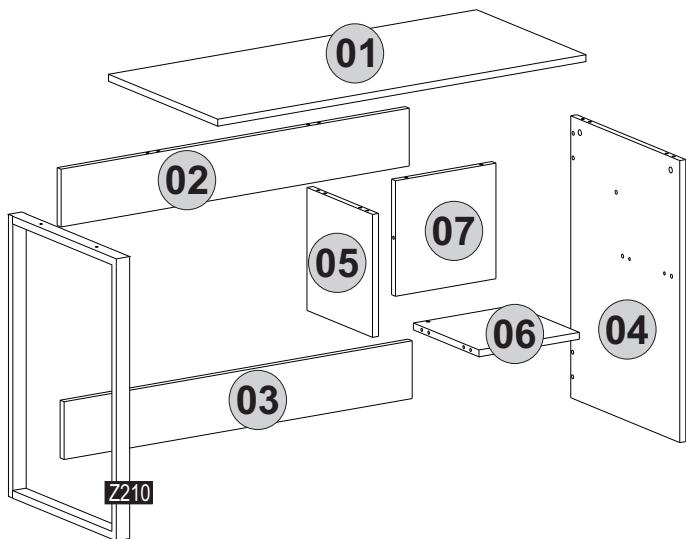



1

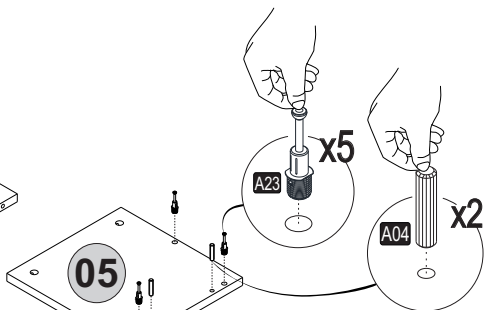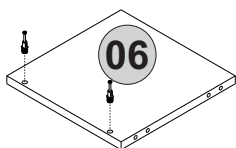


2

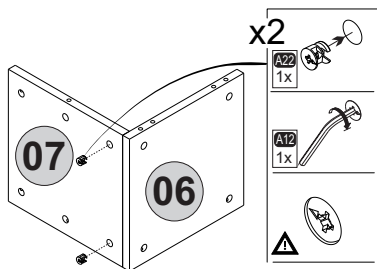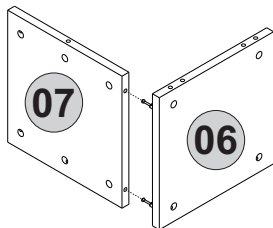


3

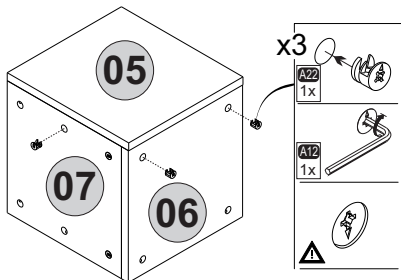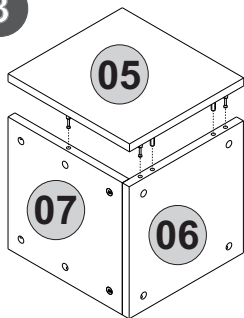


4

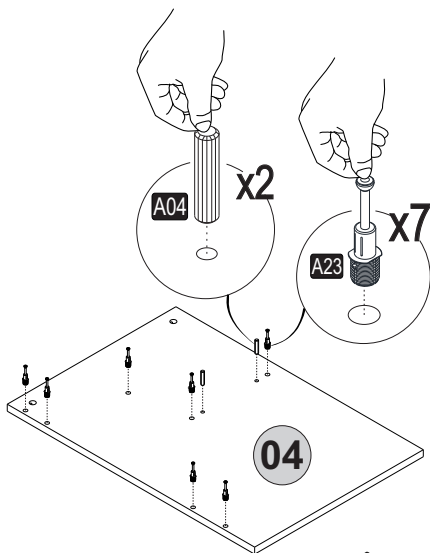


5

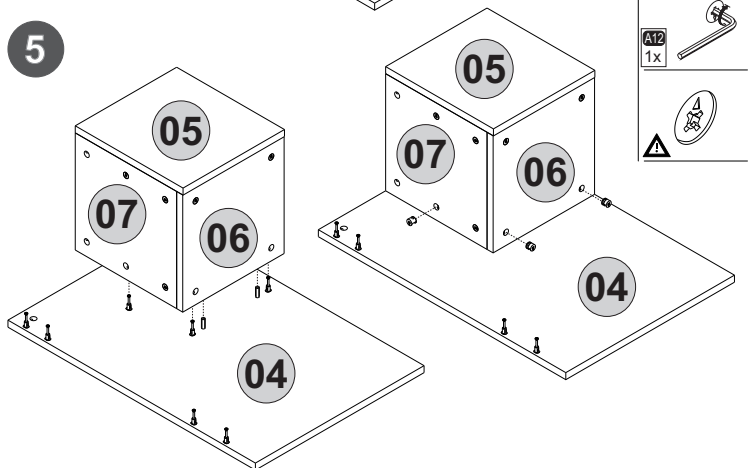


6

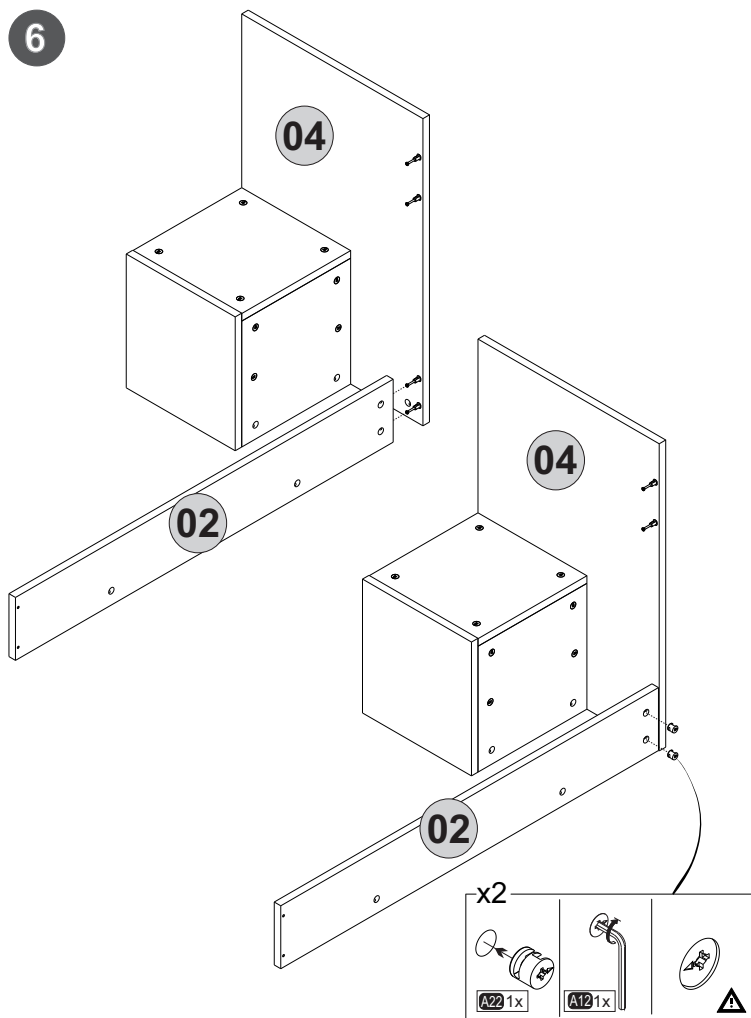



7

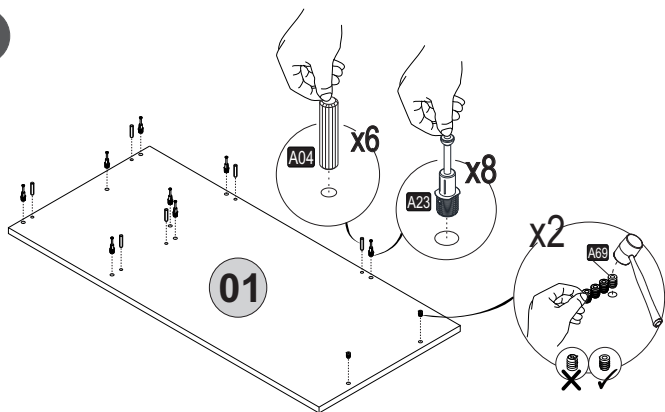


8

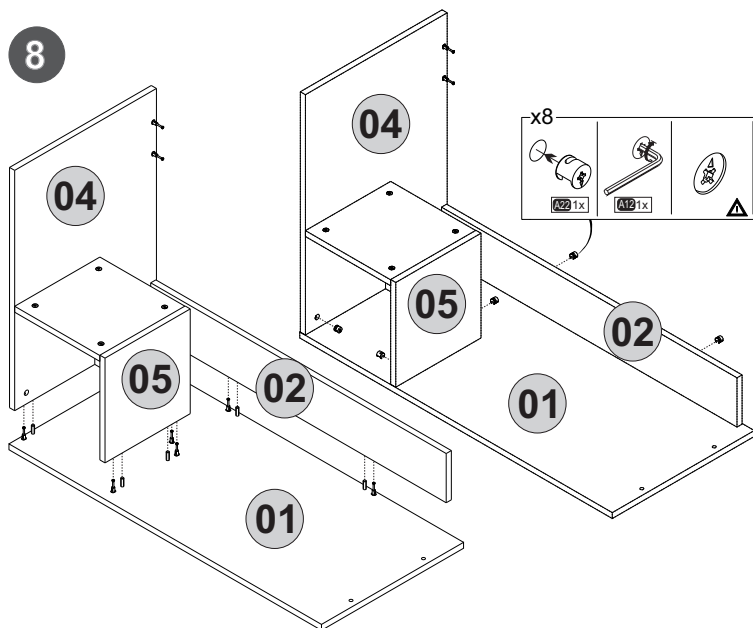


9

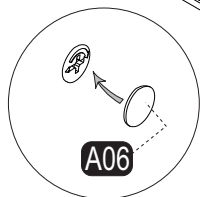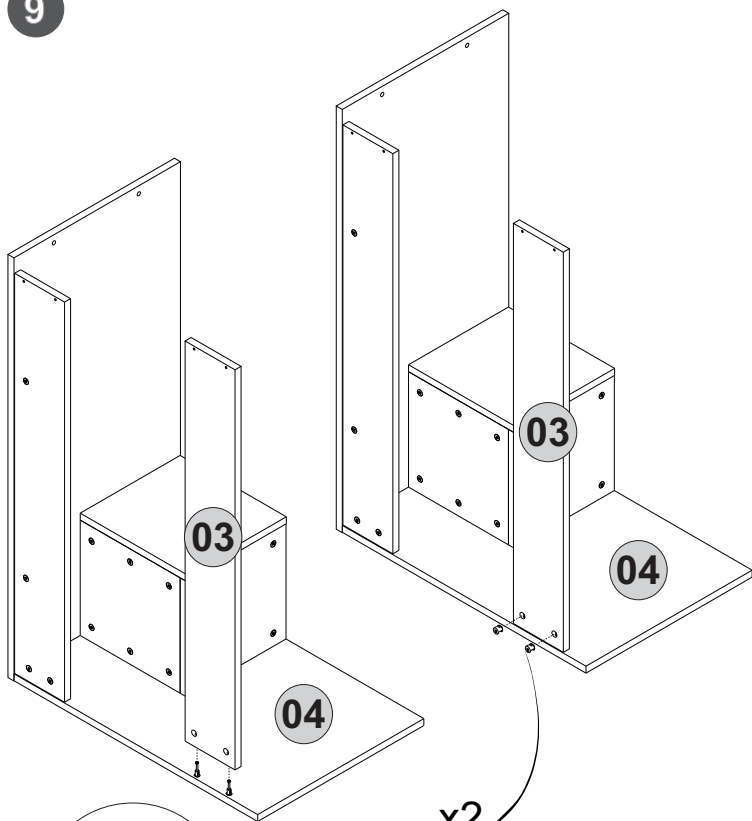

x2

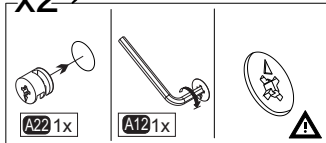

10

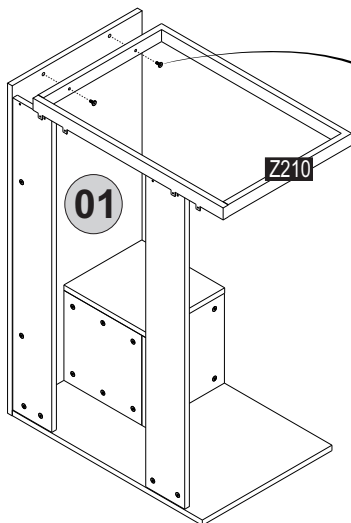

x2

B07

STEP-1


x2

B07

A12

STEP-2

11

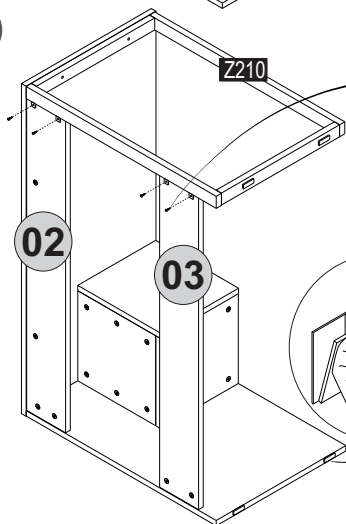

x4

A18
1x

PB01

x4

PB01