


GP037-0264,3












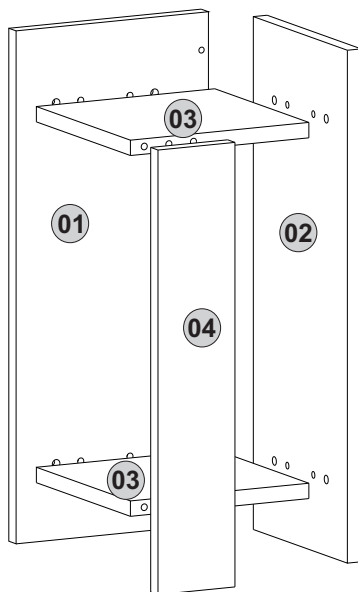
10MIN

Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.





HARDWARE LIST



A04  10x	A06 18mm  C1-15x Kece	A12 Minifix k18  1x	A13 50mm  3x	A22  12x
A23  12x	PB01  4x			






1

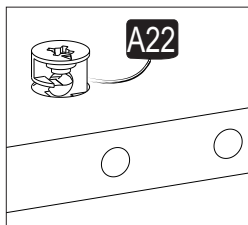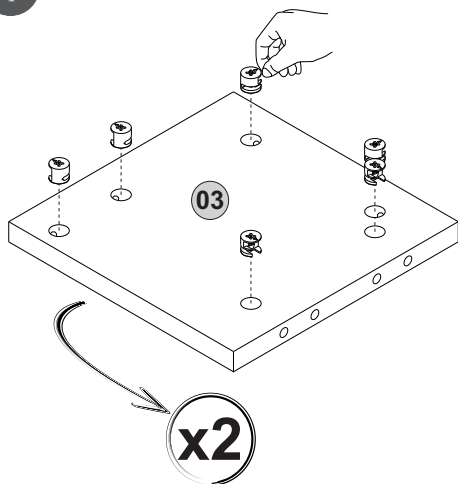


2

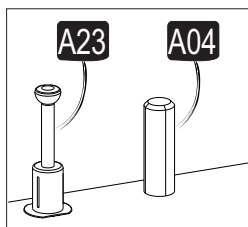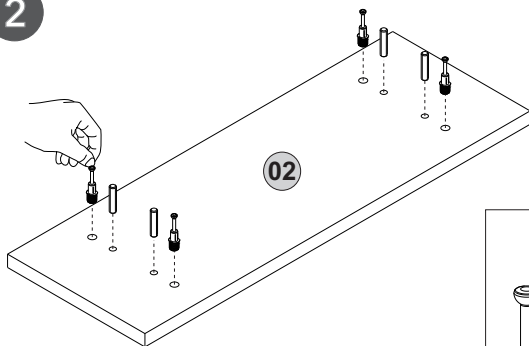



3

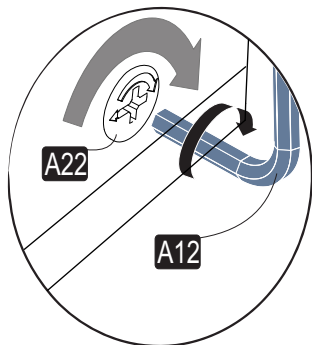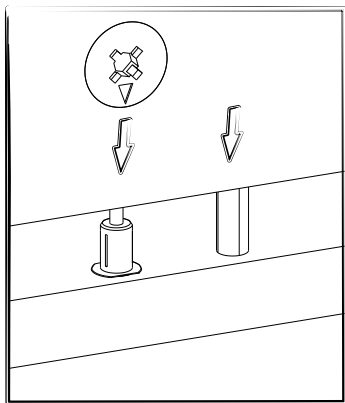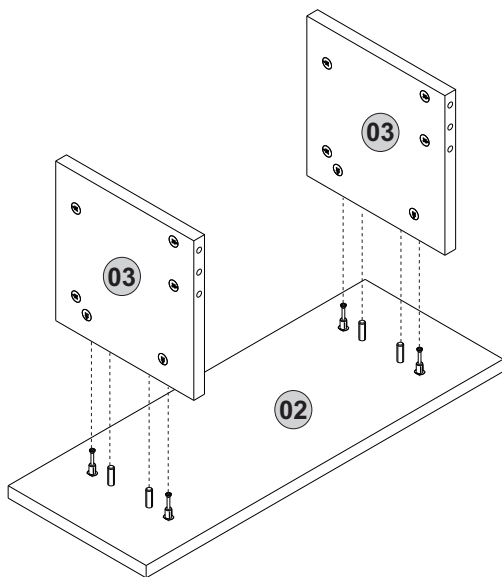


4

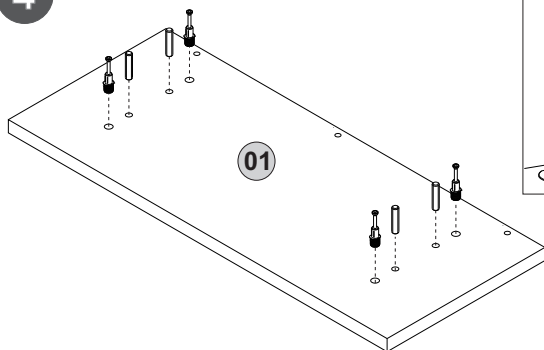



5

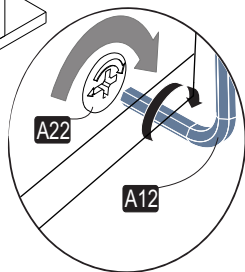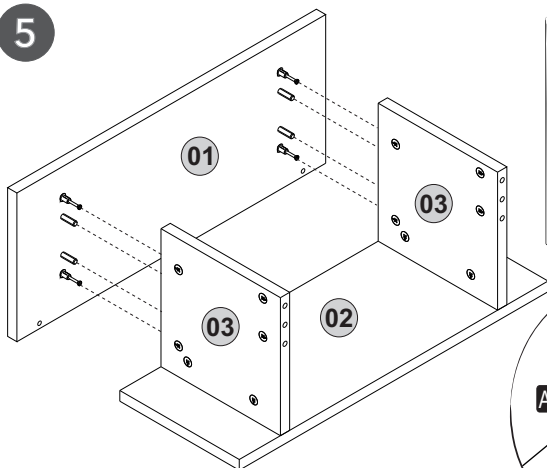




6

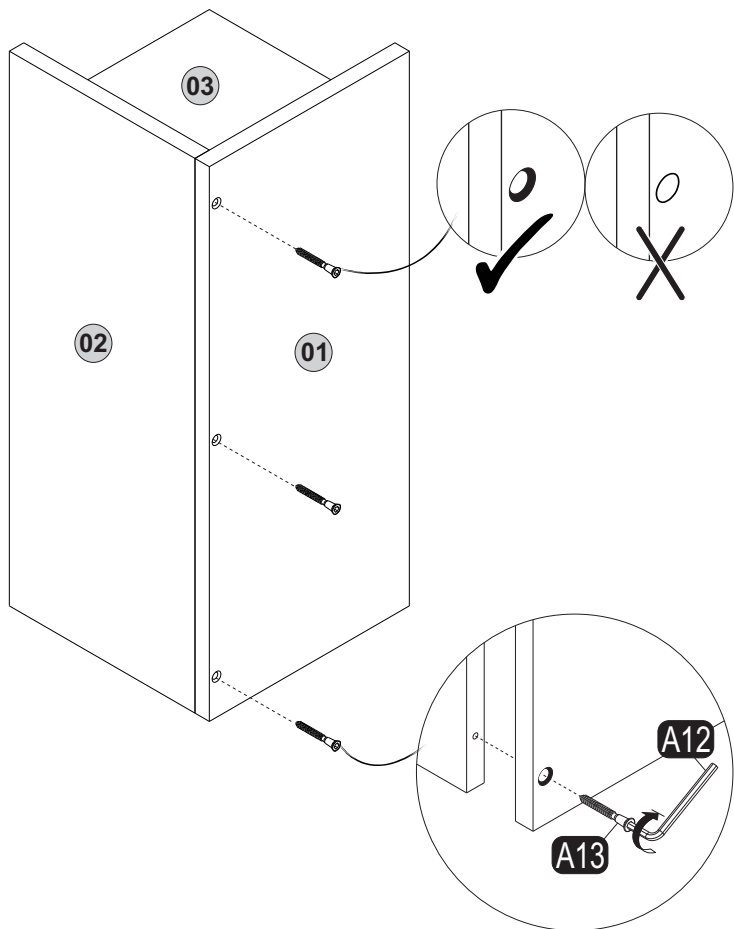



7

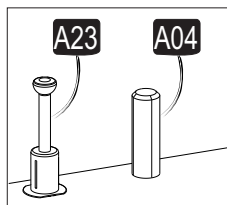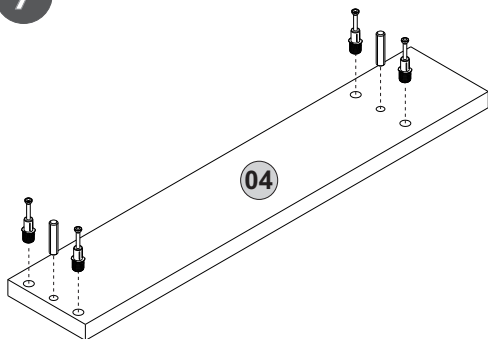


8

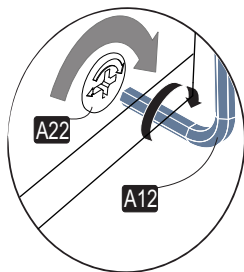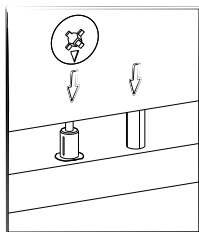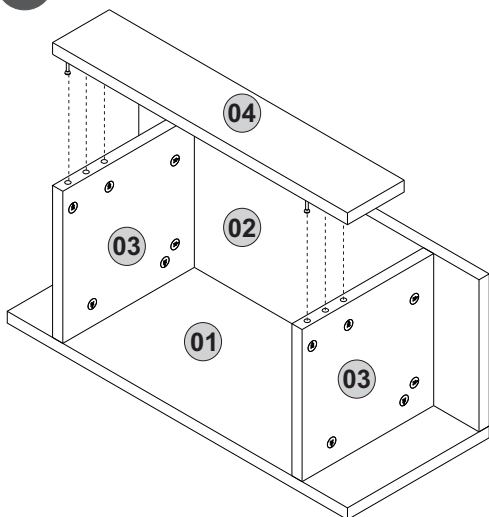

9

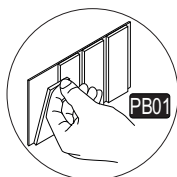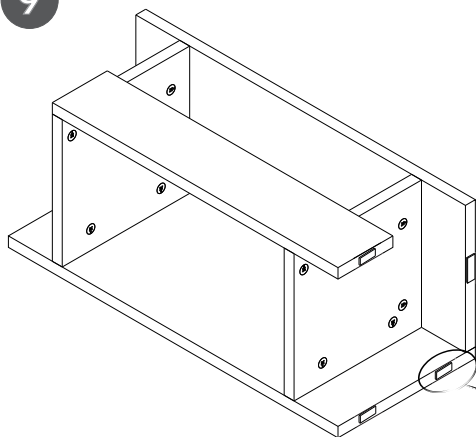



PB01

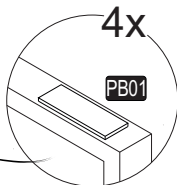

4x

PB01

10

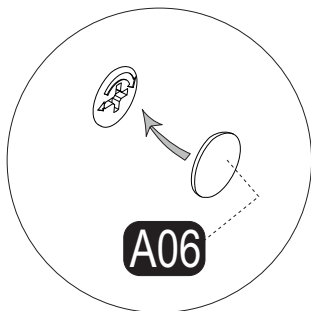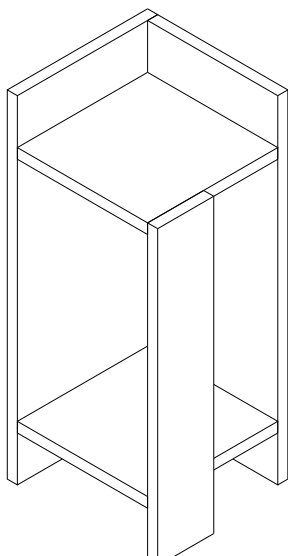

A06