


GP037-0265,2






Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.





RDWARE LIST



	A06 18mm		A12 Minifix k18		A13 50mm		A22
10x		C1-15x Kece	1x	3x		12x	
	PB01						
12x		4x					

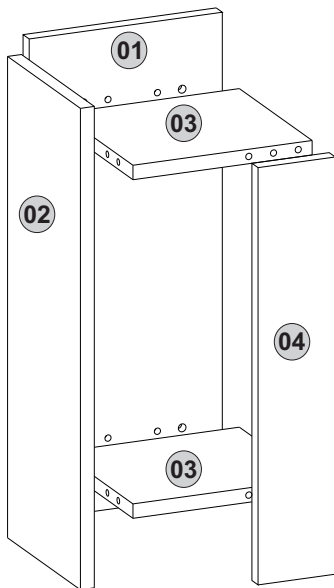




1

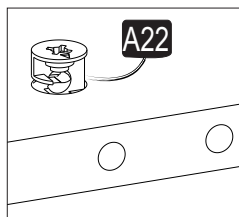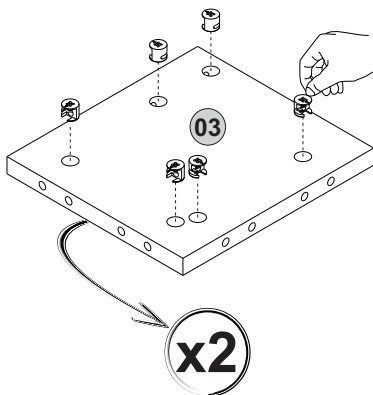



2

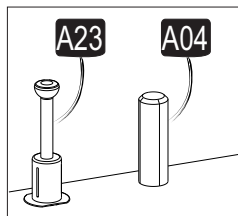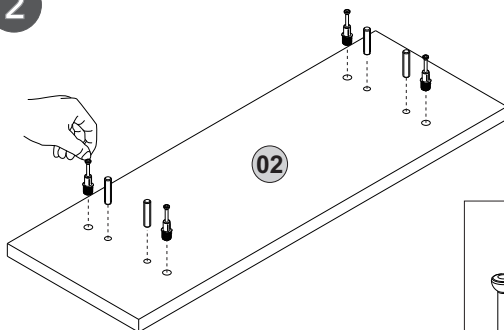




3

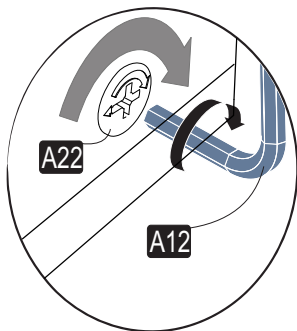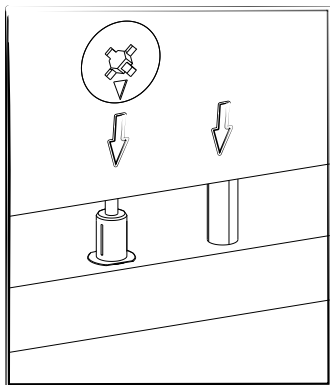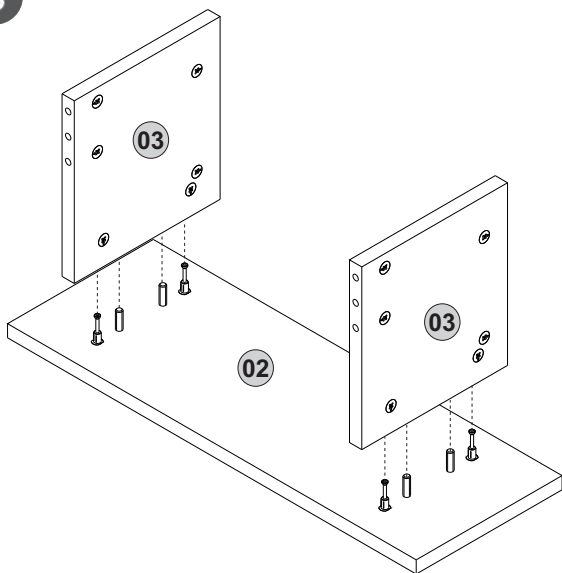


4

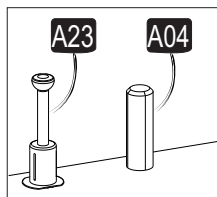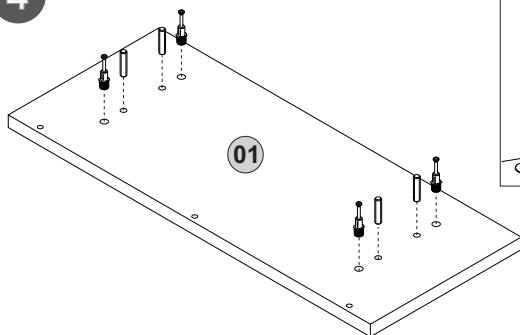



5

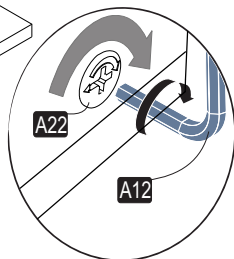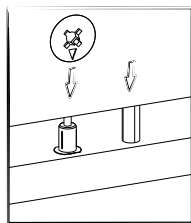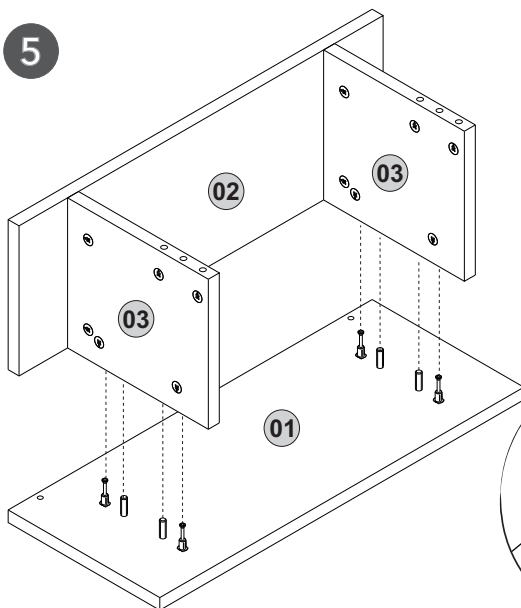




6

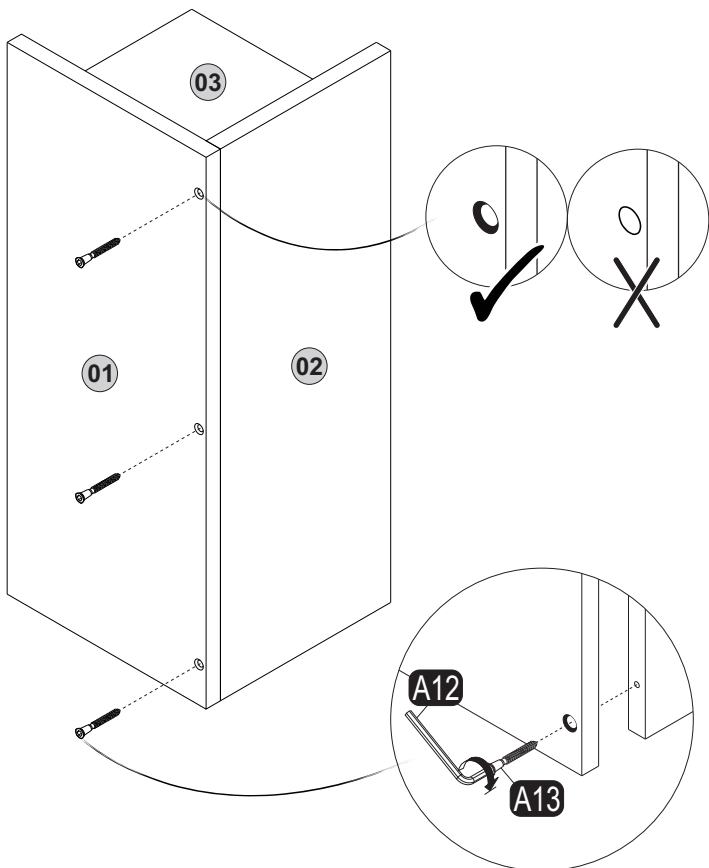


7

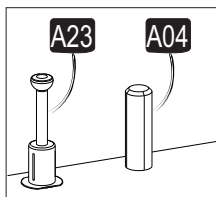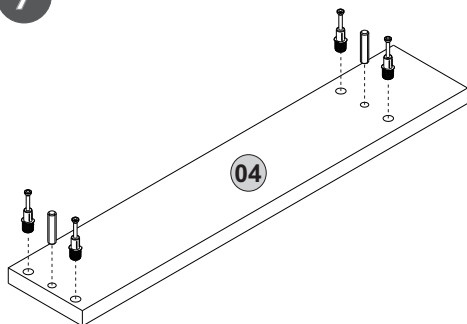


8

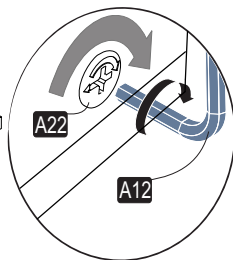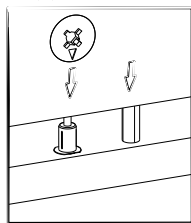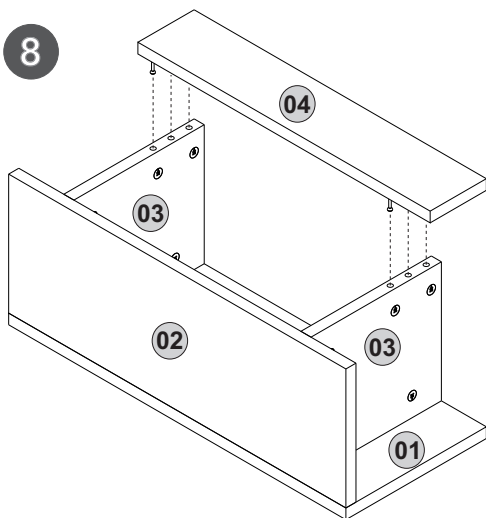



9

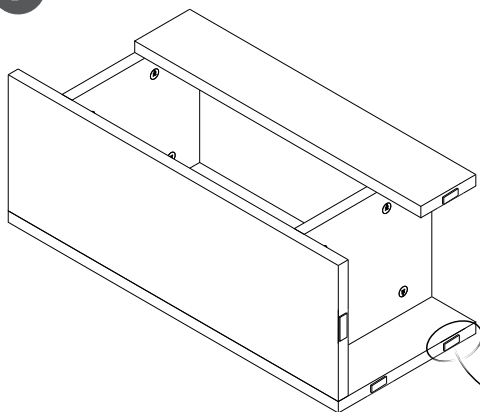

4x

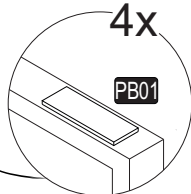

10

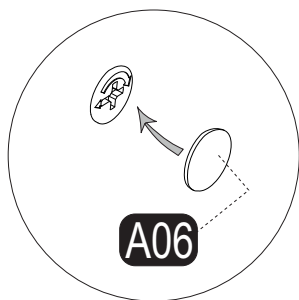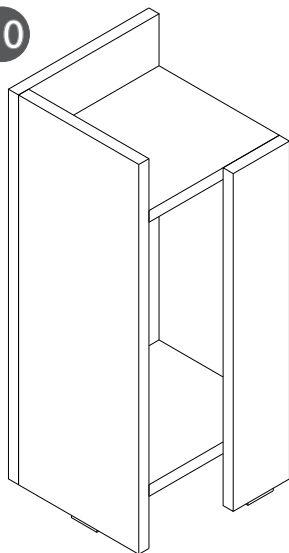

A06