







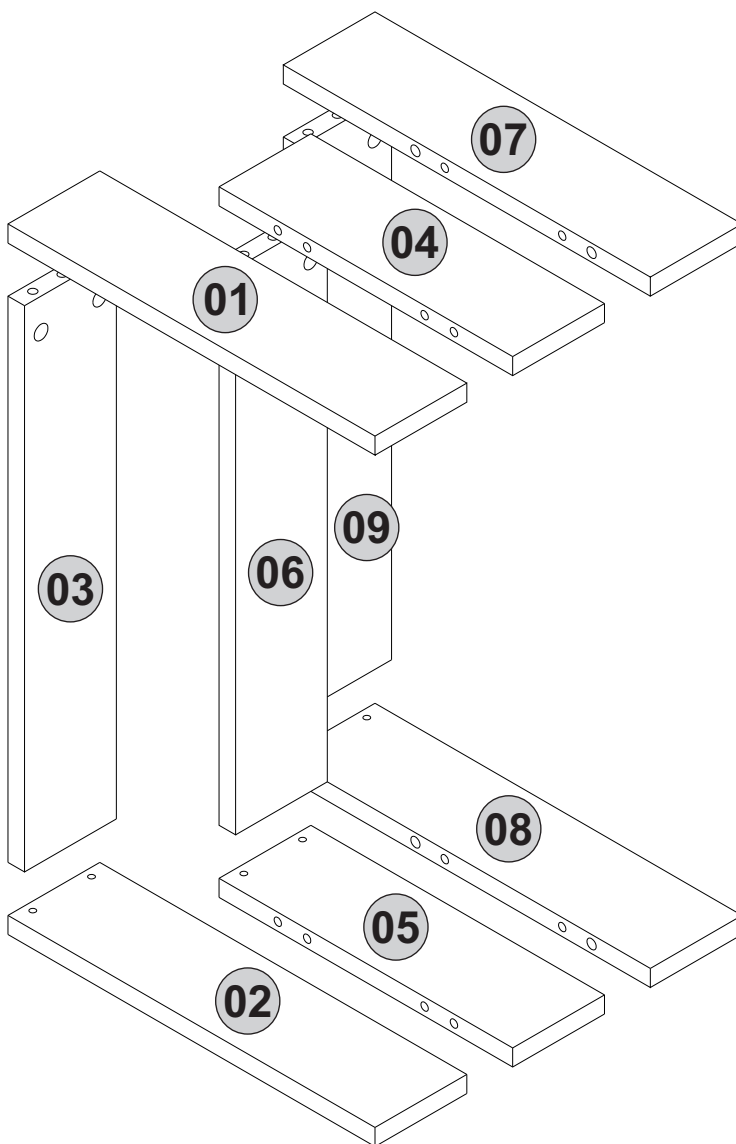


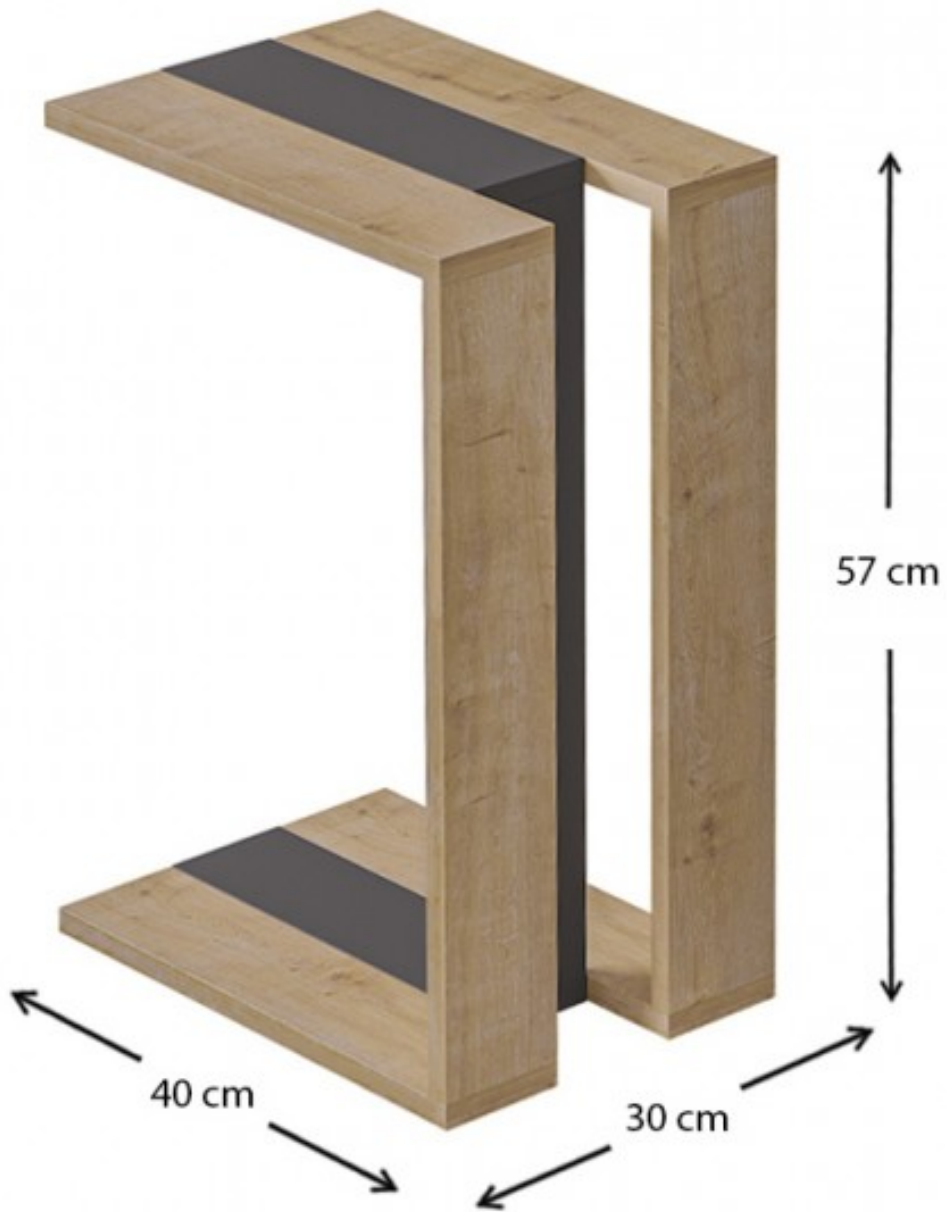


GP037-0032,2




A22 Minifix k18  14x	A62 Minifix M8  14x	A04 Ø8  11x	A12 Allen  1x	A13 50mm  6x
A08 5mm  C1-2X C3-2X	A06 18mm  C1-4X C2-12X C3-4X			




1. step

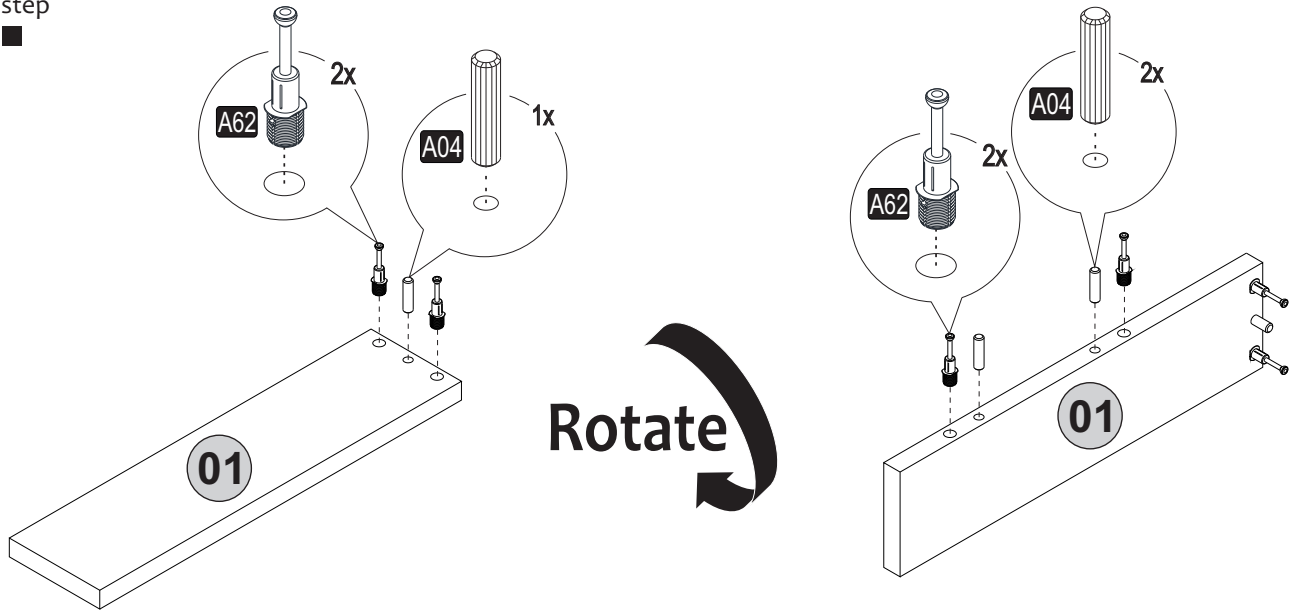


2. step

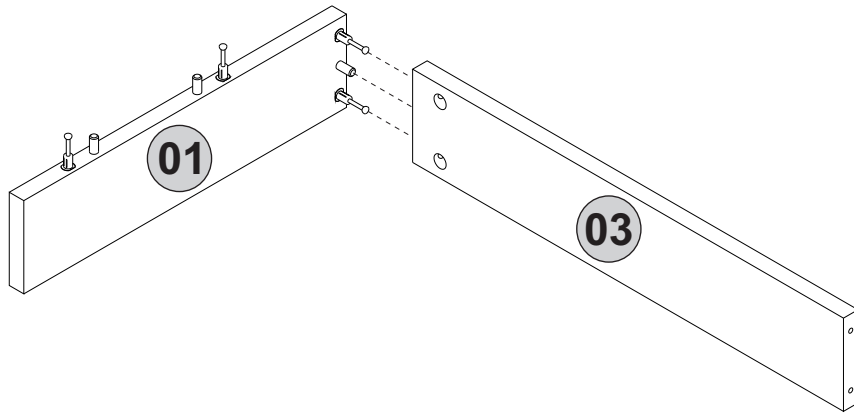


3. step

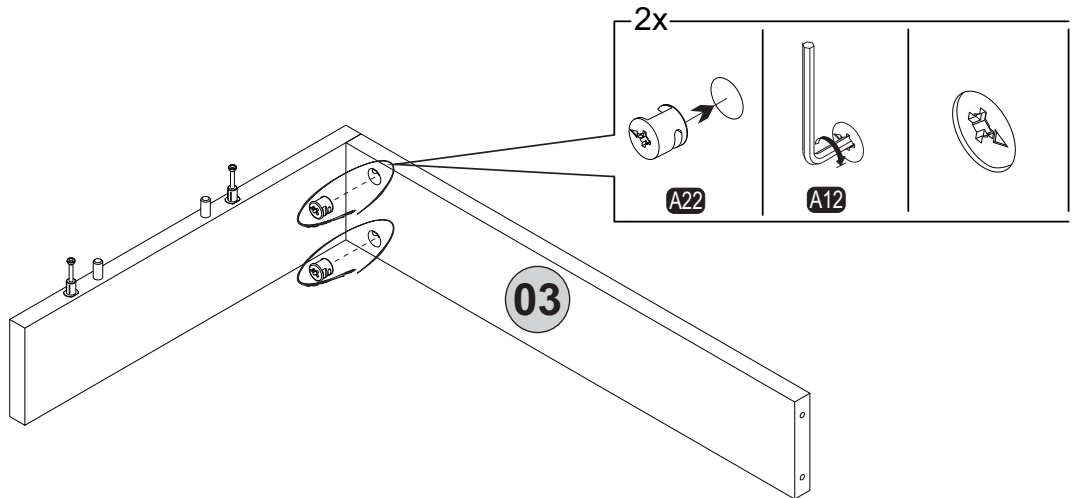


4.^{step}

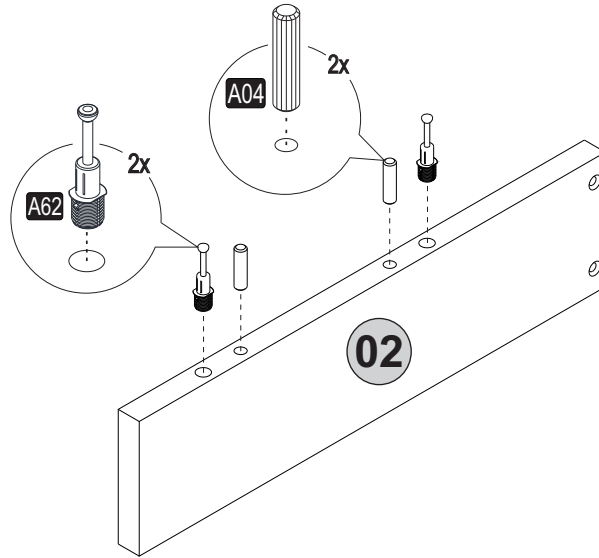


5.^{step}

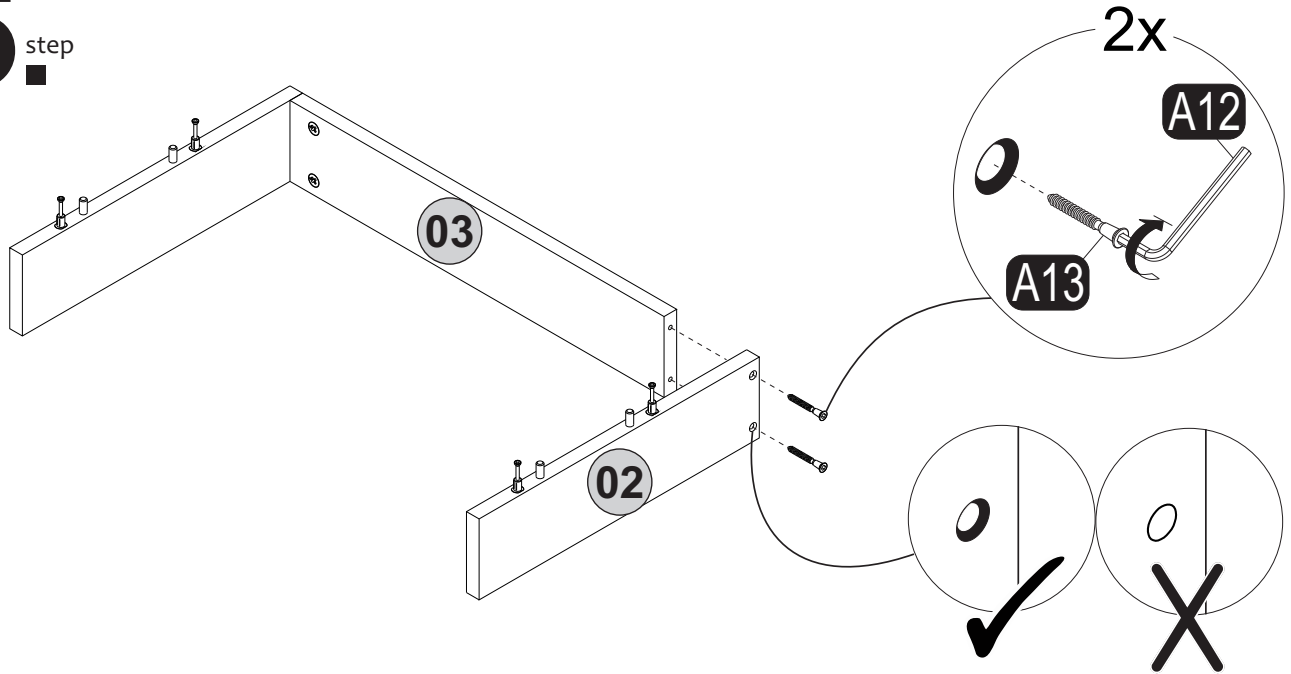


6.^{step}

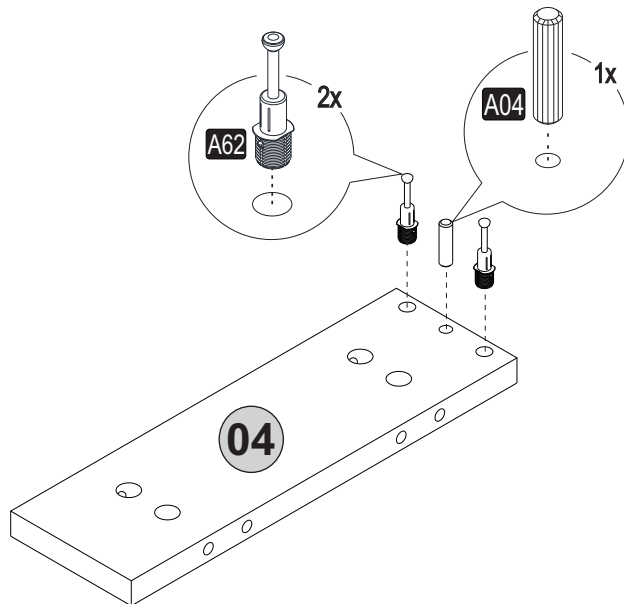


7 step

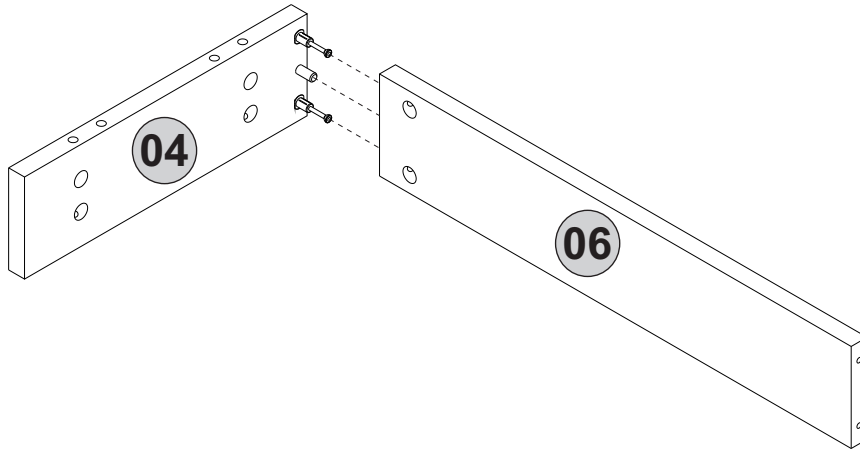


8 step

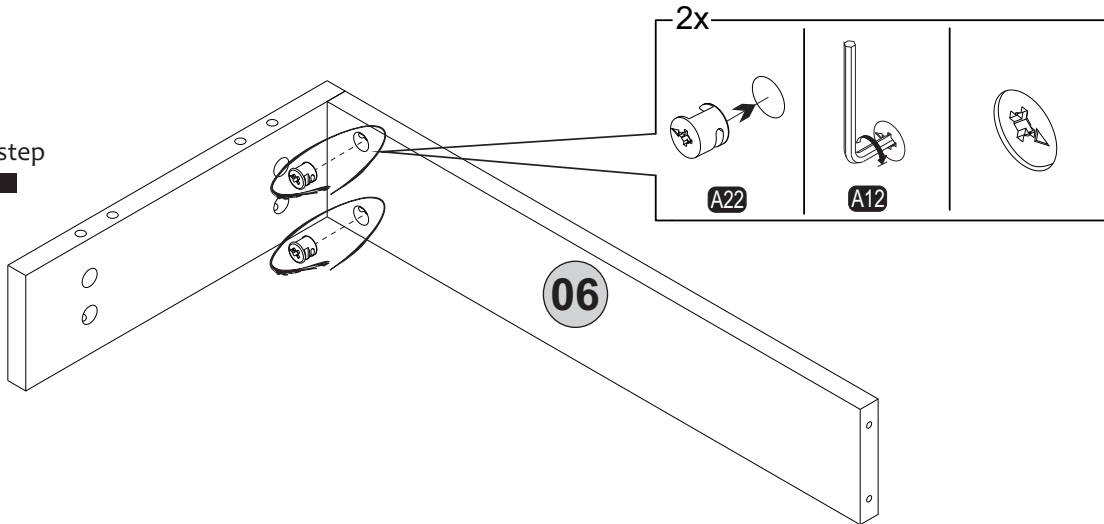


9 step

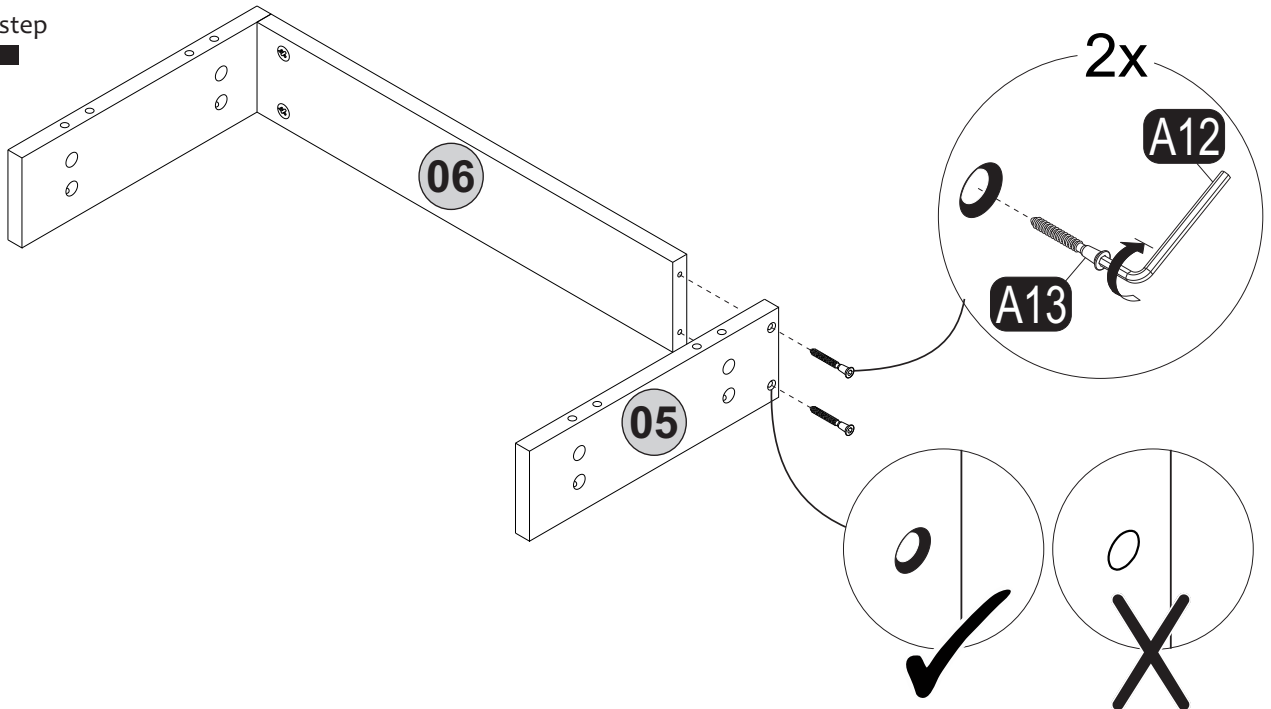


10.^{step}

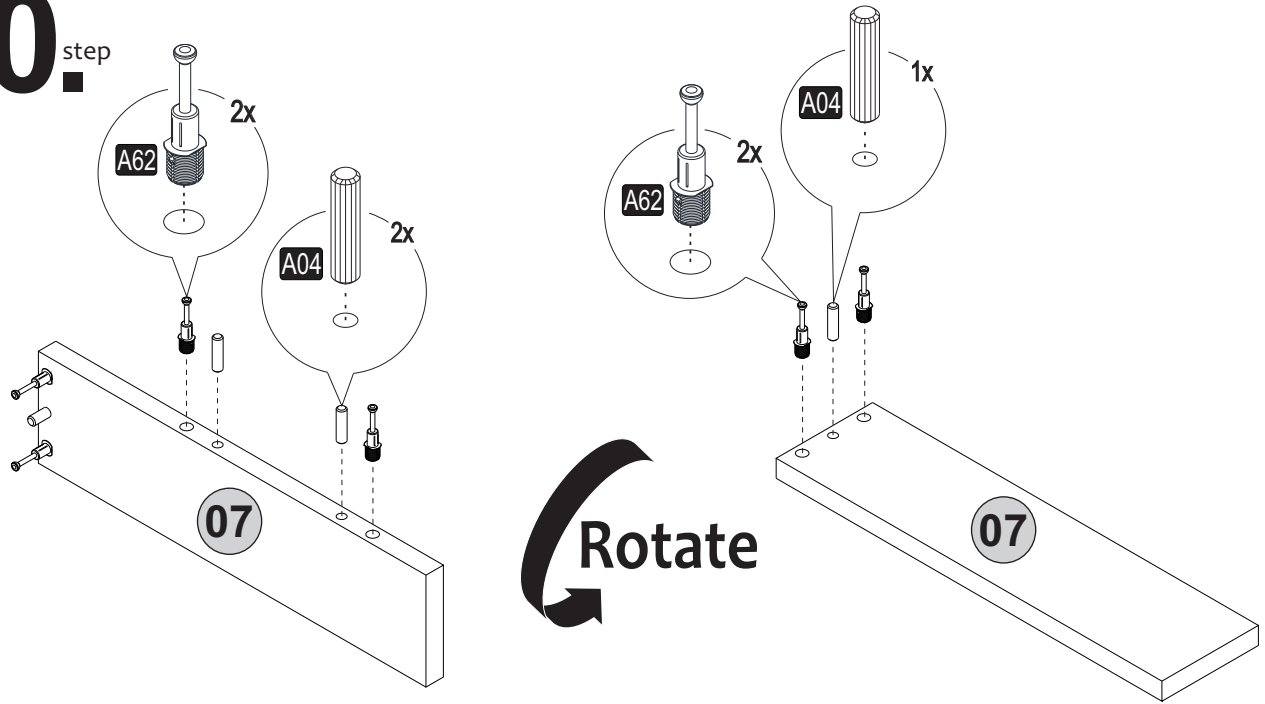


11.^{step}

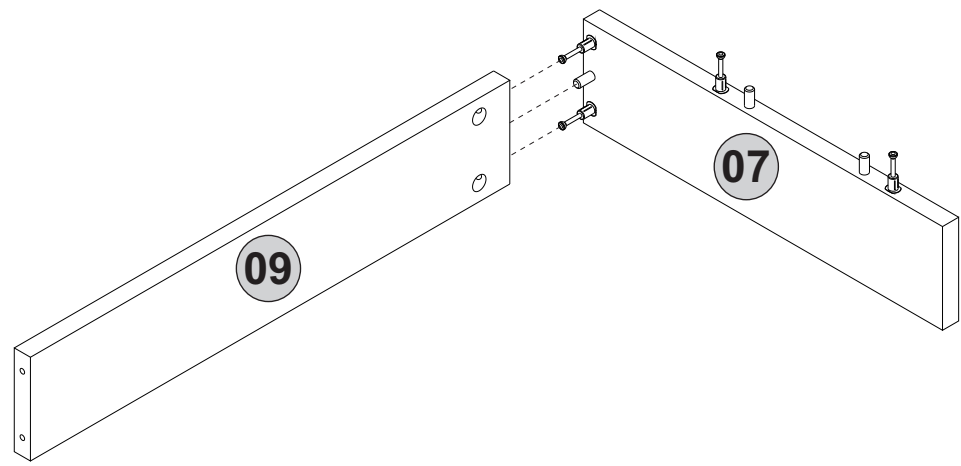


12.^{step}

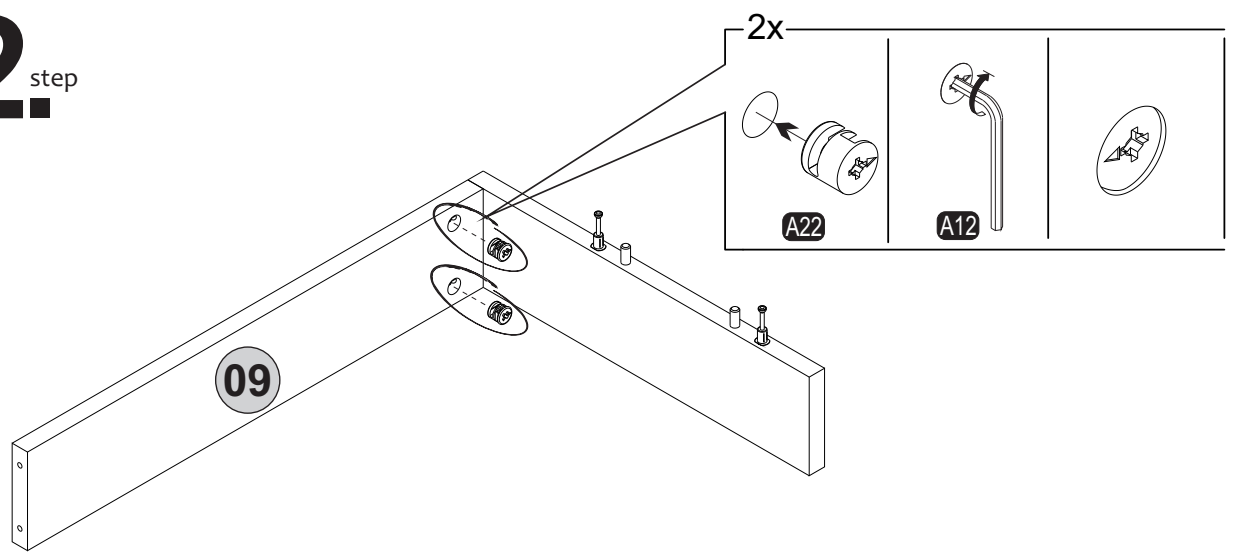


13.^{step}

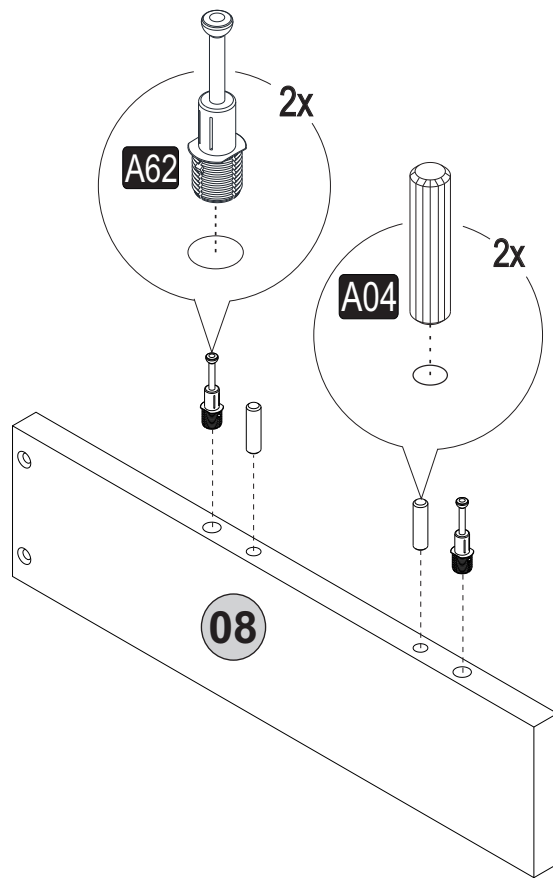


14.^{step}

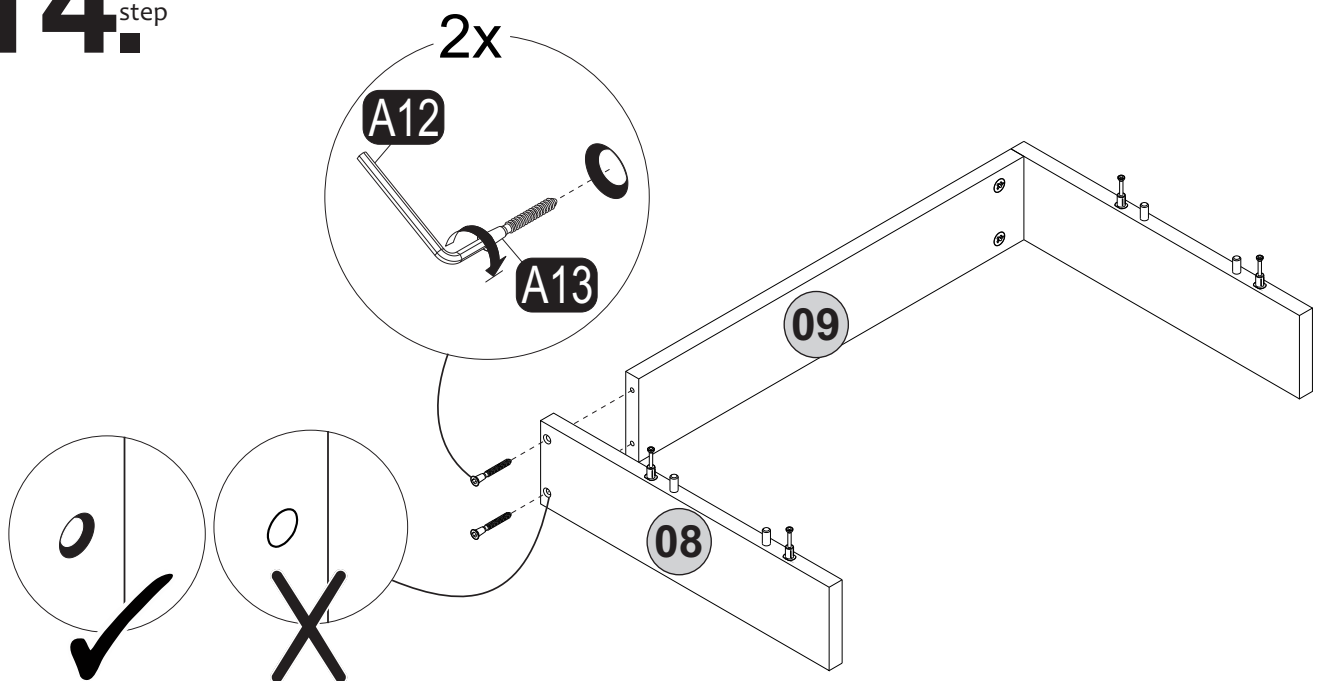


15.^{step}

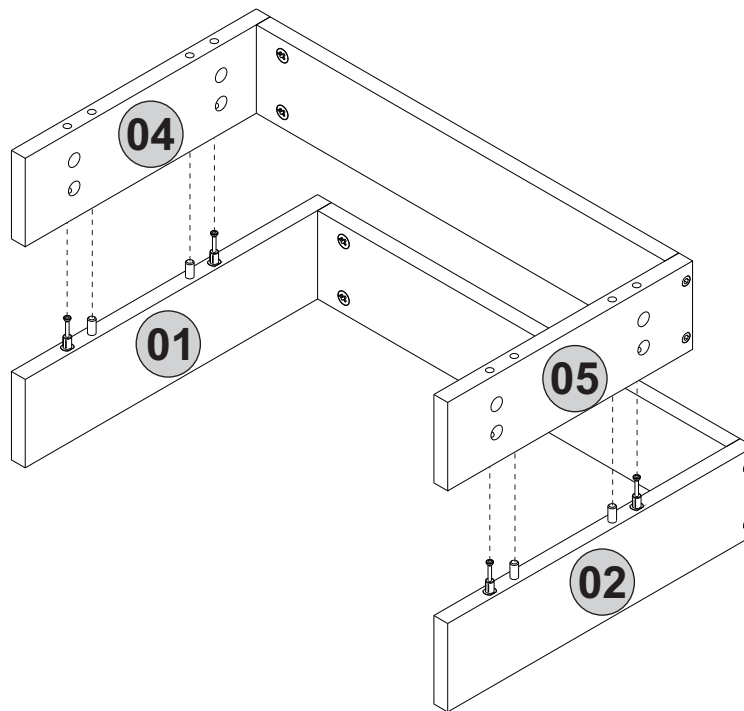


16.^{step}

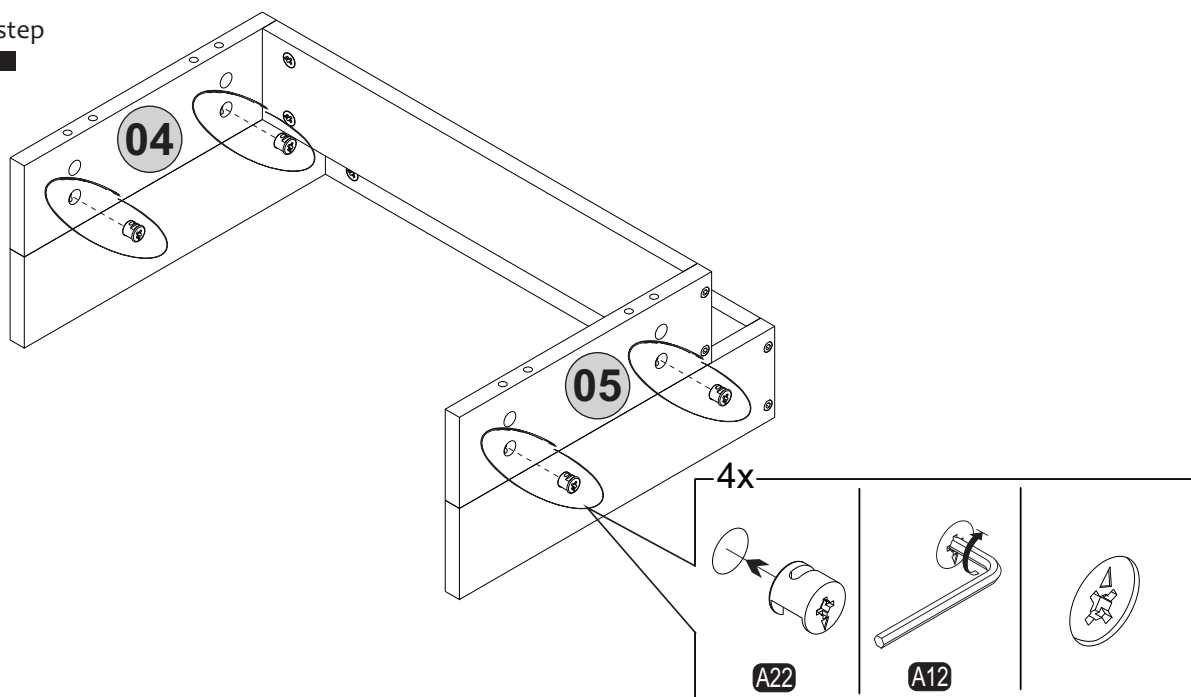


17. step

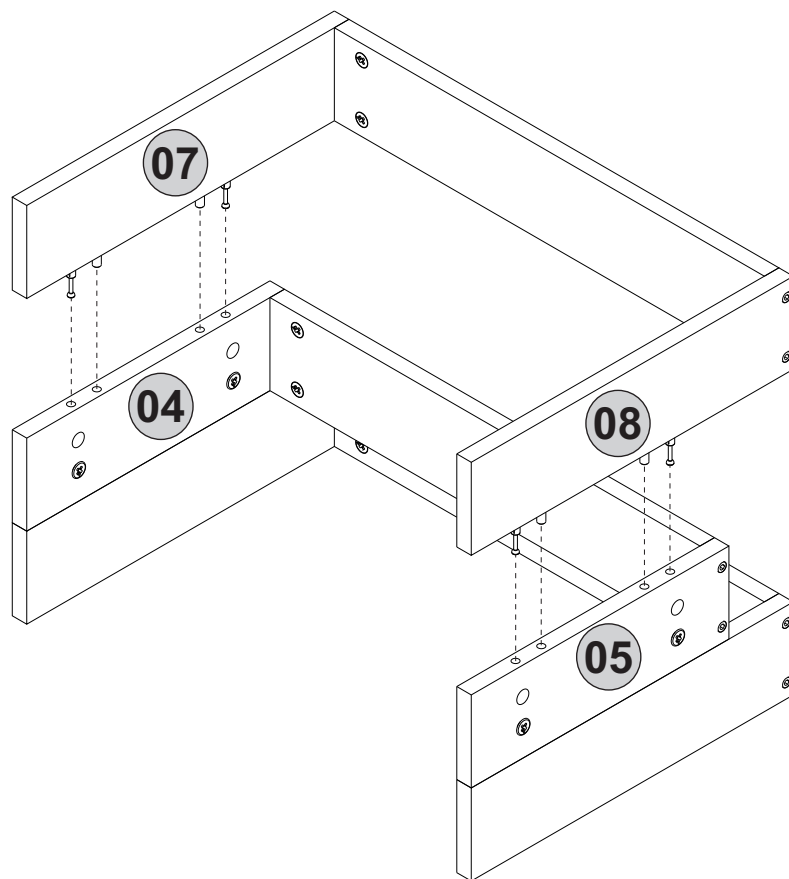

18. step

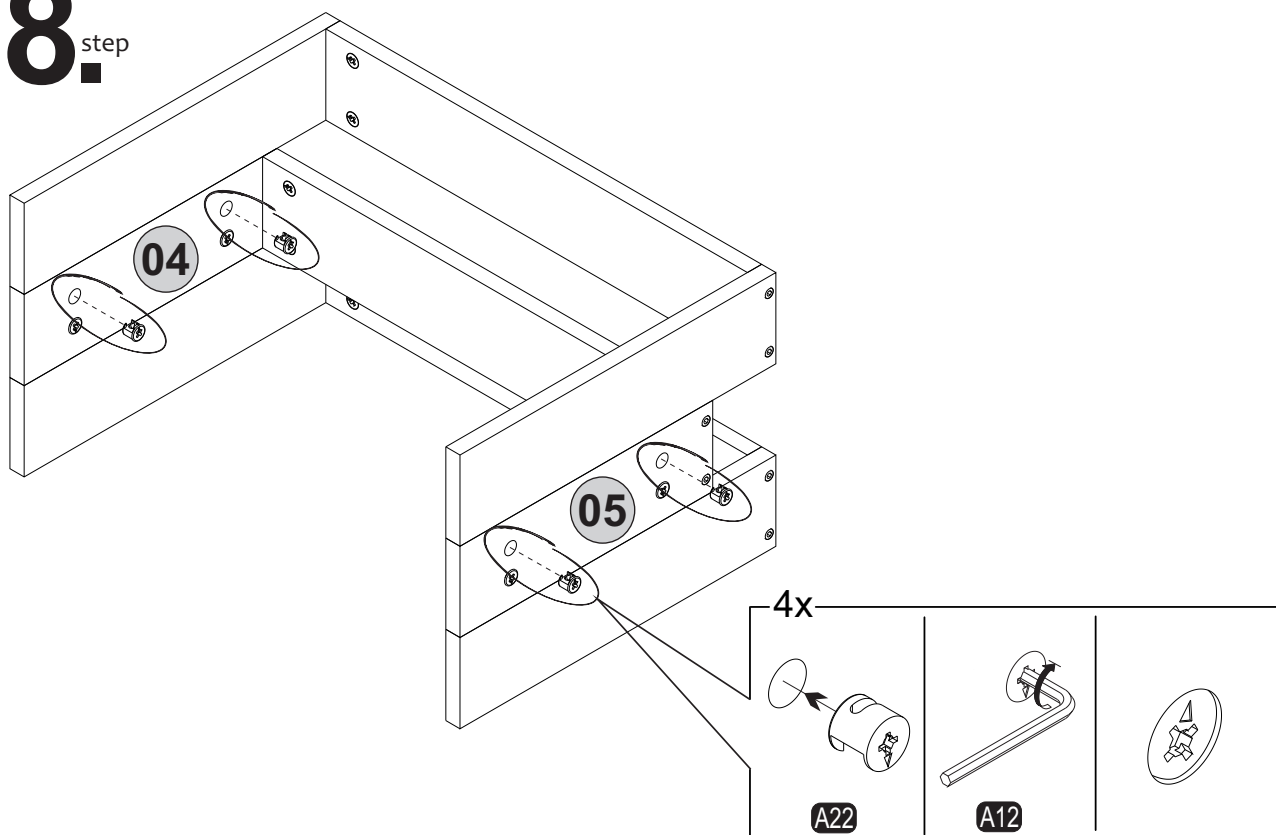

19.^{step}

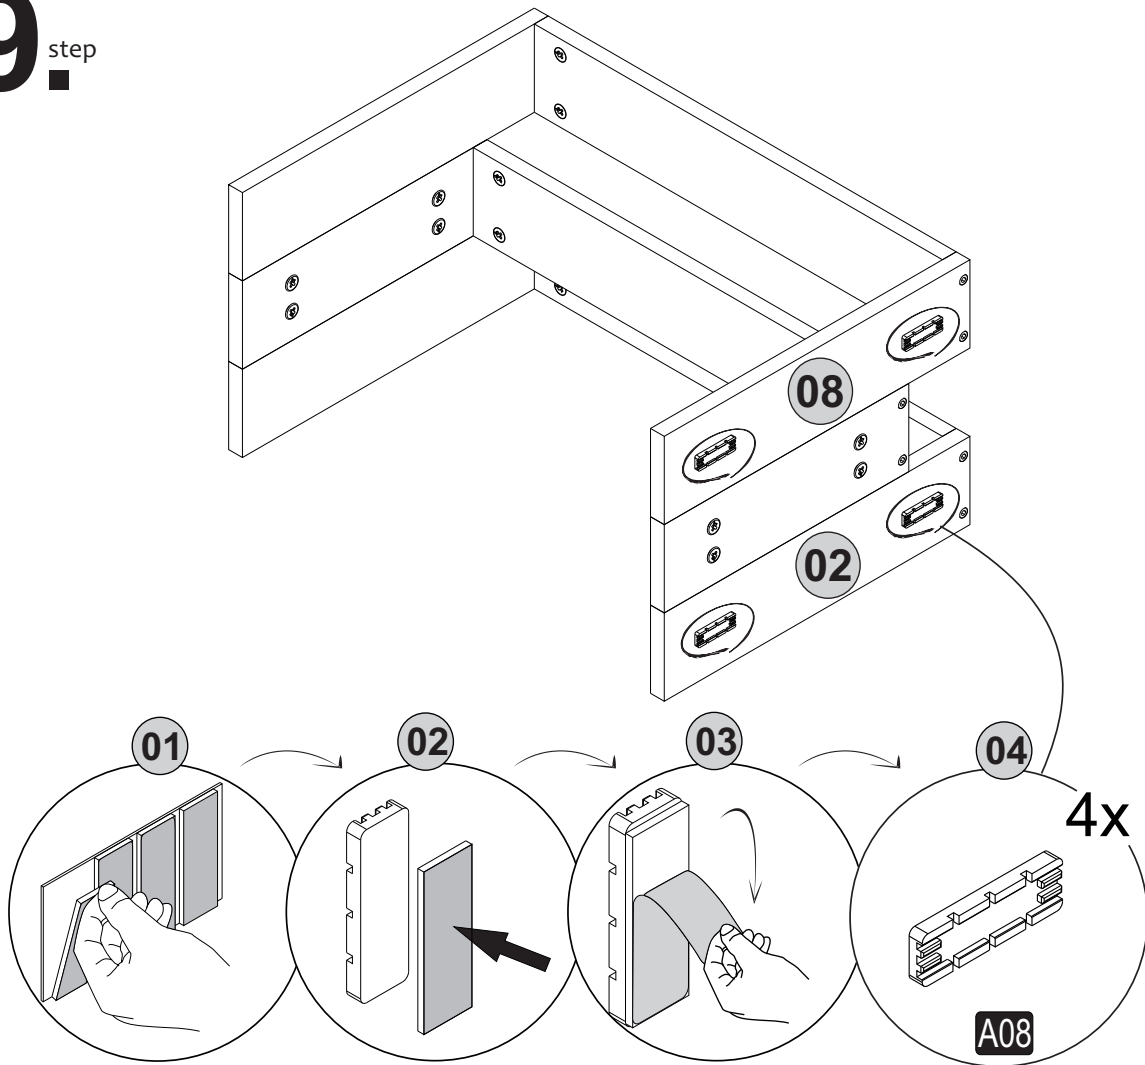

20.^{step}

