



i GP037-0211,2

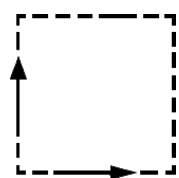

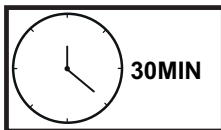






















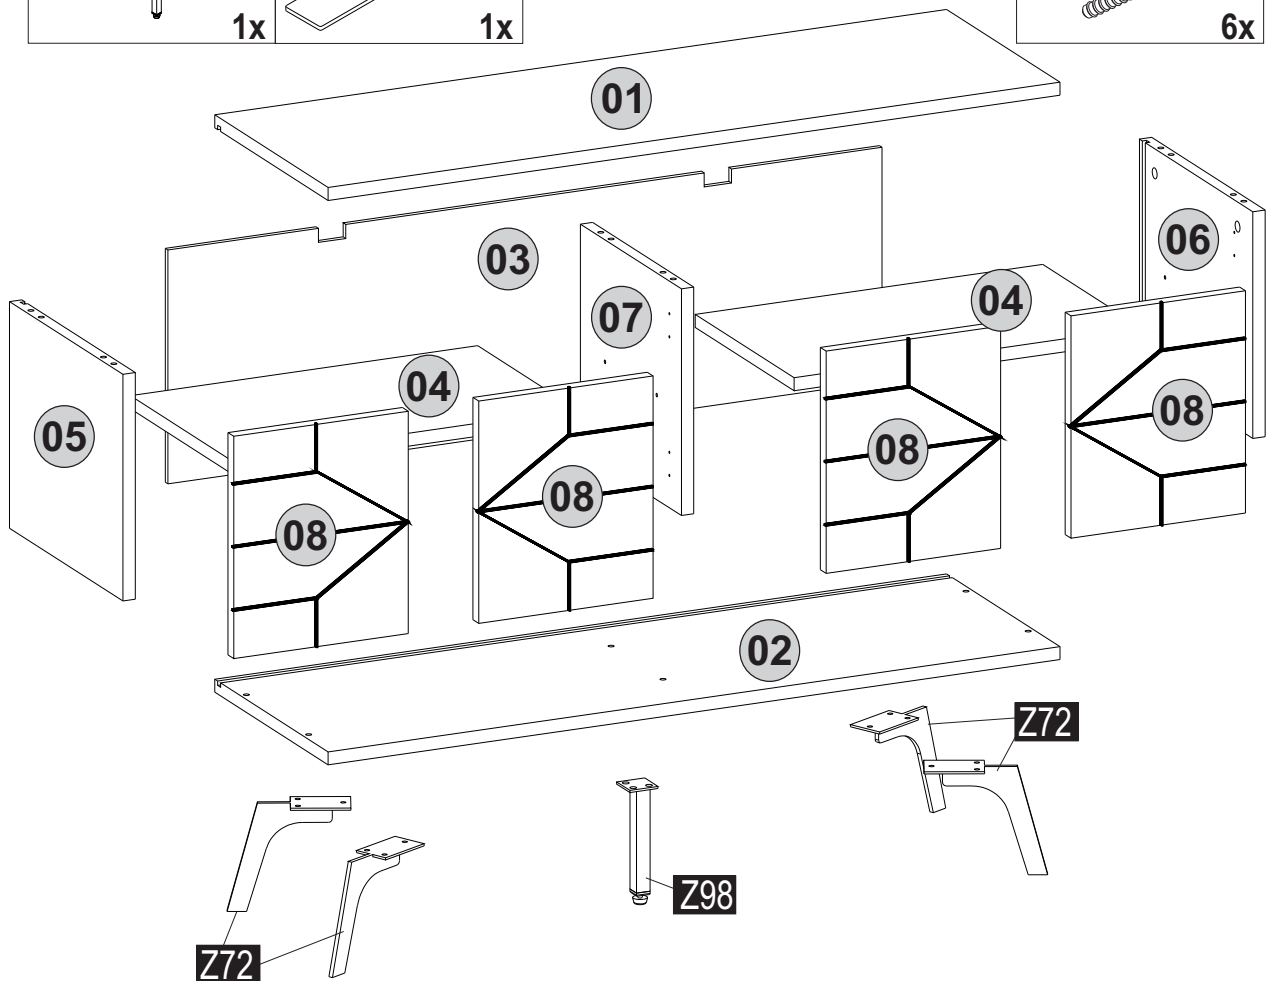
107 x 35 x 55cm






Follow the installation steps in the order as shown.  Position the parts as shown in the installation guide steps.


HARDWARE LIST

A04 Ø8x30 6x 	A22 Minifix k18 6x 	A23 Minifix M10 6x 	A06 18mm C1-12x 2x 	A87 15x90x30 2x 
A12 Allen 1x 	A69 P.D. 15x 	A16 DbØ8 2x 	A17 4x50 2x 	A18 3,5x18 56x 
A48 Raf Pimi 8x 	A25 ARK.PL 4x 	C16 sdb(S) 2x 	C19 sdbF(S) 2x 	C20 Mtk(S) 8x 
Z72 PA 4x 	B15 15 (black)mm 15x 	A80 bas ac 4x 	C18 YdbF(S) 2x 	C15 Ydb(S) 2x 
Z98 AMA 150mm 1x 	Matress 1060x340x50 1x 			A13 50mm 6x 




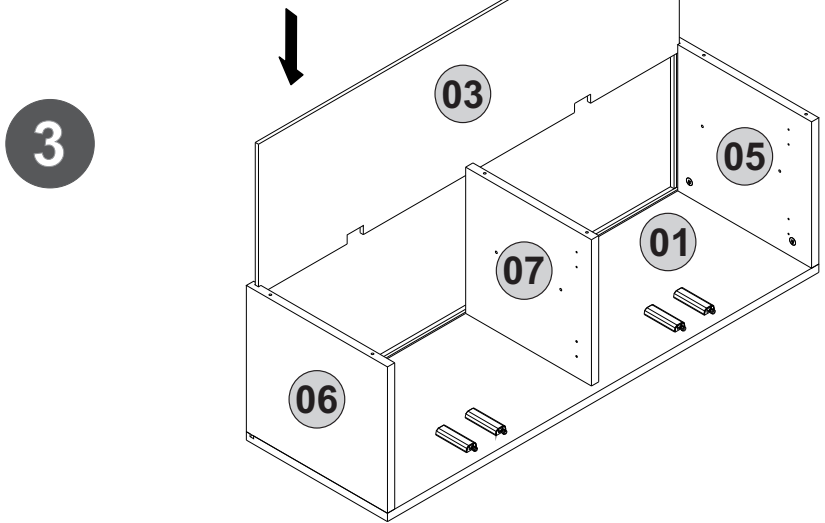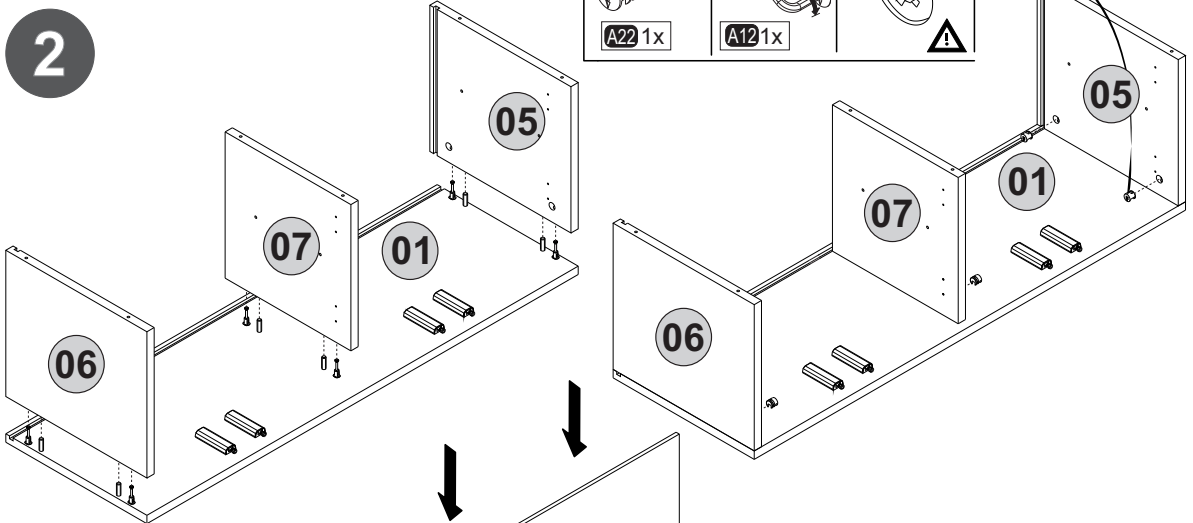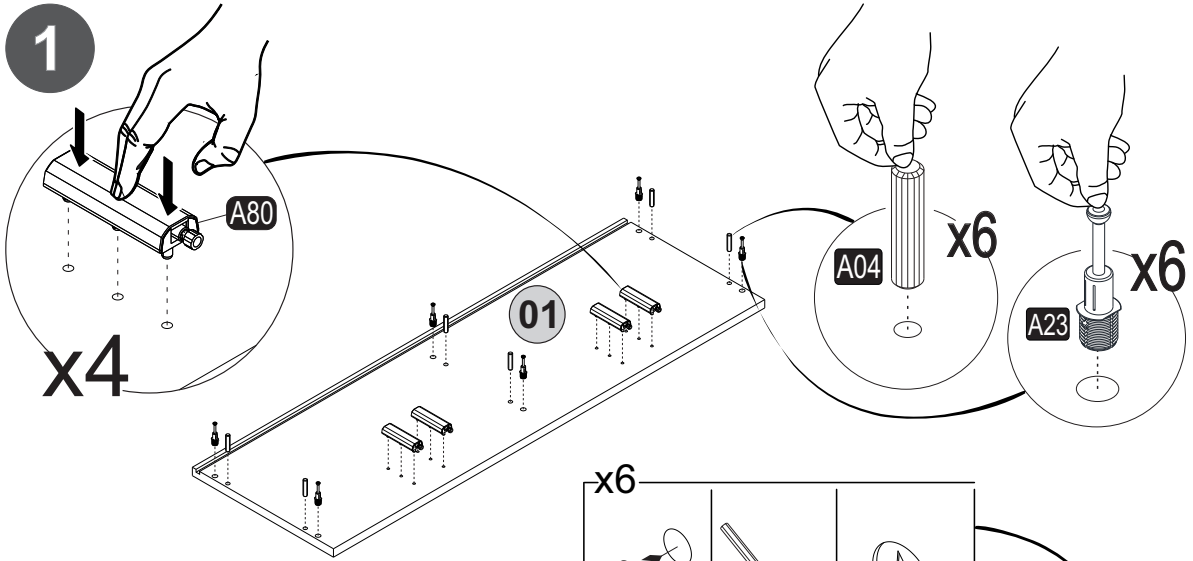


4

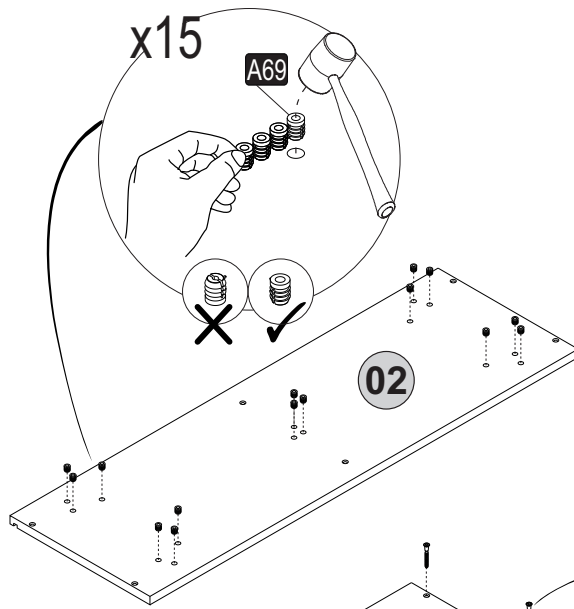


5

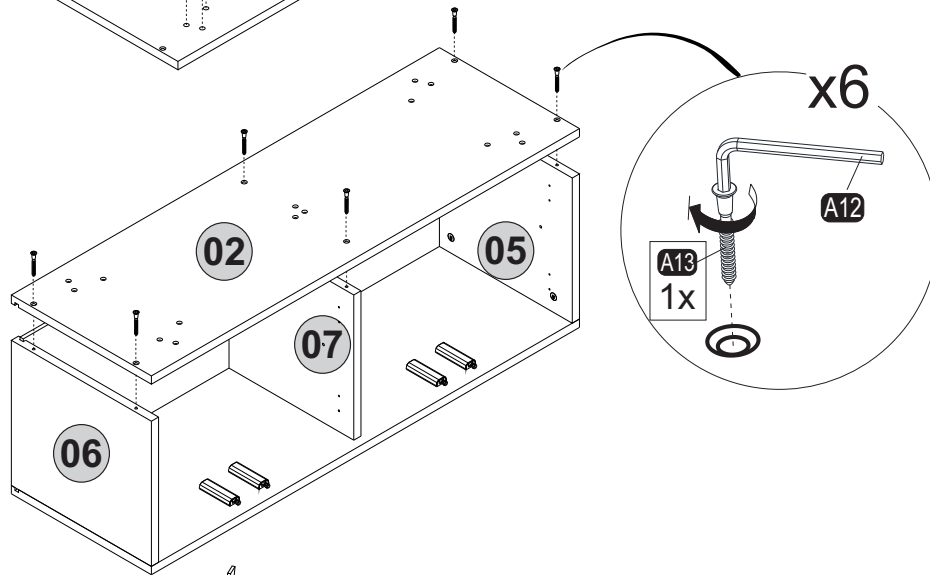


6

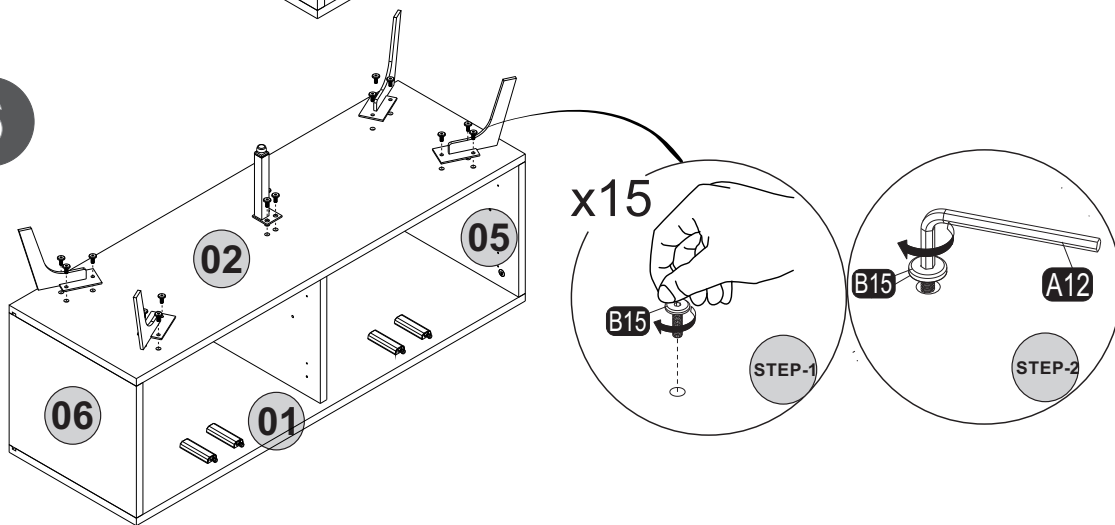


7

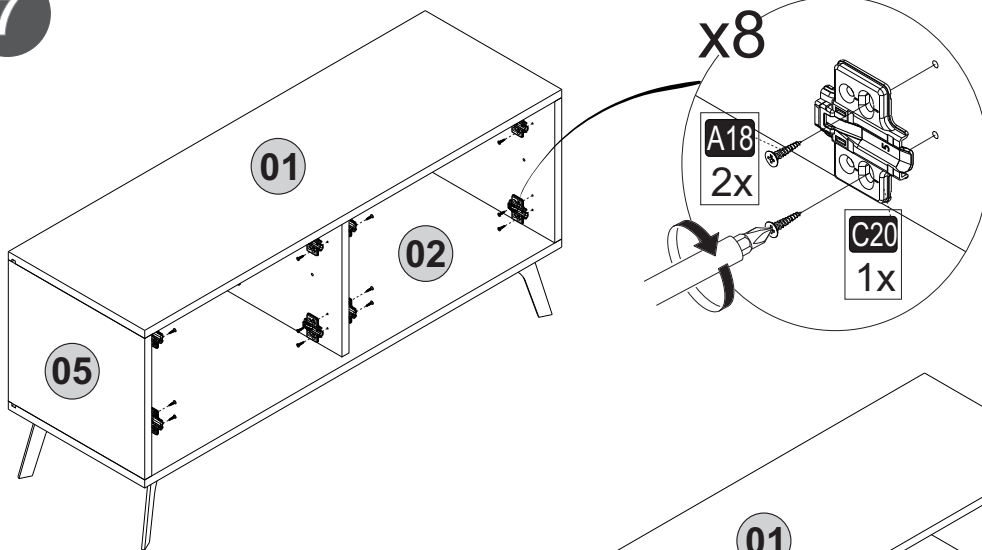



8

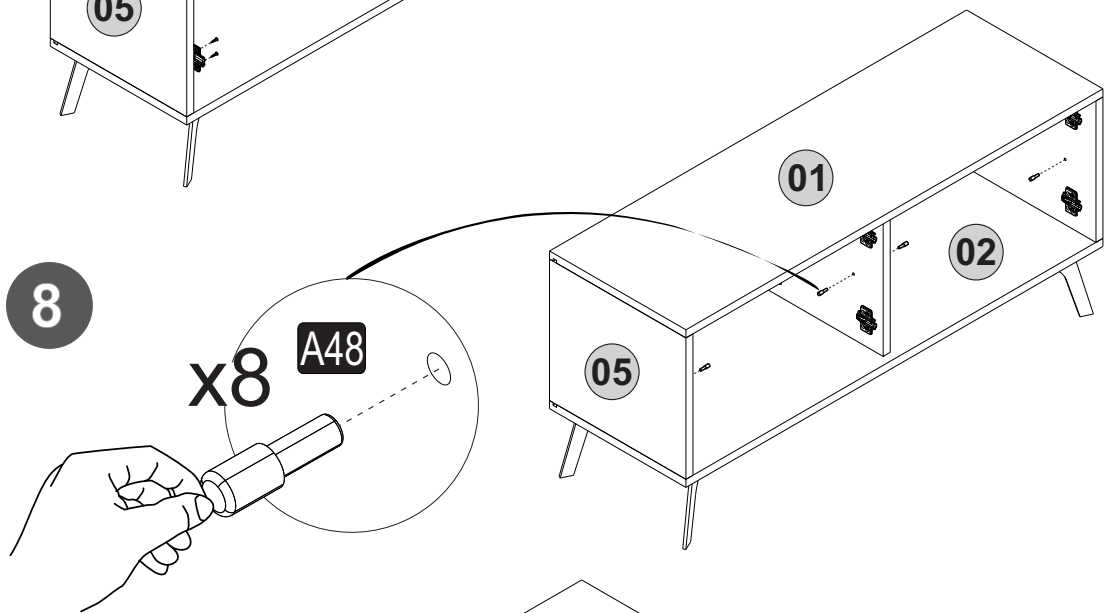





9

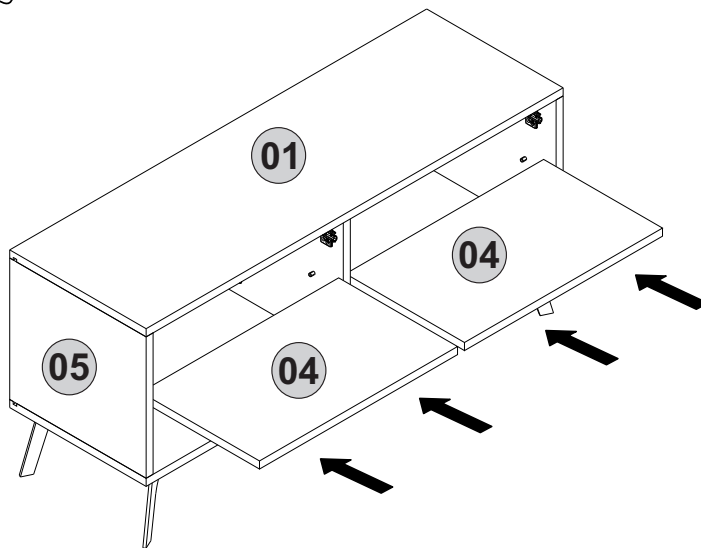










10
x2

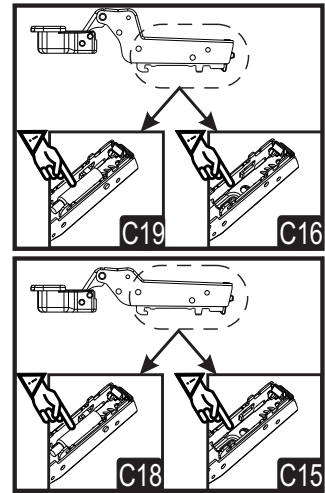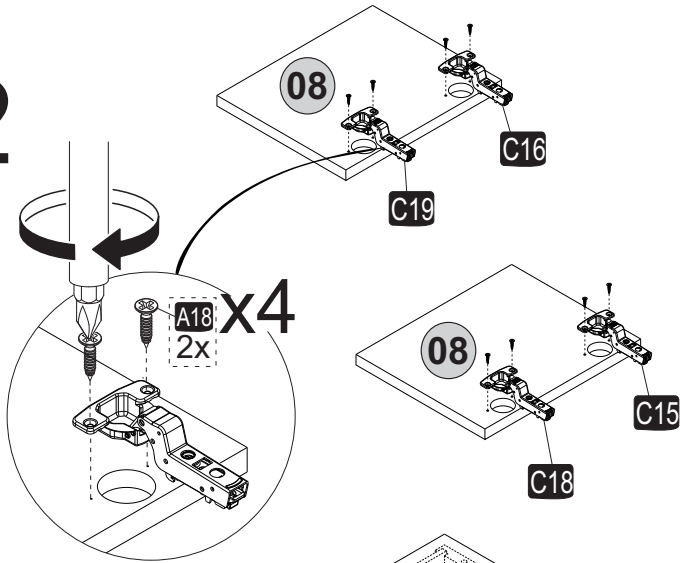




11

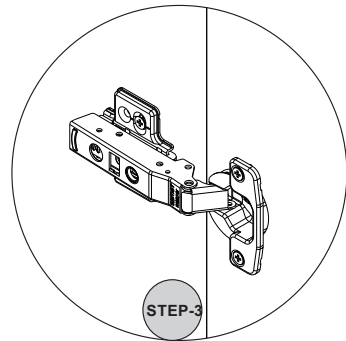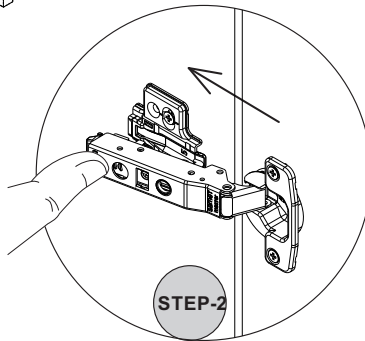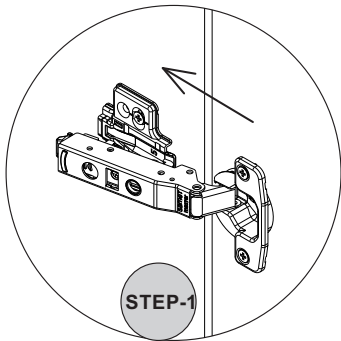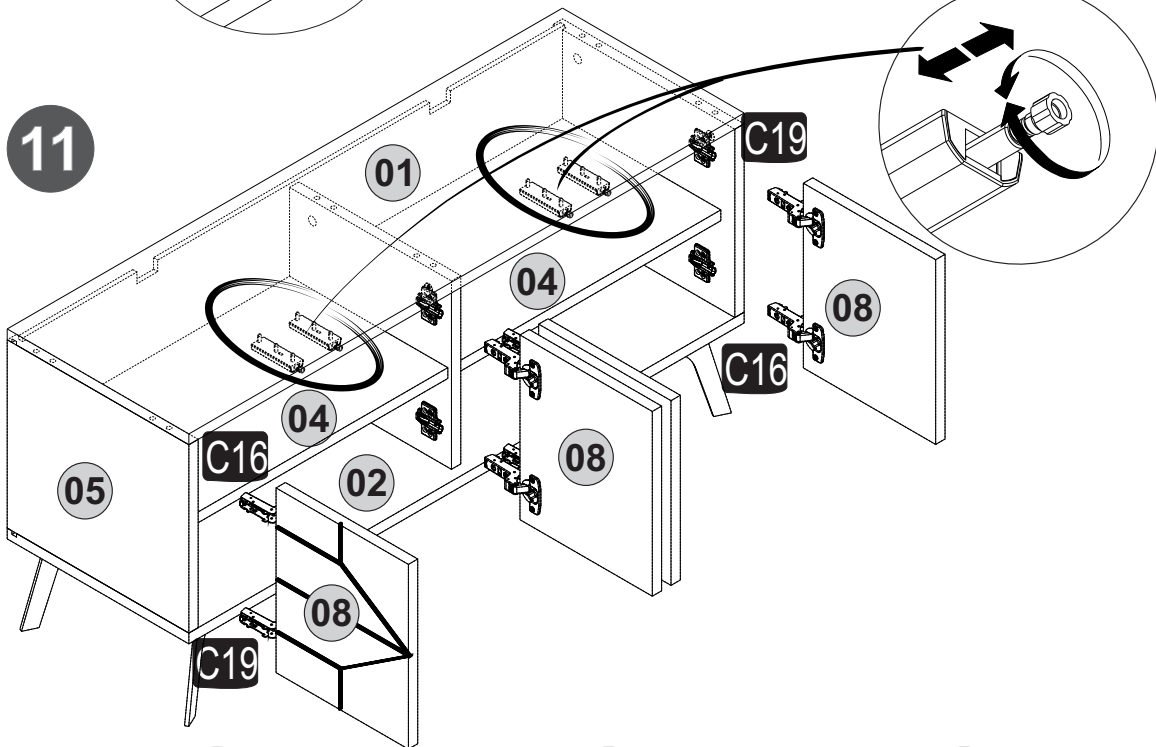

12

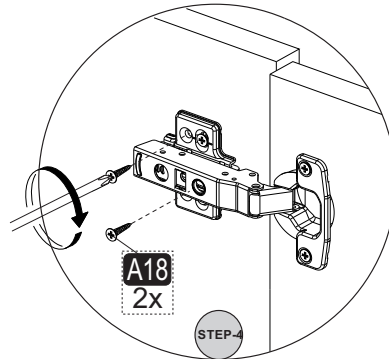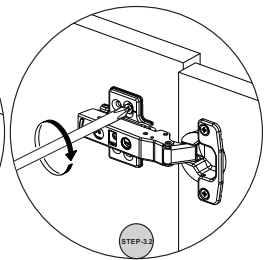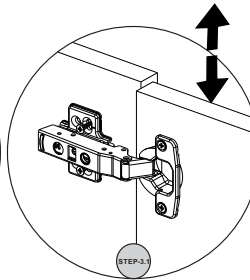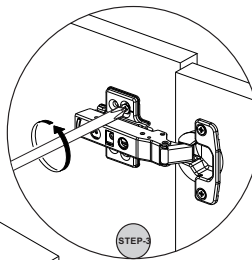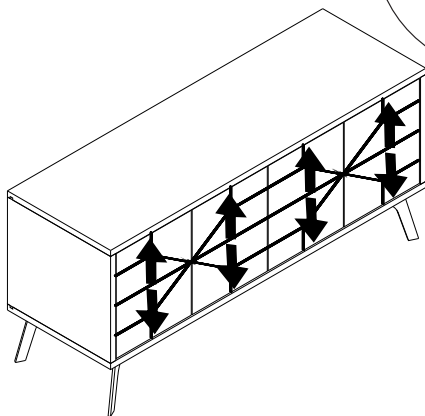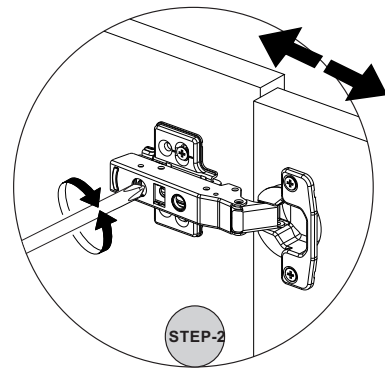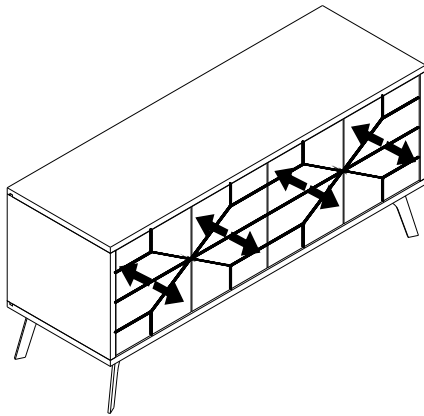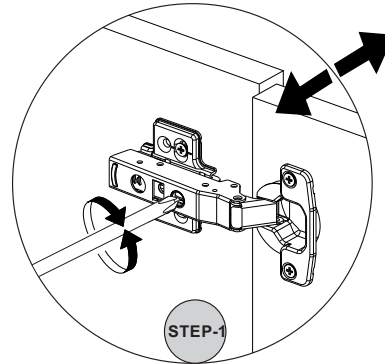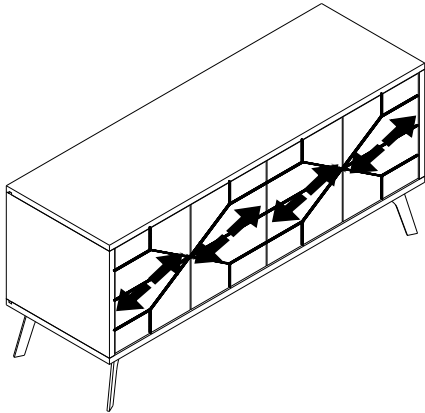

13

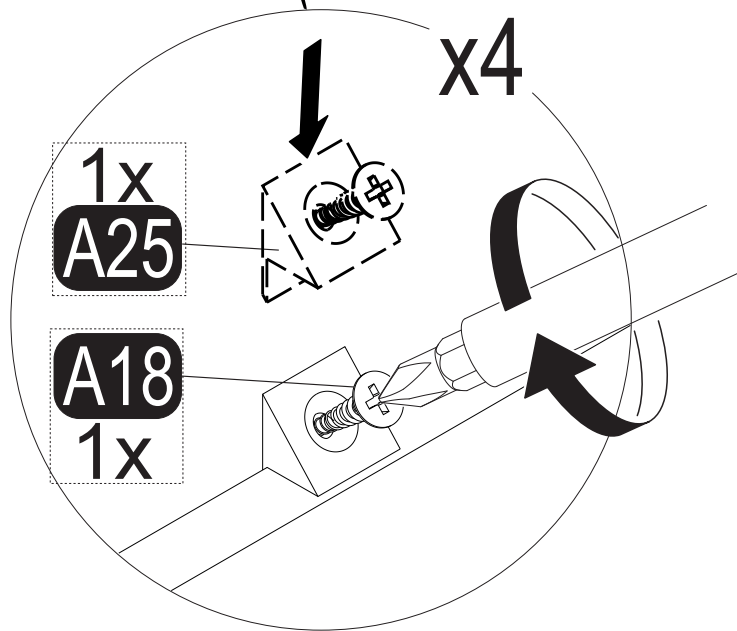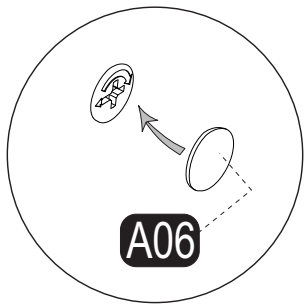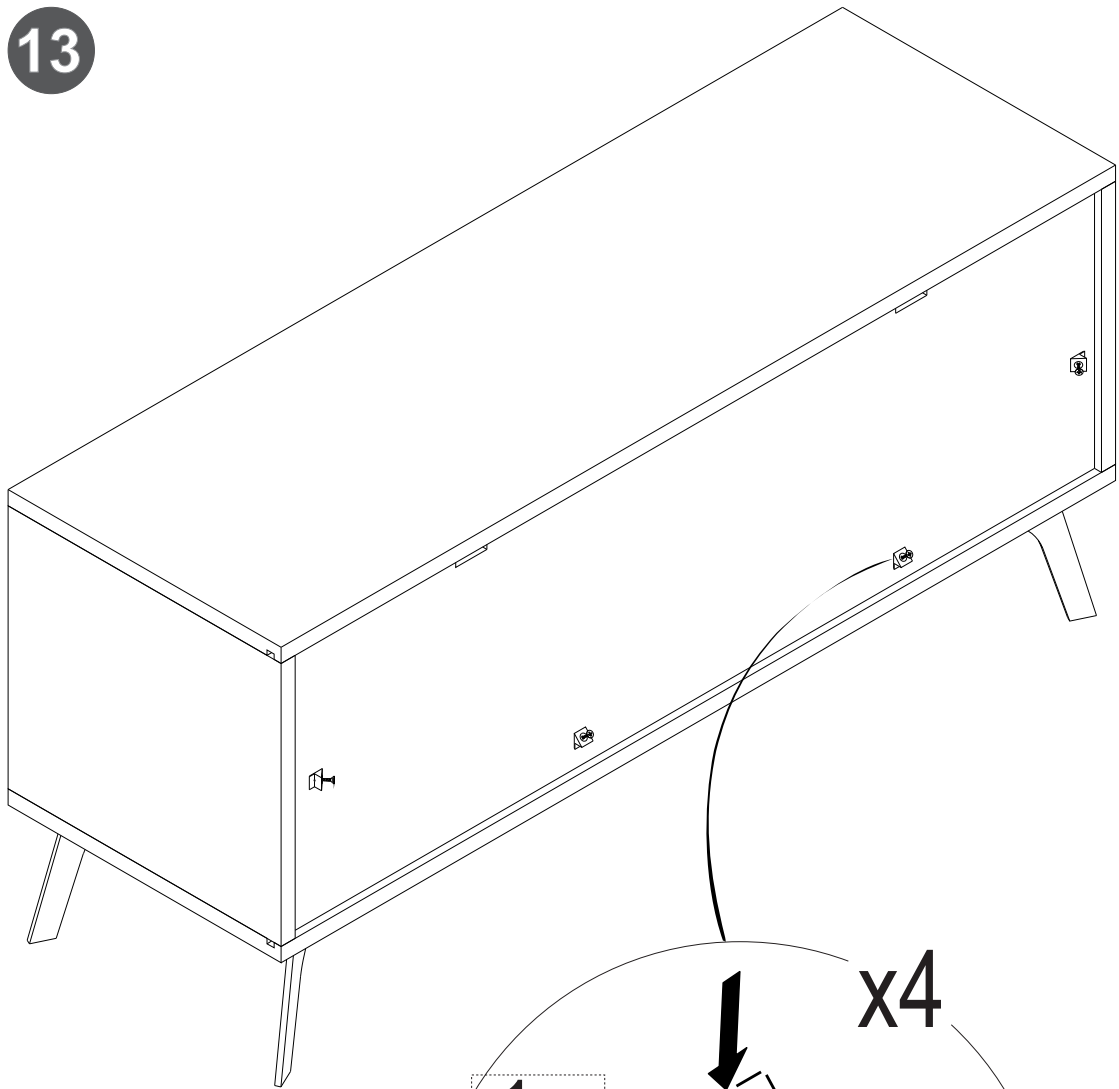

14

