


**i** GP037-0343,1

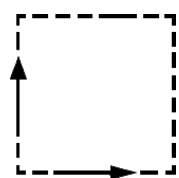










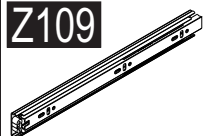

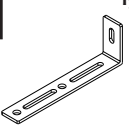



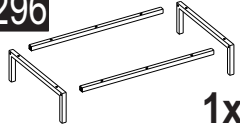



70 x 45 x 126,5cm




Follow the installation steps in the order as shown.  
Position the parts as shown in the installation guide steps.

# HARDWARE LIST


<b>A04</b> Ø8x30 8x 	<b>A06</b> 18mm C1-40x Minifix k18 48x 	<b>A12</b> Allen 1x 	<b>A16</b> DbØ8 1x 	<b>A17</b> 4x50 1x 
<b>A18</b> 3,5x18 32x 	<b>A22</b> Minifix k18 48x 	<b>A23</b> Minifix M10 48x 	<b>A25</b> ARK.PL 30x 	<b>A50</b> 3,5x16 (Black) 10x 
<b>A69</b> P.D. 10x 	<b>Z109</b> 35x300 TR 5x 	<b>A130</b> T.R.D. 40x 	<b>A87</b> 15x90x30 1x 	<b>B12</b> 30 (black)mm 14x 
<b>Z27</b> 20x20x18 4x 	<b>Z551</b> 150mm MK (black) 5x 	<b>Z296</b> 1x 		

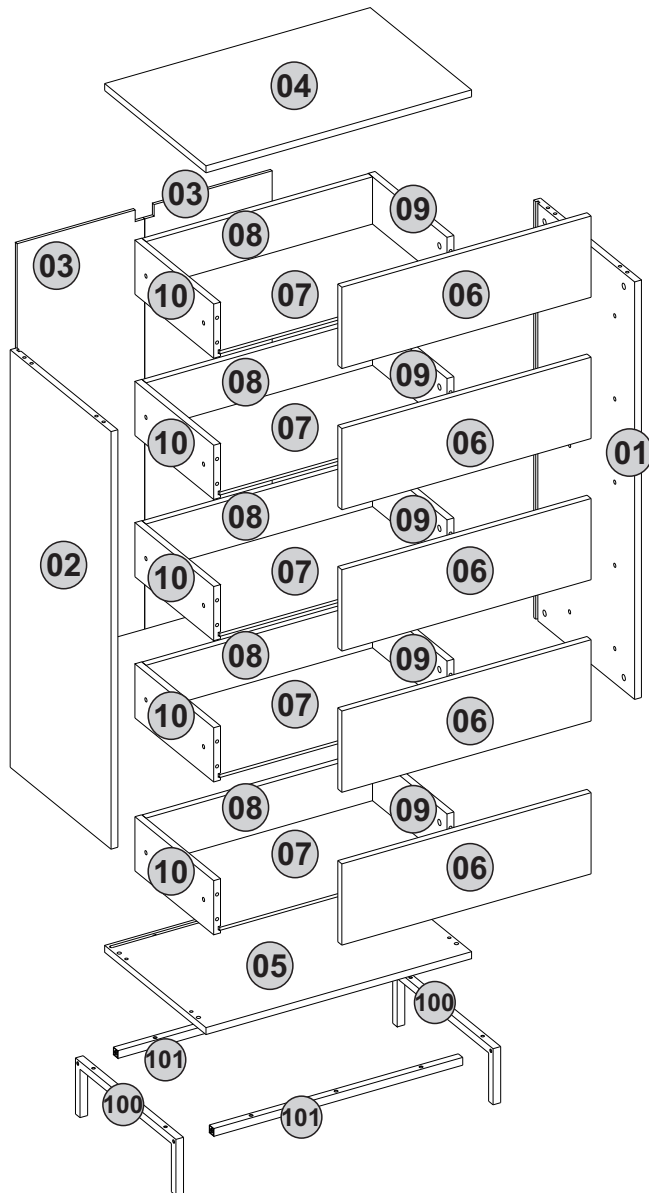


# 1 x10

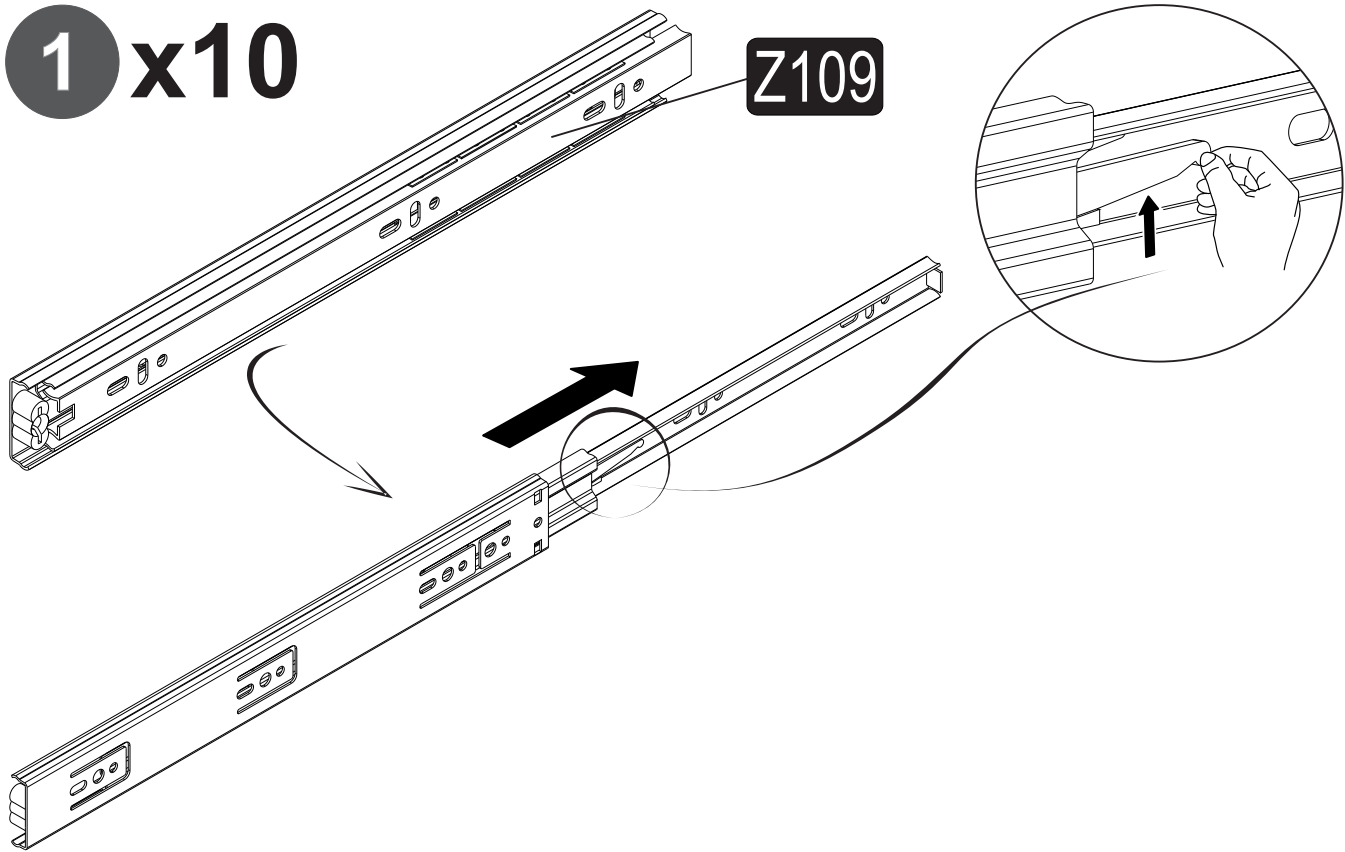


# 2 x10

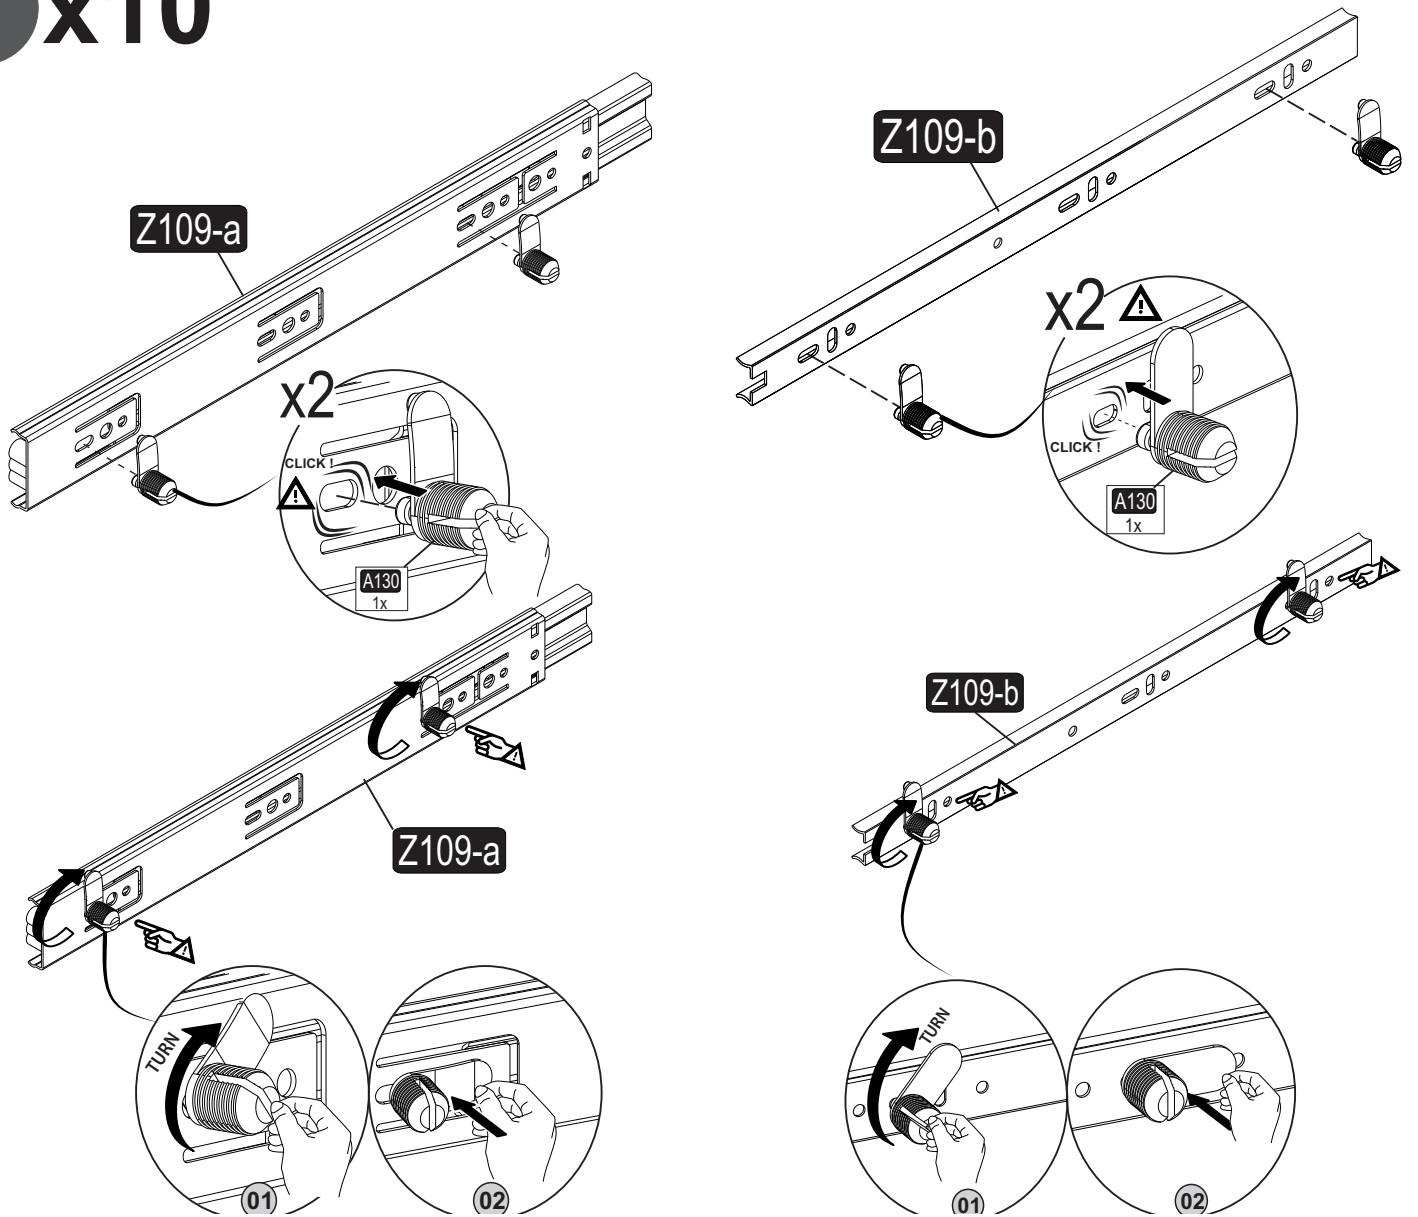


3 x 5

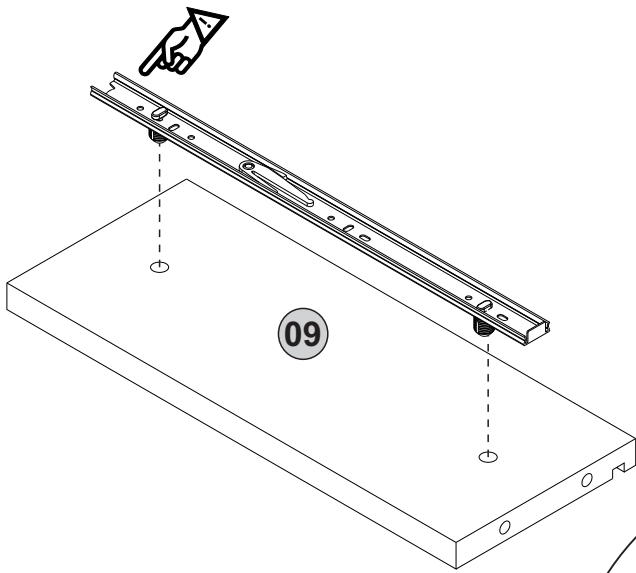

09

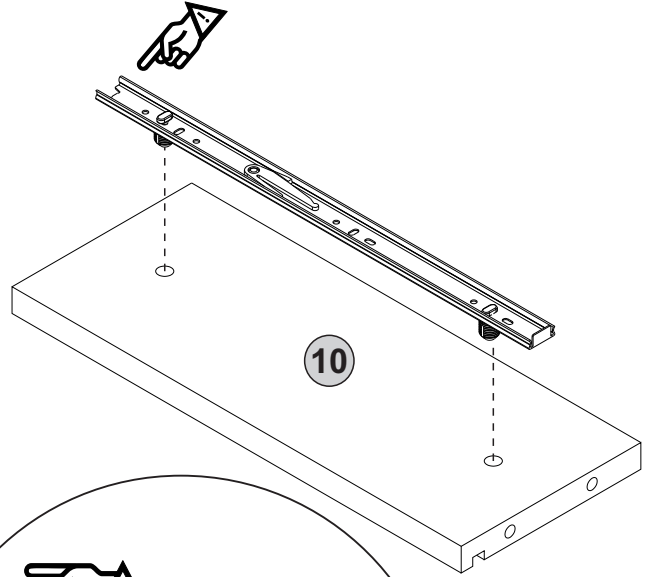


10

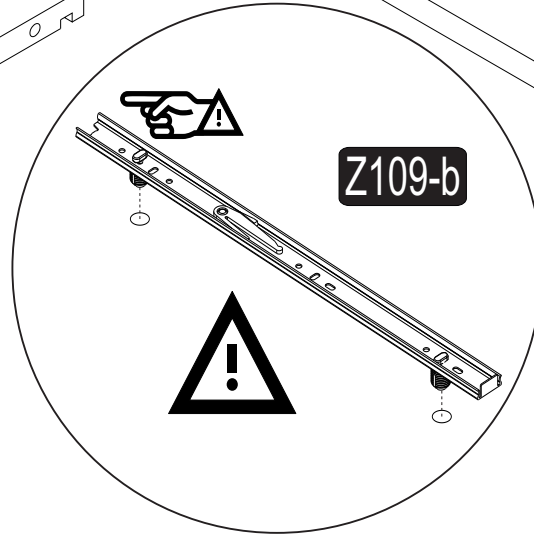


Z109-b

4

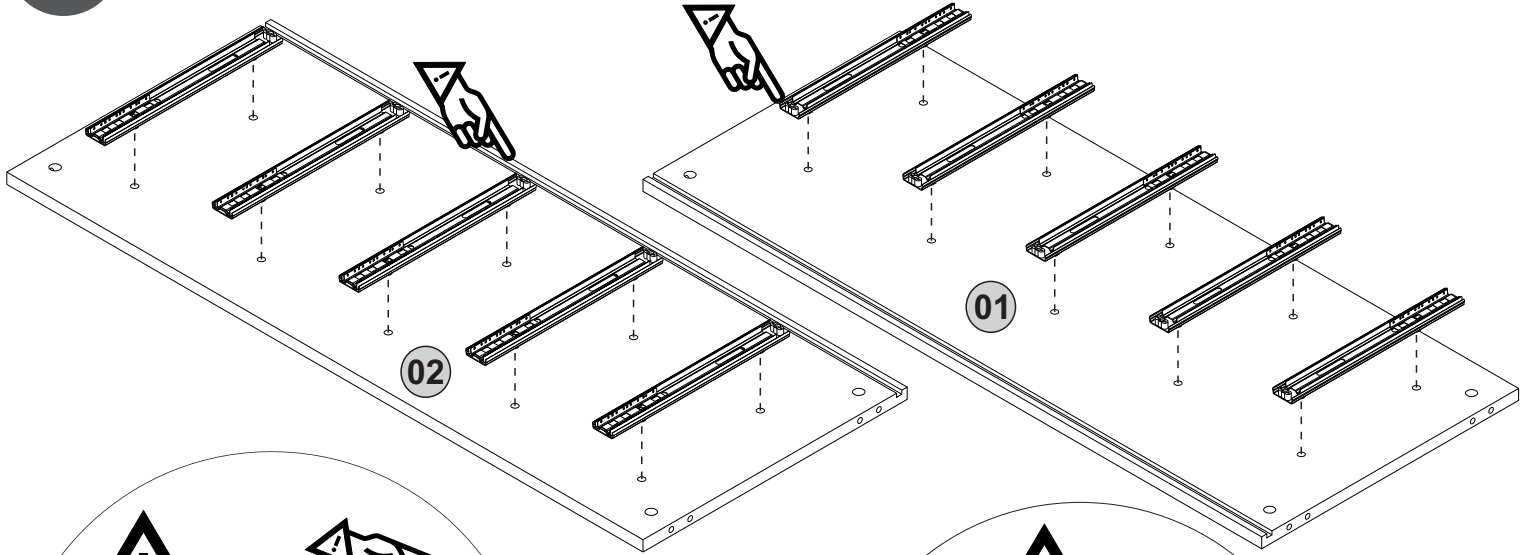


02

01

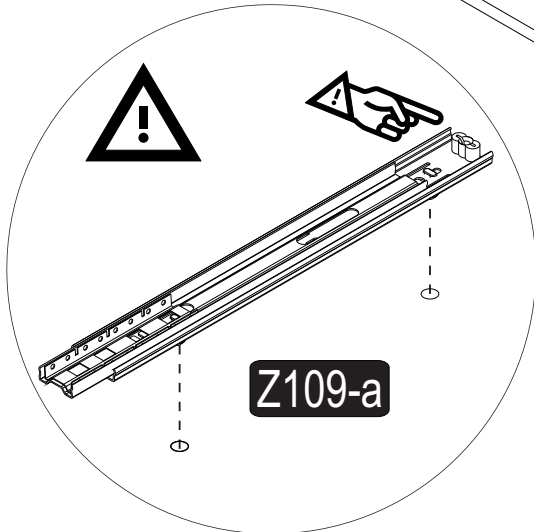


Z109-a

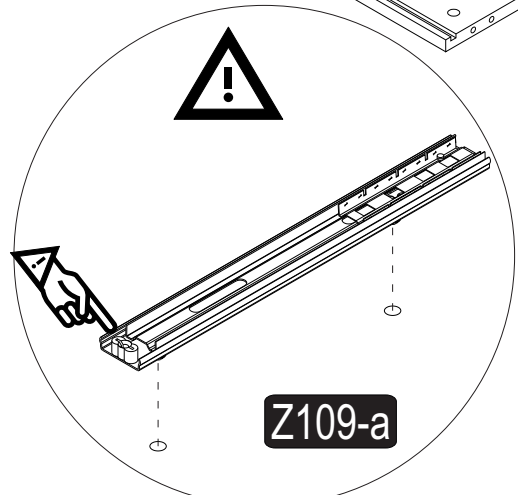


Z109-a




5

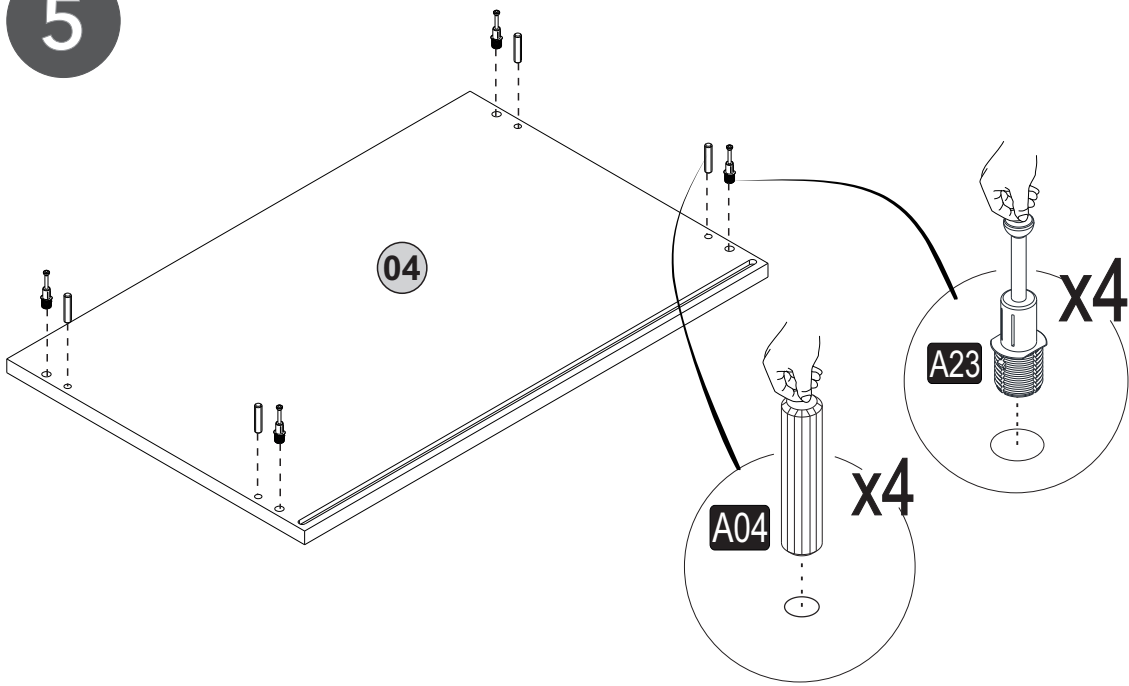

6

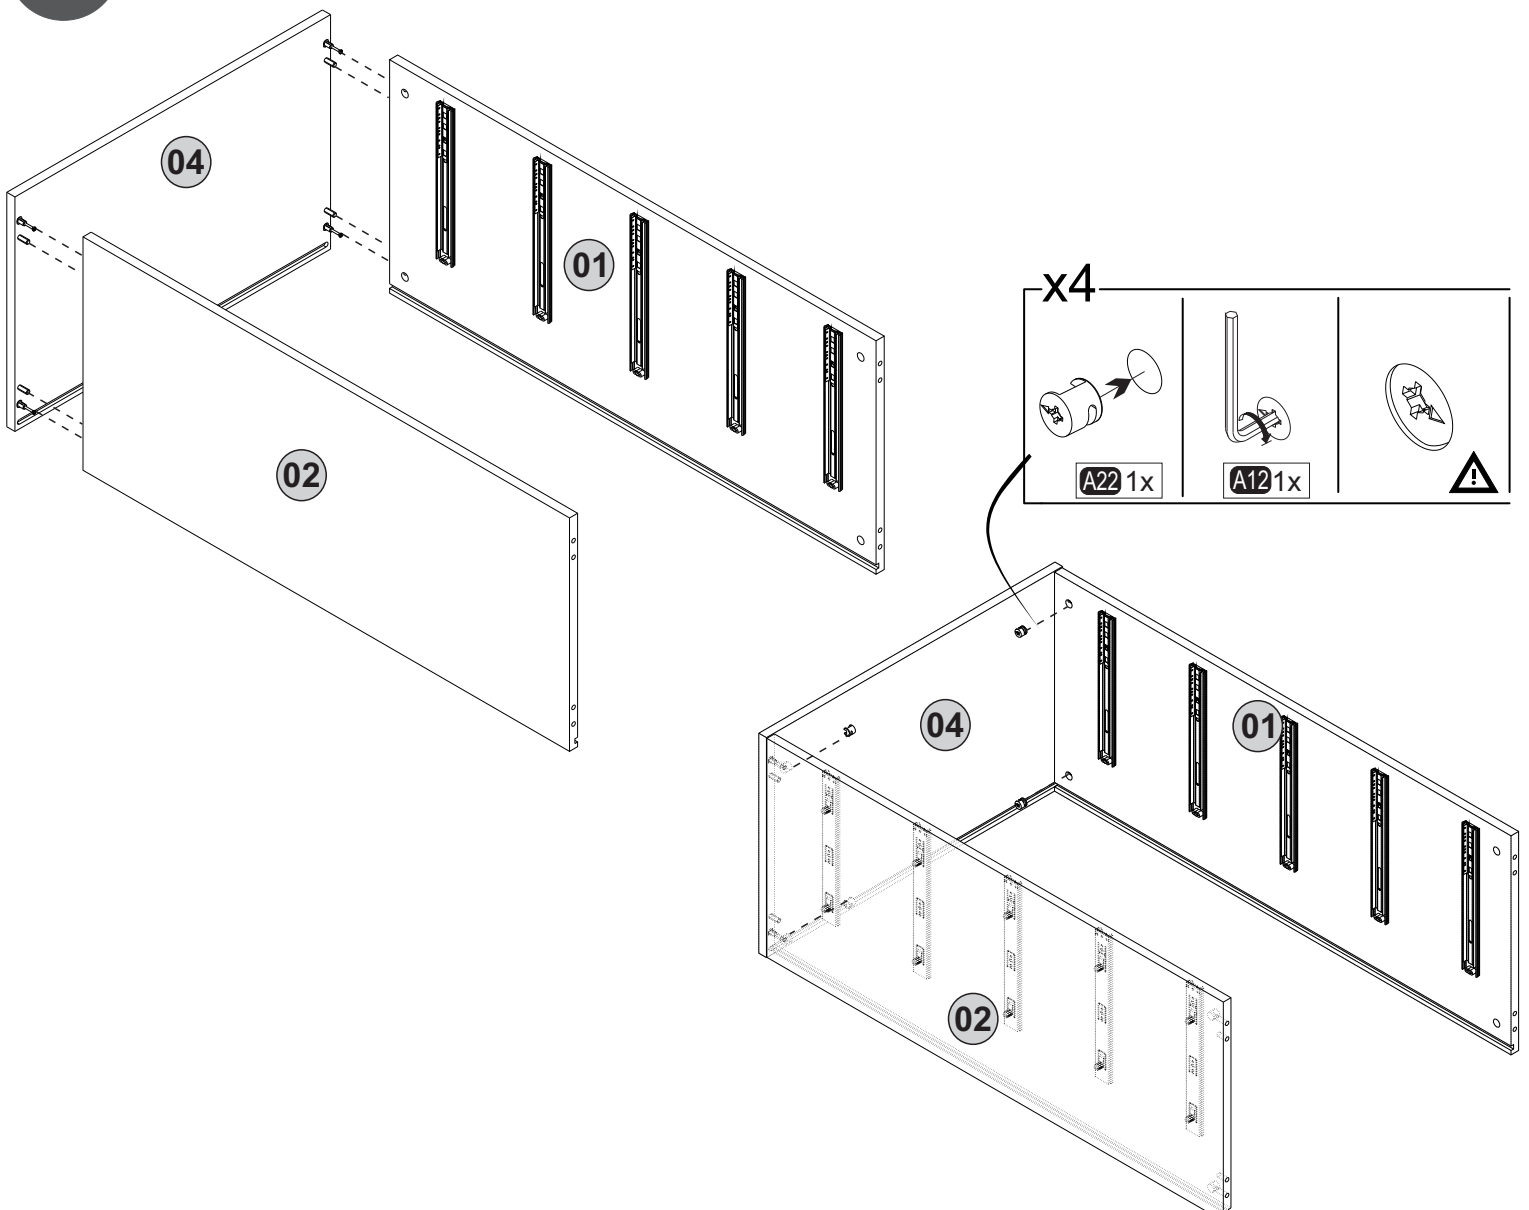


9

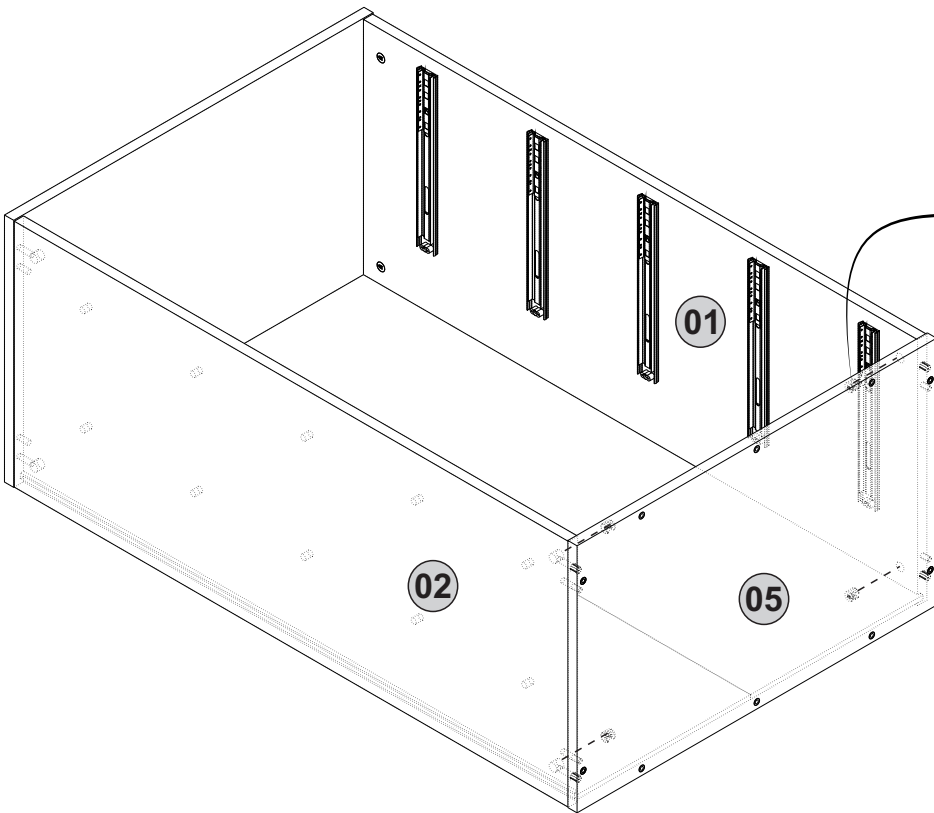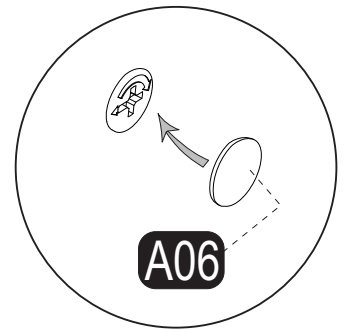
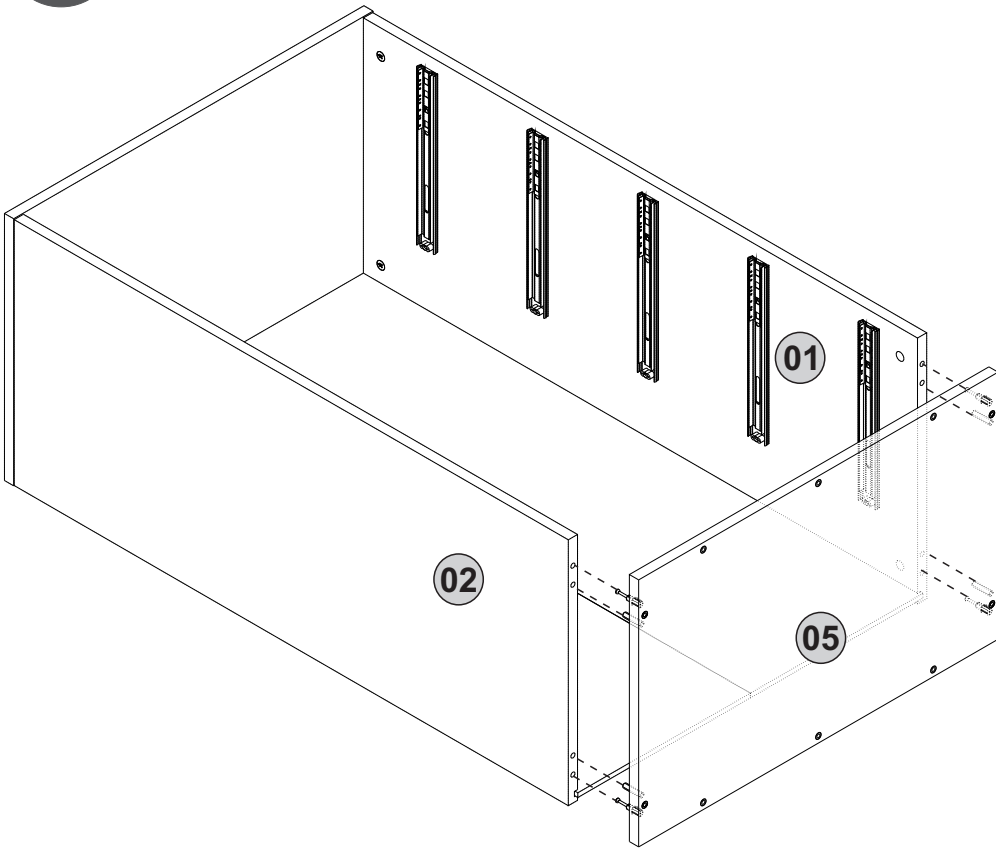


x4


A22  
1x

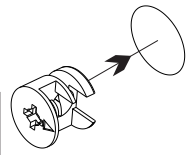


A12  
1x

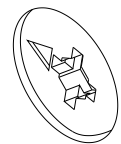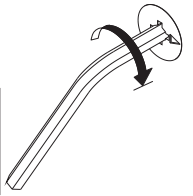



10

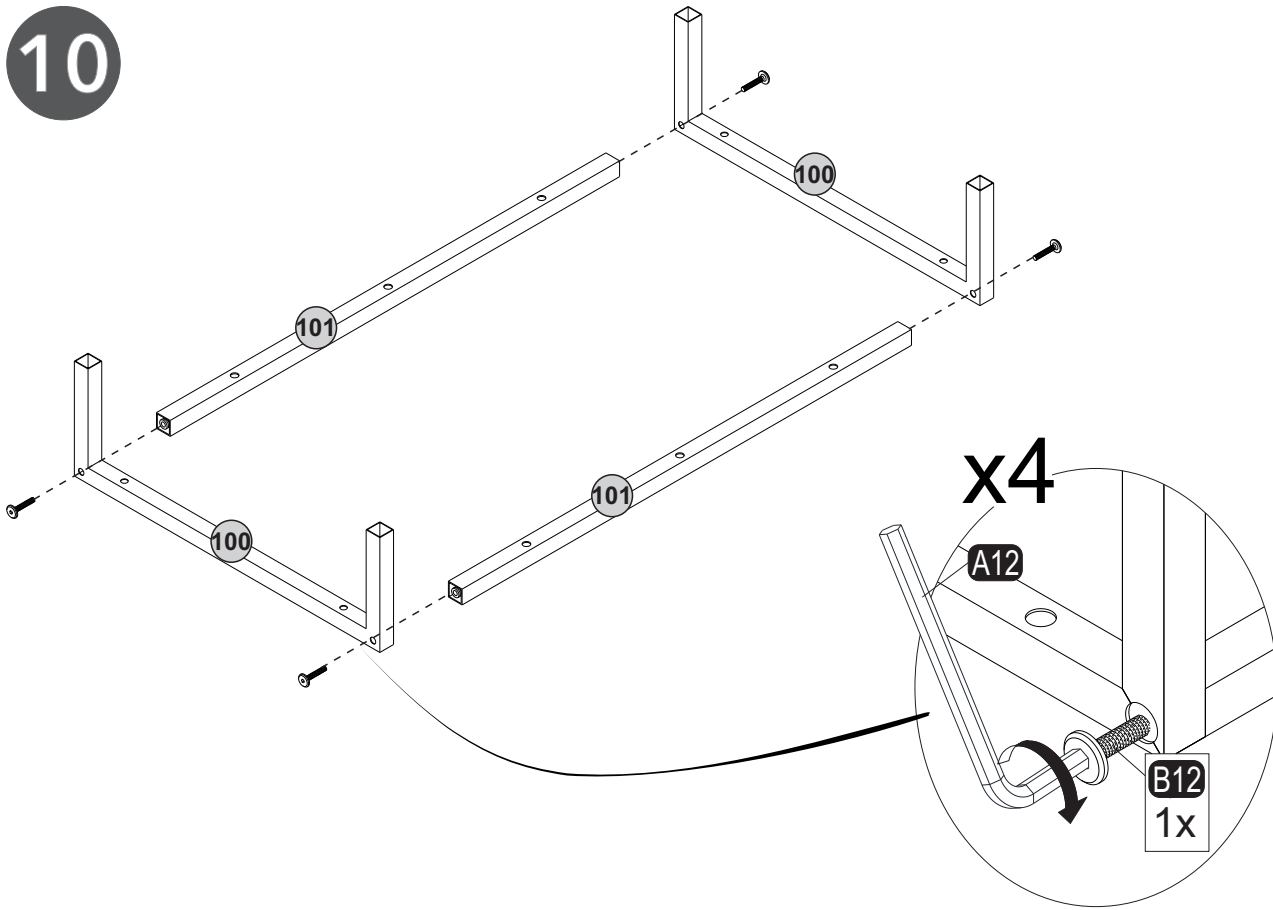




11







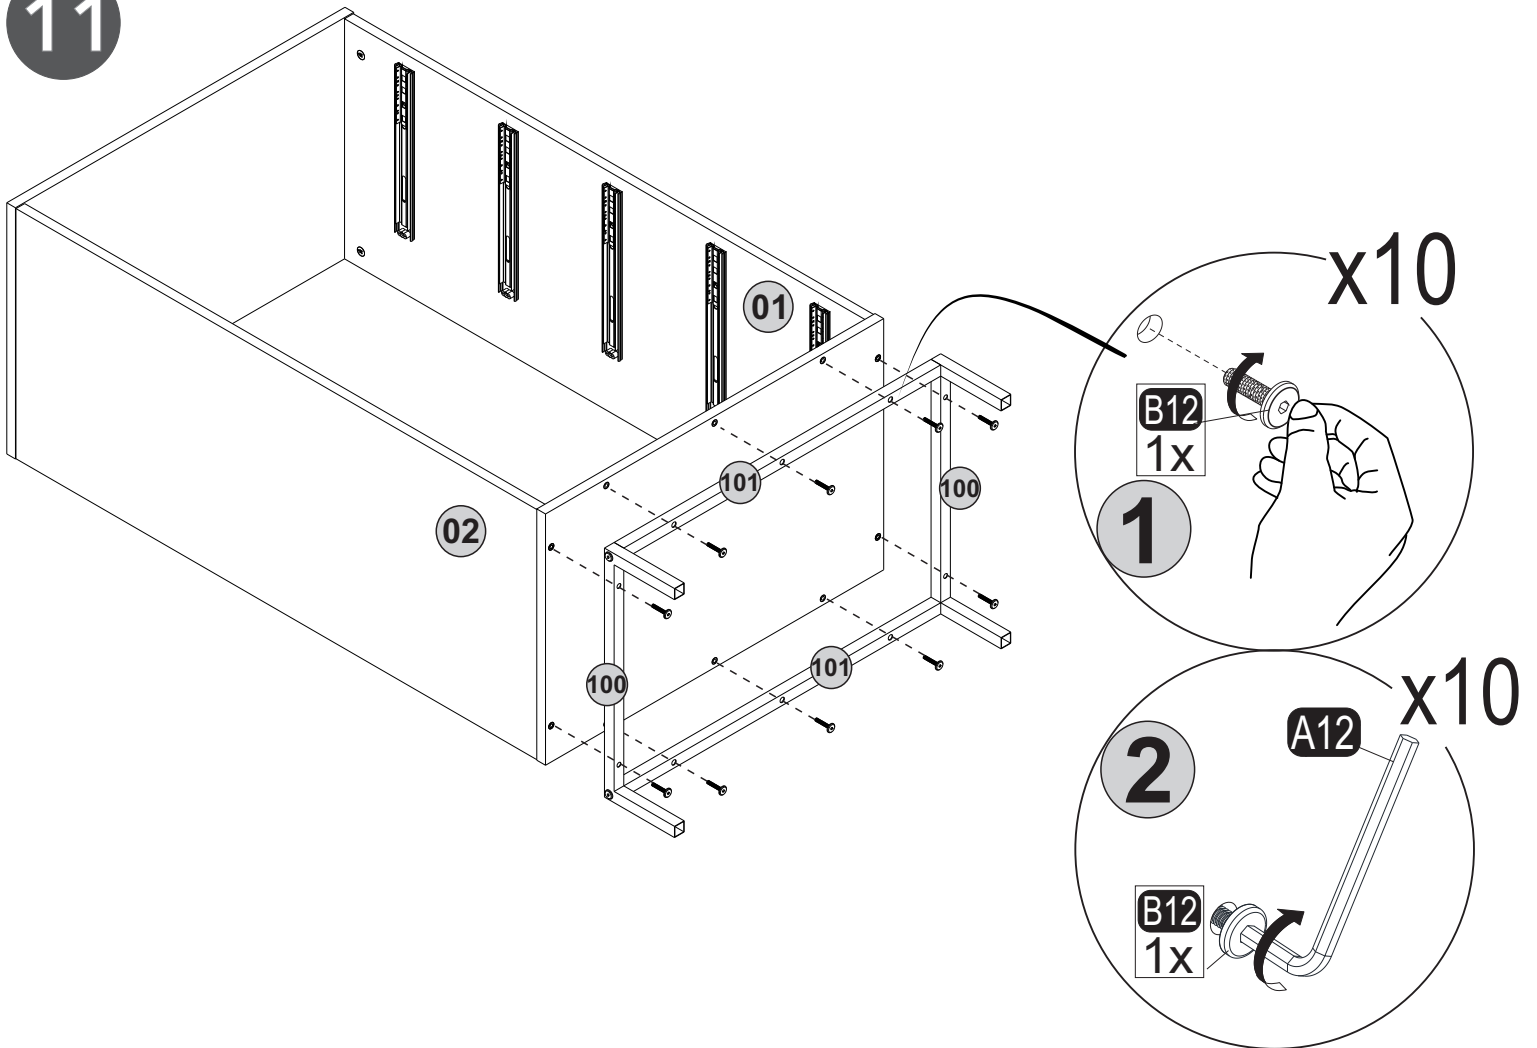


12

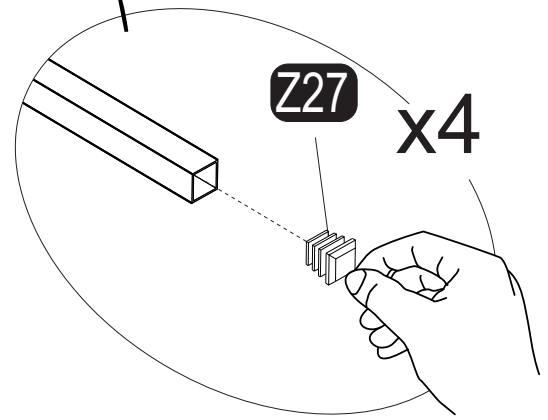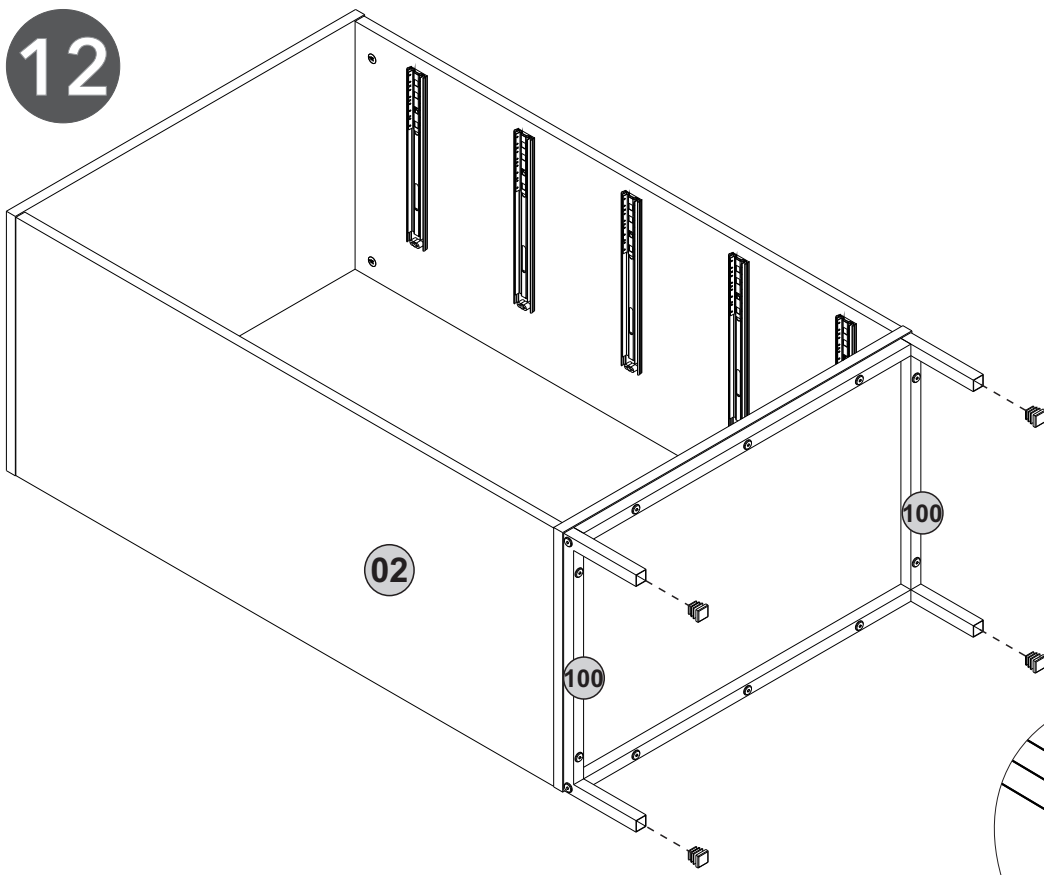


13

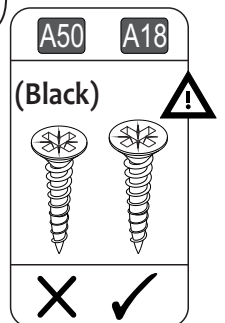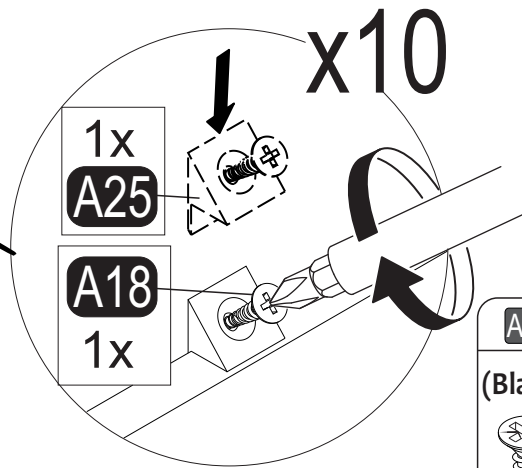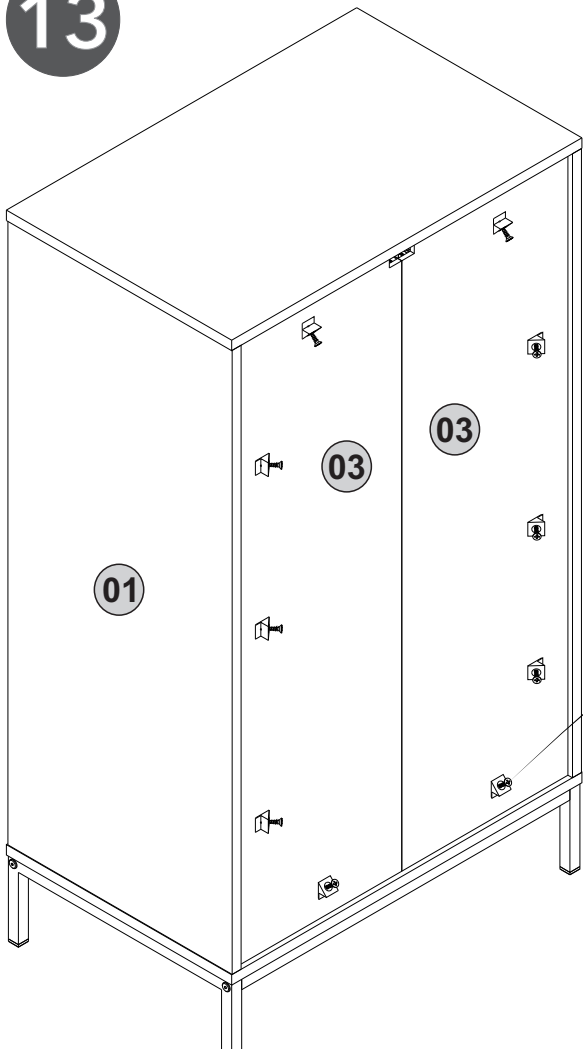


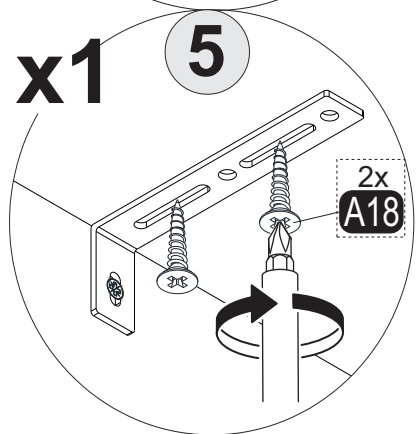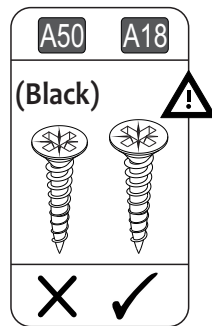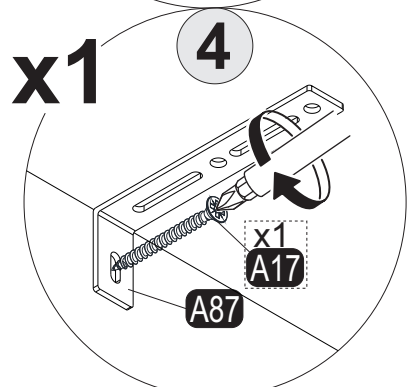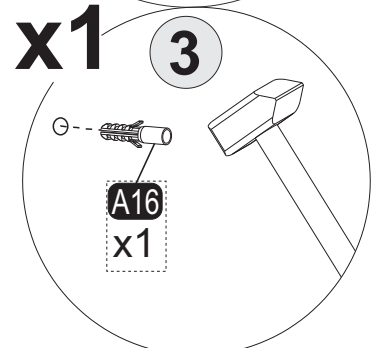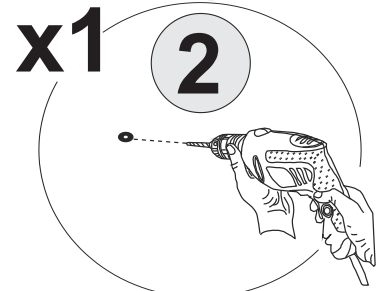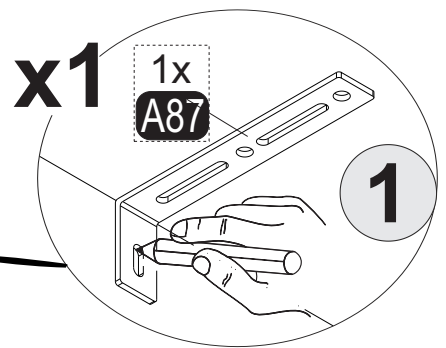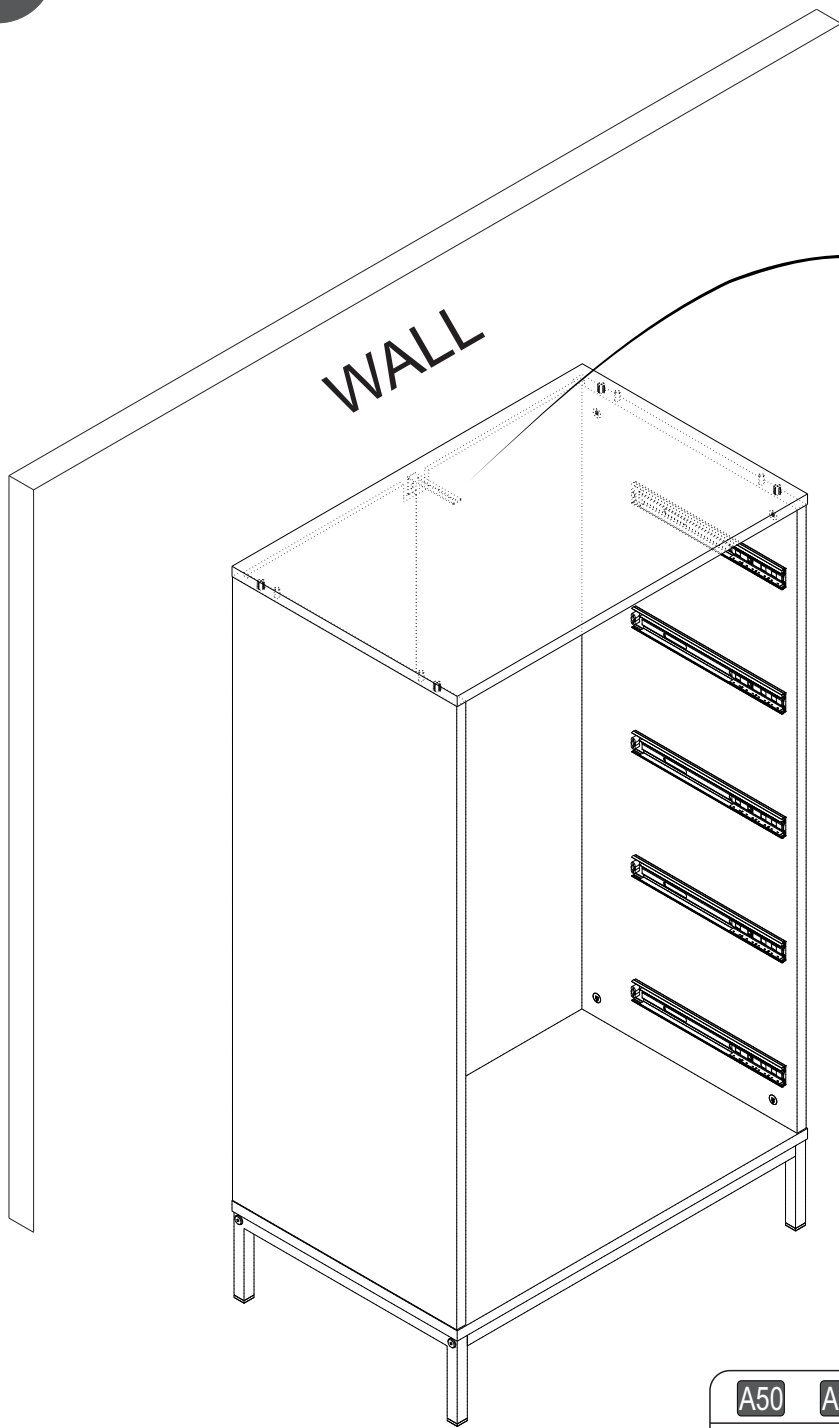


# 15 x 5

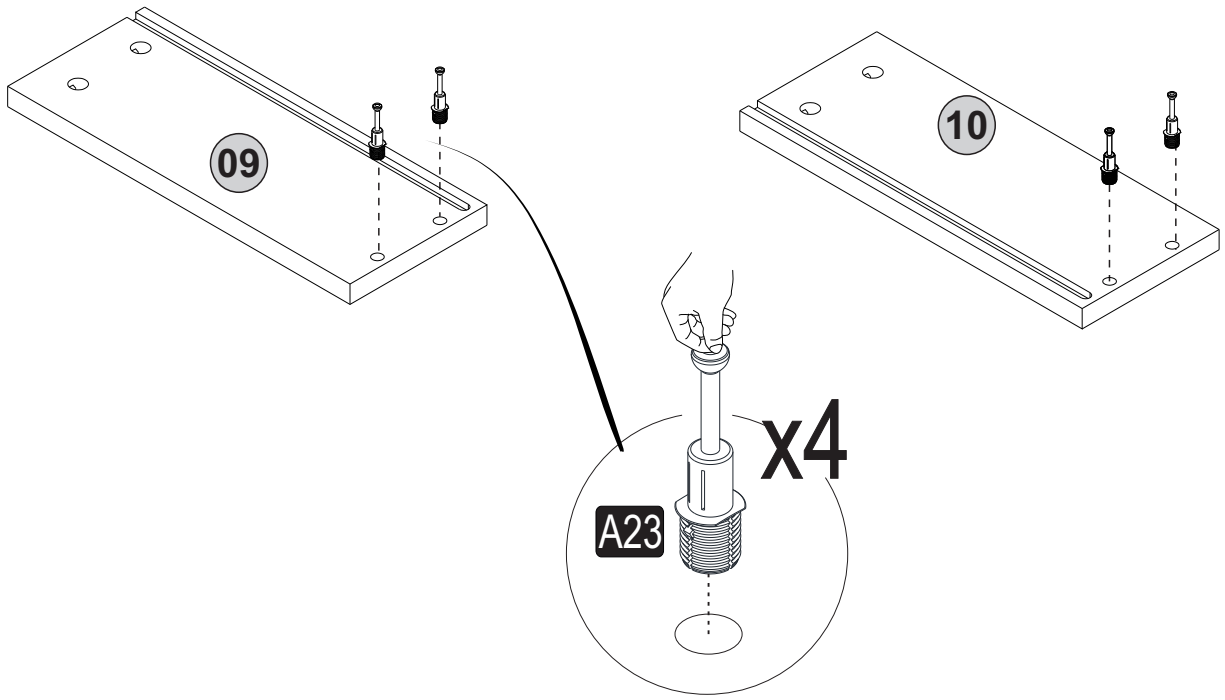


# 16 x 5

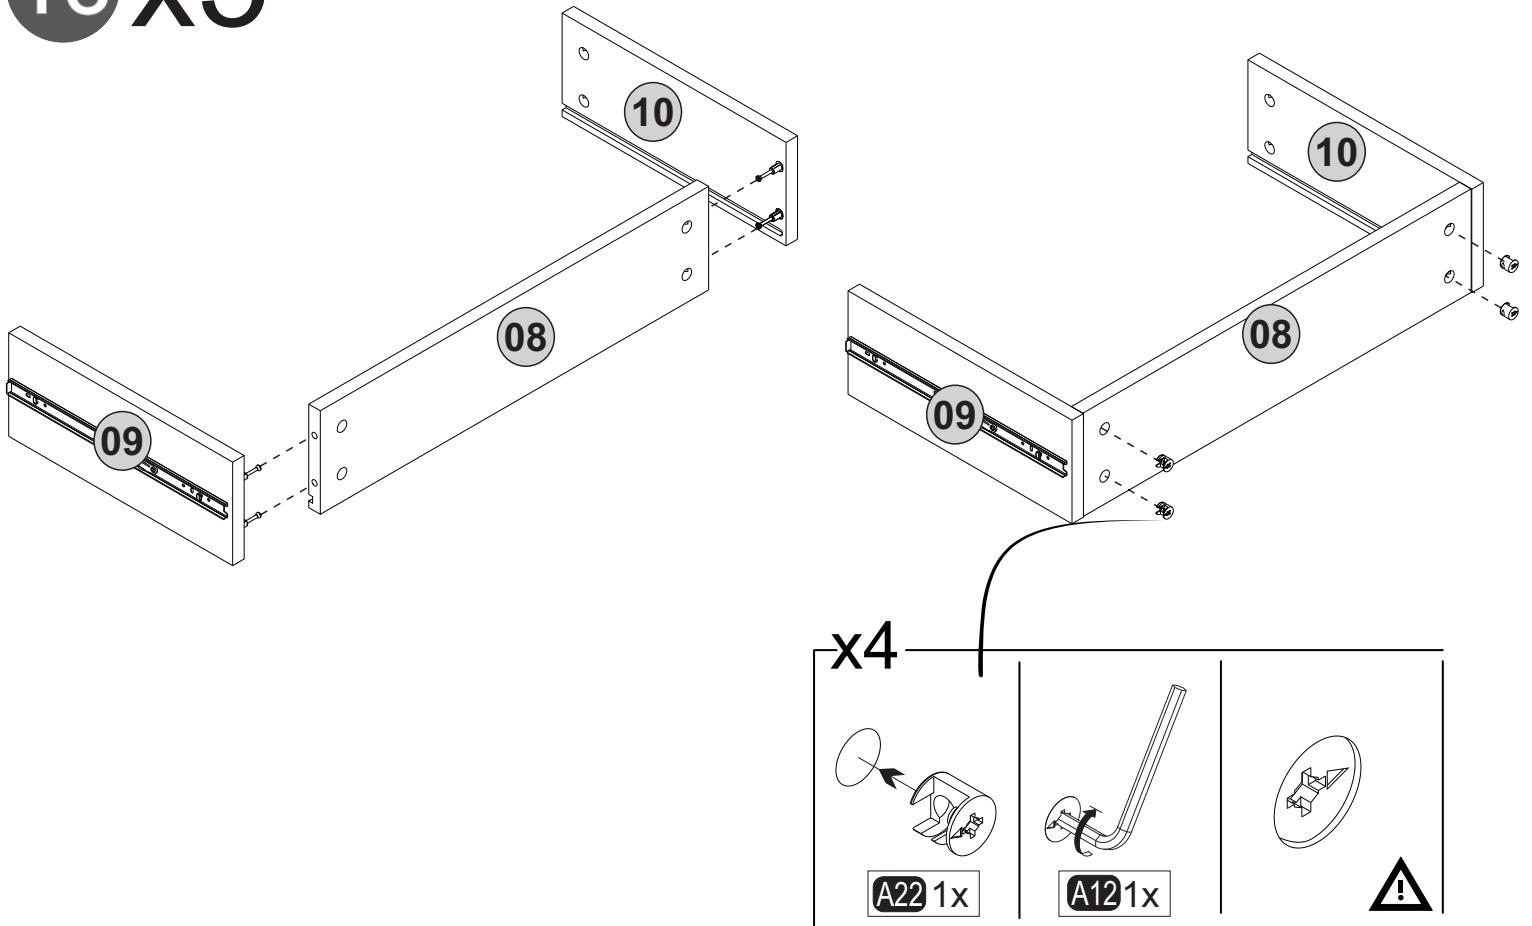

**17**x5

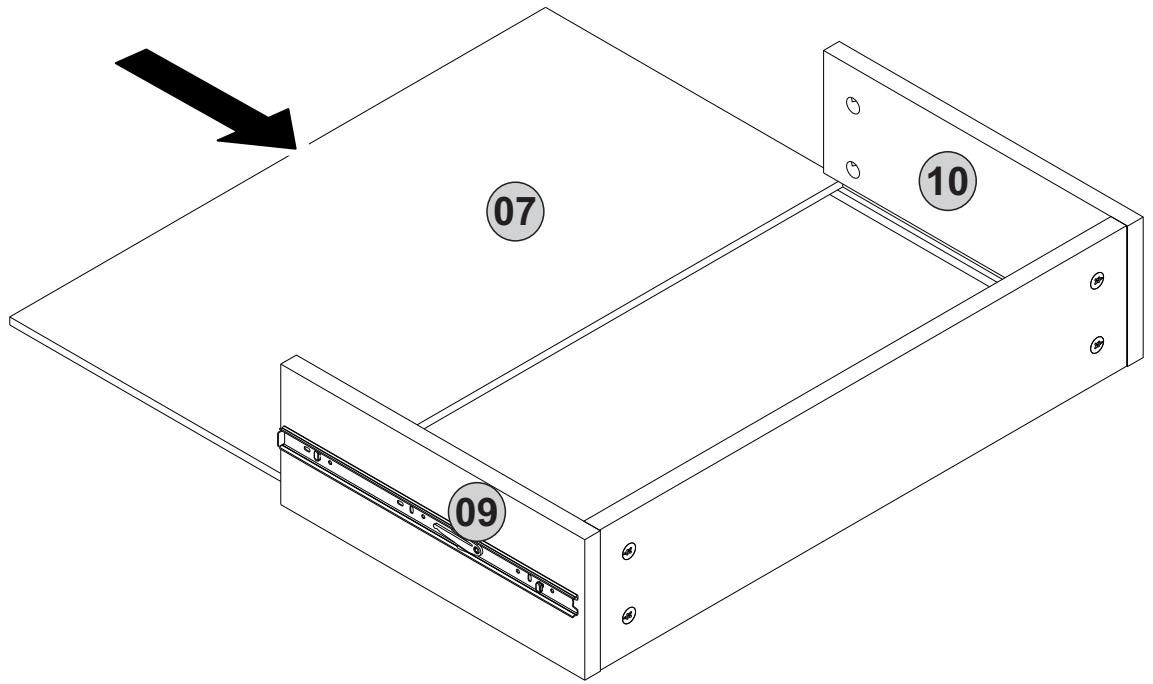

**18**x5

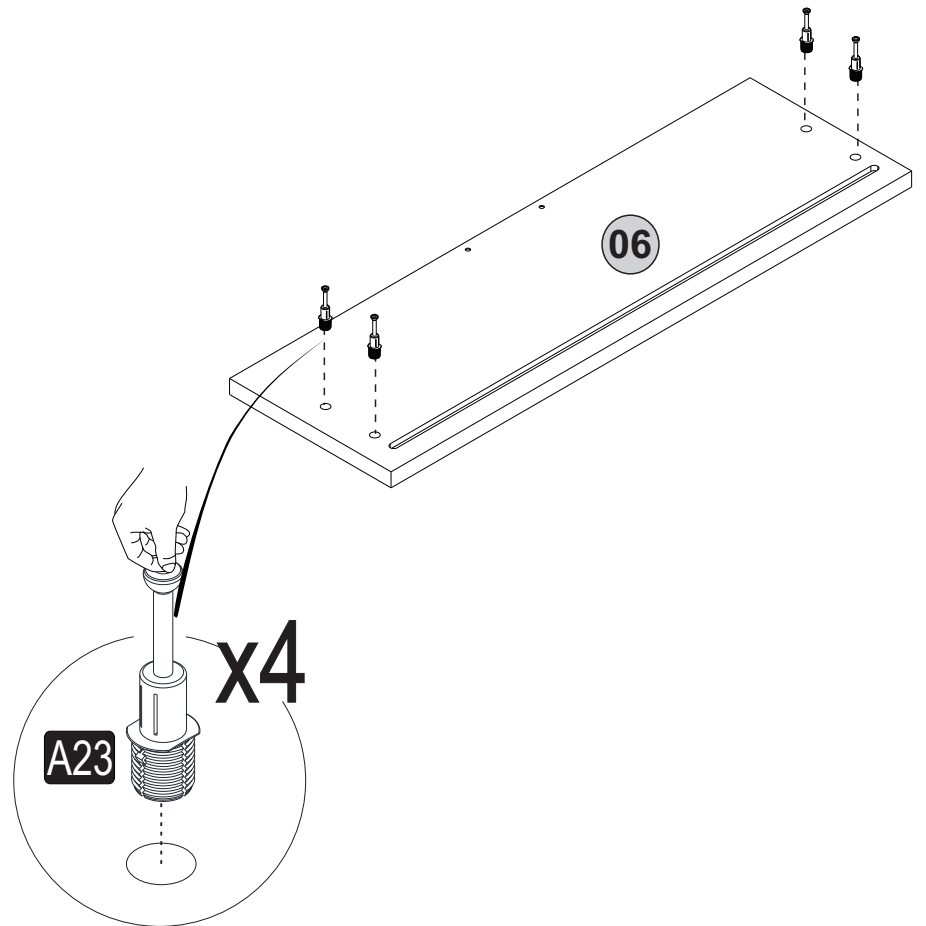

# 19x5

