


i GP037-0355,1

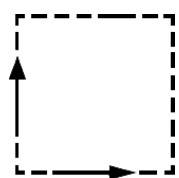














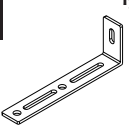





150,2 x 39 x 81cm




Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.

HARDWARE LIST


A04 Ø8x30  28x	A06 18mm  C1-28x	A12 Allen  1x	A18 3,5x18  35x	A69 P.D.  5x
A22 Minifix k18  28x	A23 Minifix M10  12x	A62 Minifix M8  16x	C33 TM  4x	C34 MA  4x
A16 DbØ8  2x	A17 4x50  2x	Z121 MDK  2x	Z07 4x22kv  2x	A153 AYAK  5x
A87 15x90x30  2x	A25 ARK.PL  7x	A48 Raf Pimi  8x		

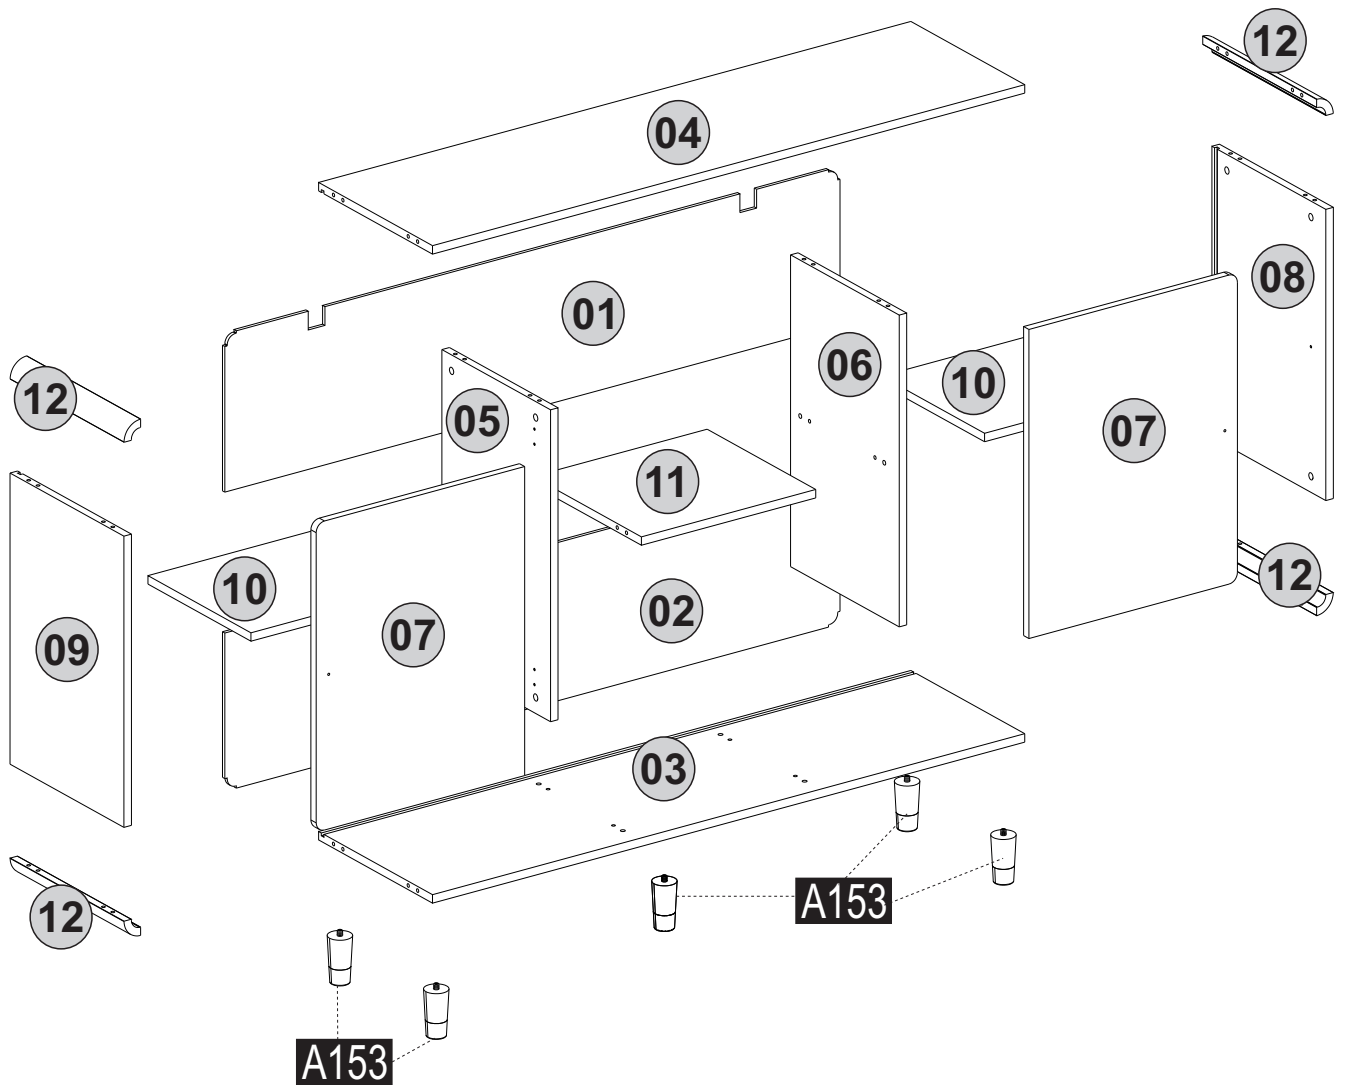




1

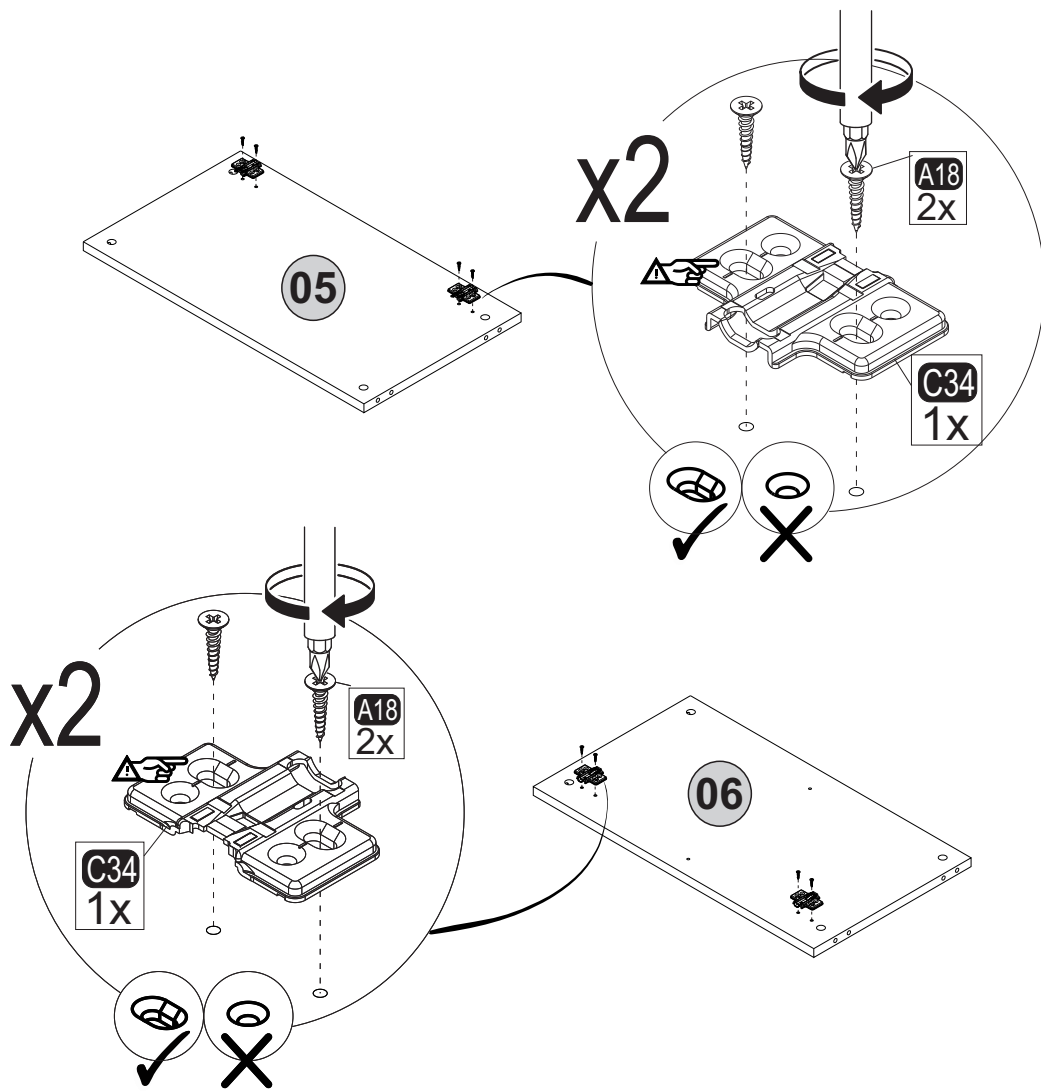




2

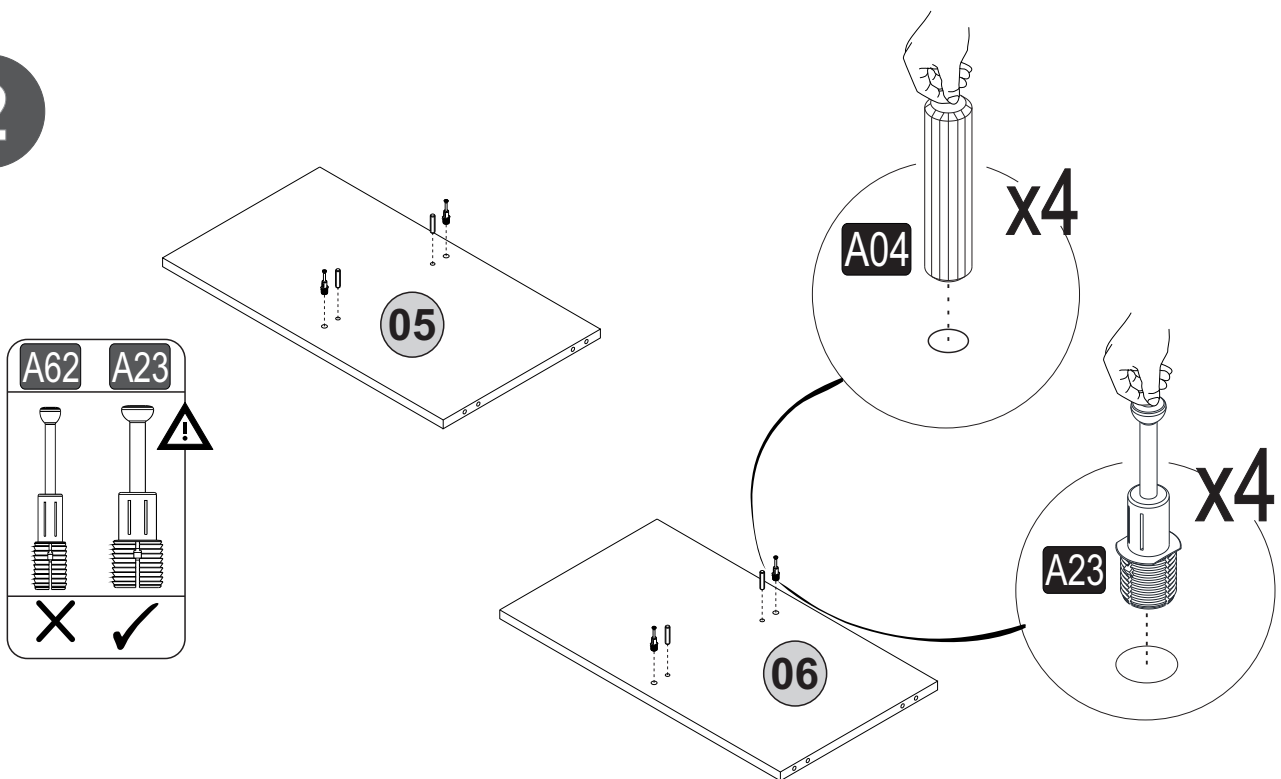




3

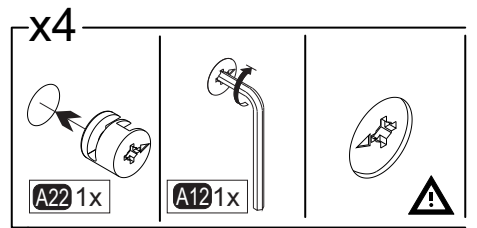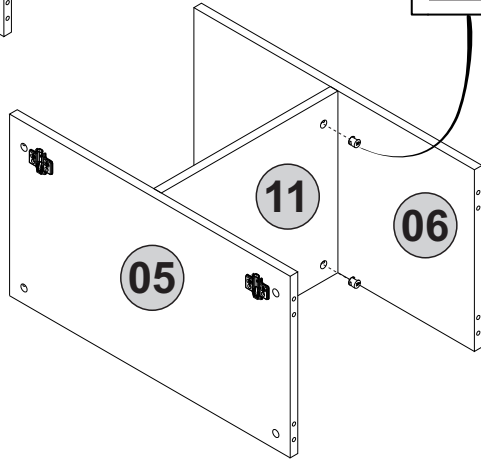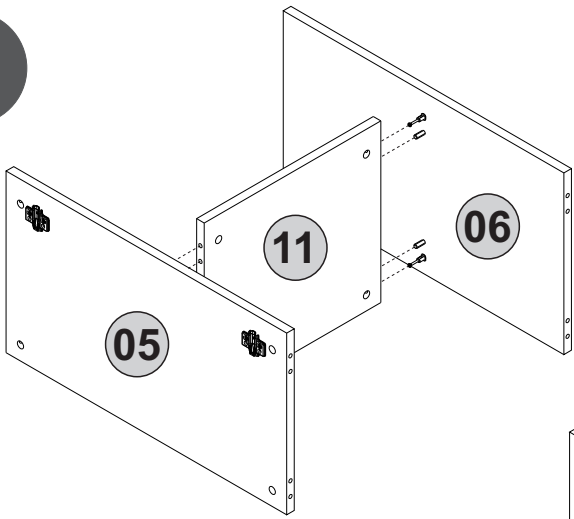


4

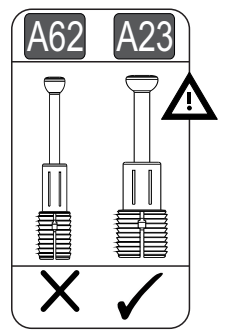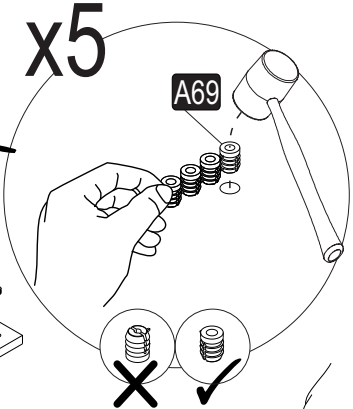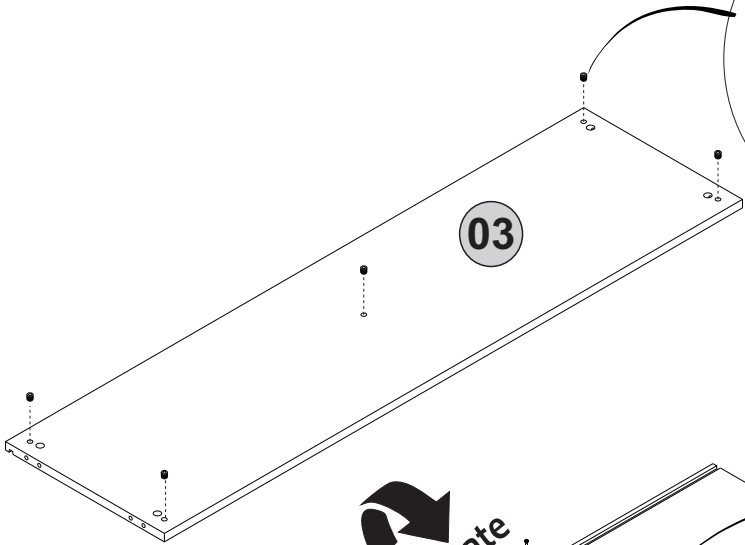


Rotate

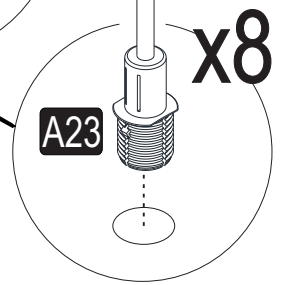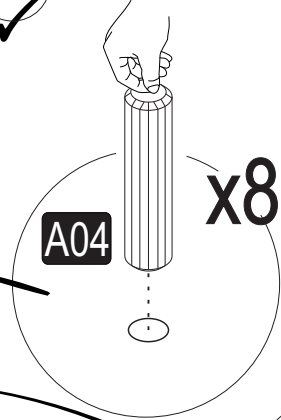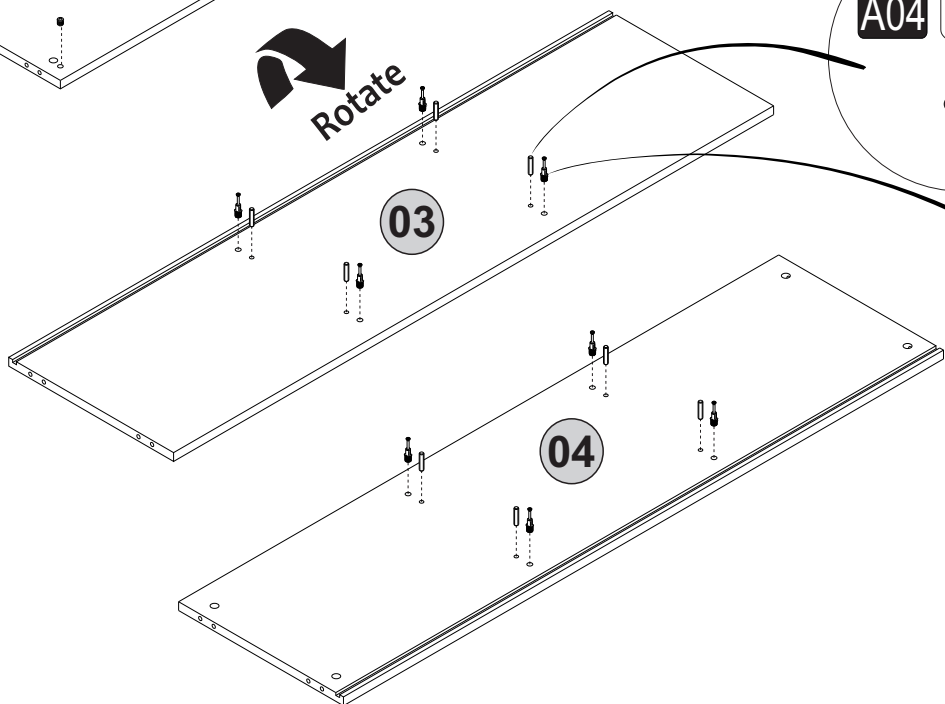





5

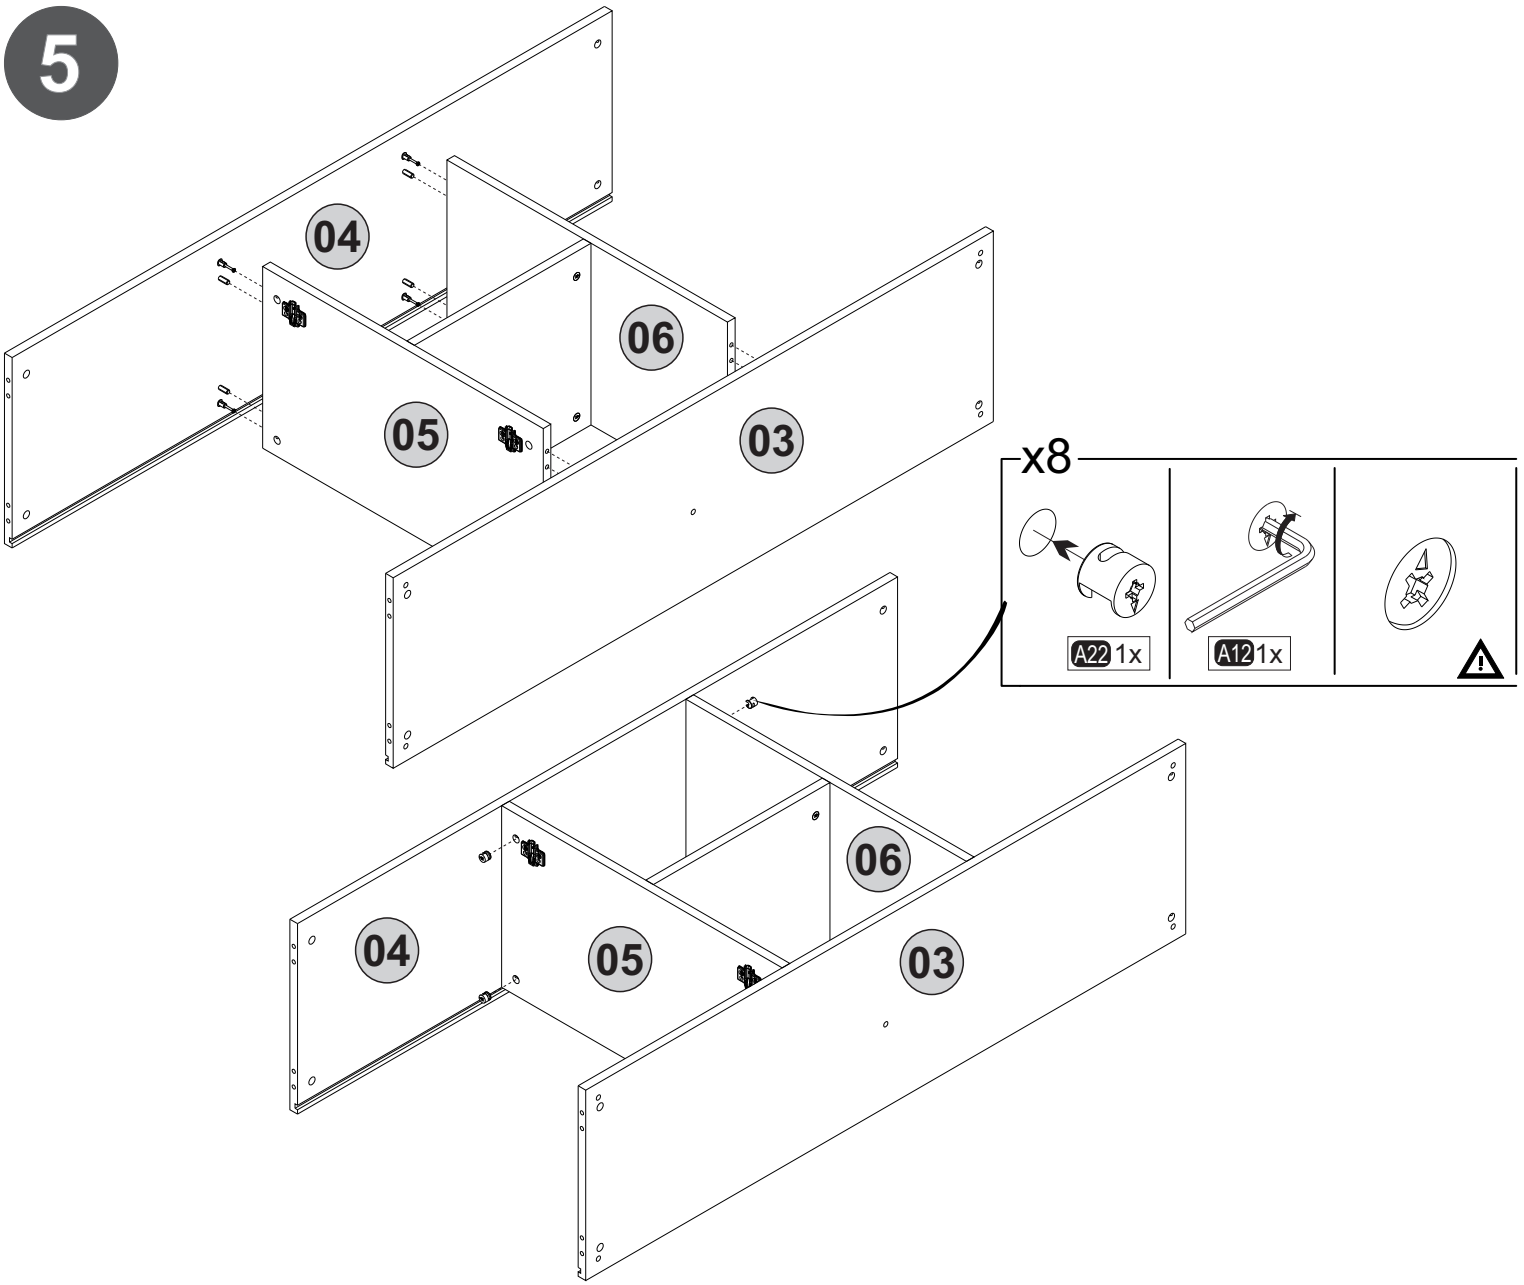

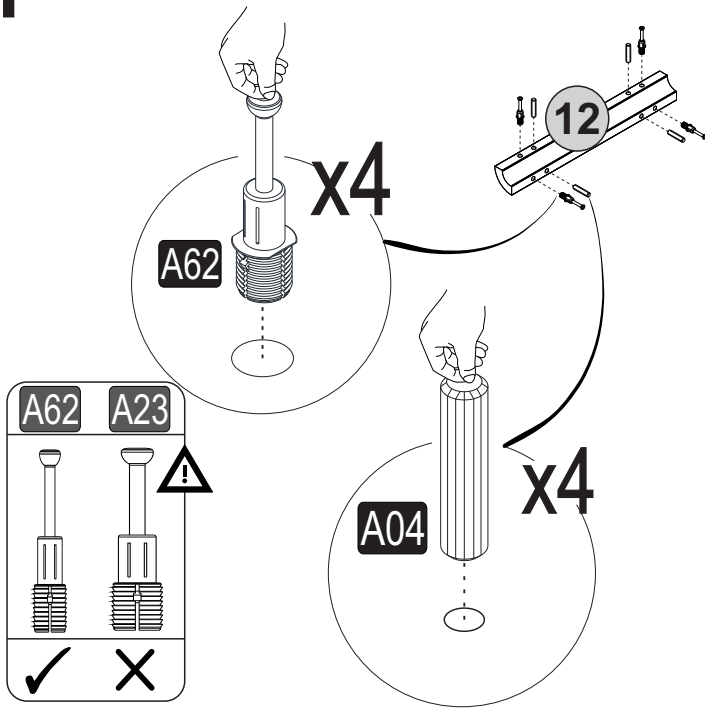


6 x4

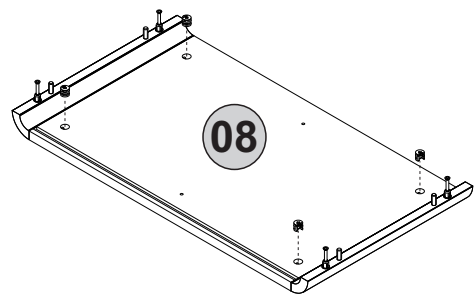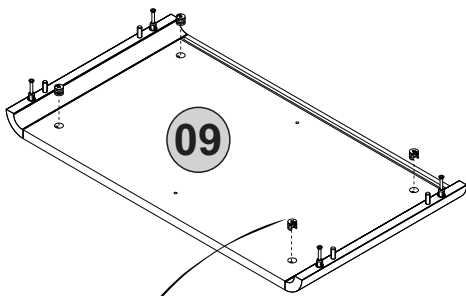
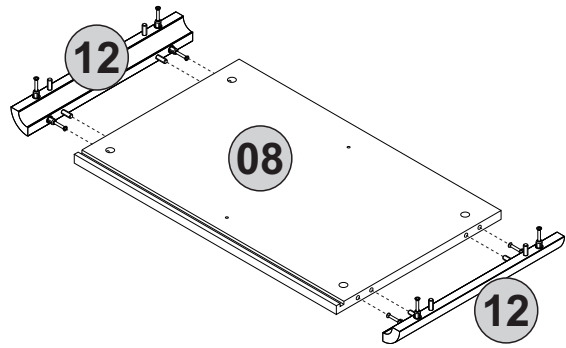
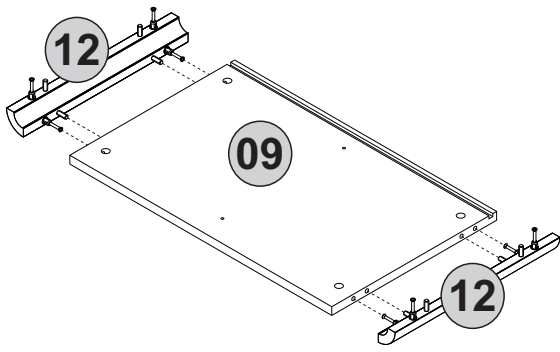


7






x8

 A22 1x	 A12 1x	 !
---	---	--

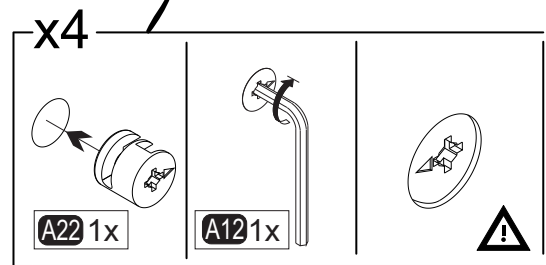
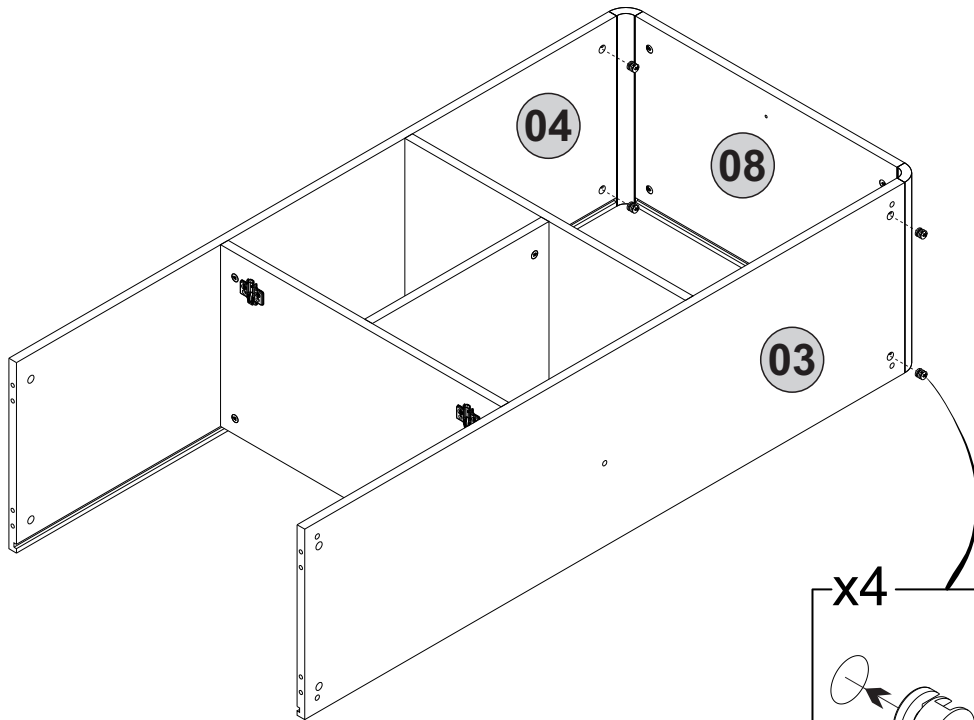
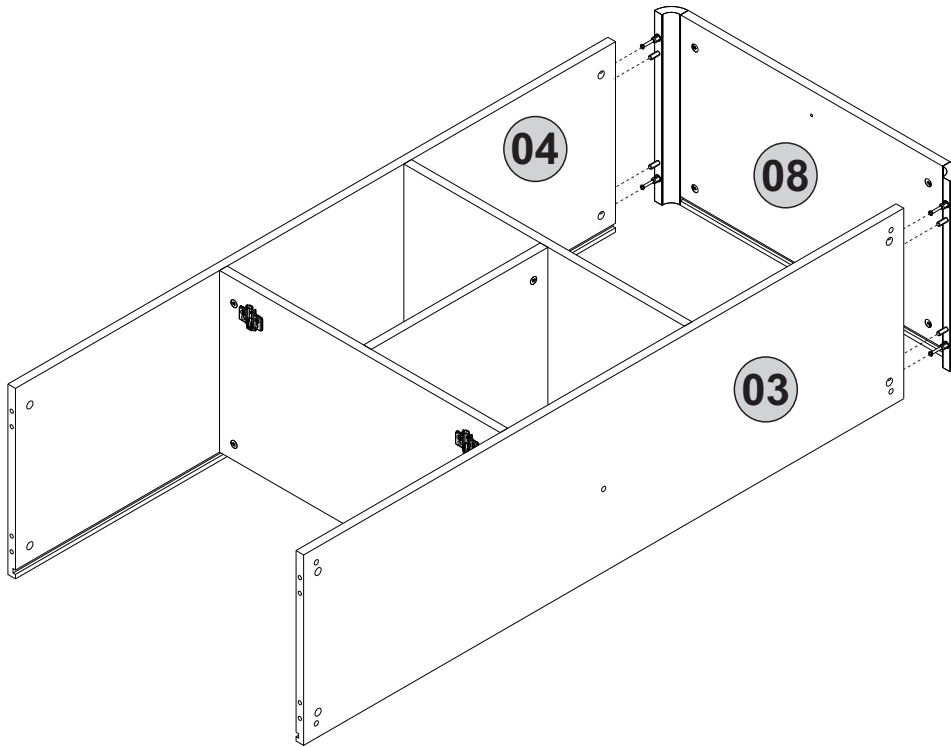



9

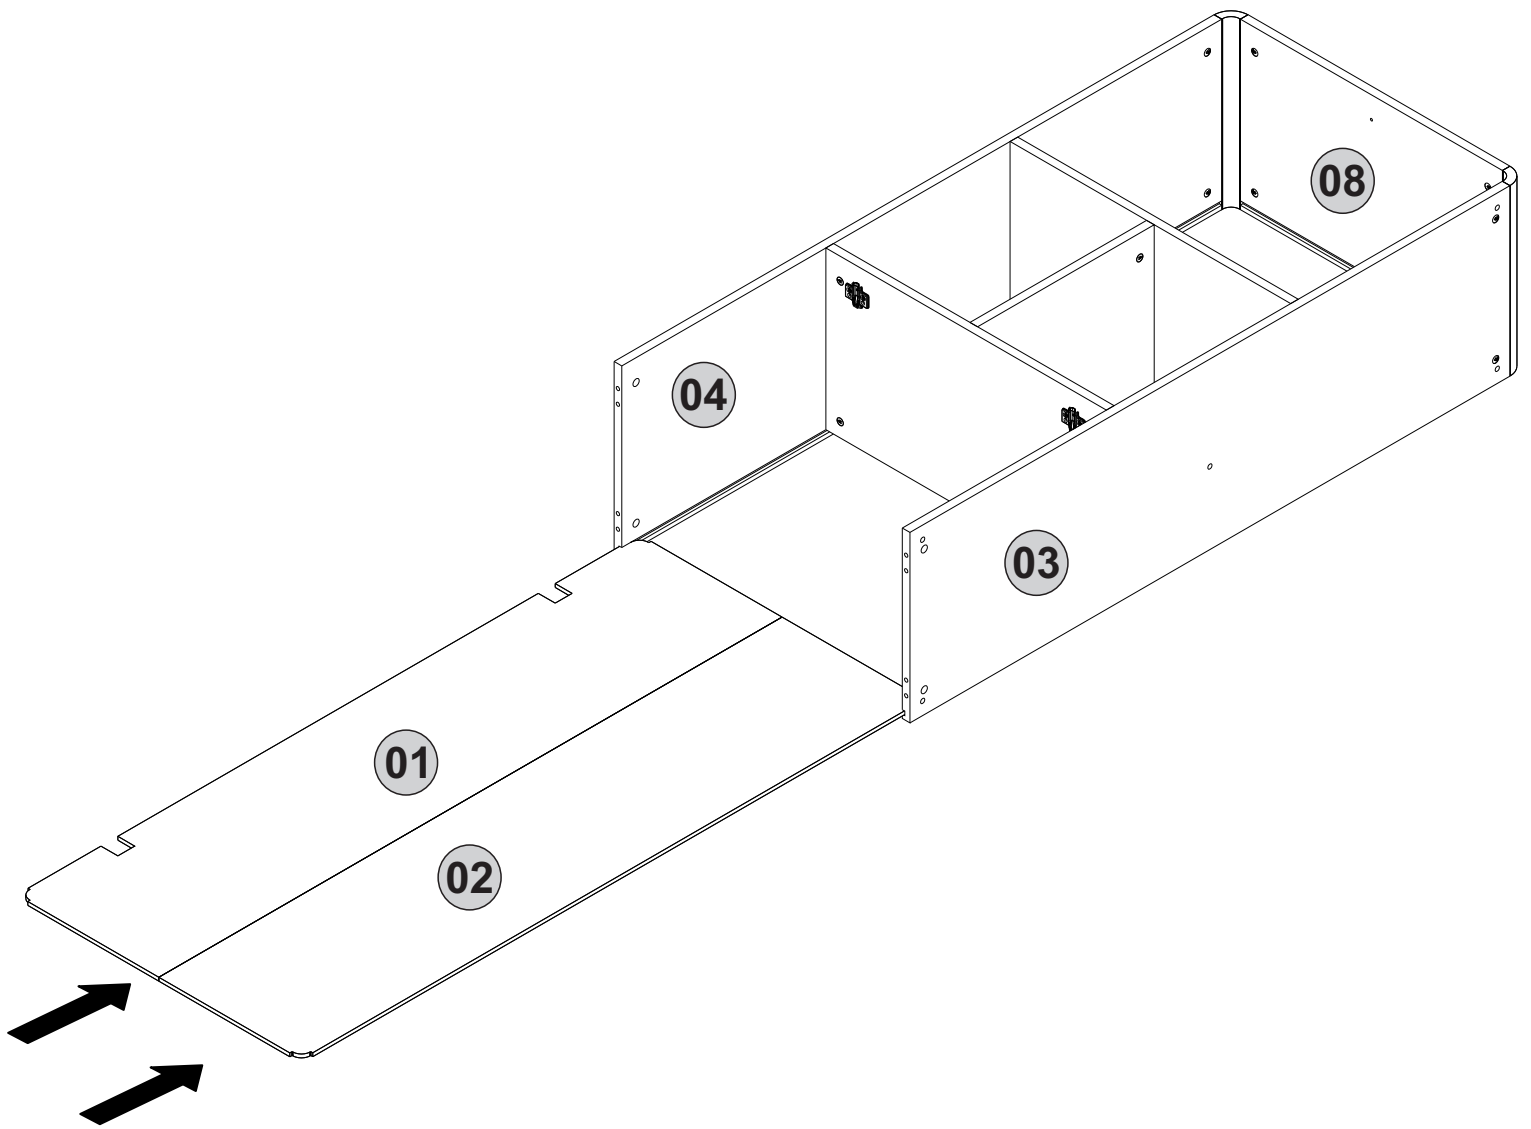


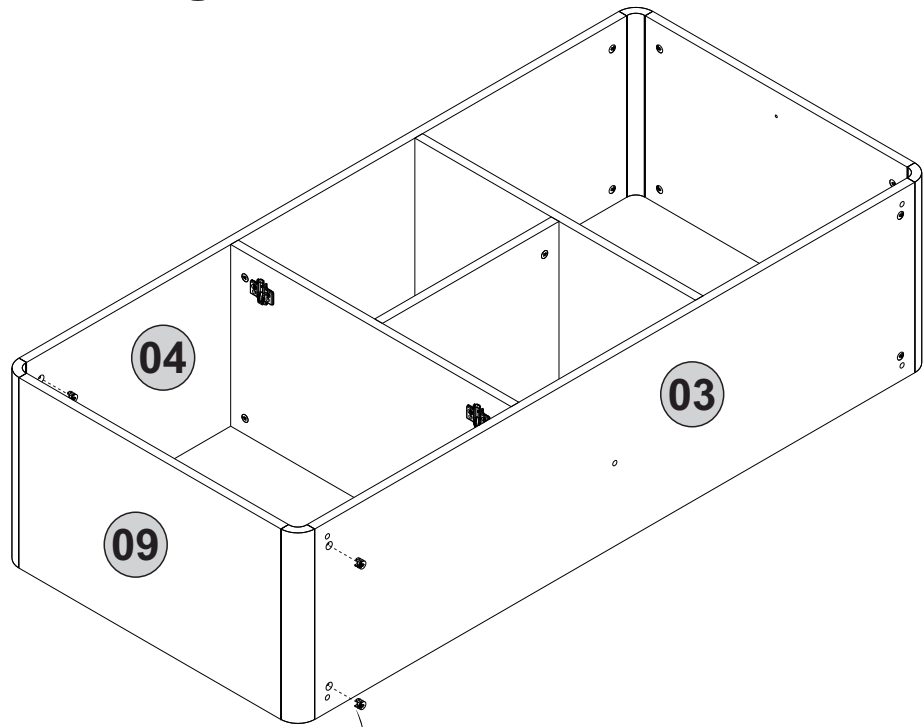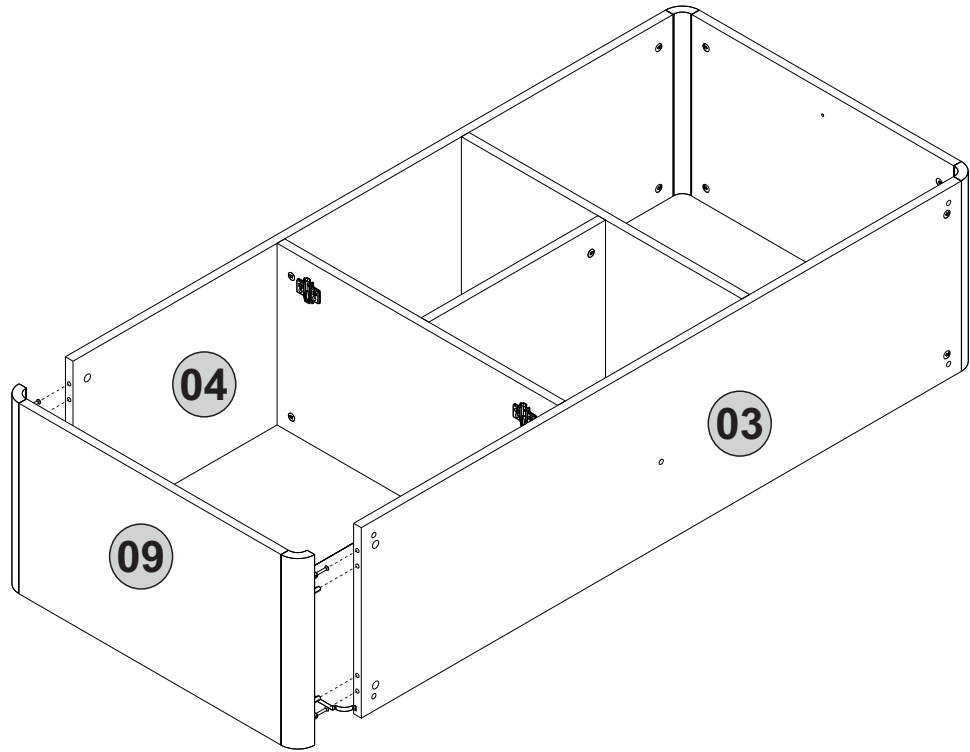


x4

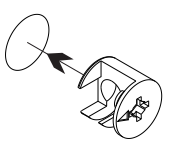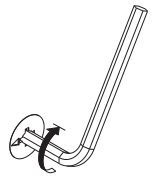 <p>A22 1x</p>	 <p>A12 1x</p>	 <p></p>
---	---	--





11

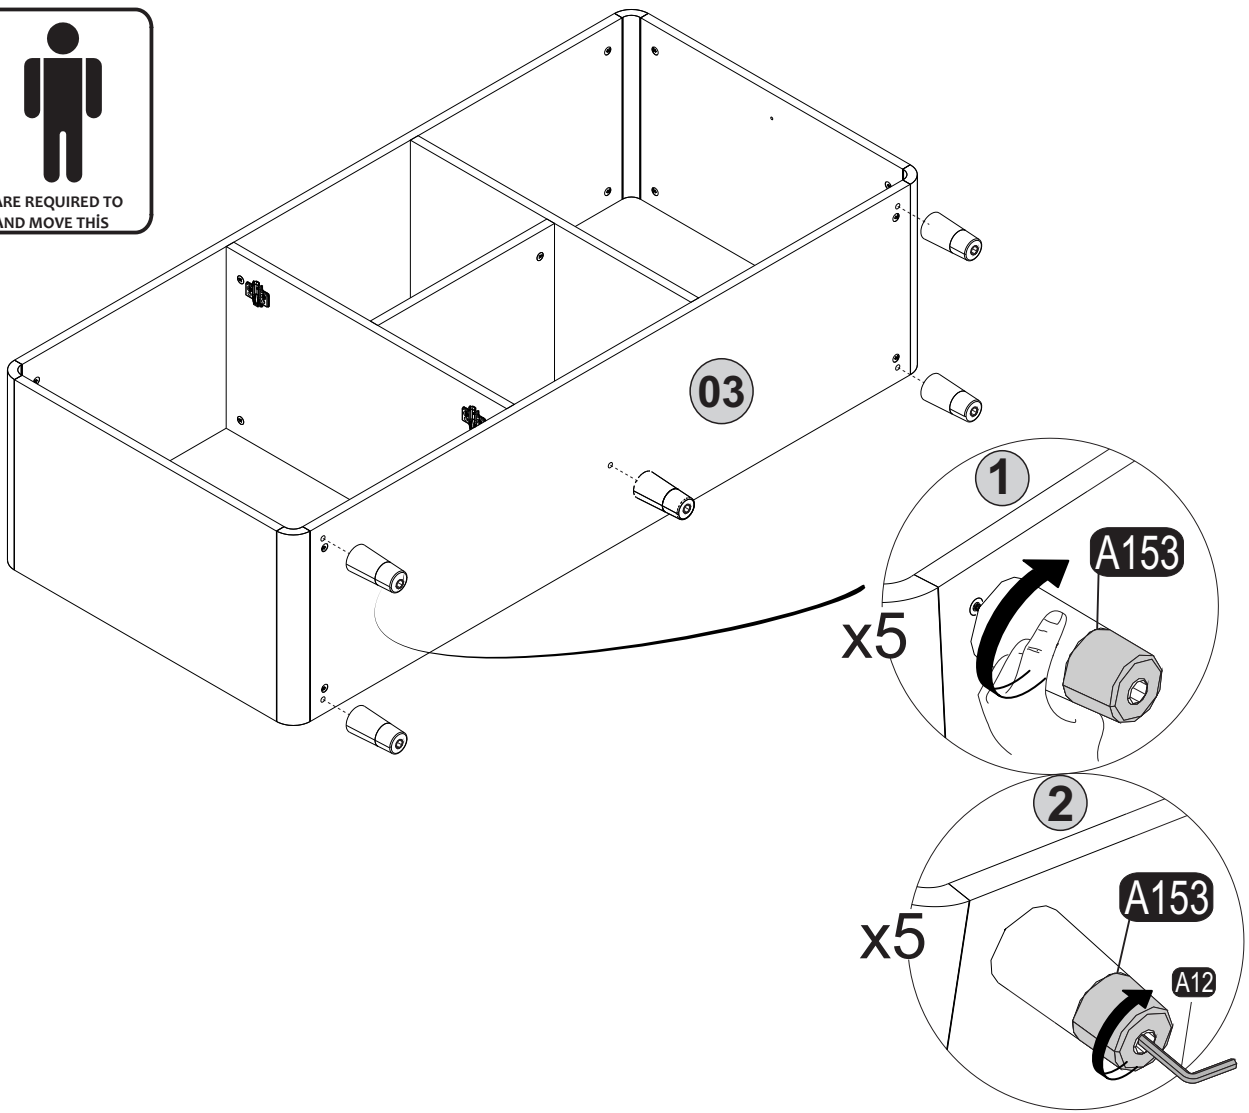



12







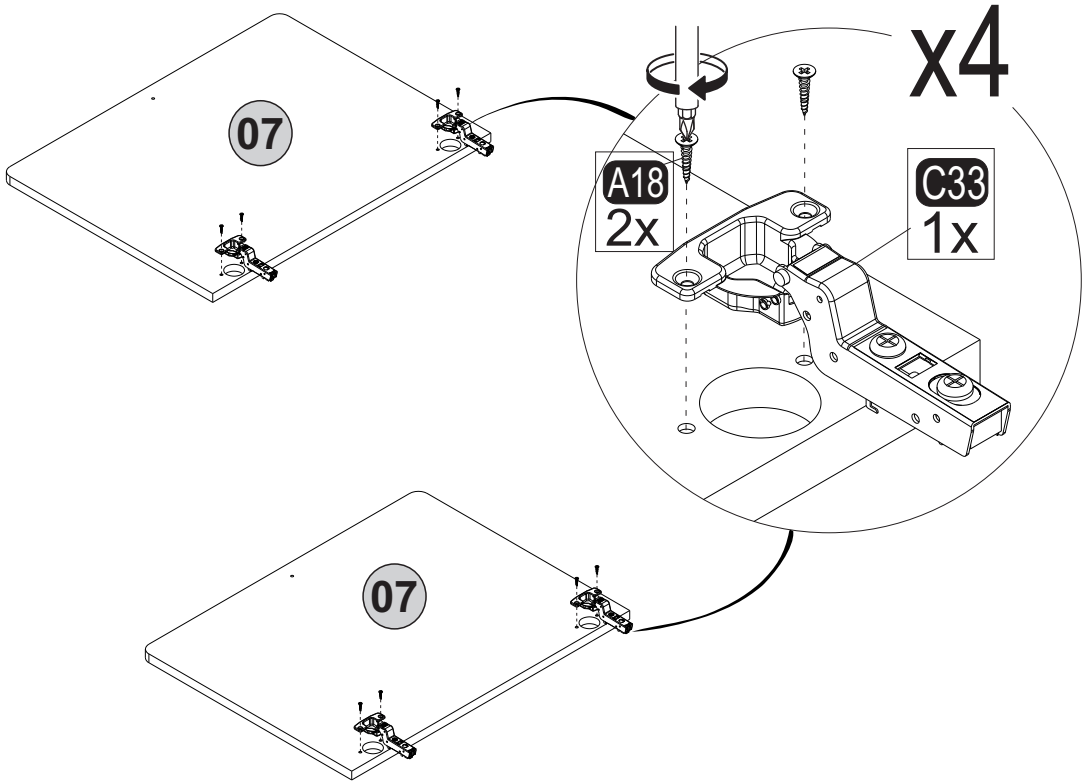




13



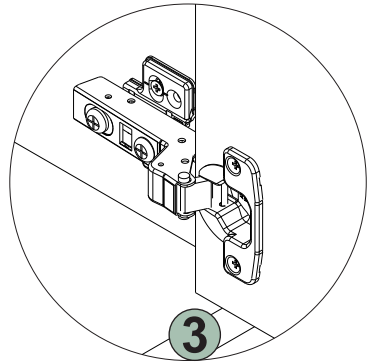
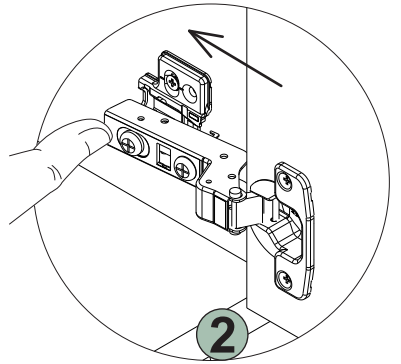
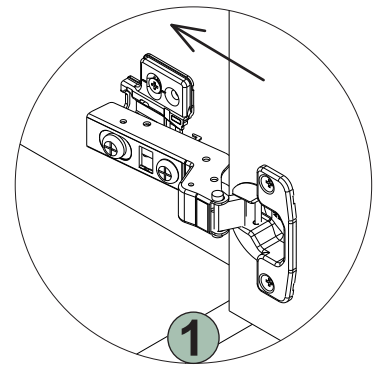
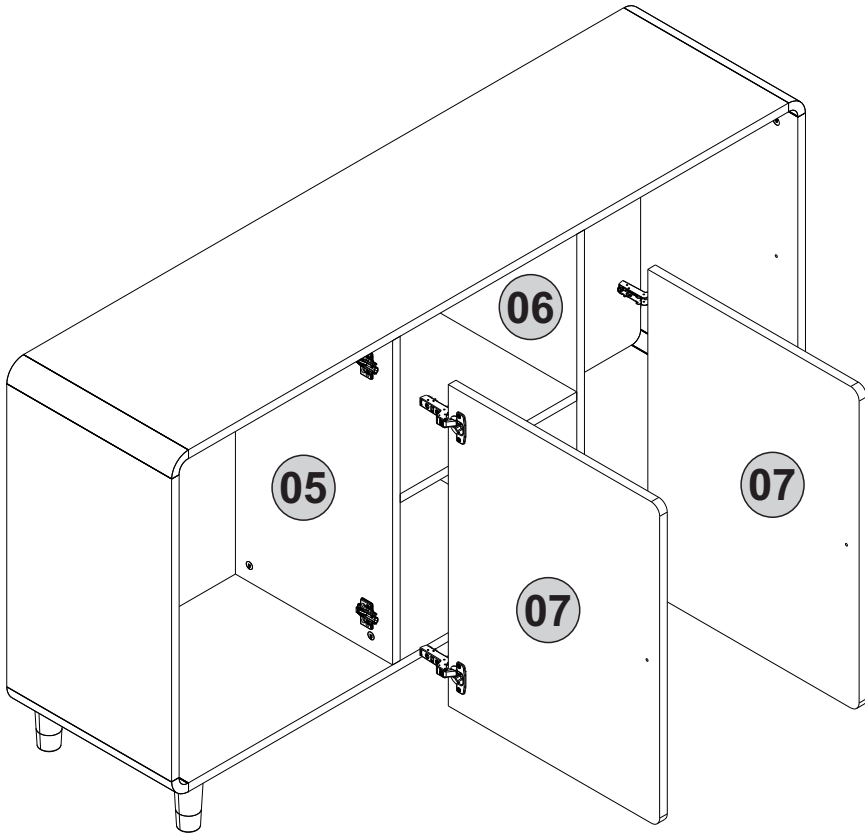


14

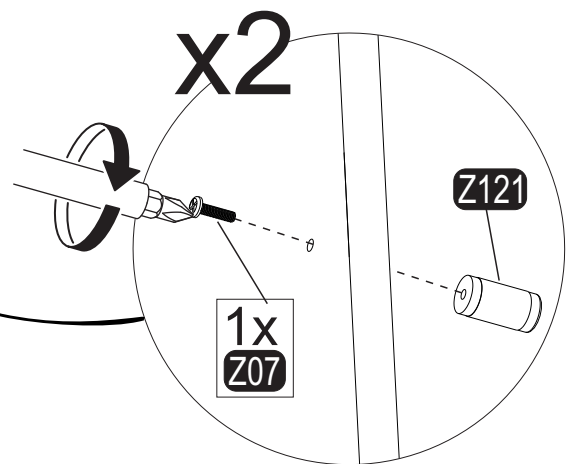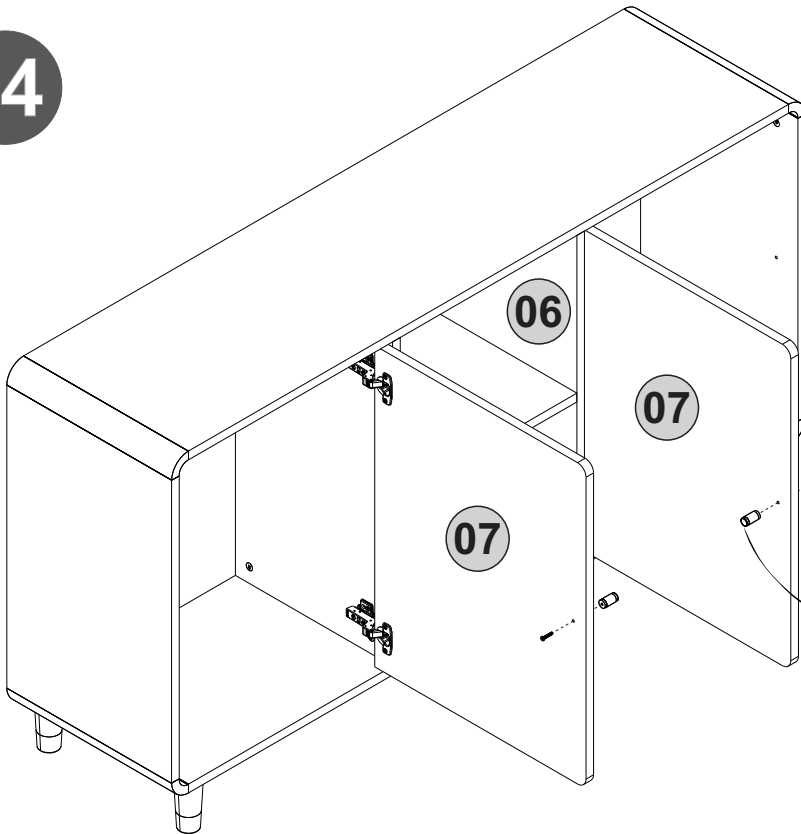


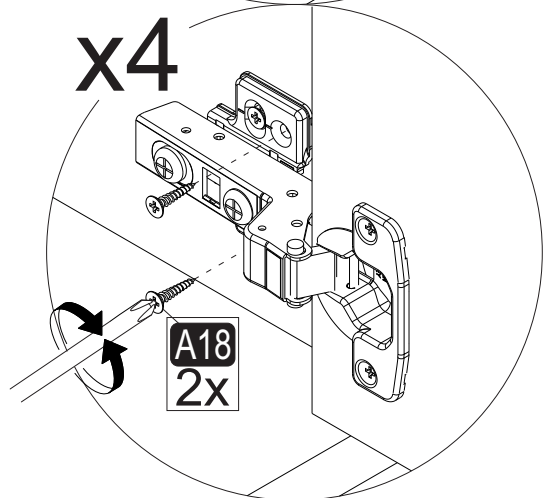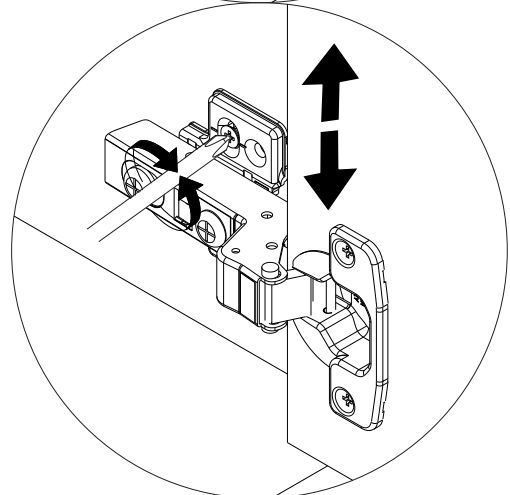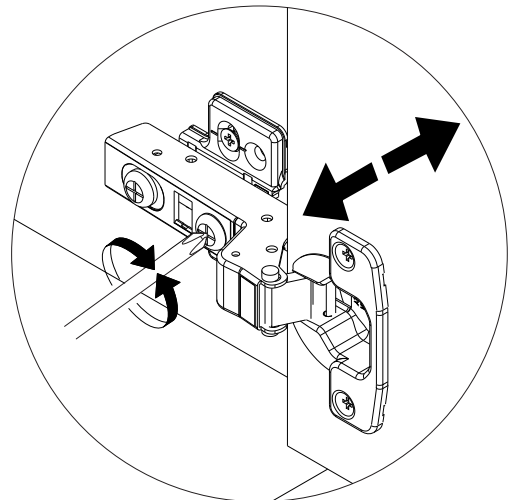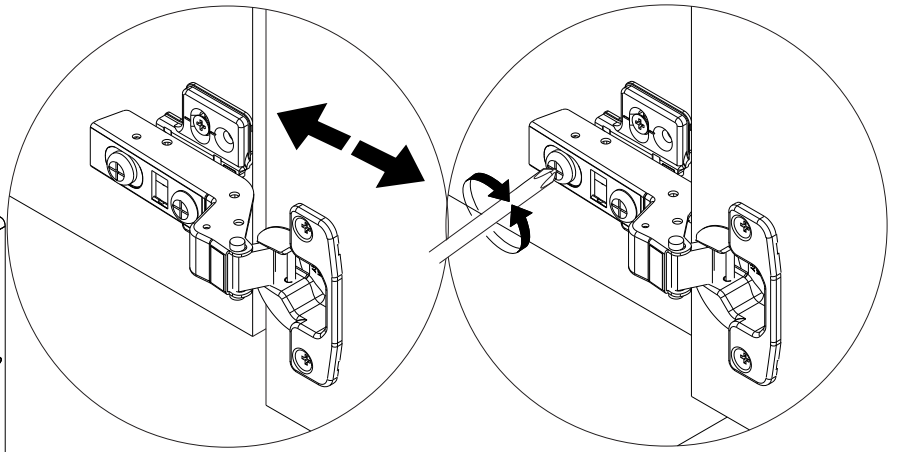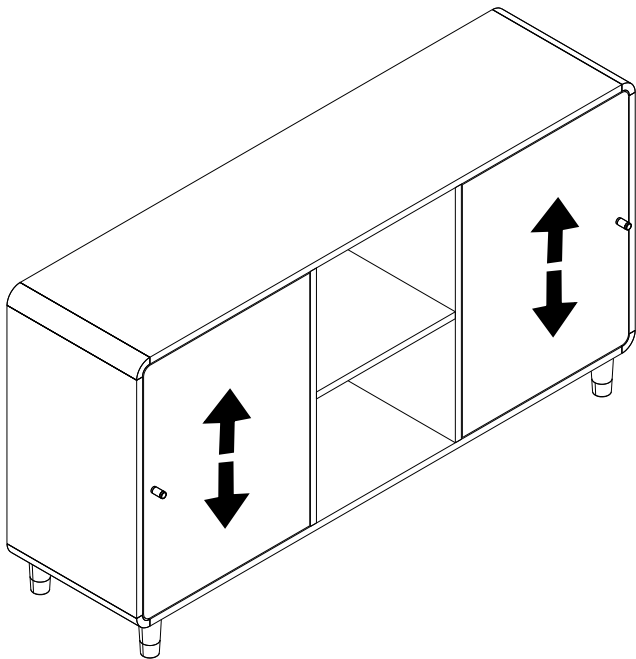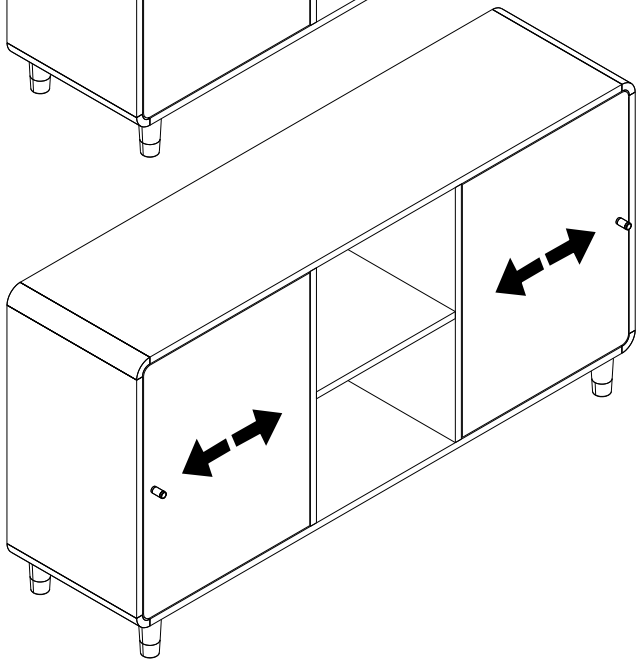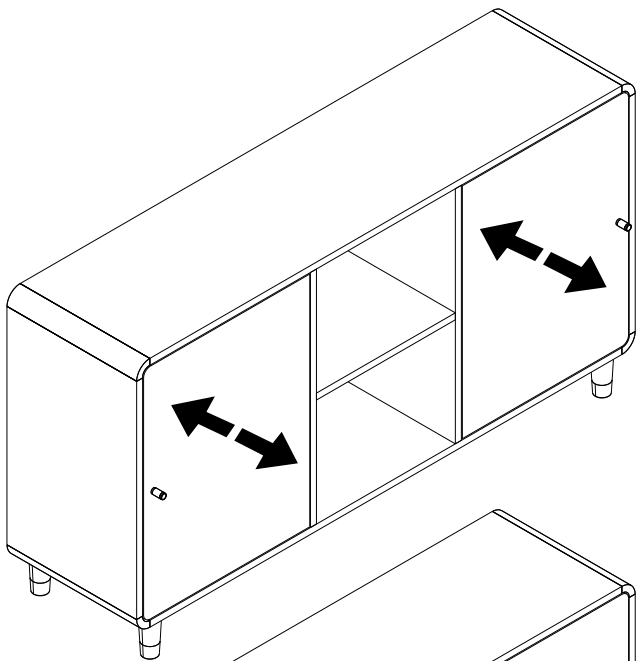

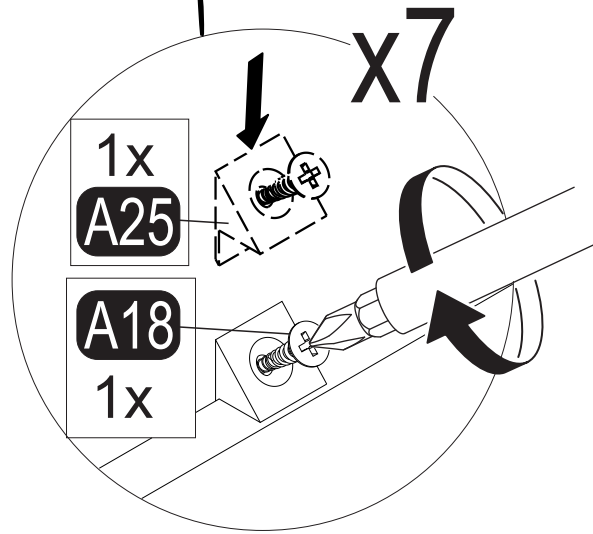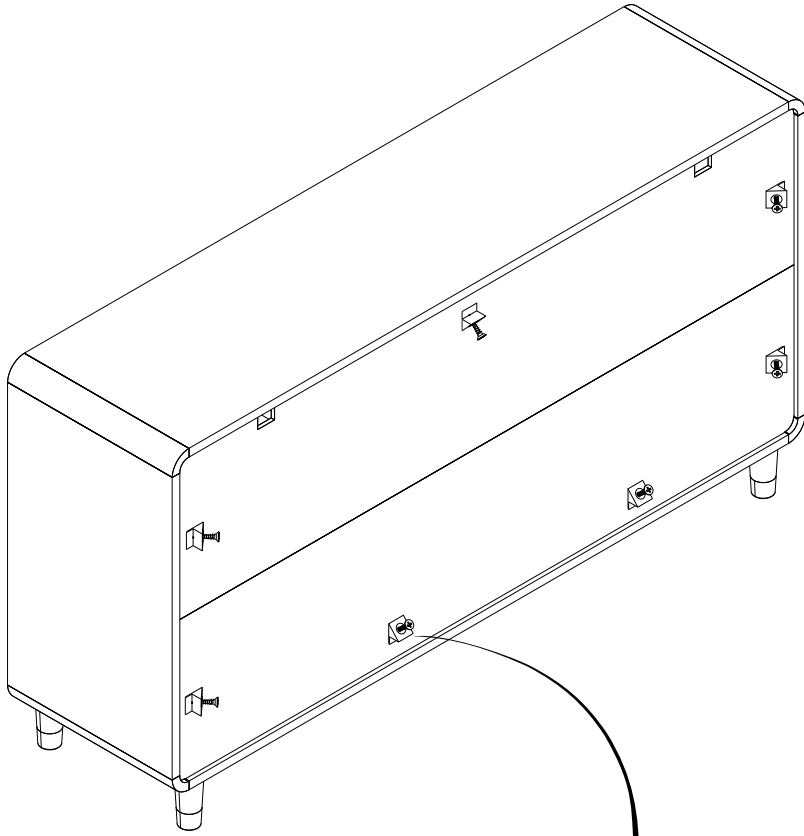

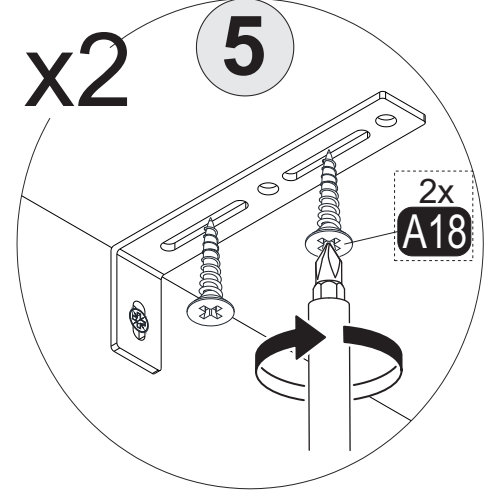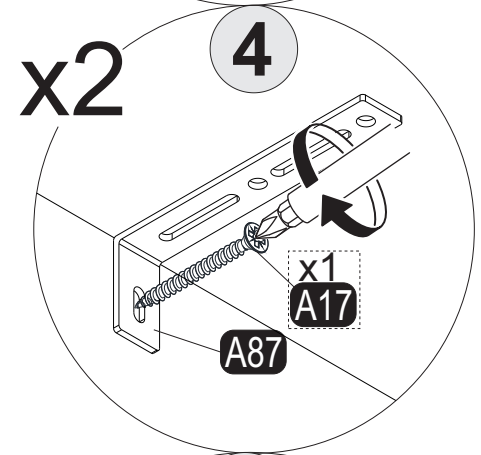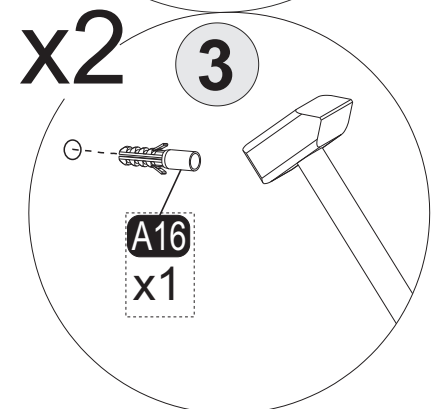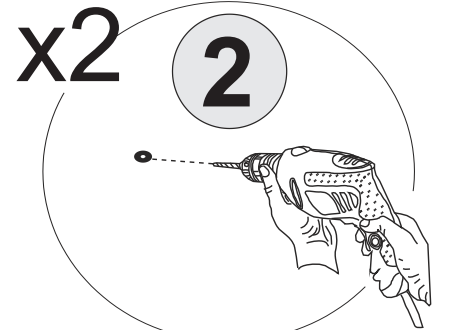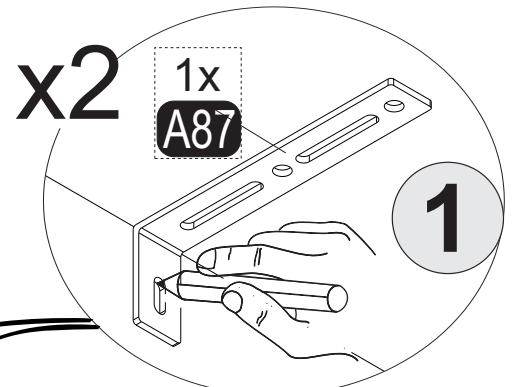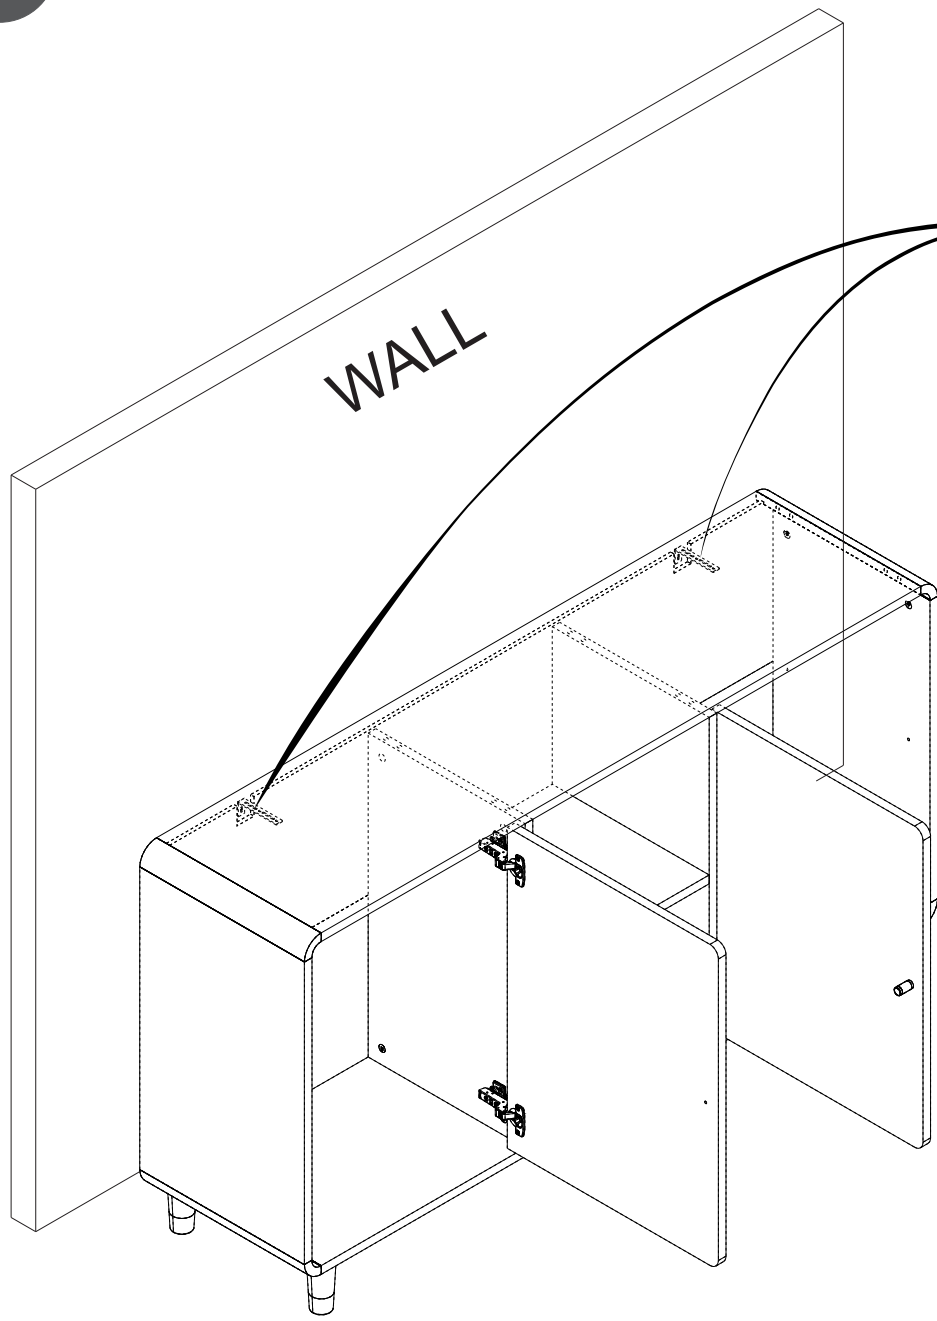

18

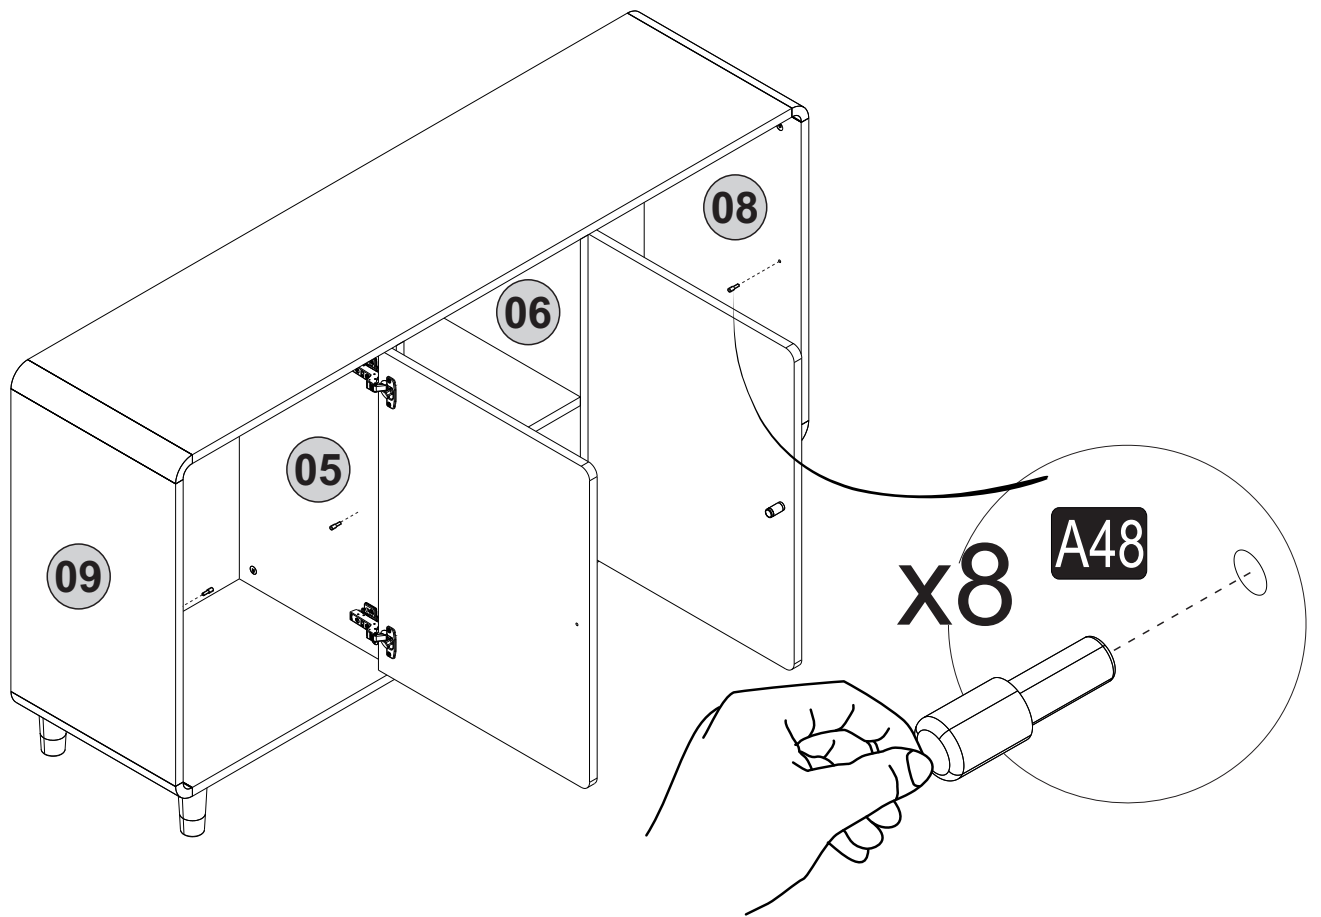

19

