



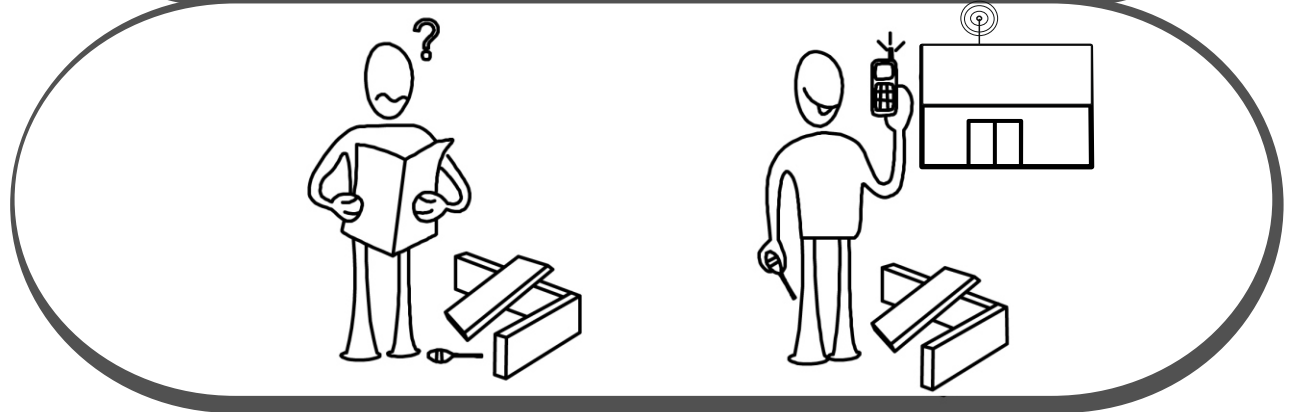


GP042-0035,1

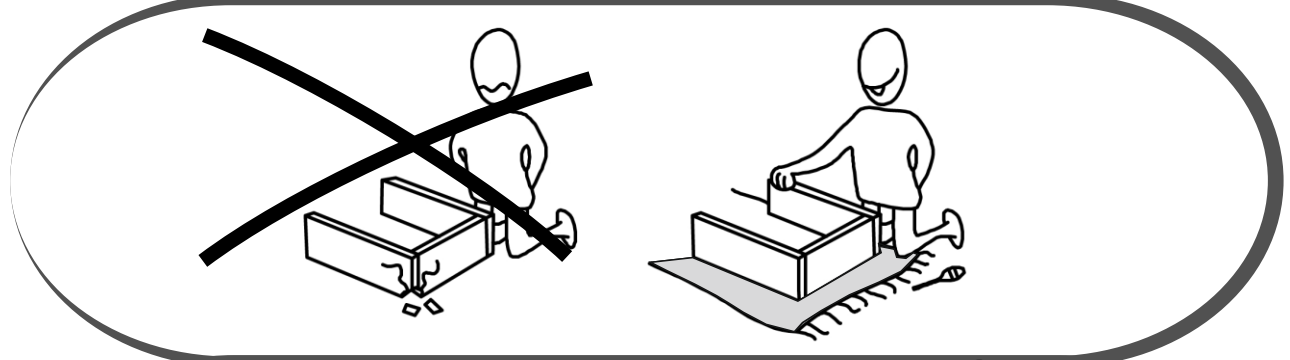




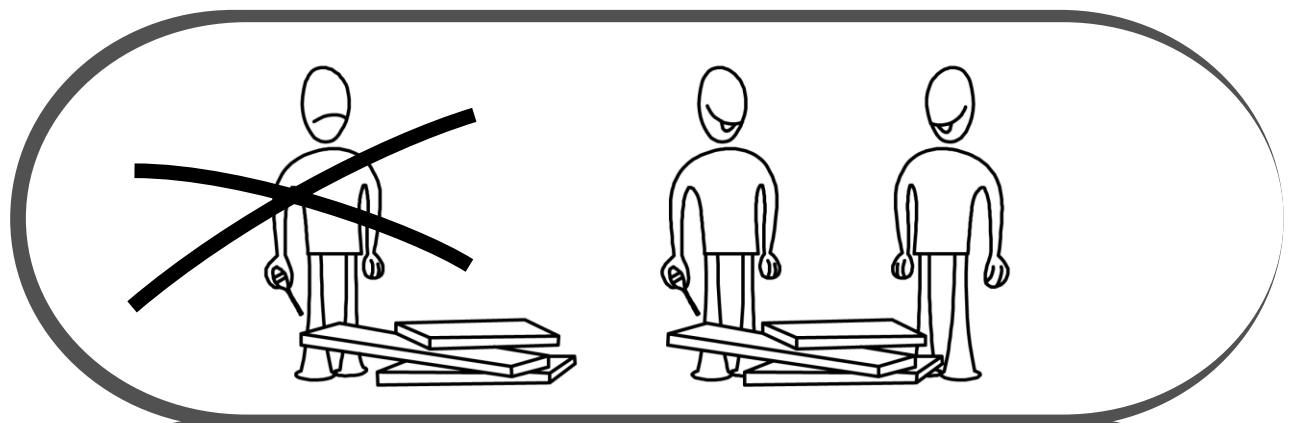


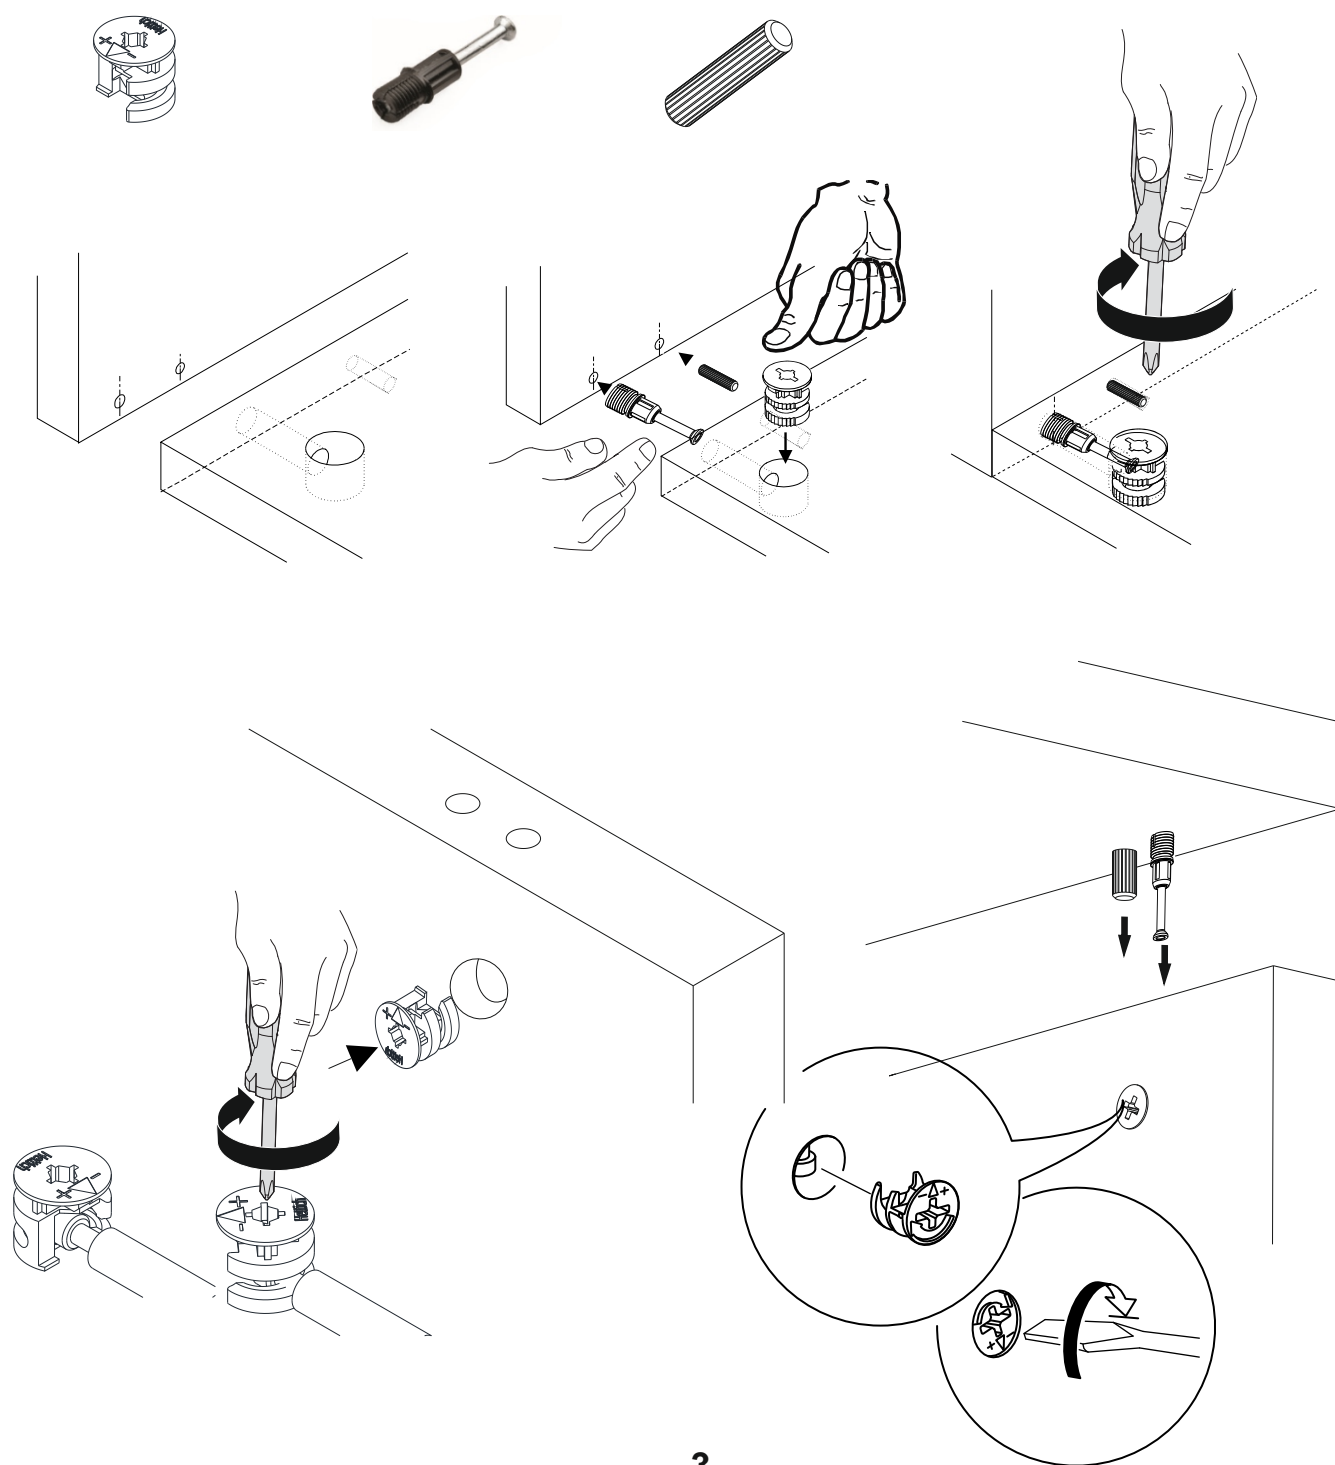

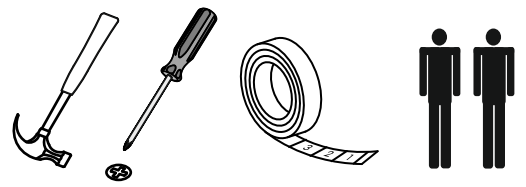


The necessary tools (not included)


ACCESSORY LIST

A02  16x	A01  16x	A03  16x	A12  6x	A13  6x
A28  20x Ø8 RKT	A04  A 16x	A10  36x 3,5x18	A41  6x	D41  6x 5x70 YHB
D69  6x				


GENERAL VIEW

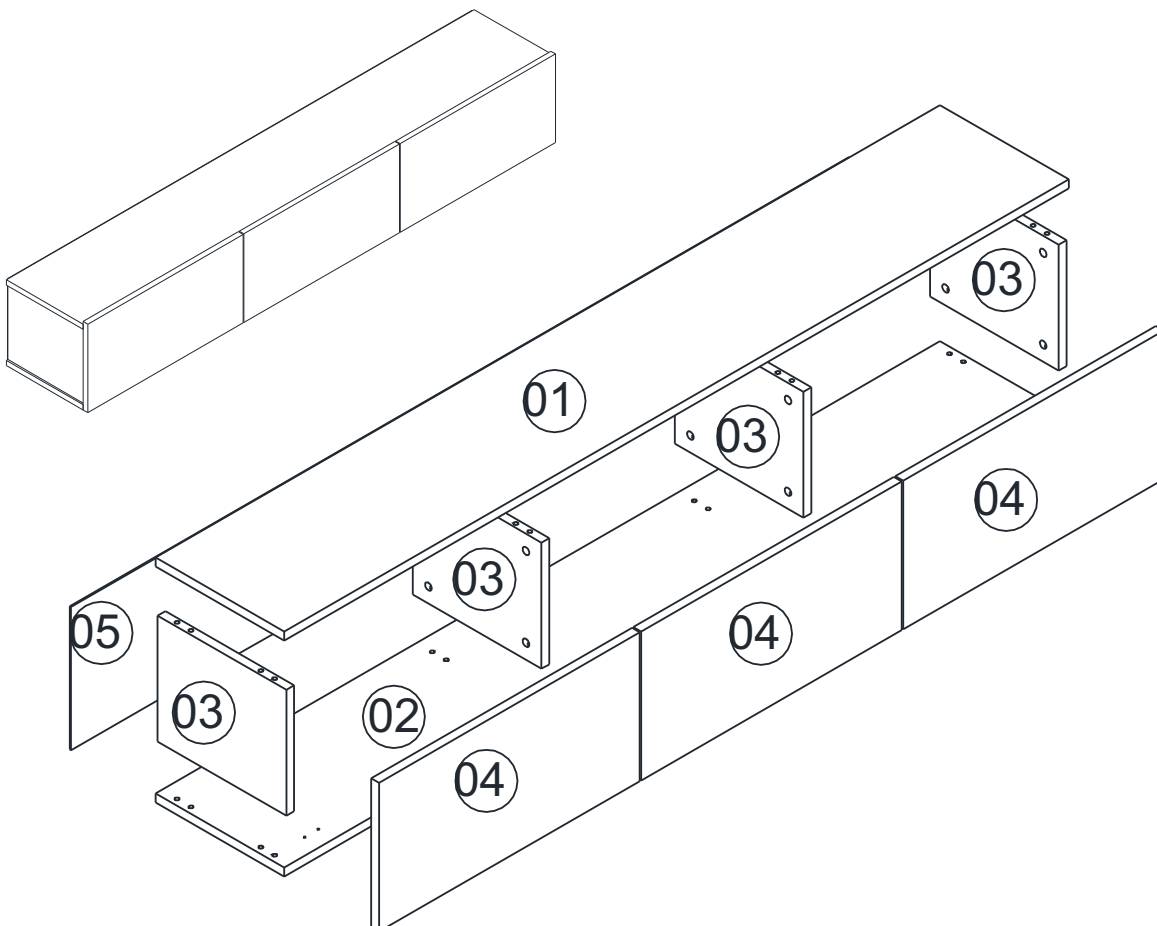


1



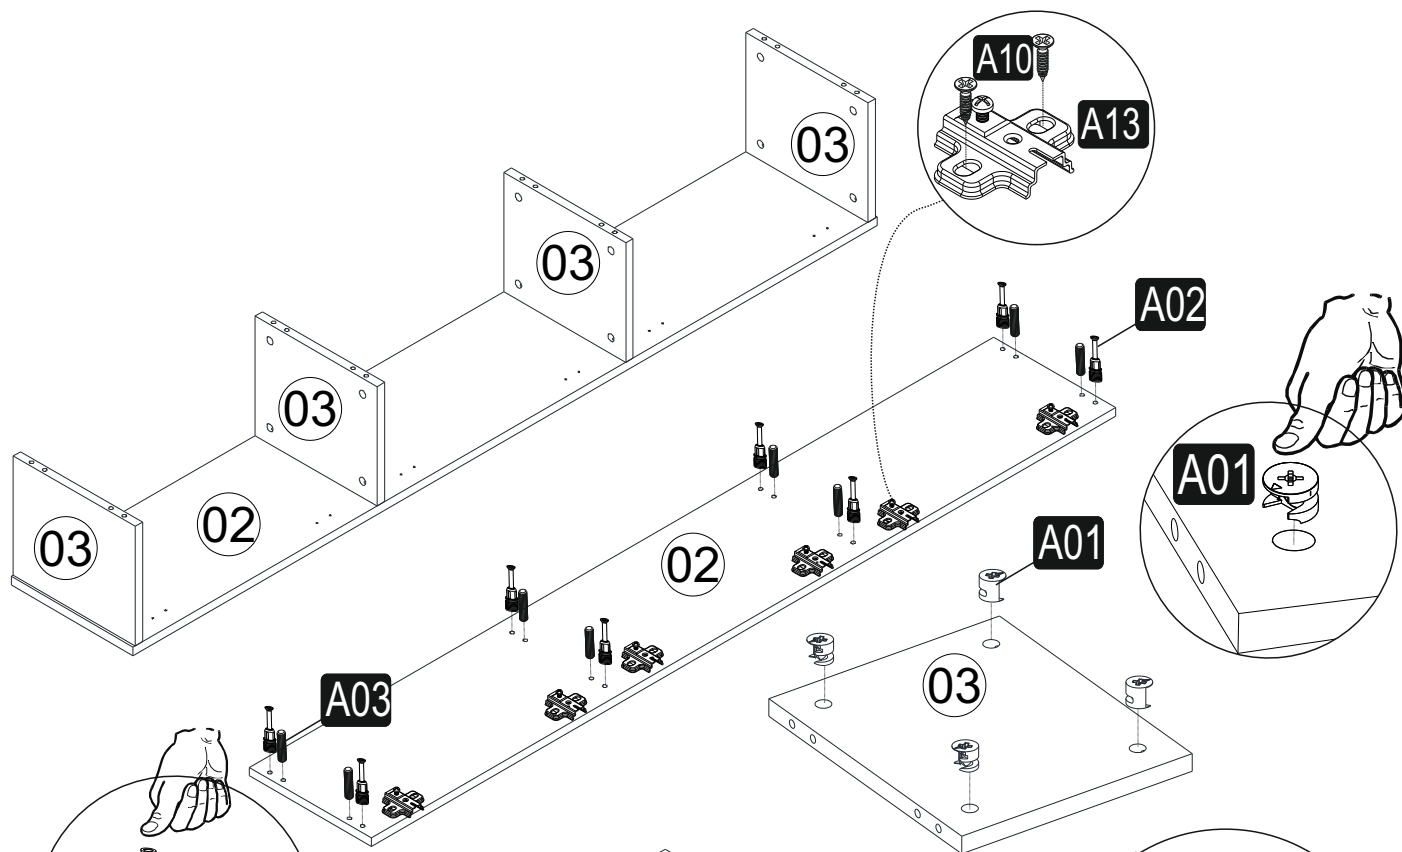


2

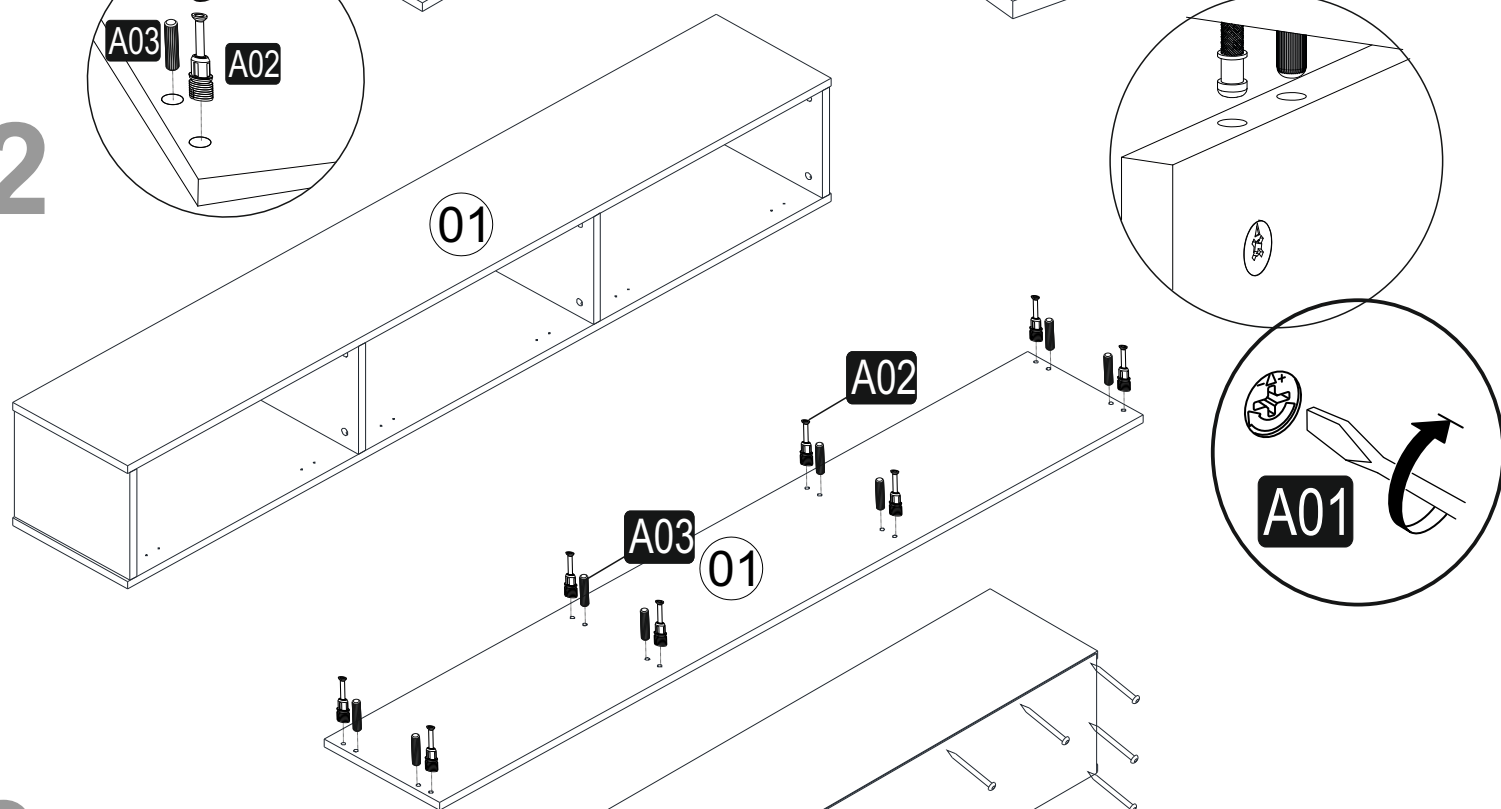


3

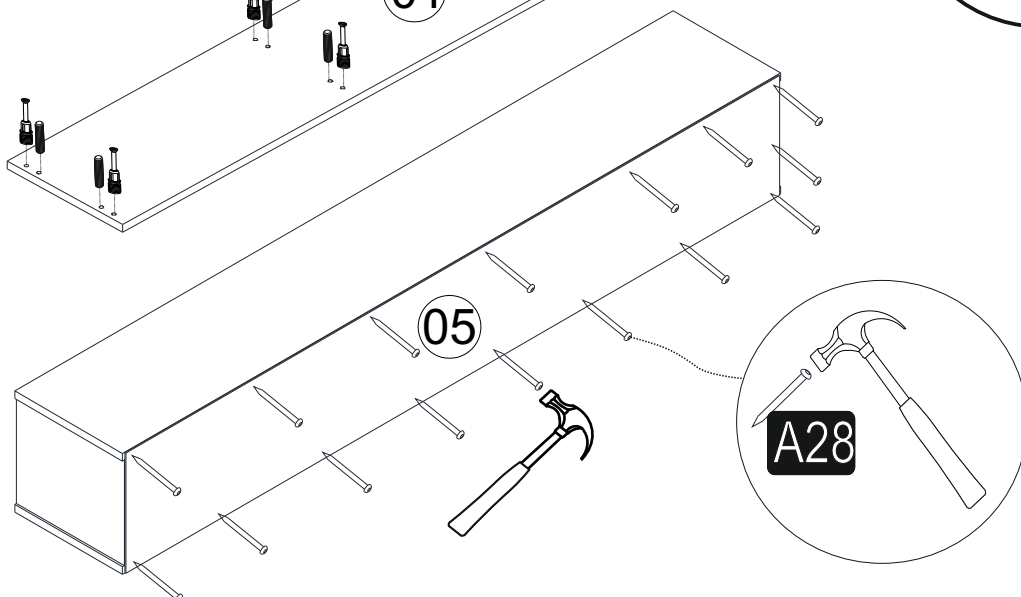

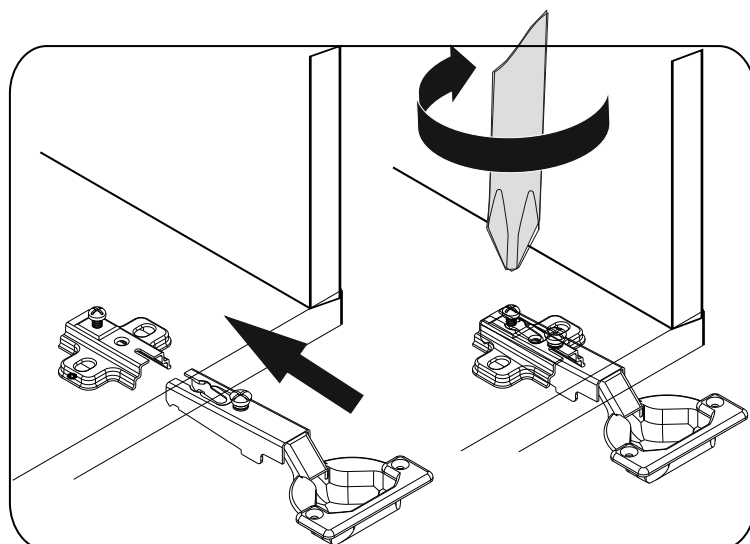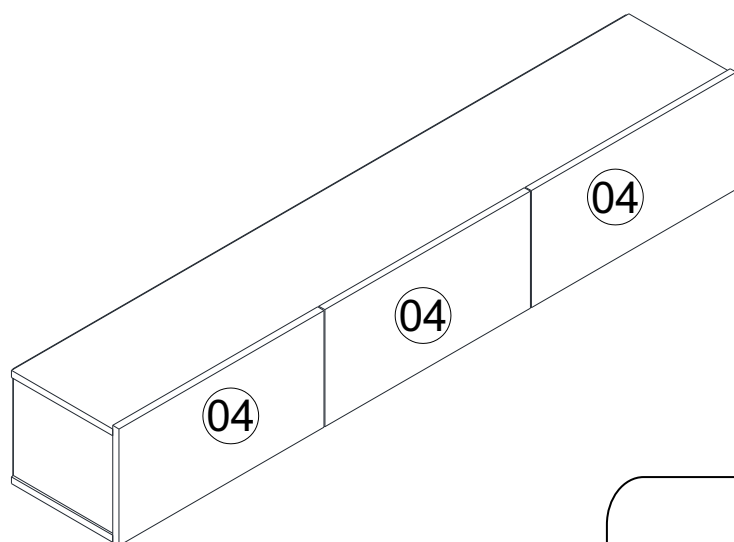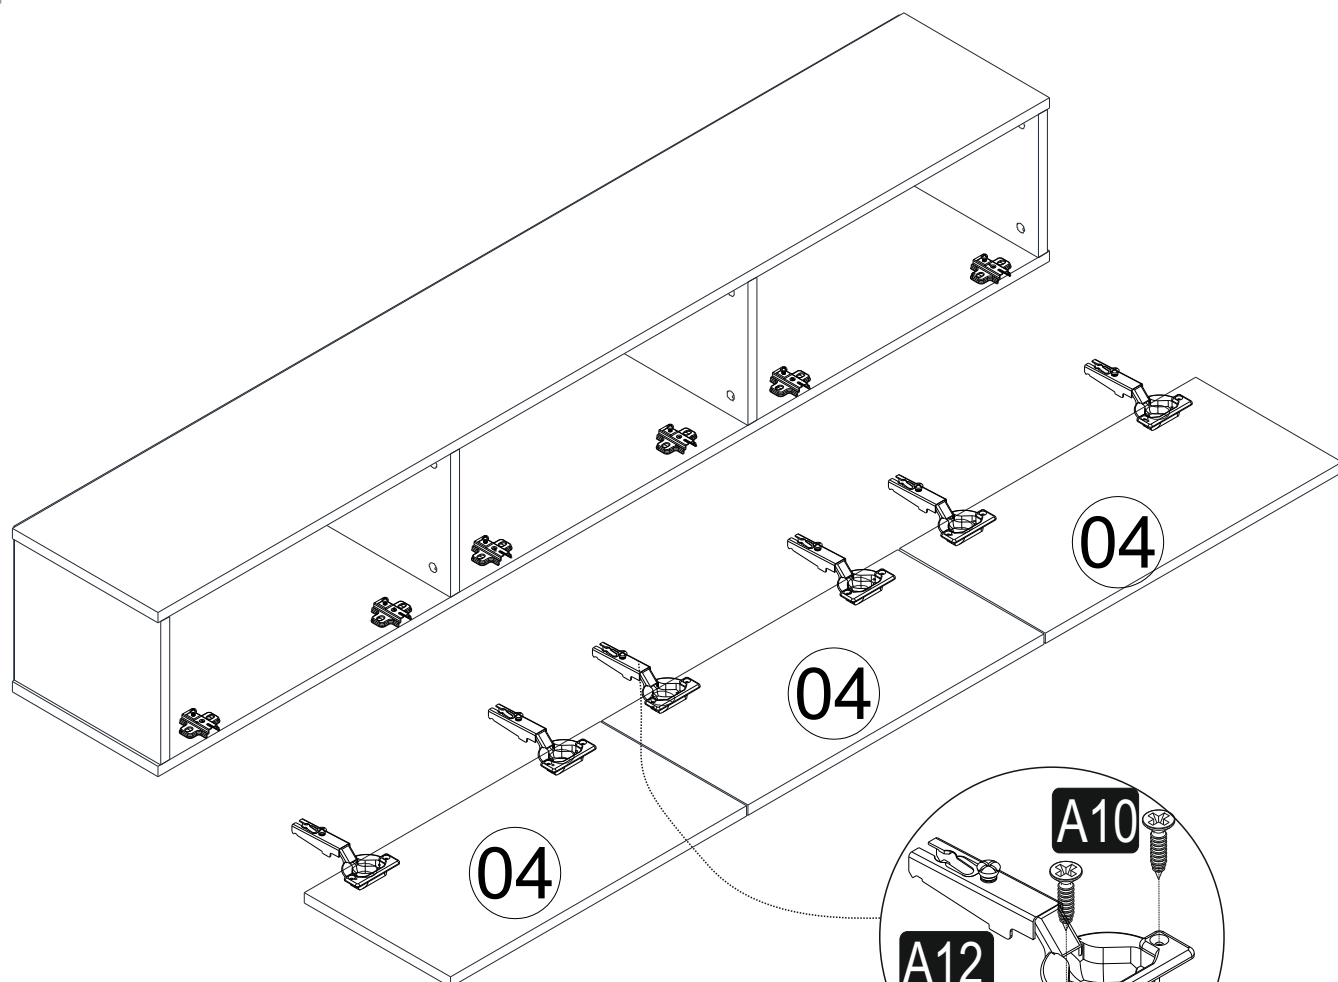


5


Plase use stud finder to anchor brackets into the studs for a safe installation.

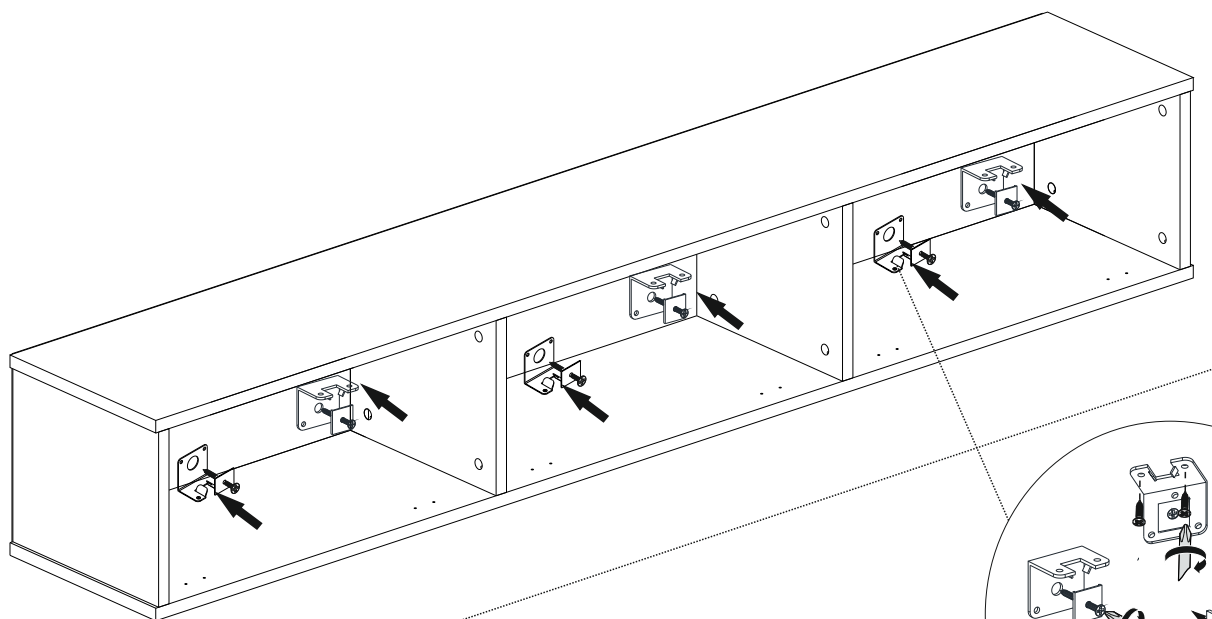


PART-1

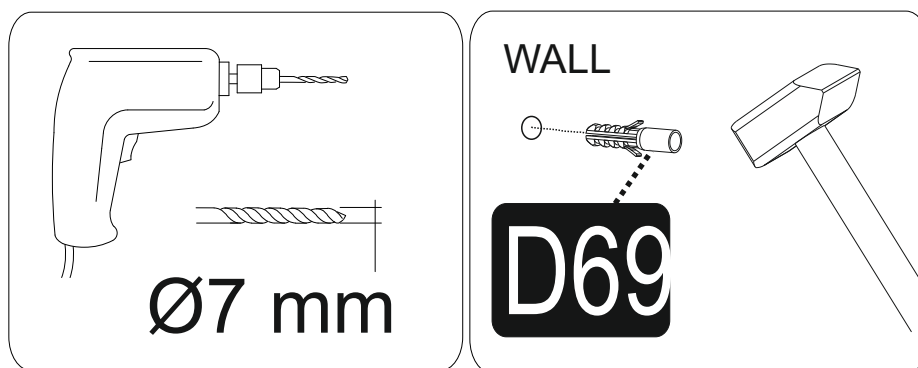


PART-2


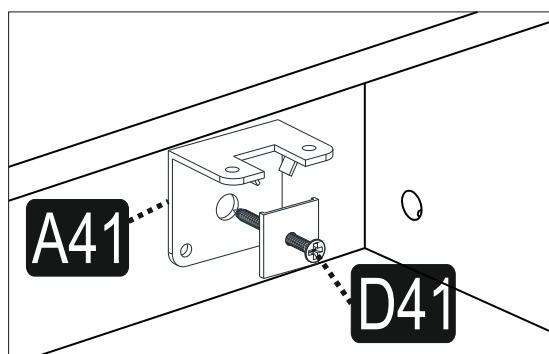



PART-3



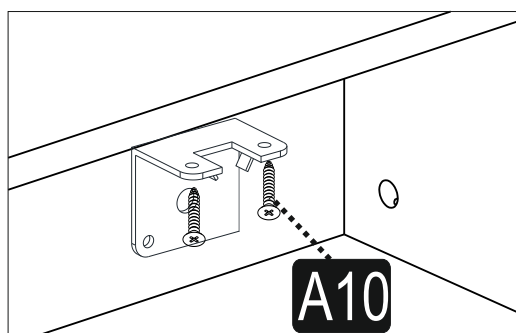



PART-4

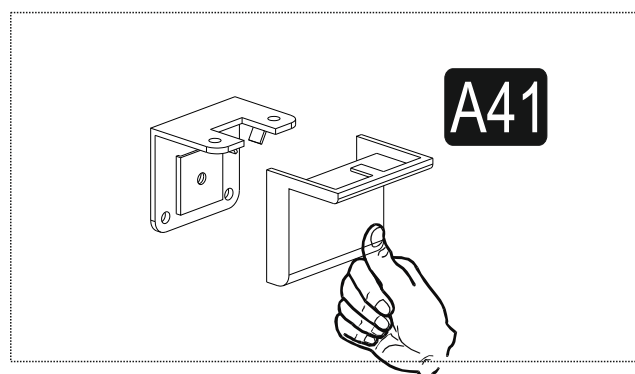


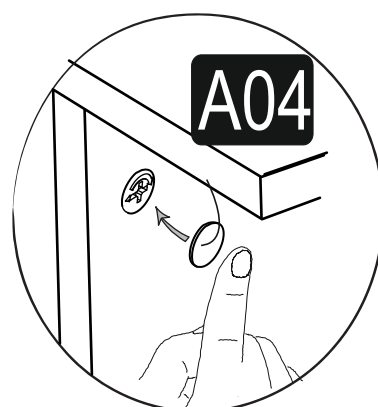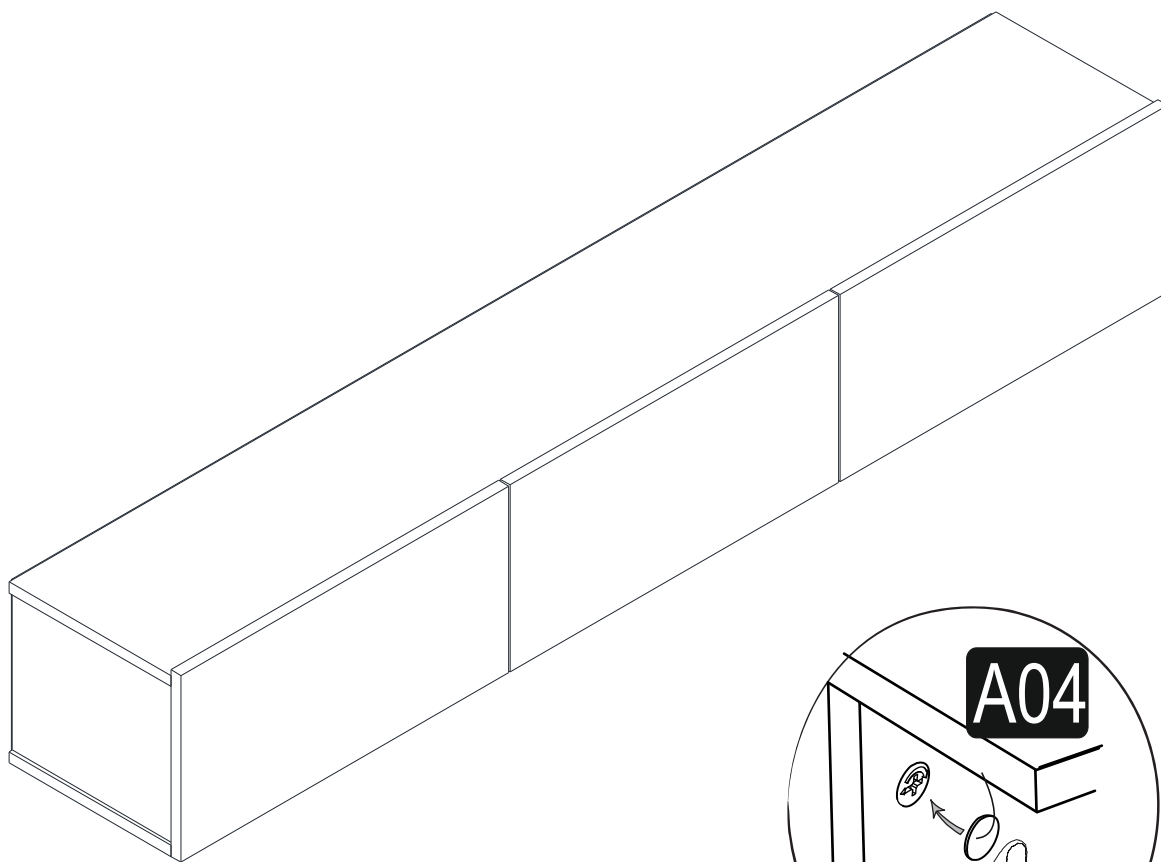

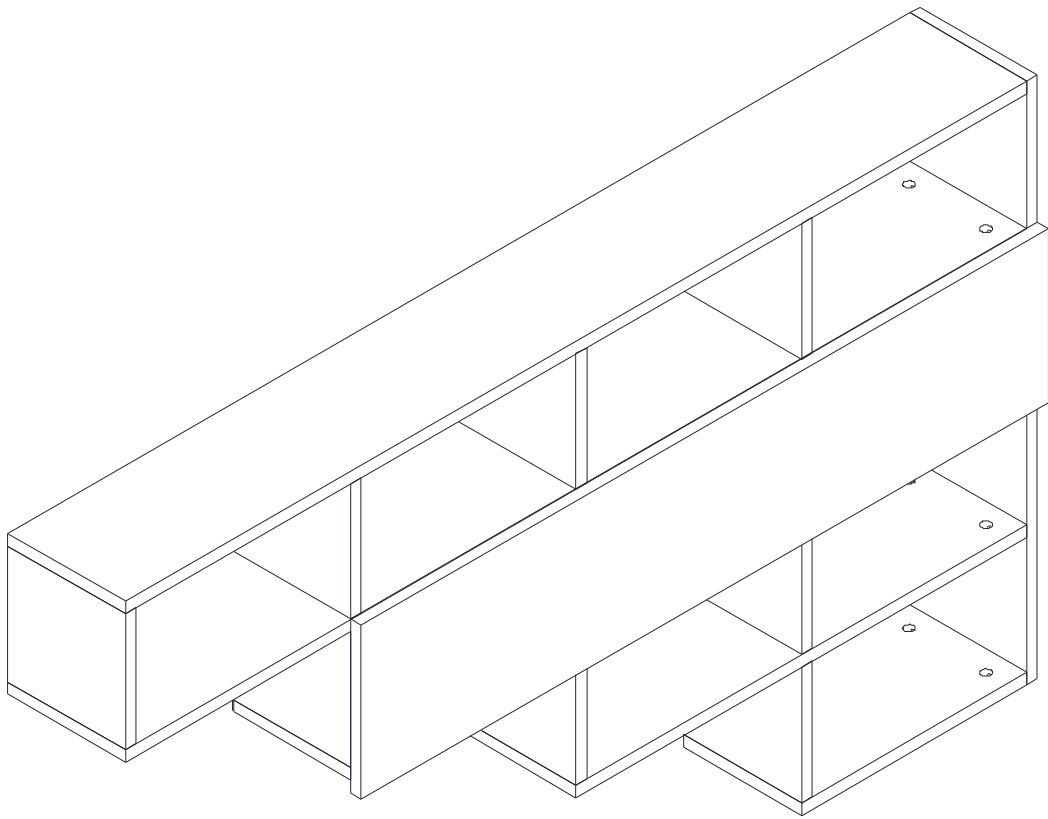




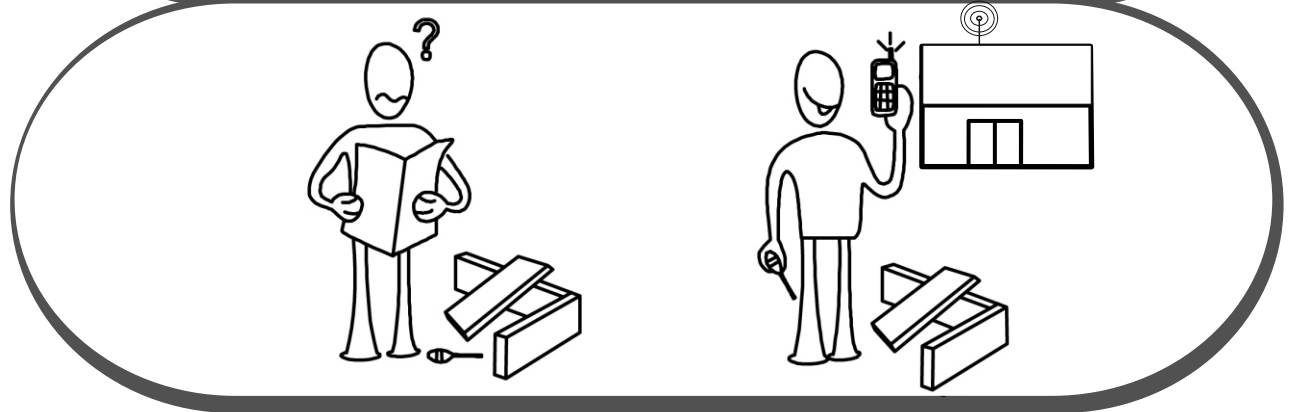
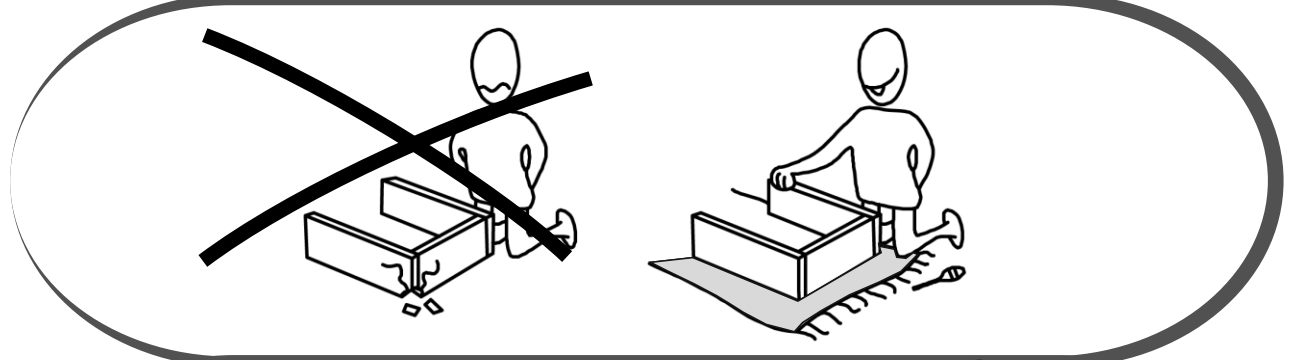
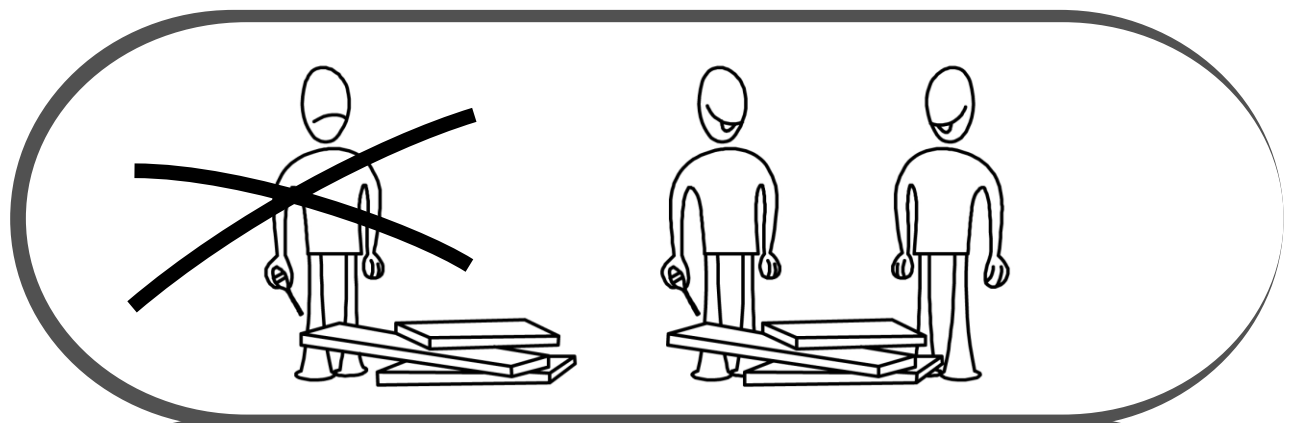


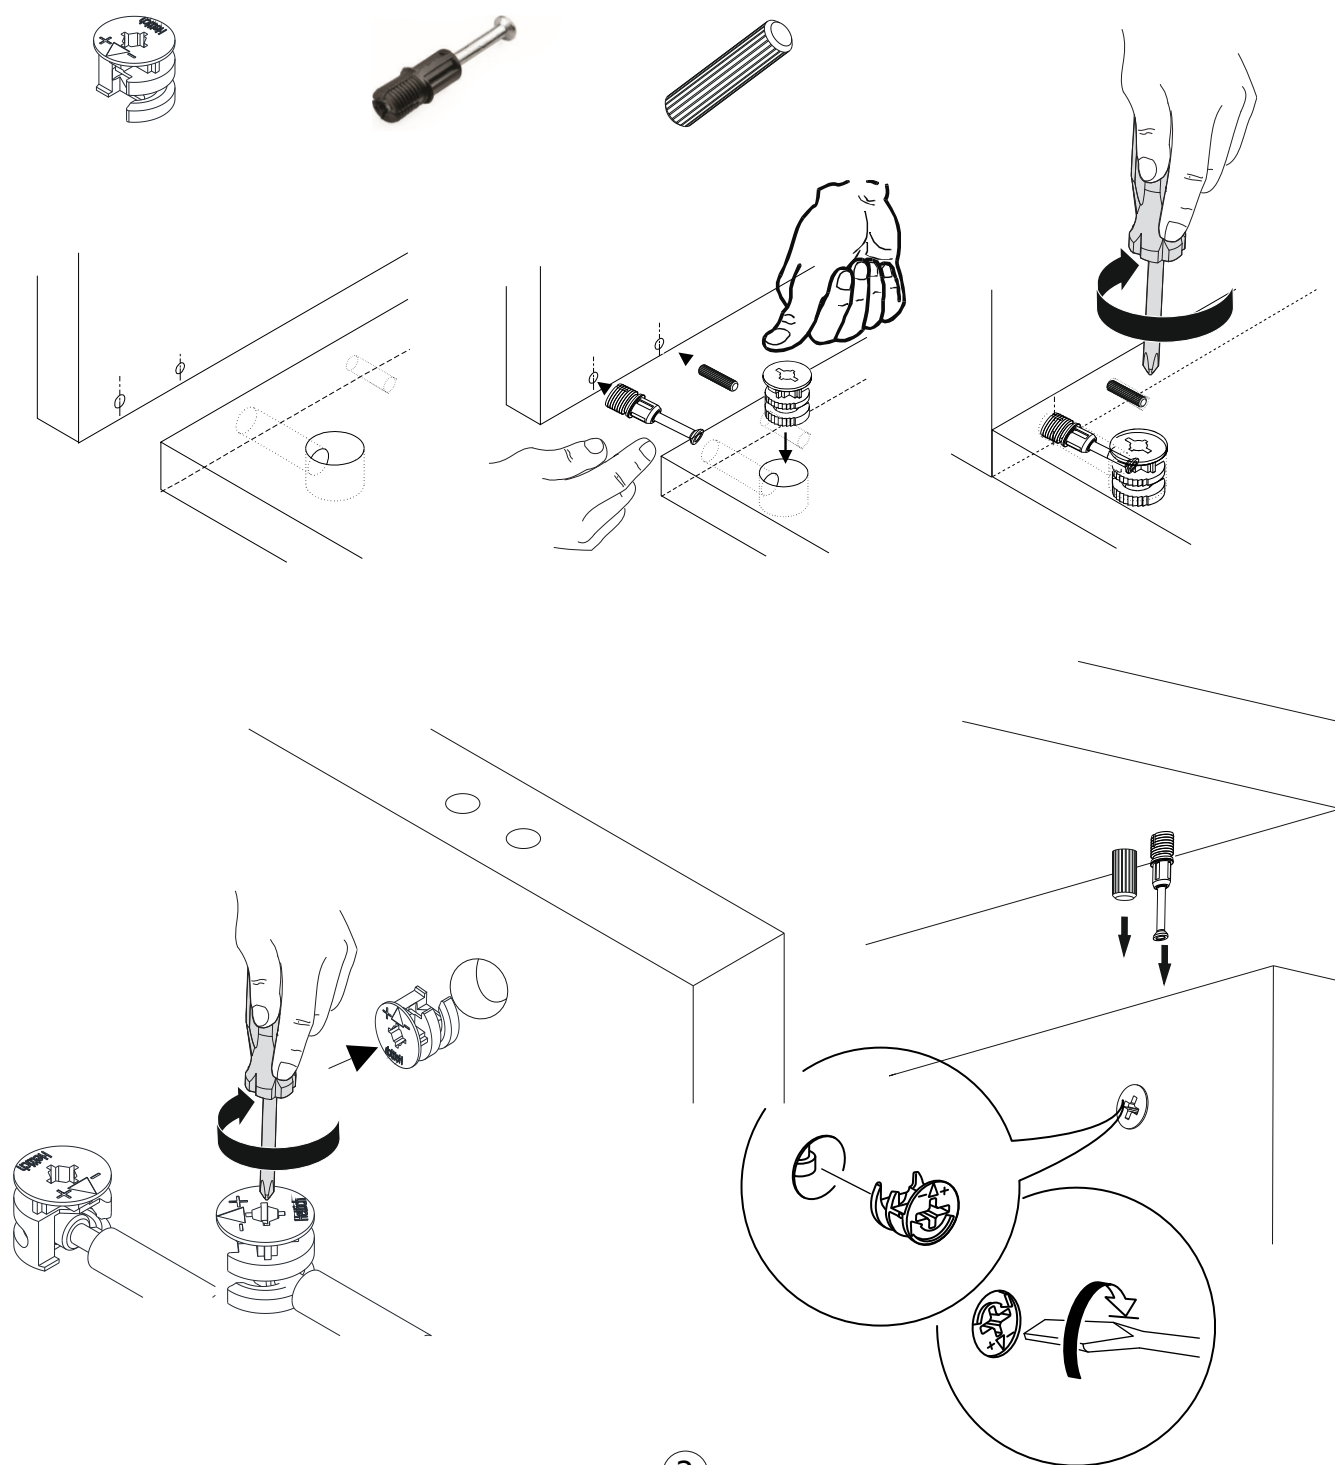

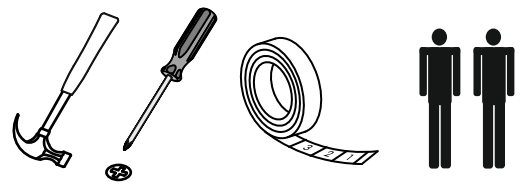


The necessary tools (not included)


ACCESSORY LIST

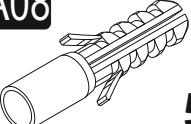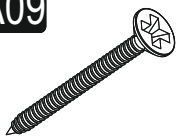A02  26x	A06  12x	A01  50x	A12  3x	A13  3x
A28  15x	A41  5x	A08  5x	A10  22x	A09  5x
A04  A 50x				


GENERAL VIEW

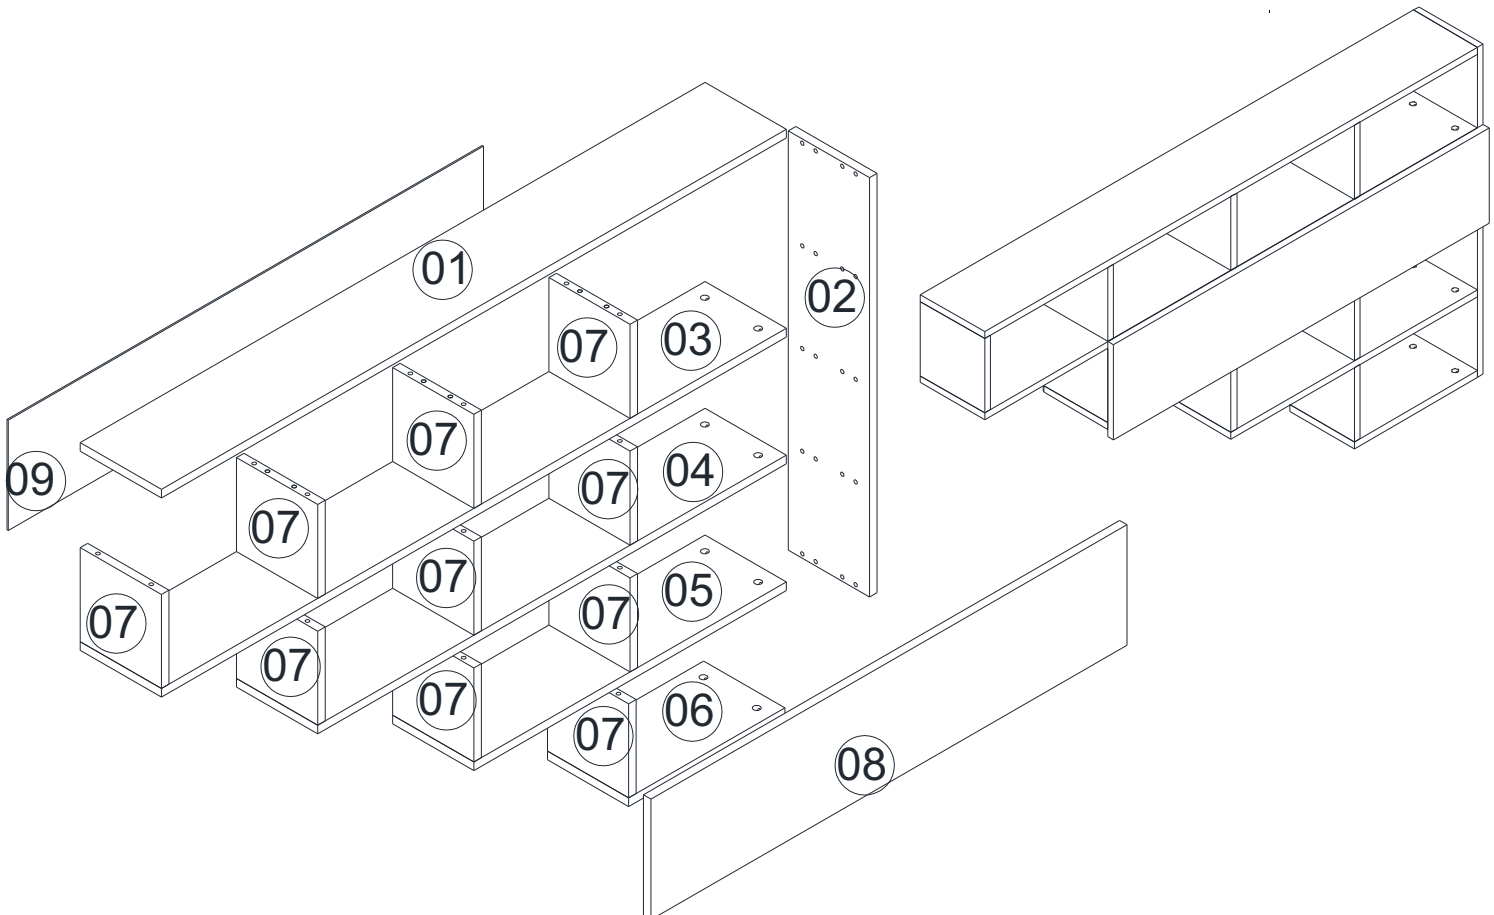


1

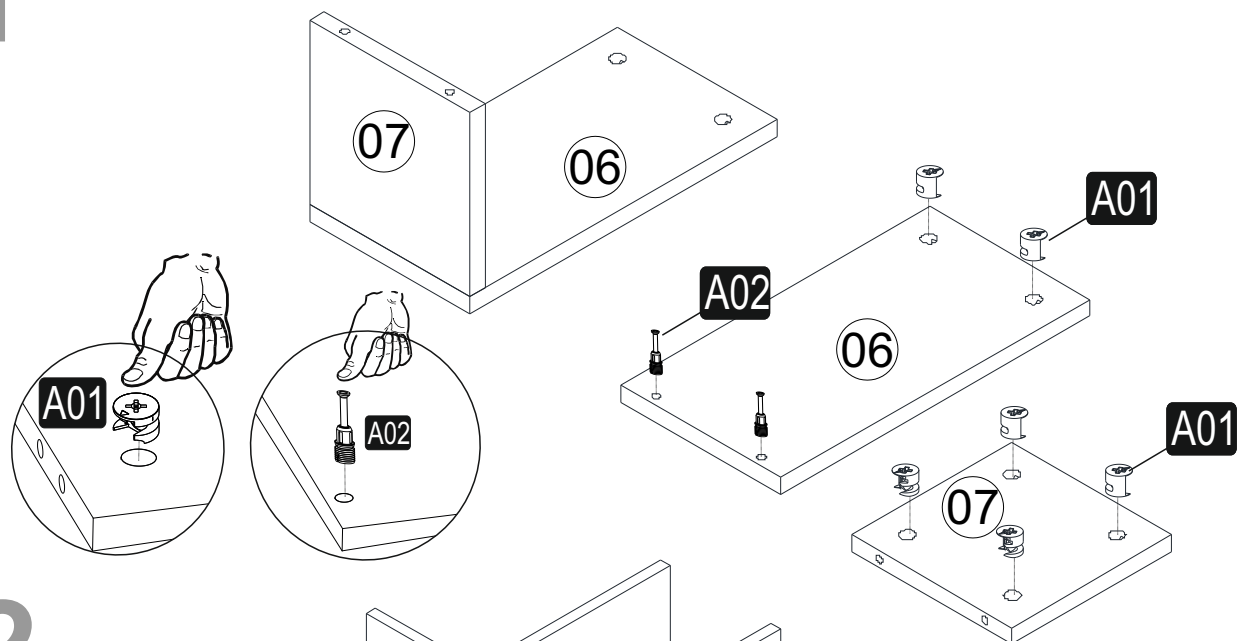


2

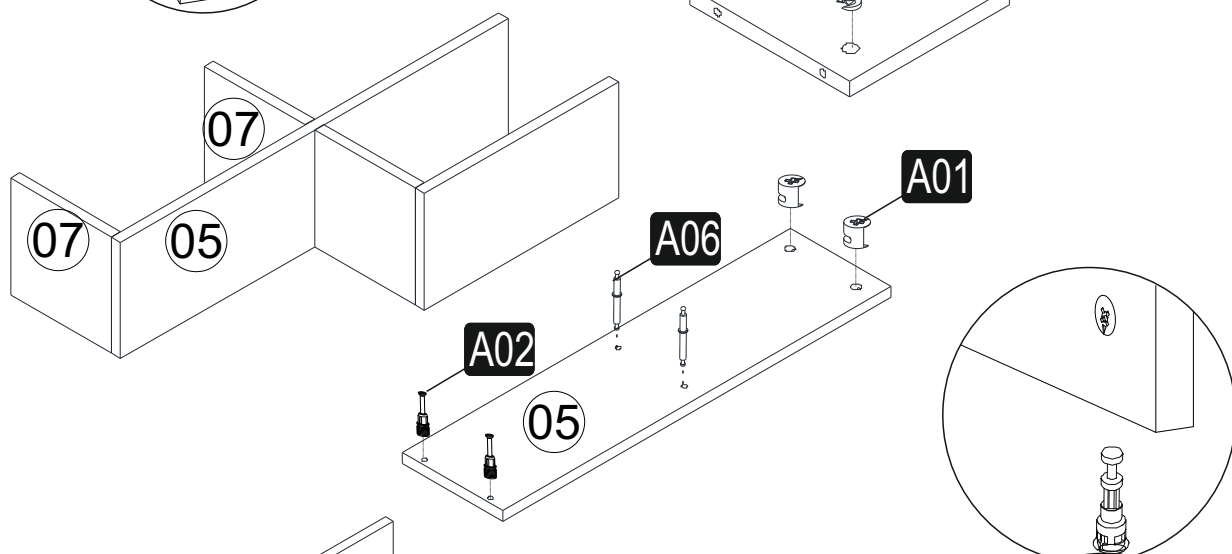


3

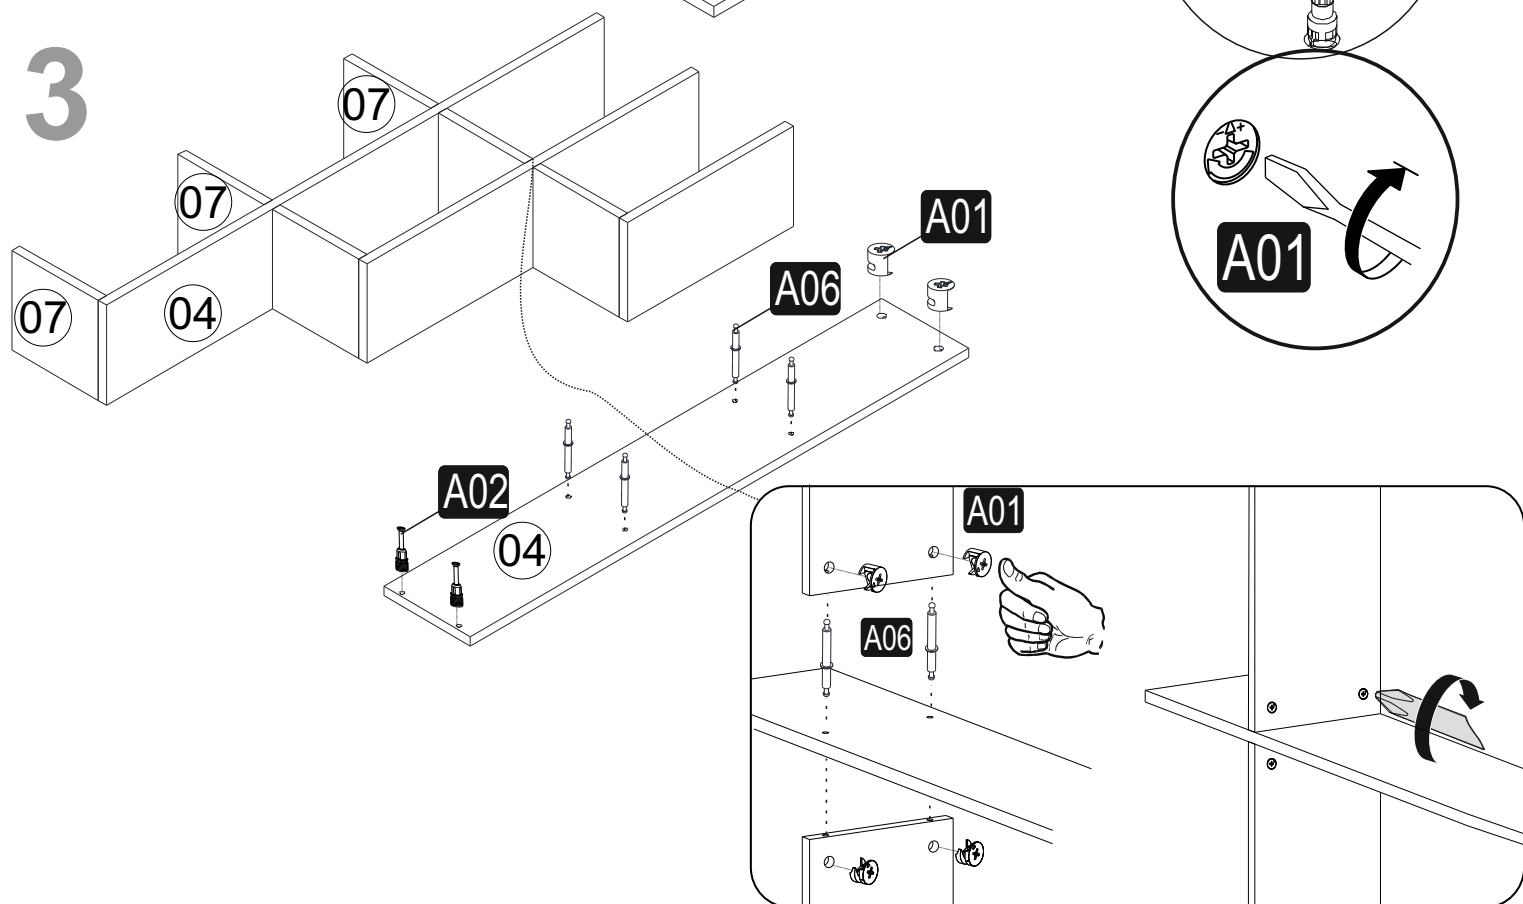


4

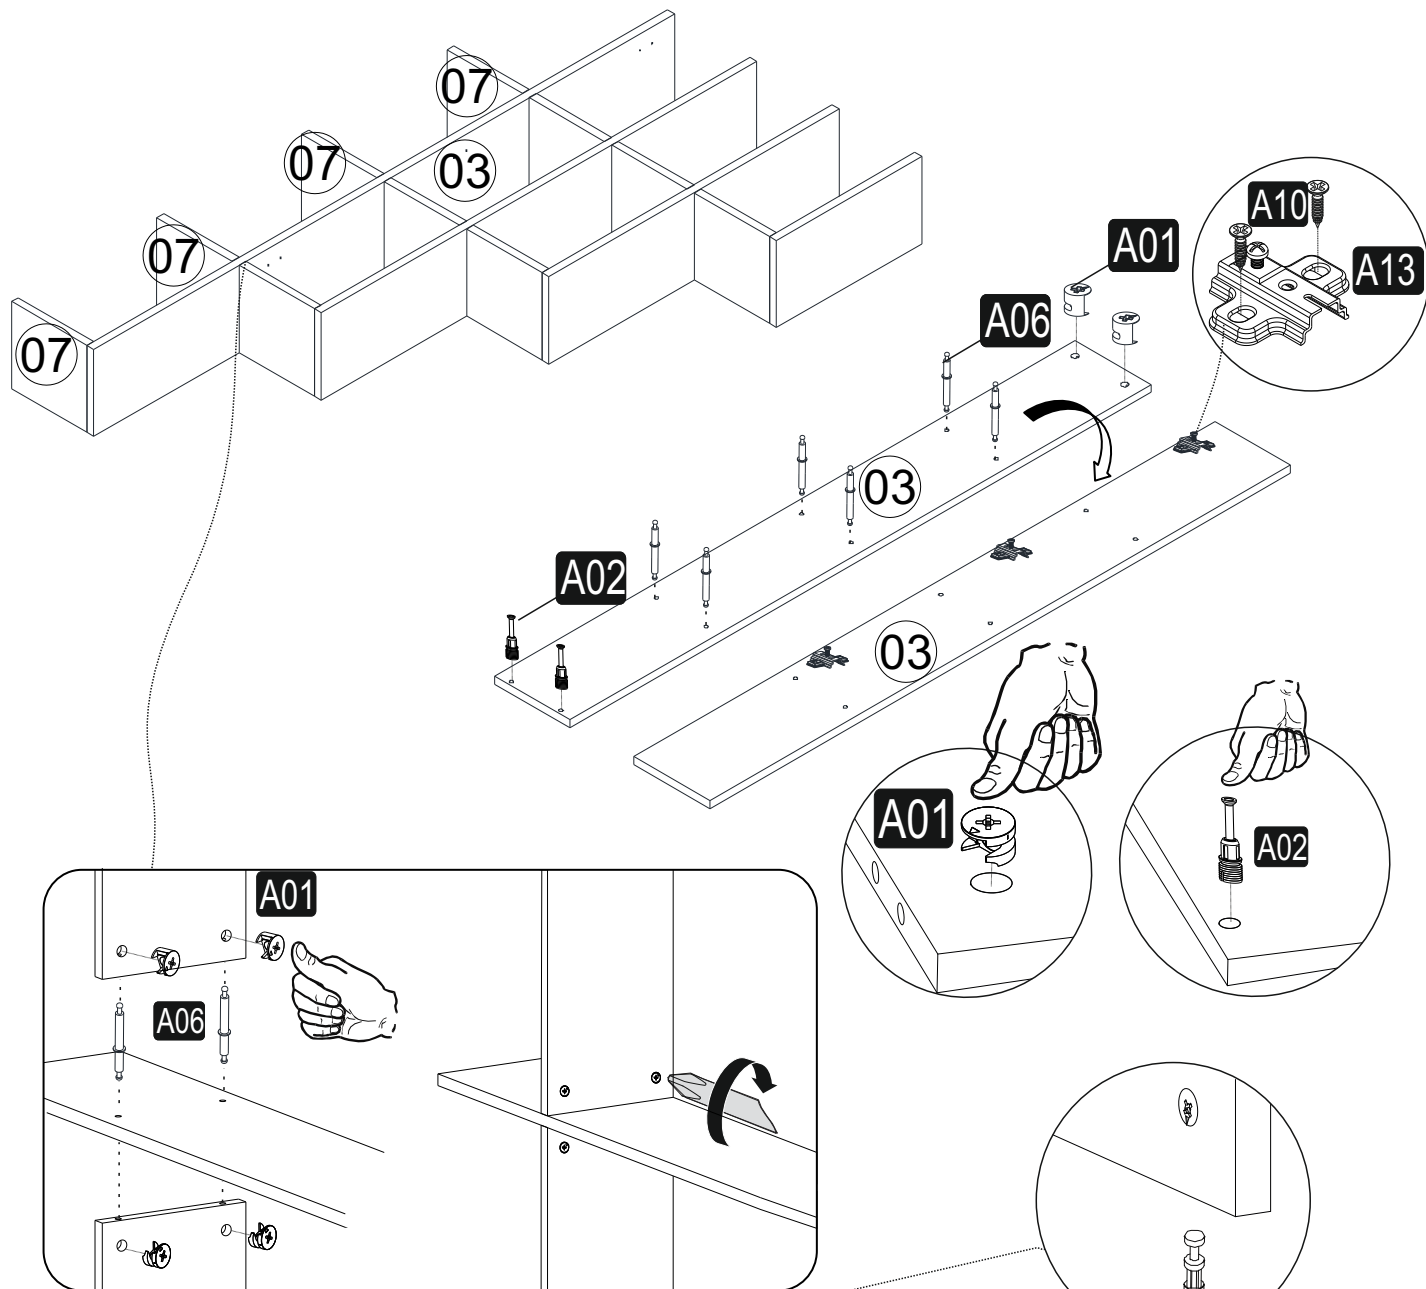


5

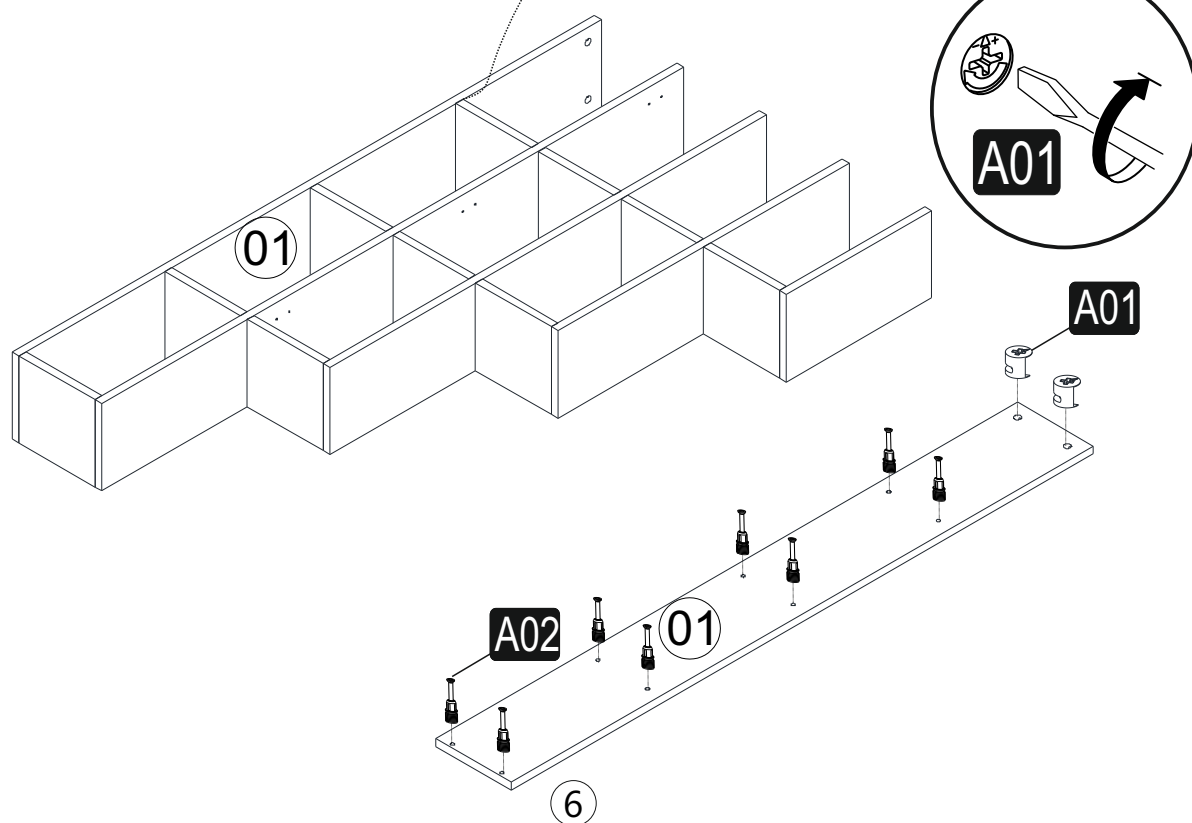


6

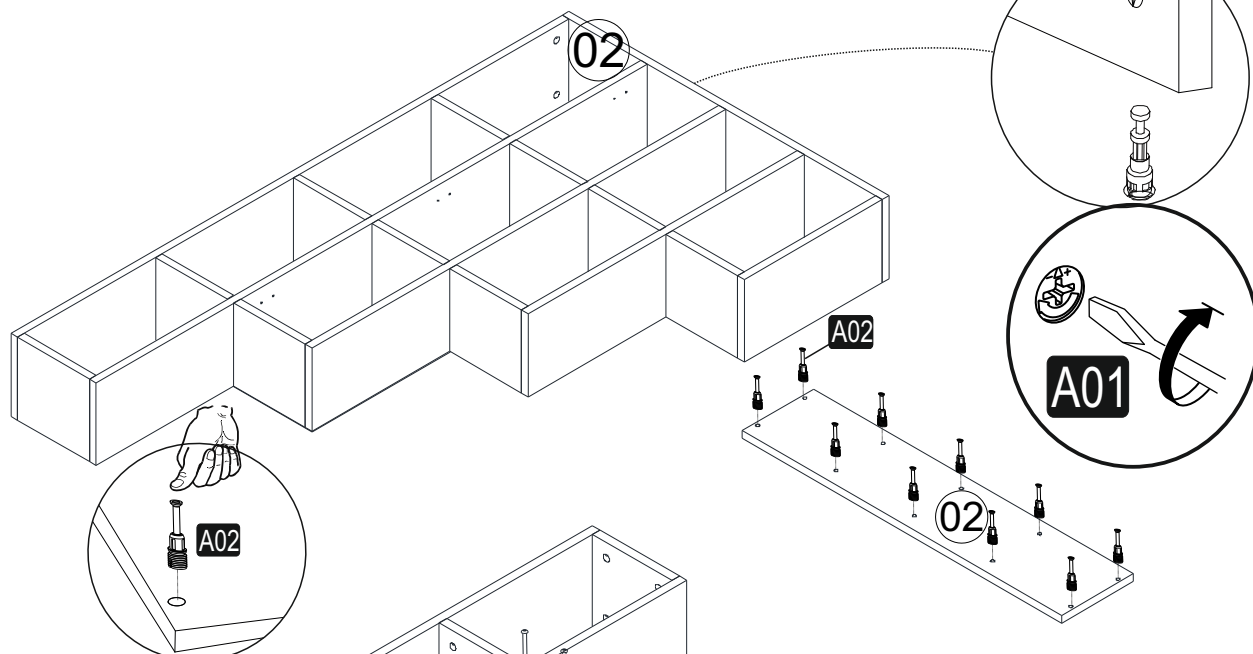

7

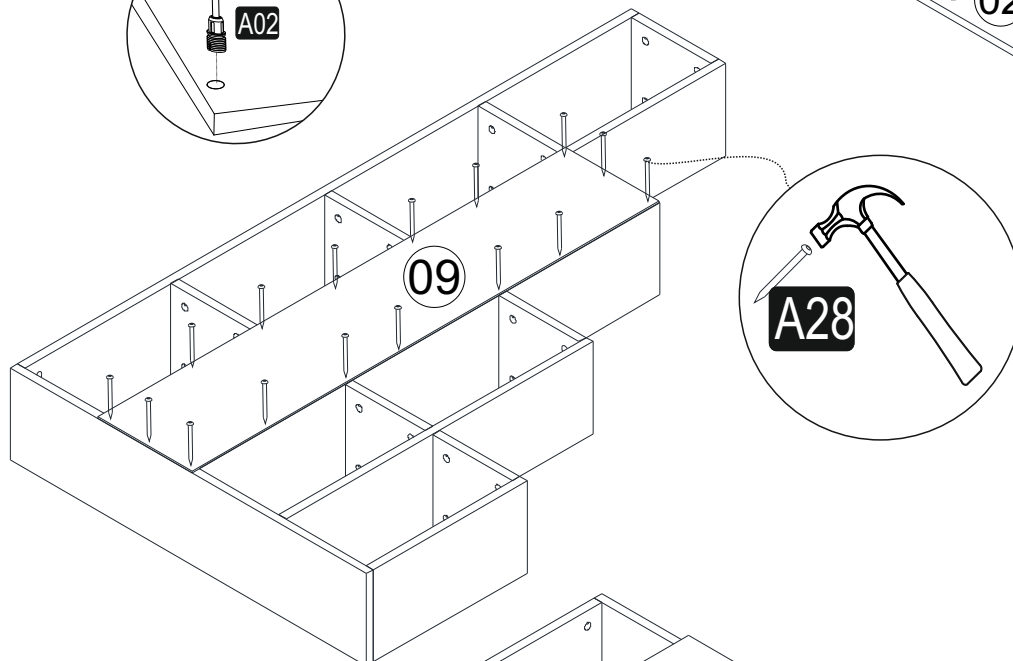

8

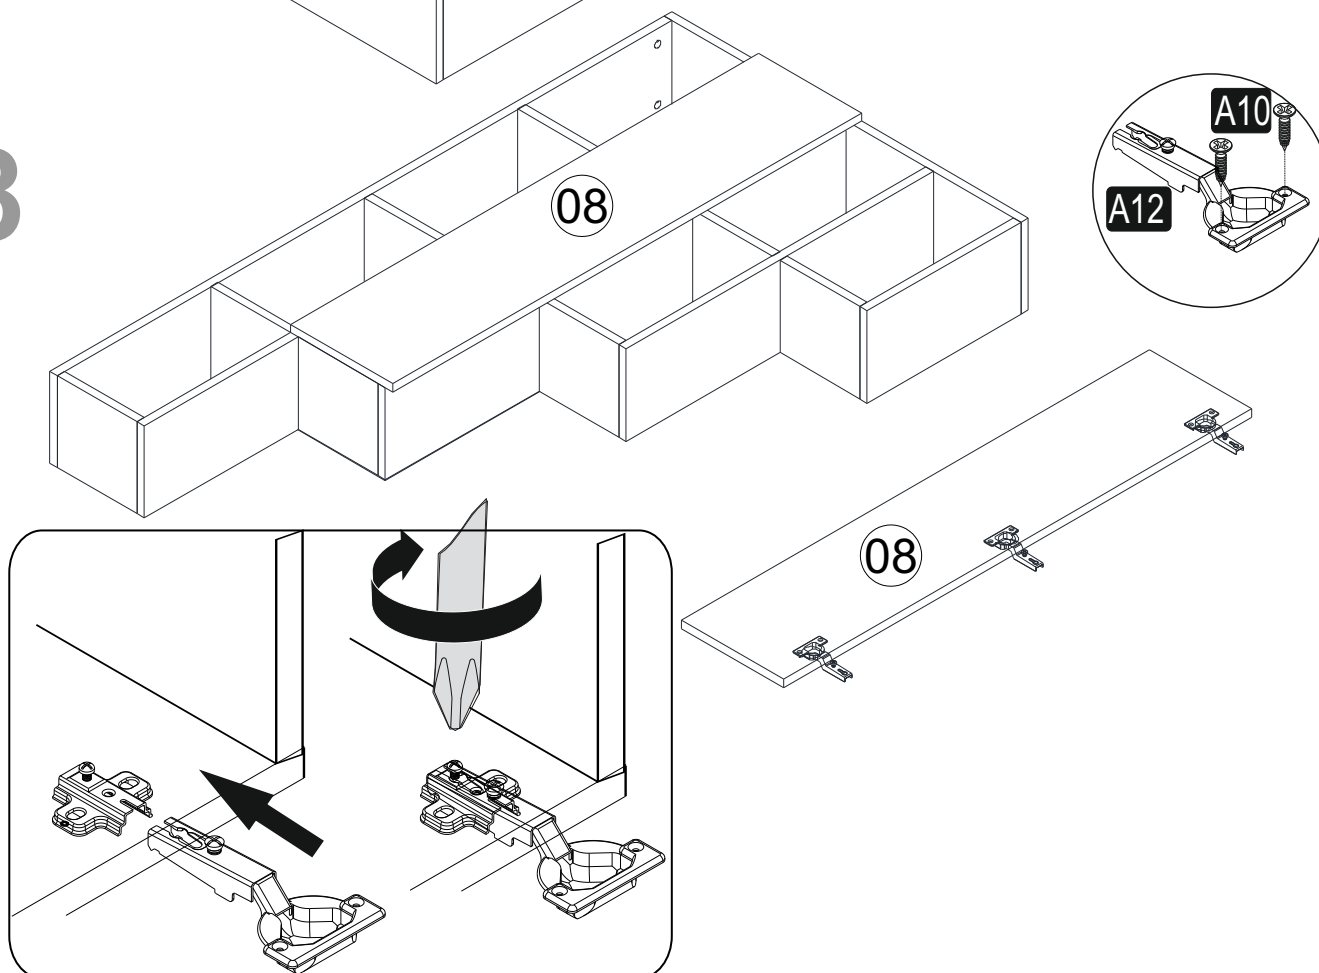

7

