



GP037-0070,1

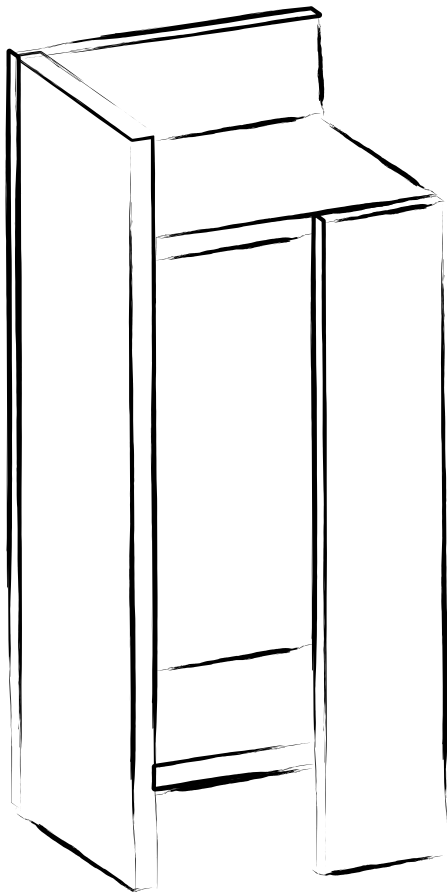


ATTENTION !!

Minifix is the main connection material used in our products.
Before starting assembly, please check the drawings below.

A04




A23

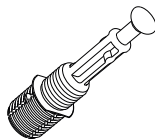


A22




A12

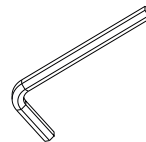


1

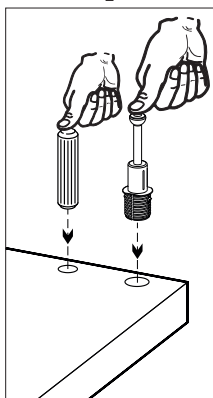


2

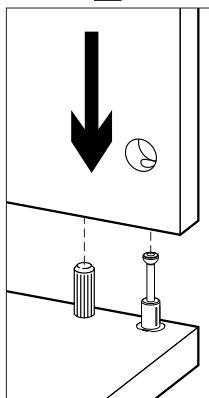

3

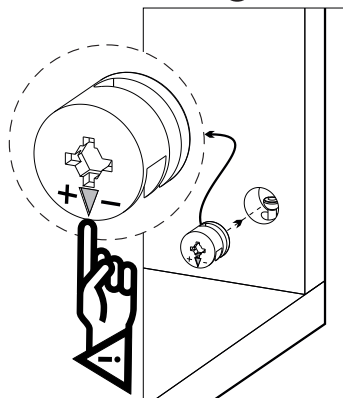


4

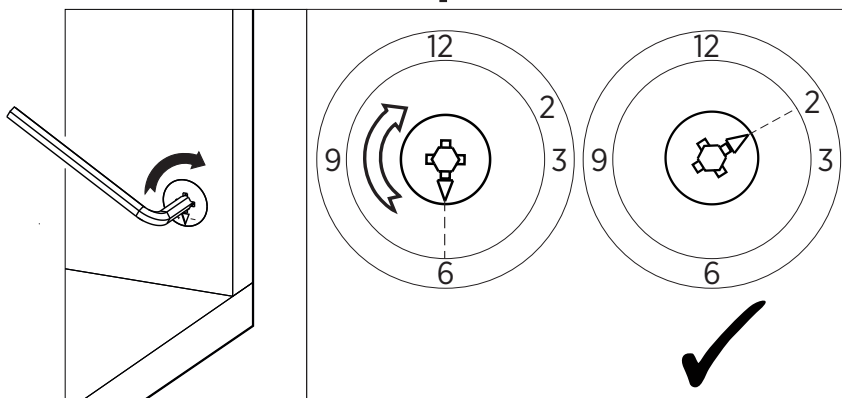

ATTENTION !!

Our products are screw system. Before you proceed with installation try to understand the following

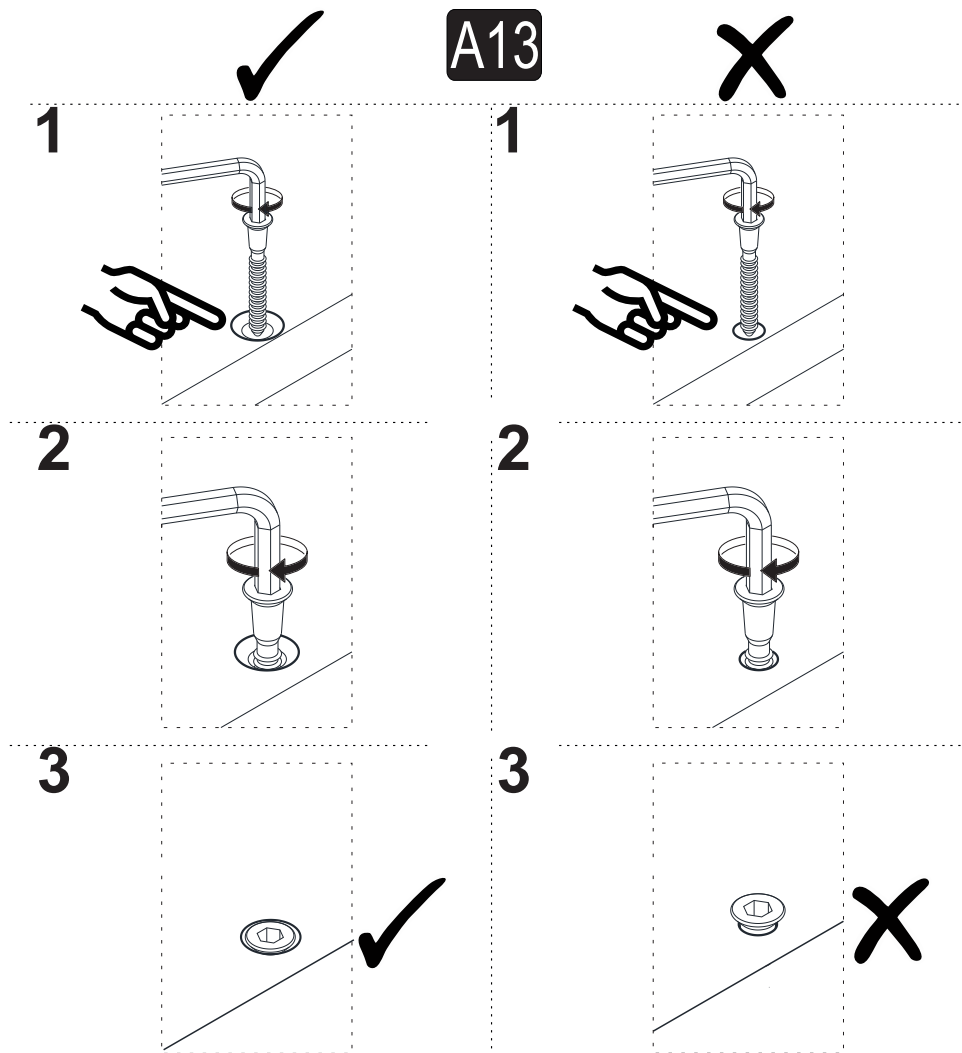


Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.





ACCESSORY LIST



A04  10x	A06 18mm  C1-15x Kece	A12 Minifix k18  1x	A13 50mm  3x	A22  12x
A23  12x	PB01  4x			

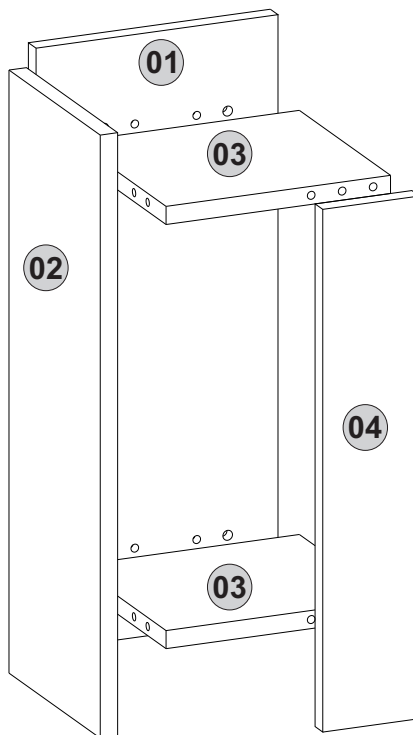




1. ^{step}

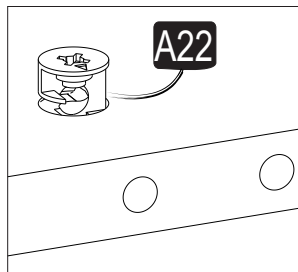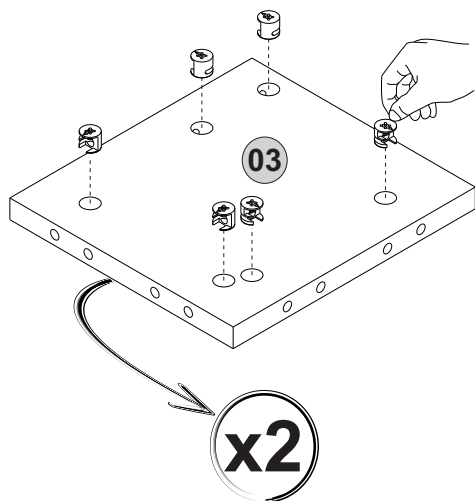



2. ^{step}

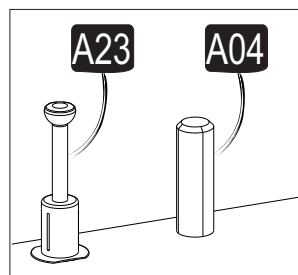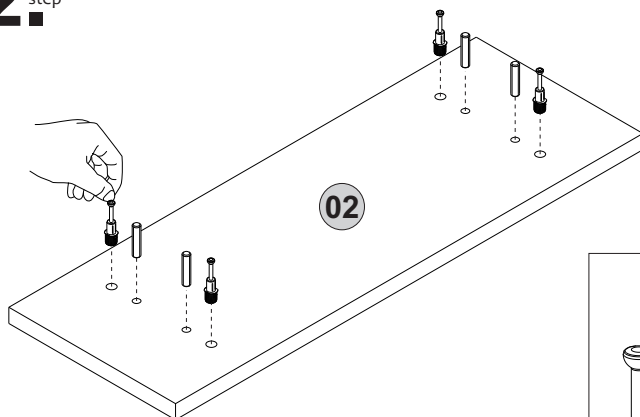




3 ^{step}

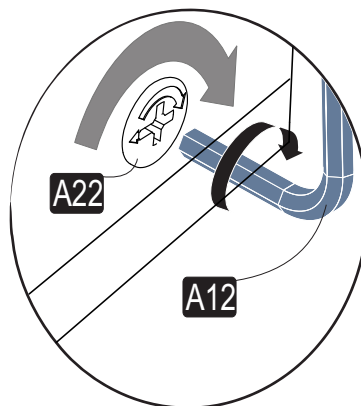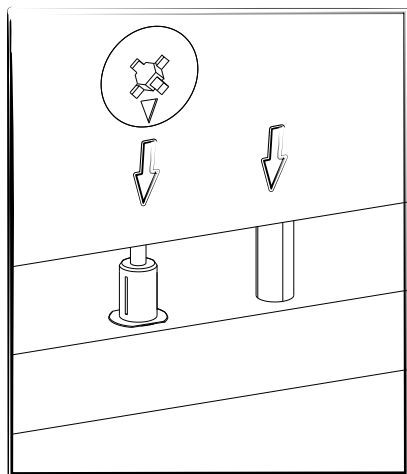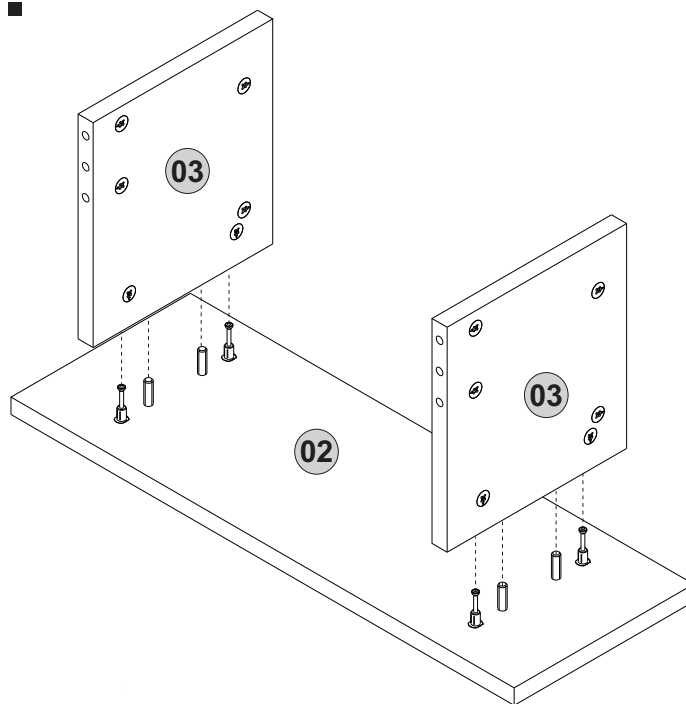


4. step

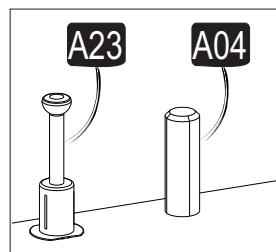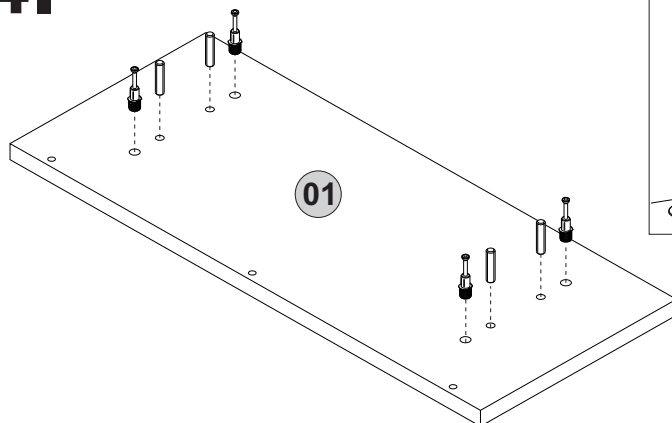



5. step

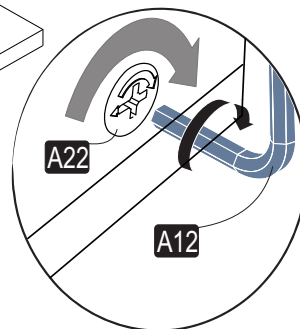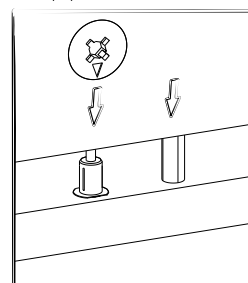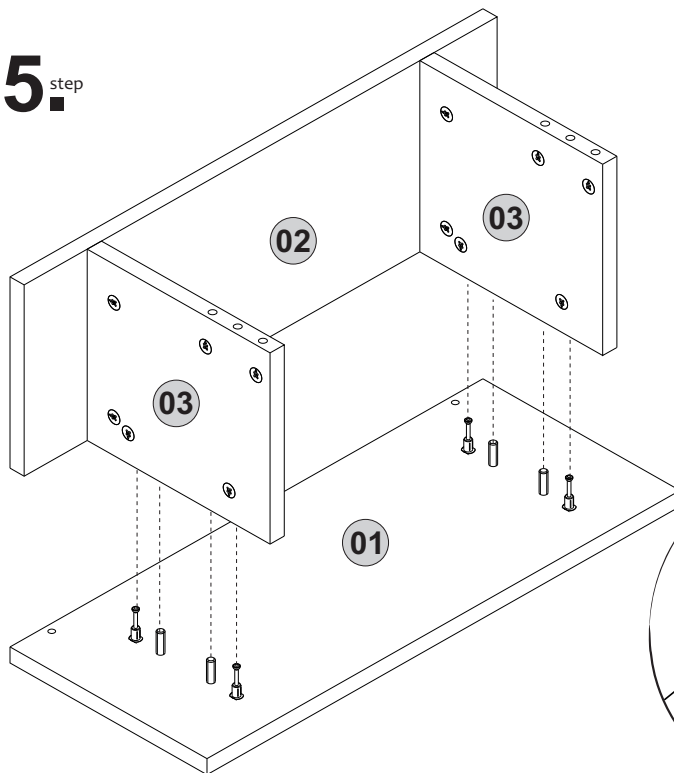




6^{step}

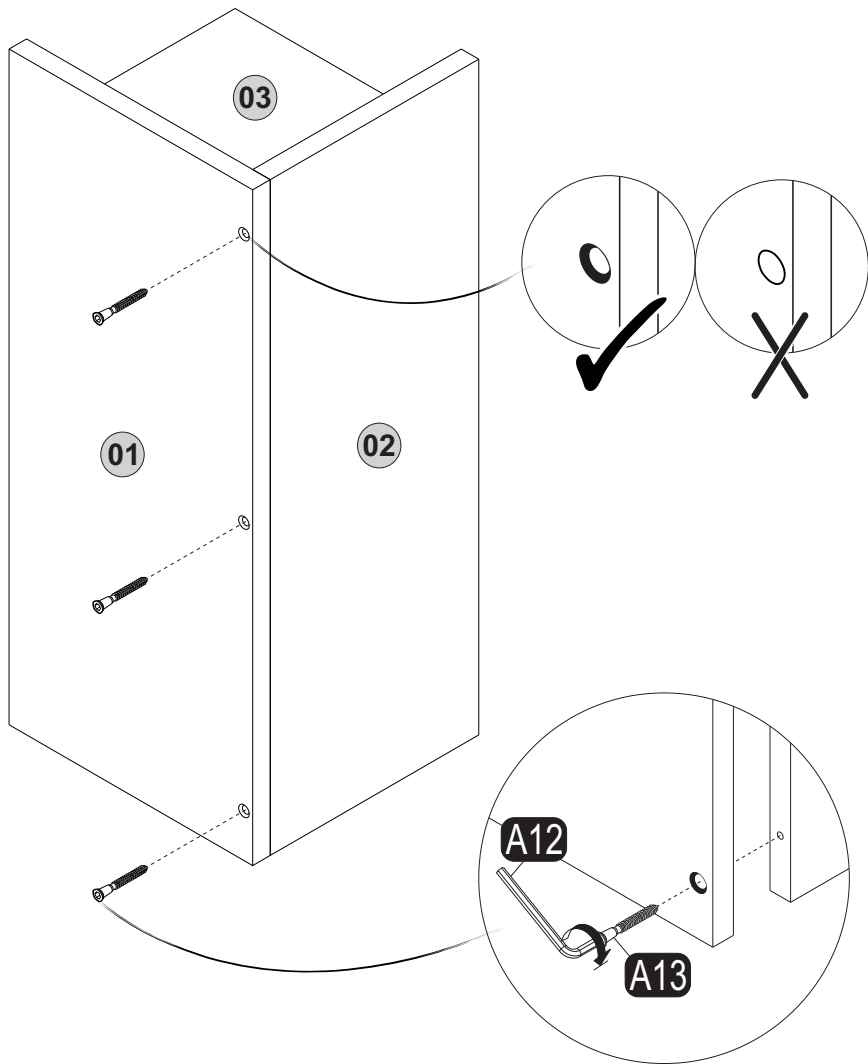


7^{step}

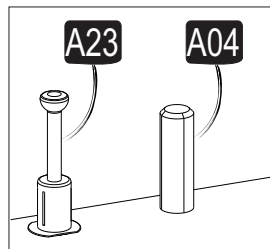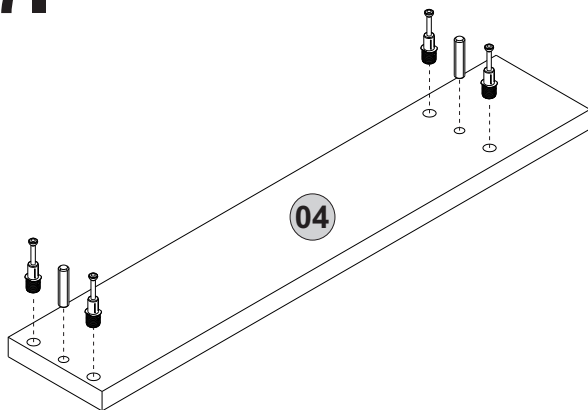

8^{step}

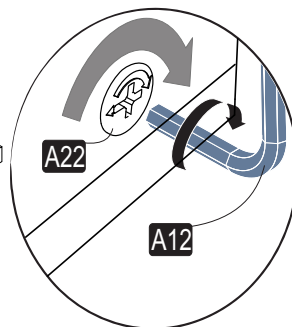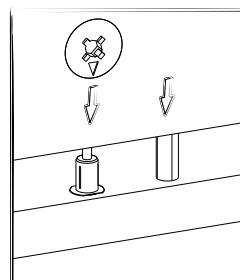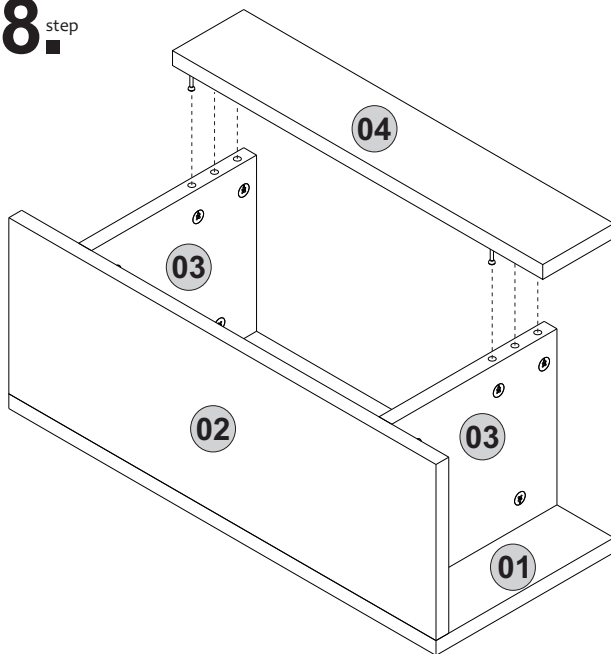

9.^{step}

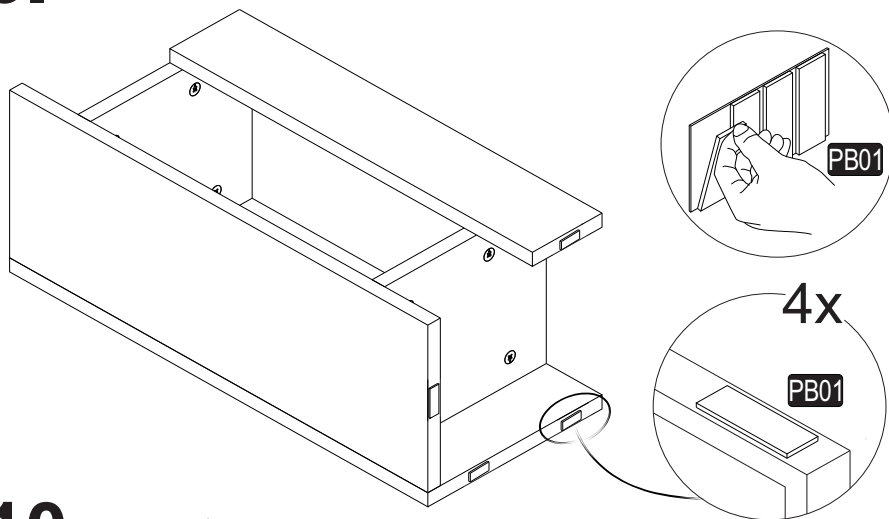

10.^{step}

