



GP037-0072,1

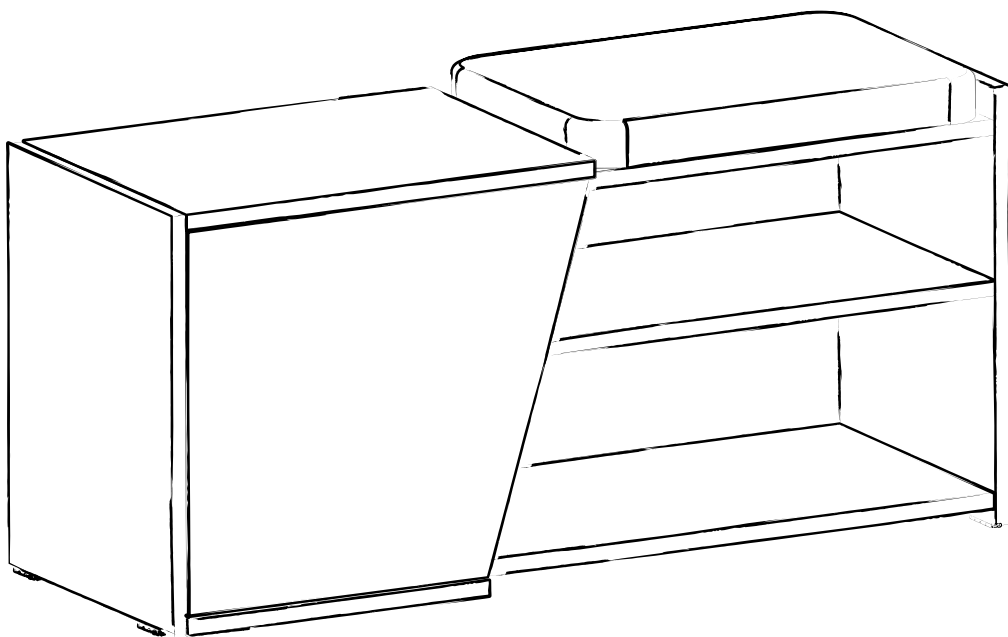


ATTENTION !!

Minifix is the main connection material used in our products.
Before starting assembly, please check the drawings below.

A04




A23

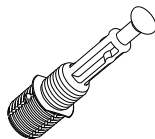


A22




A12

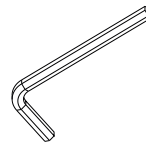


1

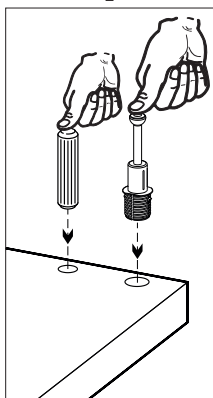


2

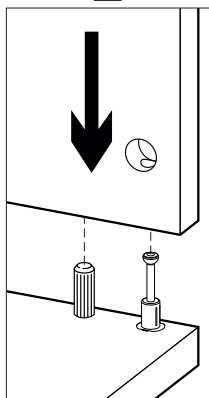

3

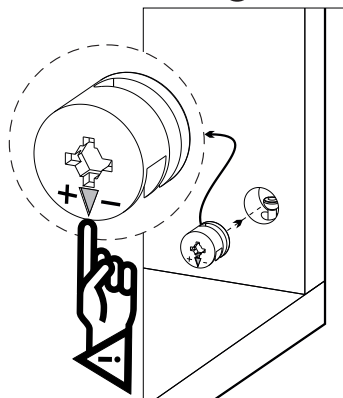


4

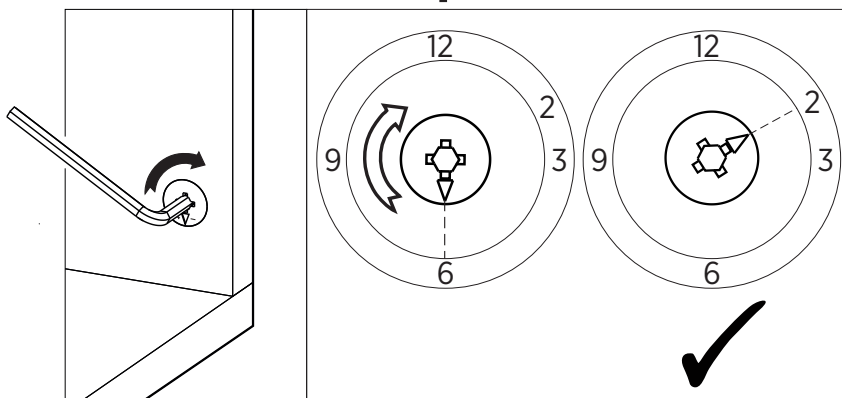

ATTENTION !!

Our products are screw system. Before you proceed with installation try to understand the following

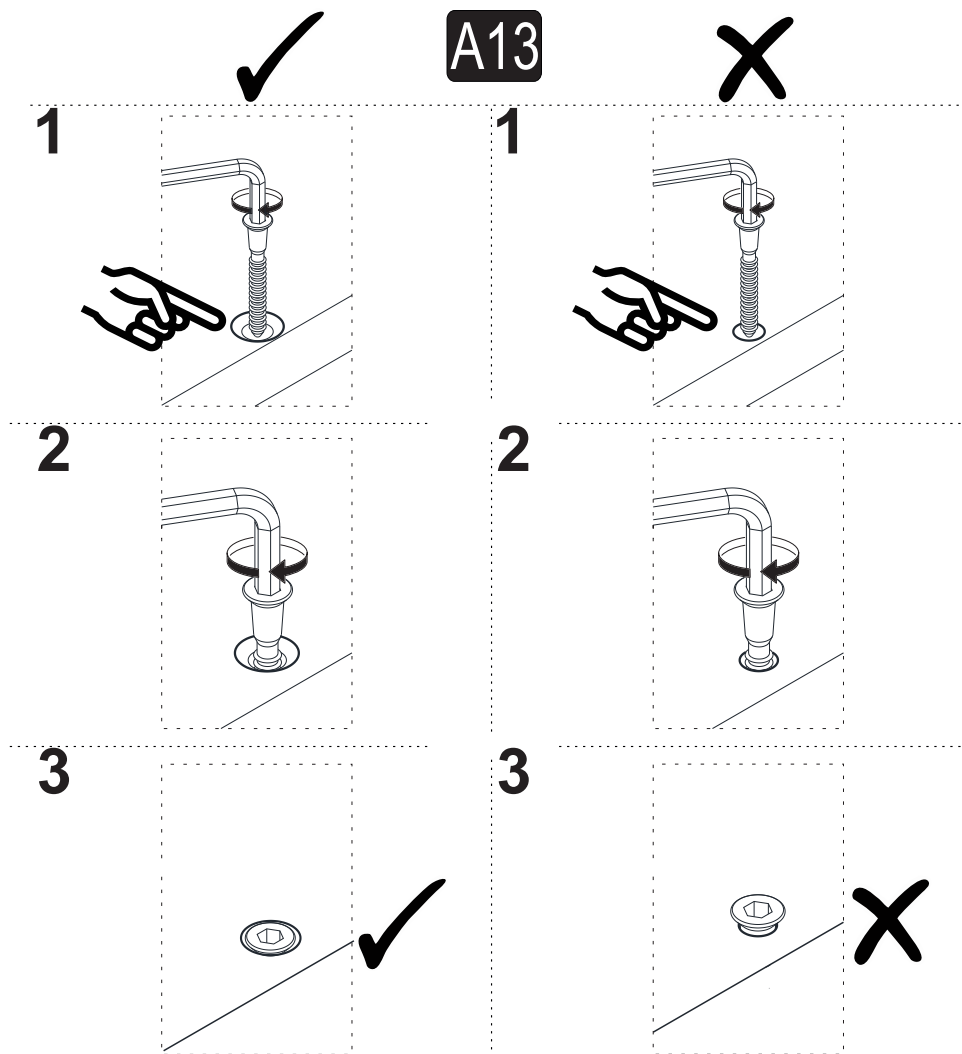


Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.




ACCESSORY LIST


A04 Ø8 16x	A06 18mm C1-16x C2-8x	A12 Allen 1x	A14 DFM6-86 2x	A18 3,5x18 16x
A22 Minifix k18 20x	A23 Minifix M10 16x	A25 ARK.PL 4x	A41 Ø8 2x	A48 Raf Pimi 6x
A69 P.D. 4x	B03 25 mm 4x	C16 Sdb(S) 1x	C19 SdbF(S) 1x	C20 Mtk(S) 2x
Mattress 500x350x50 1x	PB01 Kece 6x			

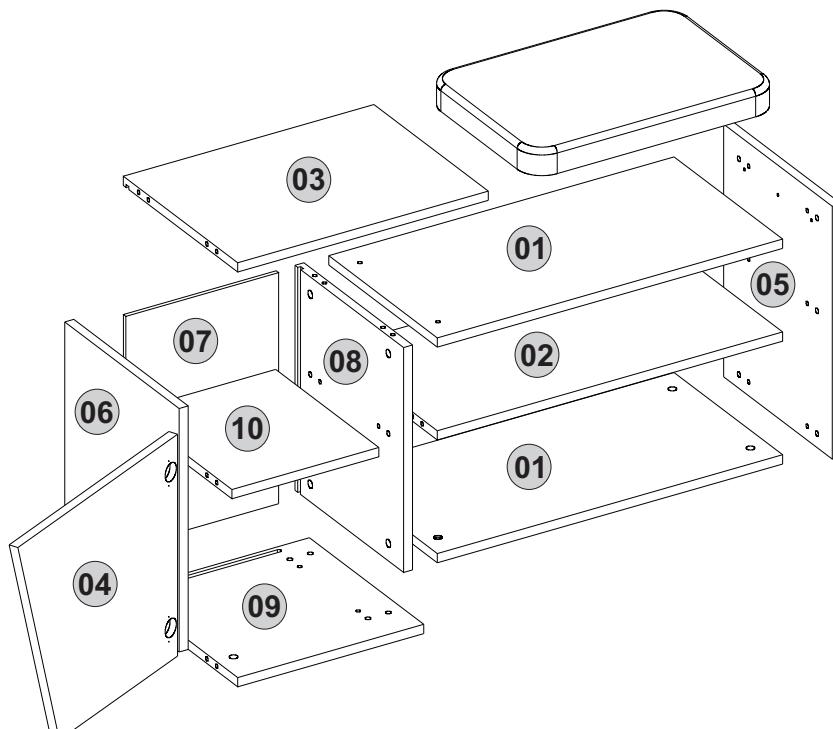


1. step

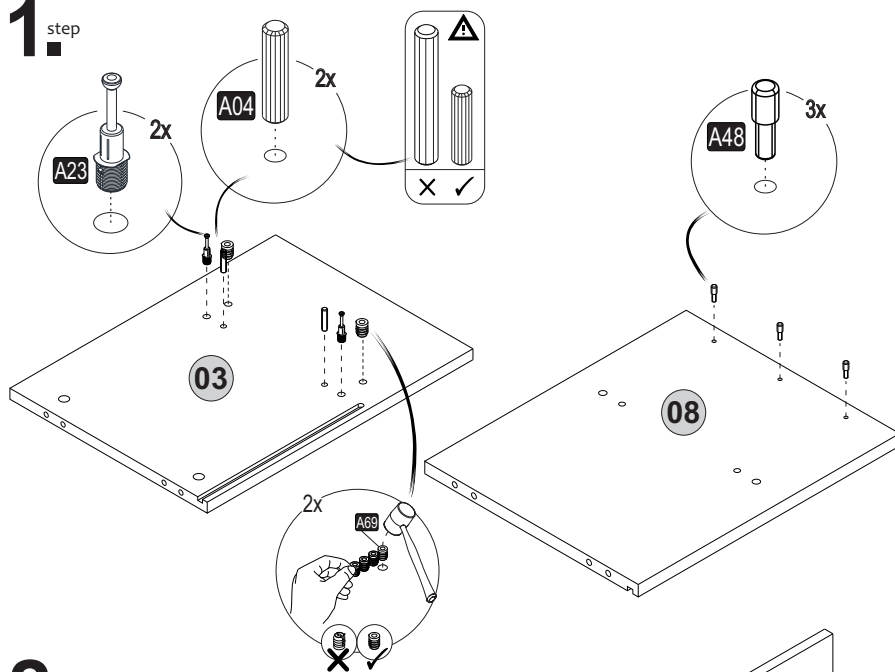


2. step

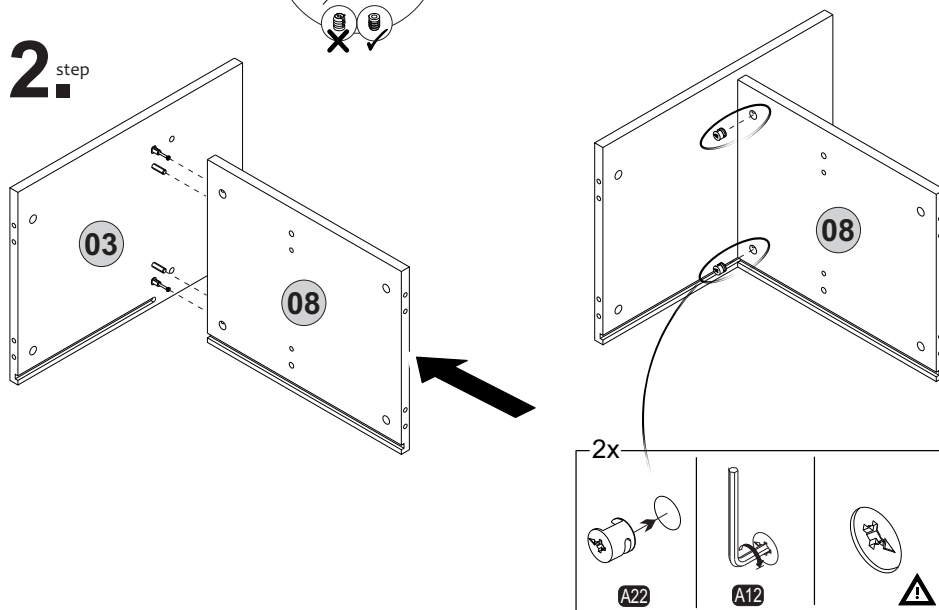


3 ^{step}

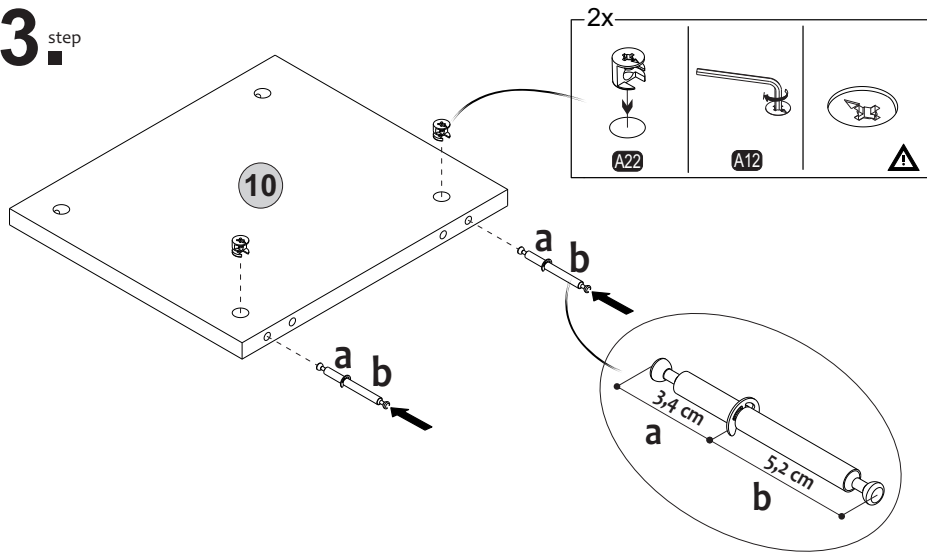


4 ^{step}

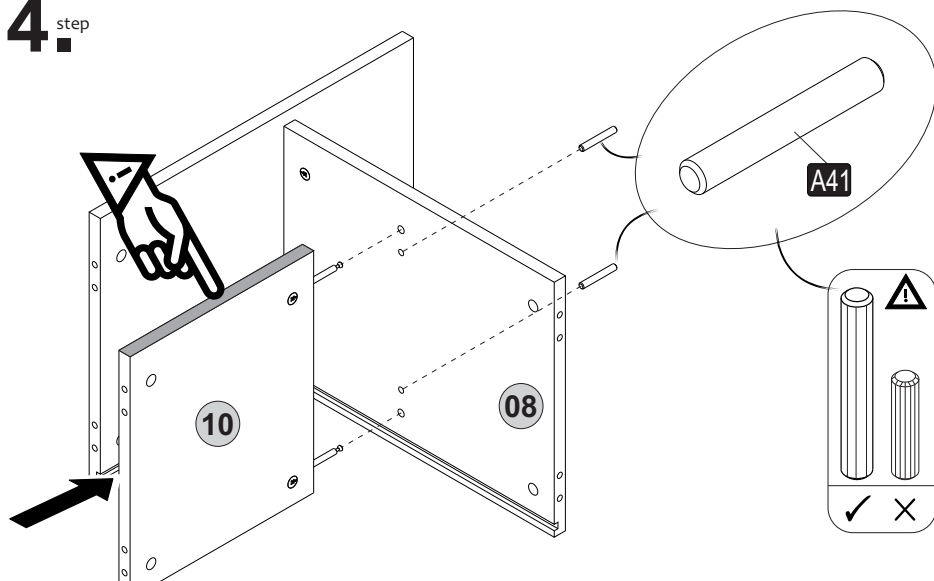


5.^{step}

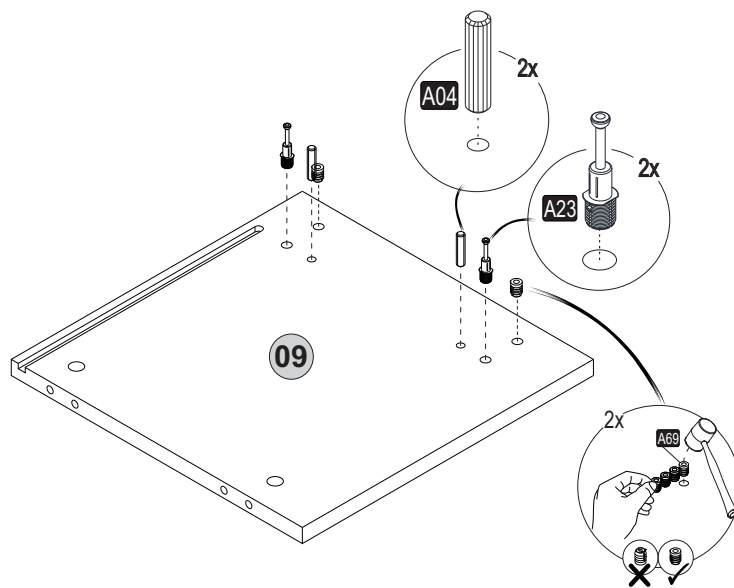


6.^{step}

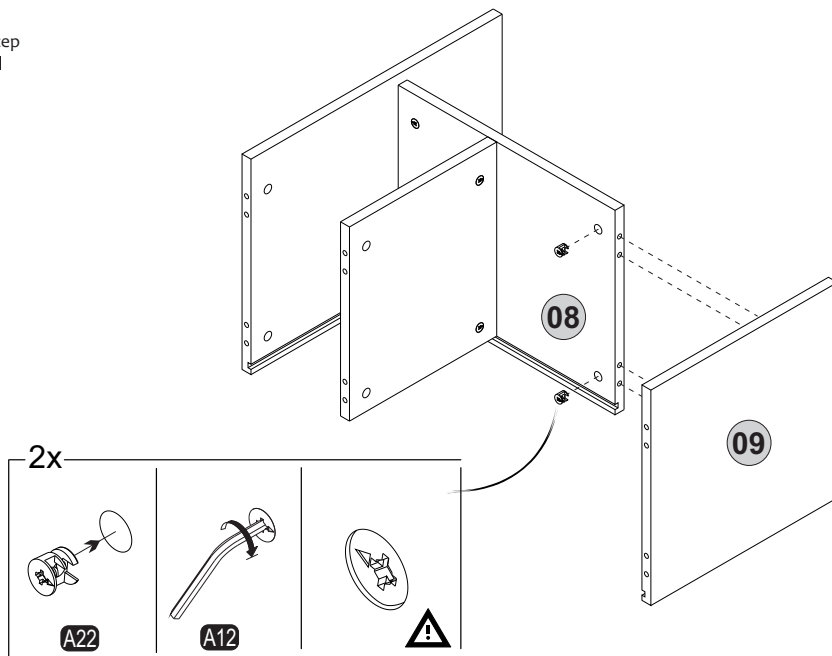


7^{step}

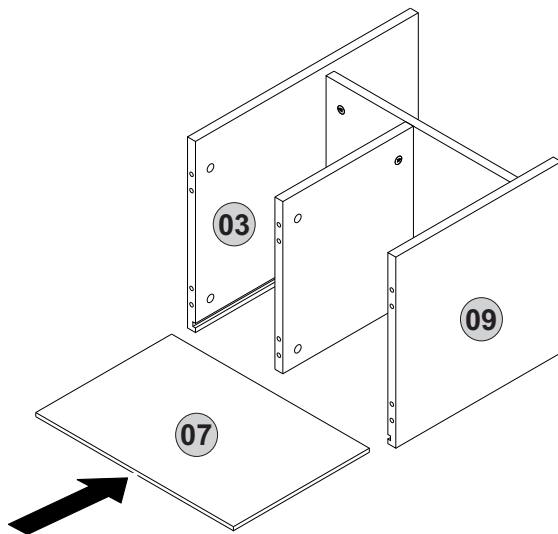


8^{step}

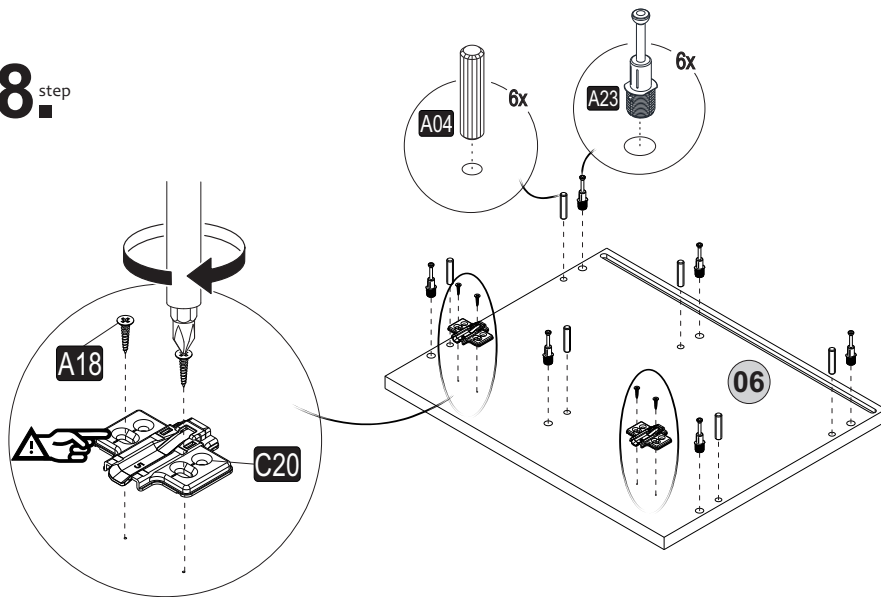


9.^{step}

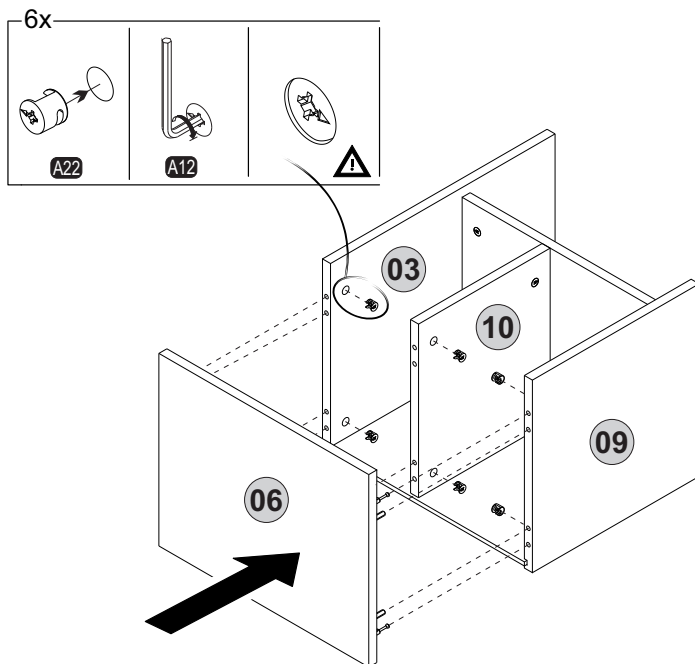


10.^{step}

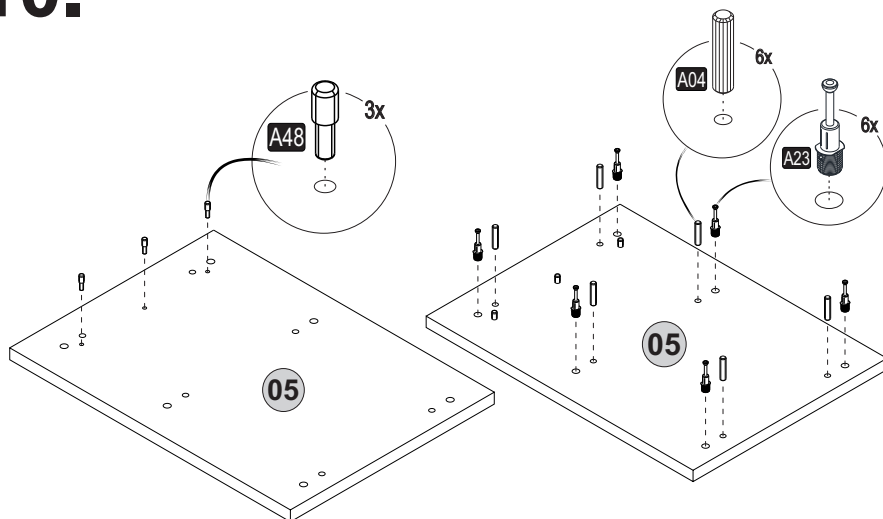


11. step

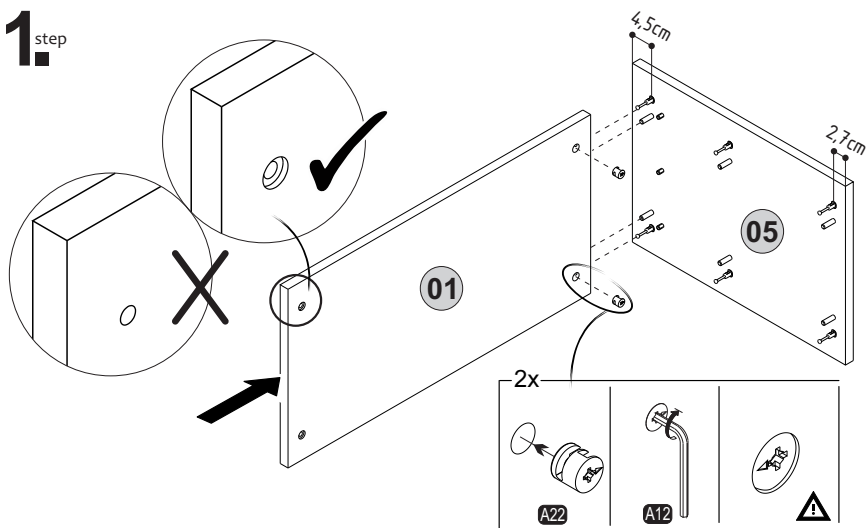


12. step

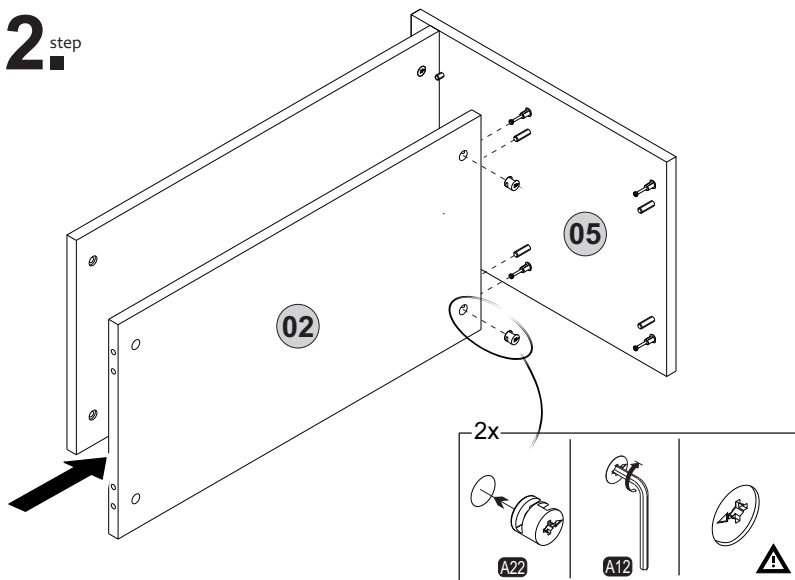


13.^{step}

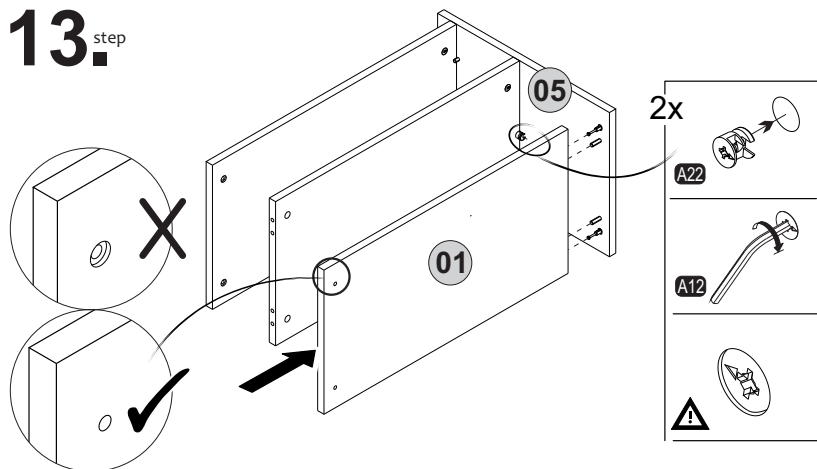


14.^{step}

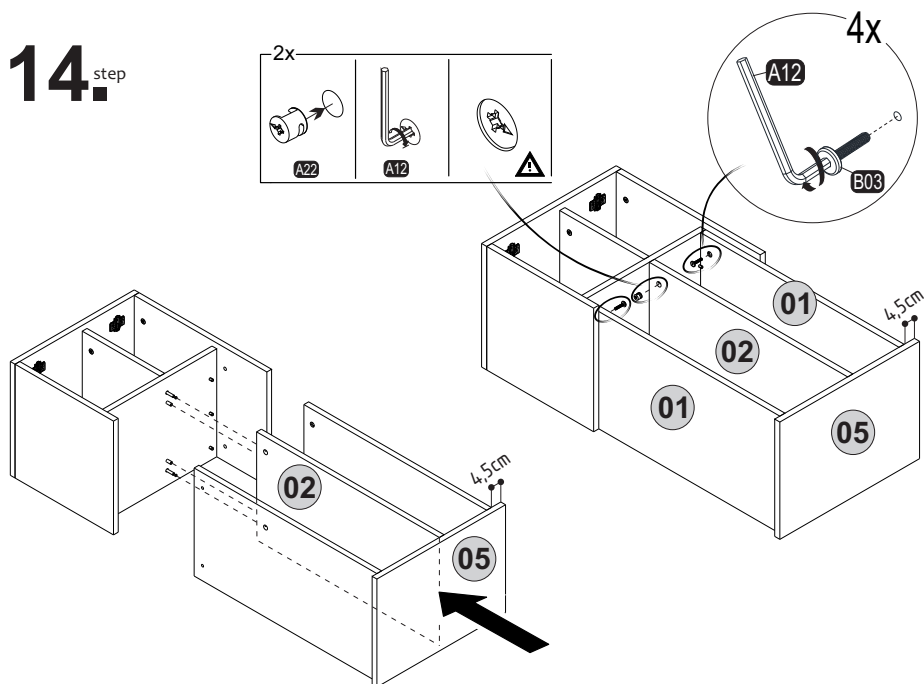




15._{step}

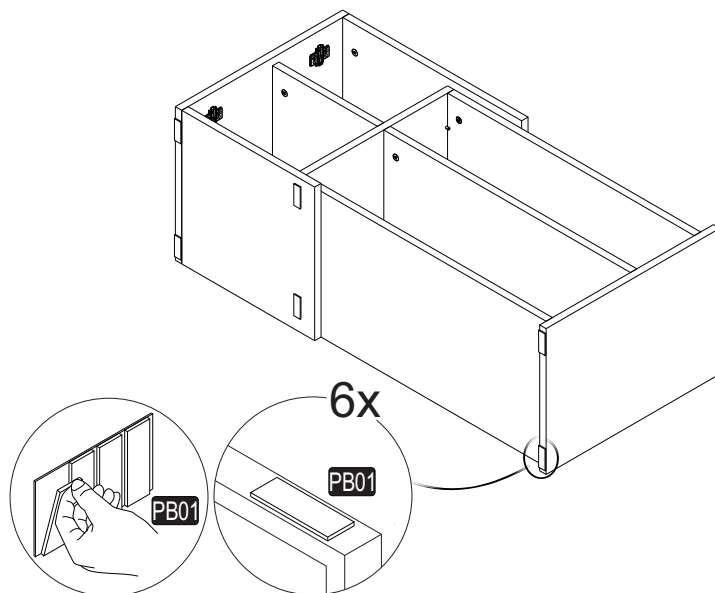


16._{step}

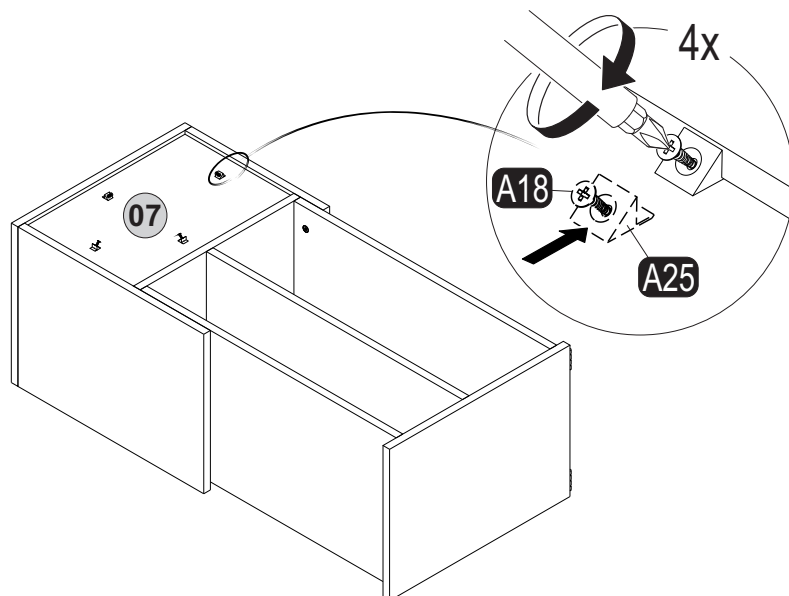


17. step

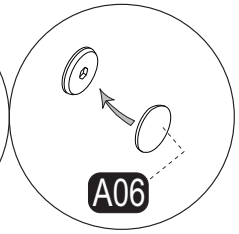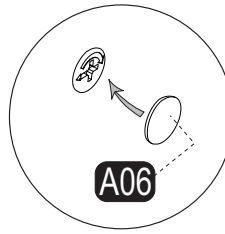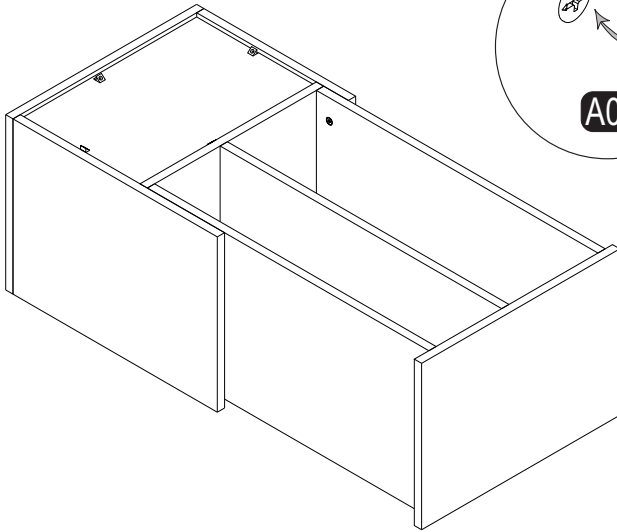





18. step

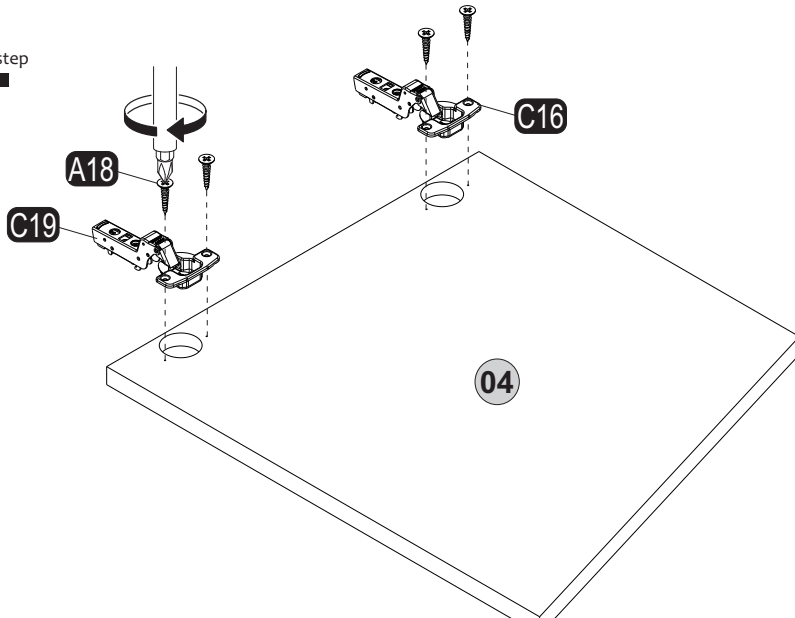

19.^{step}

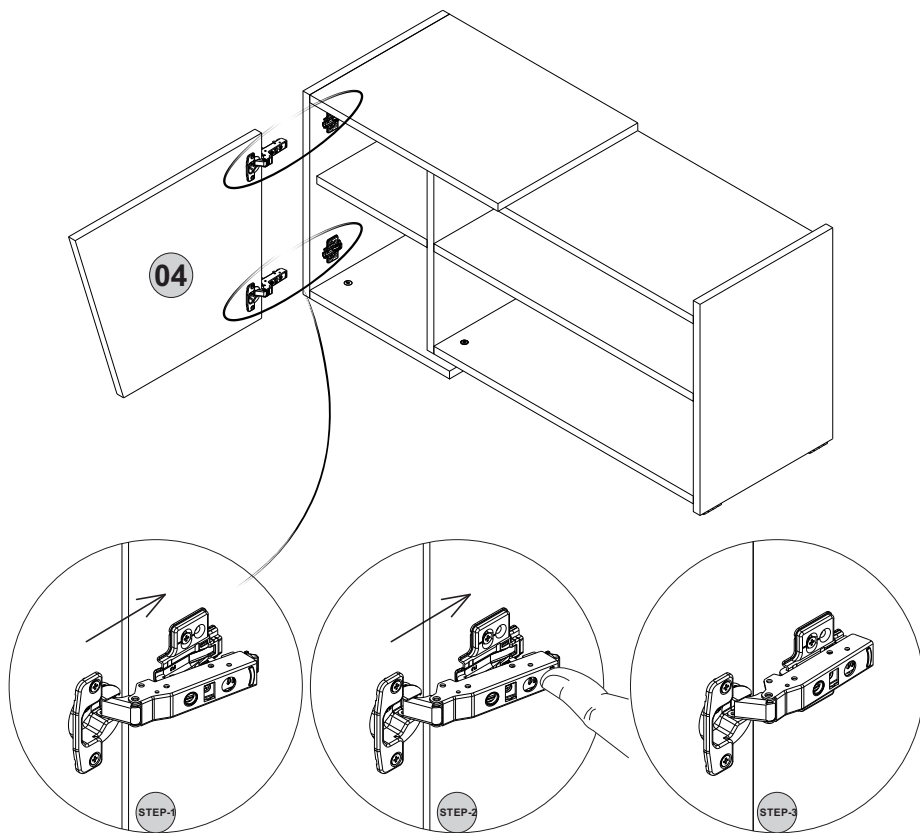

20_{step}

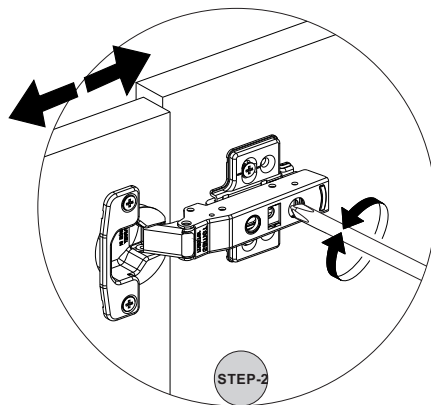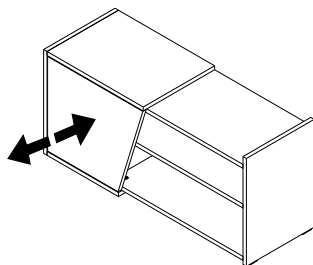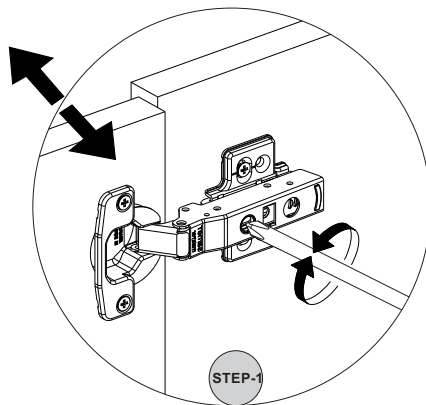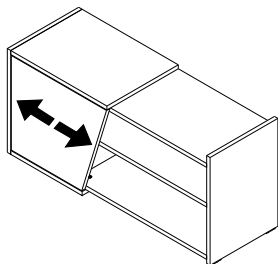

21.^{step}

