



GP037-0102,3

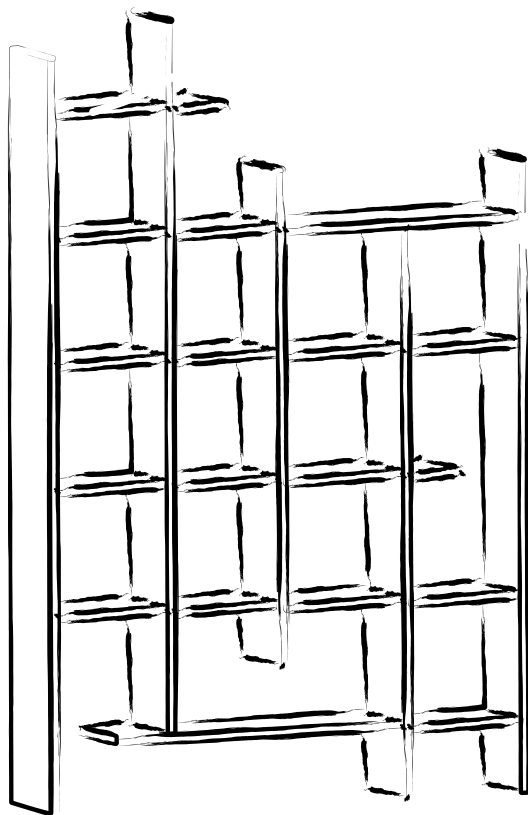


ATTENTION !!

Minifix is the main connection material used in our products.
Before starting assembly, please check the drawings below.

A04




A23

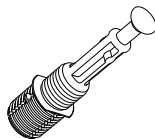


A22




A12

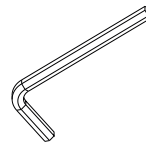


1

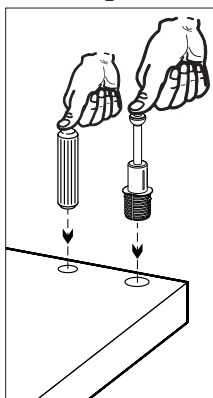


2

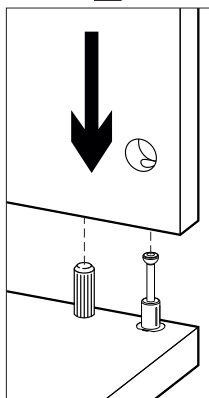

3

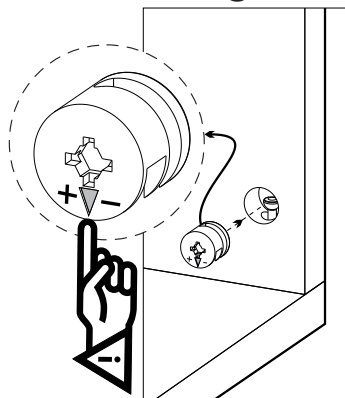


4

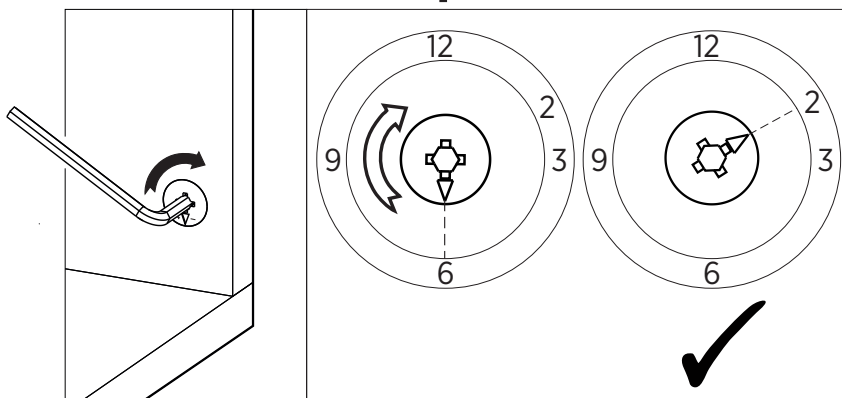





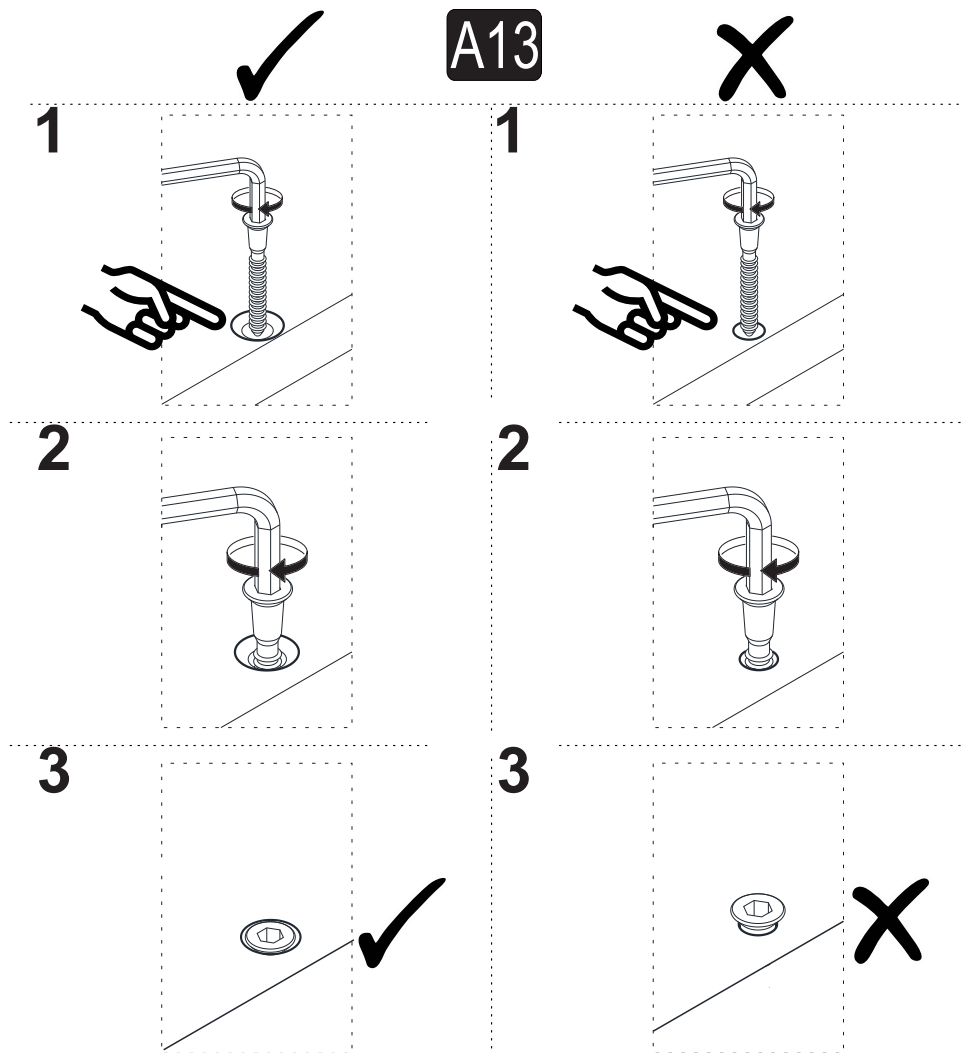




ATTENTION !!


Our products are screw system. Before you proceed with installation try to understand the following





Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.

ACCESSORY LIST


A06  18mm 54x 3,5x18	A12  4 sw 1x Allen	A13  50mm 54x 15x90x30	A16  DbØ8 1x Kece	A17  4x50 1x
A18  2x	A26  1x	A87  1x	PB01  6x	

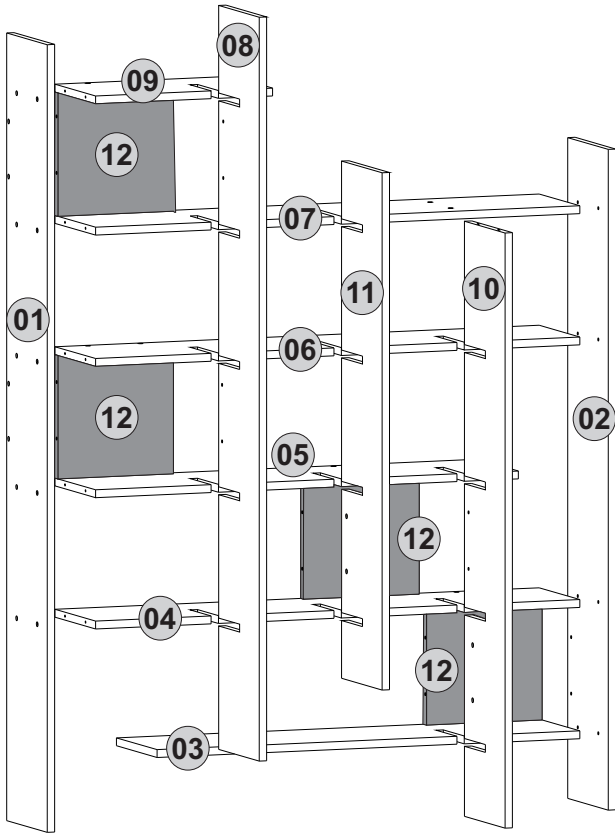


1.step

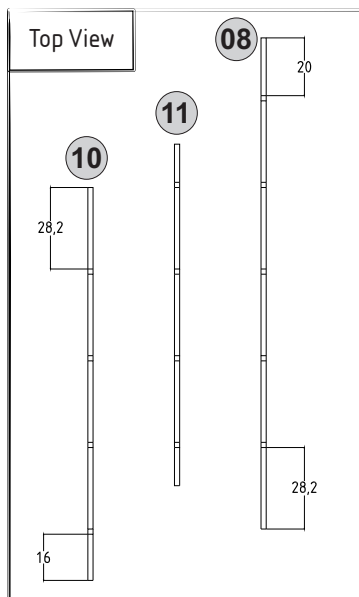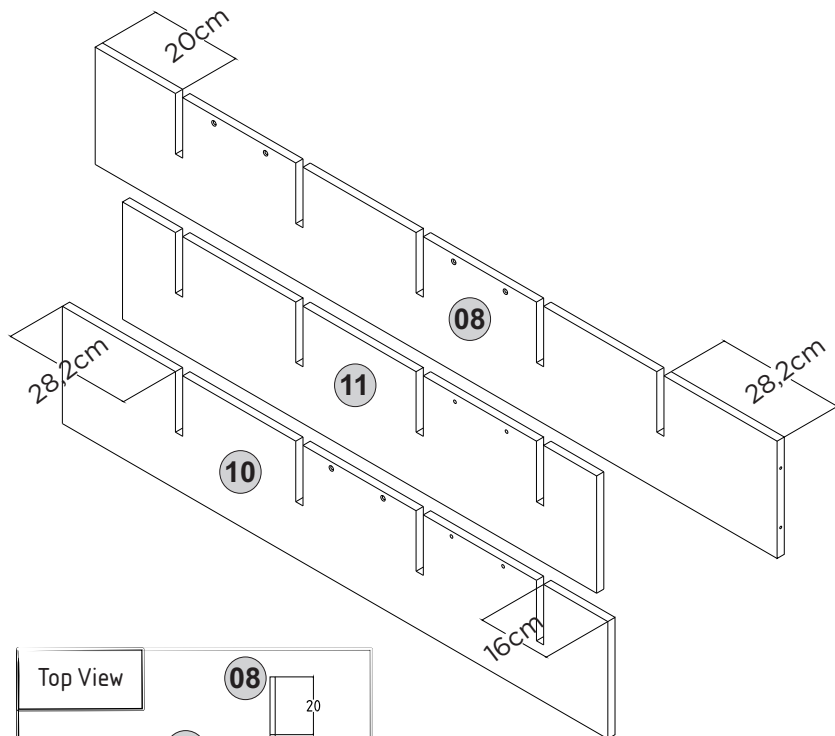


2. step

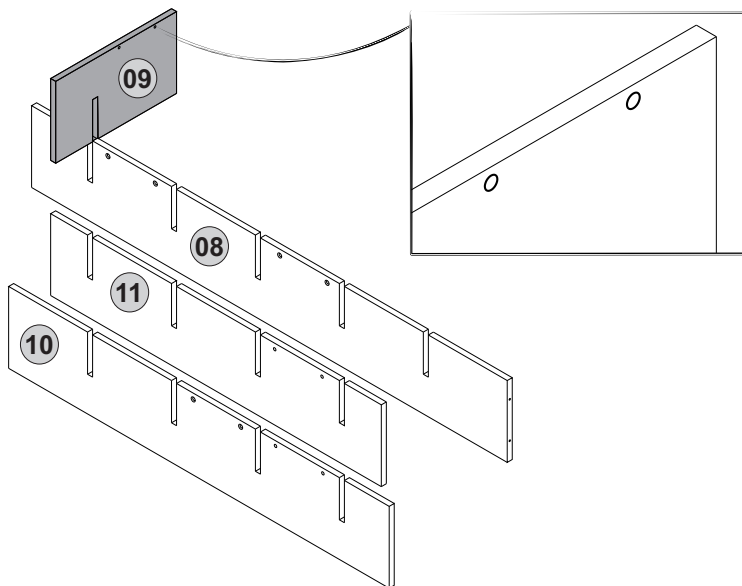


3. step

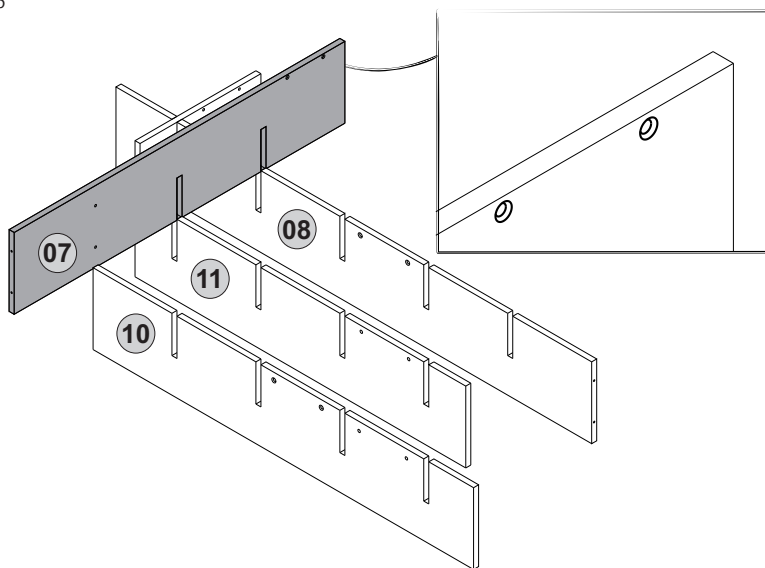


4.step

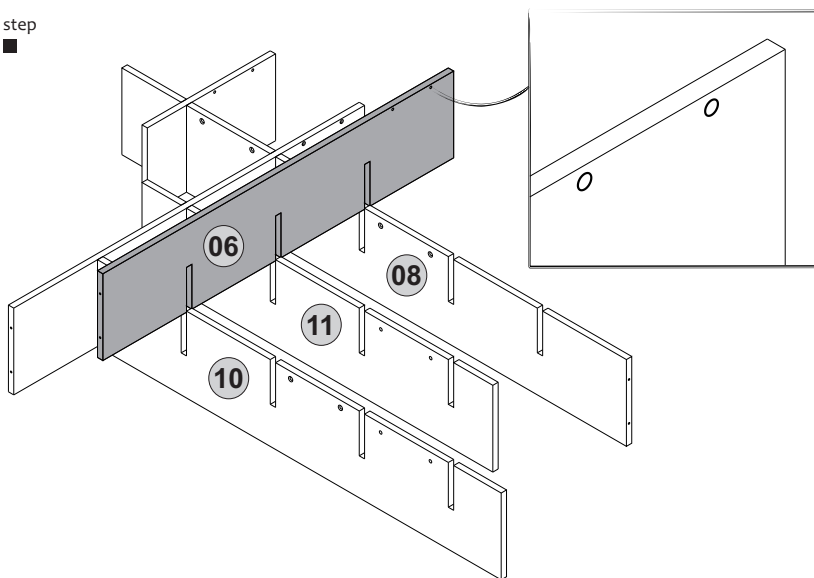


5.step

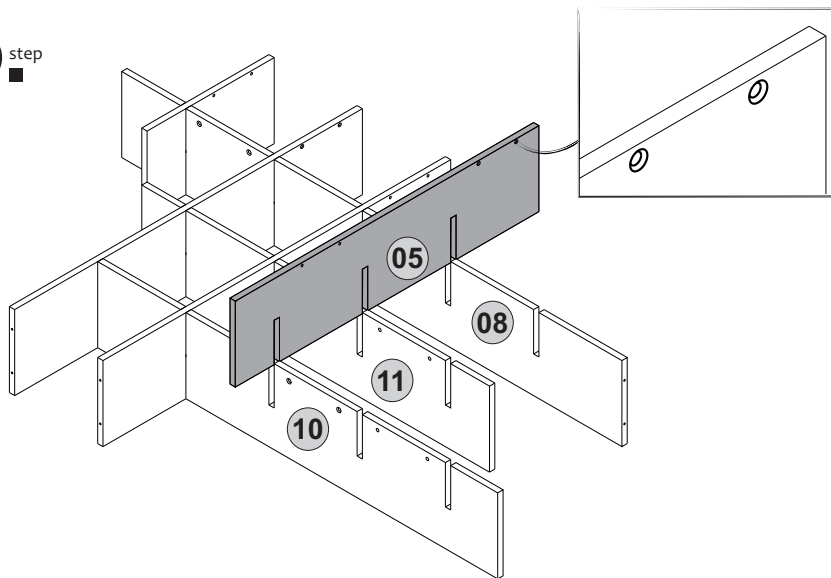


6. ^{step}

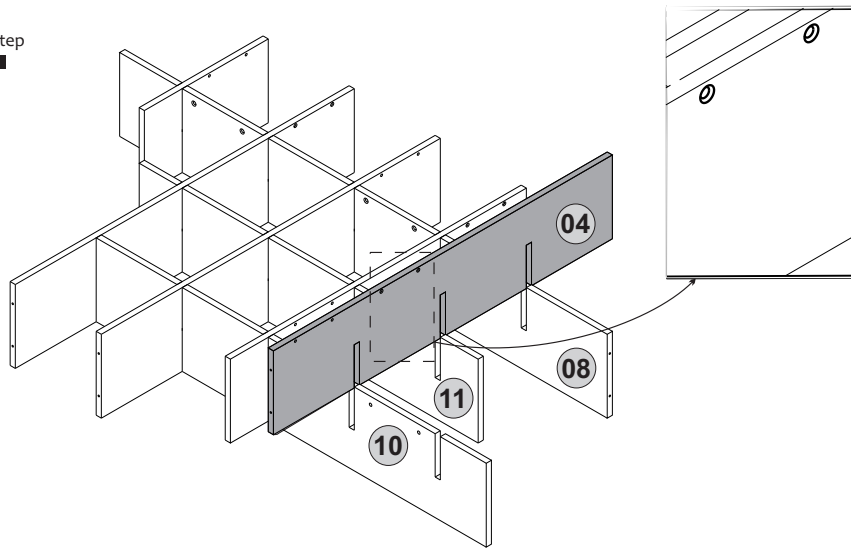


7. ^{step}

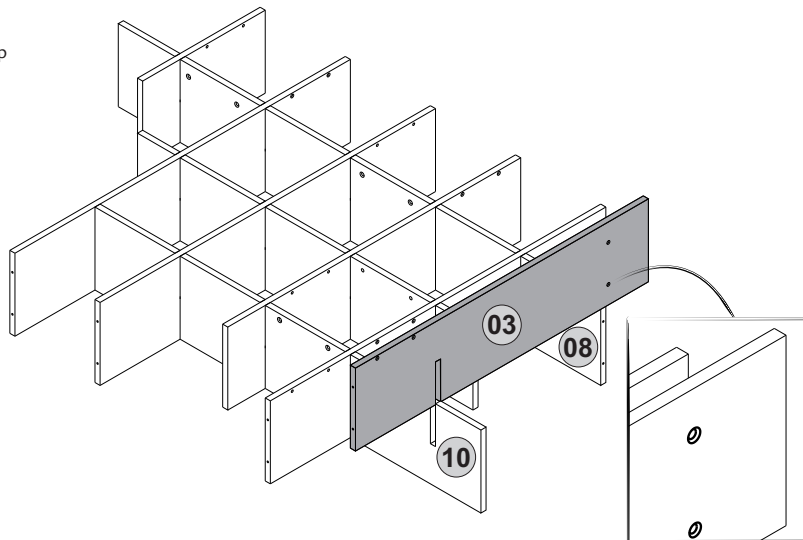


8._{step}

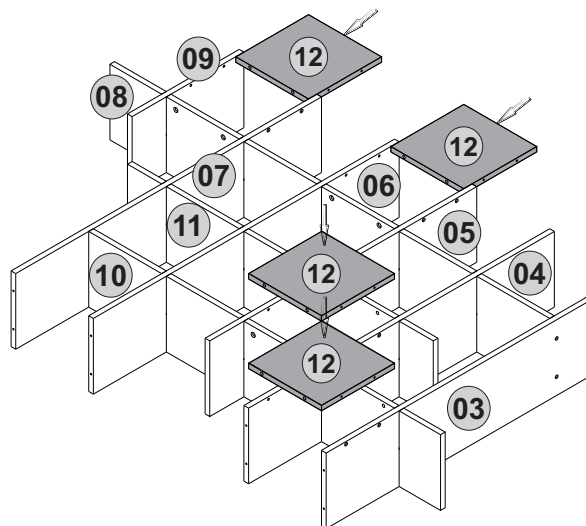


9._{step}

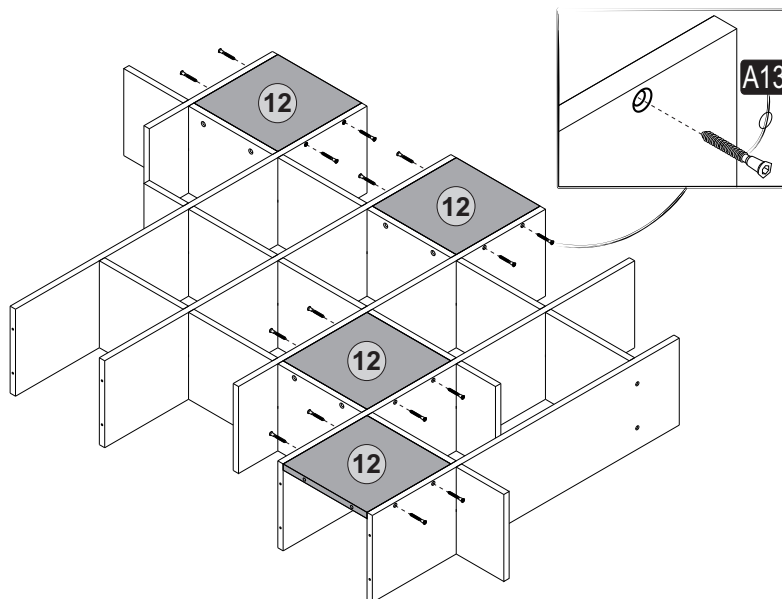




10.^{step}

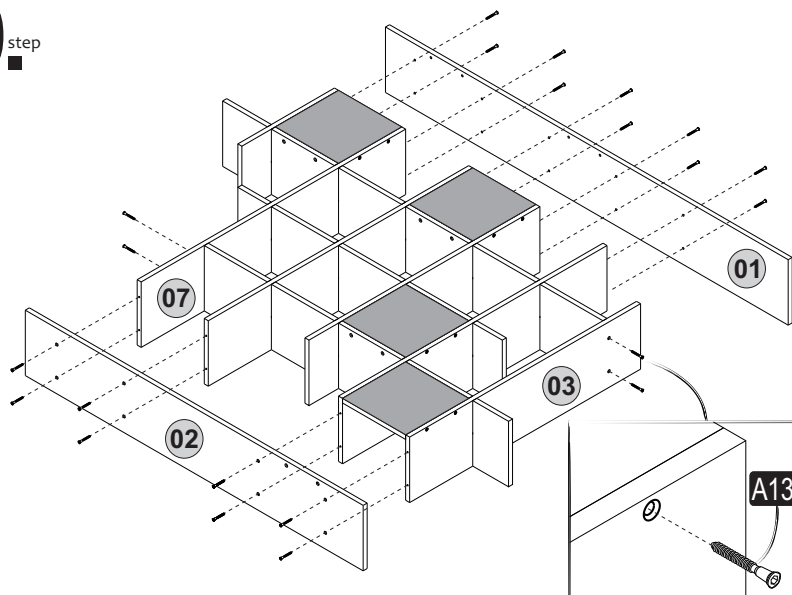



11.^{step}

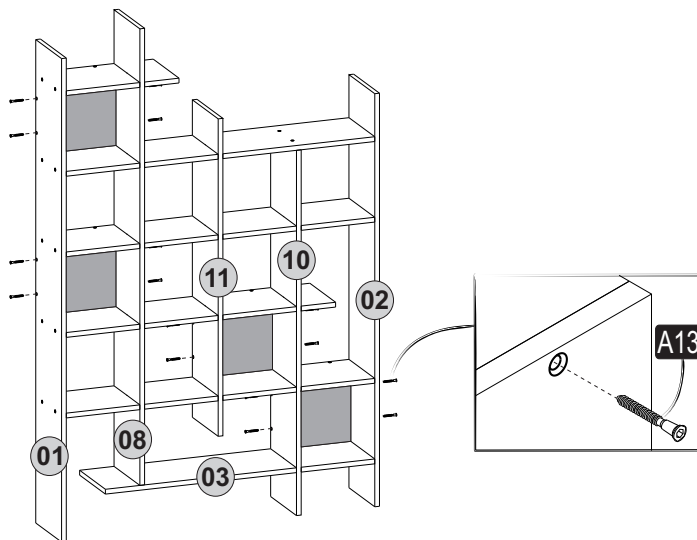

12_{step}

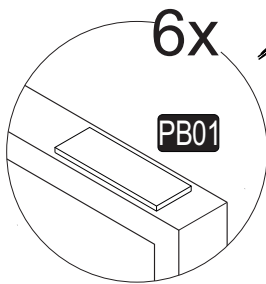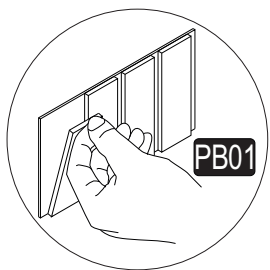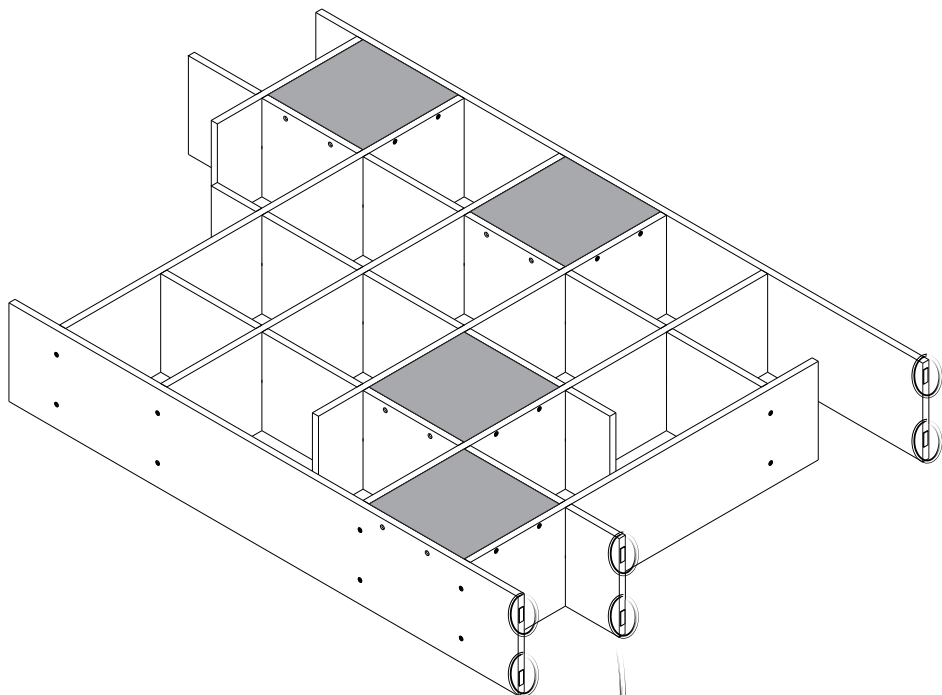

13.^{step}

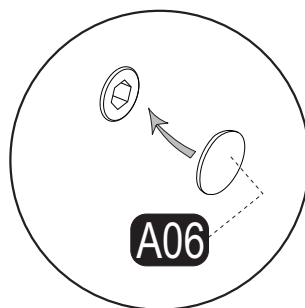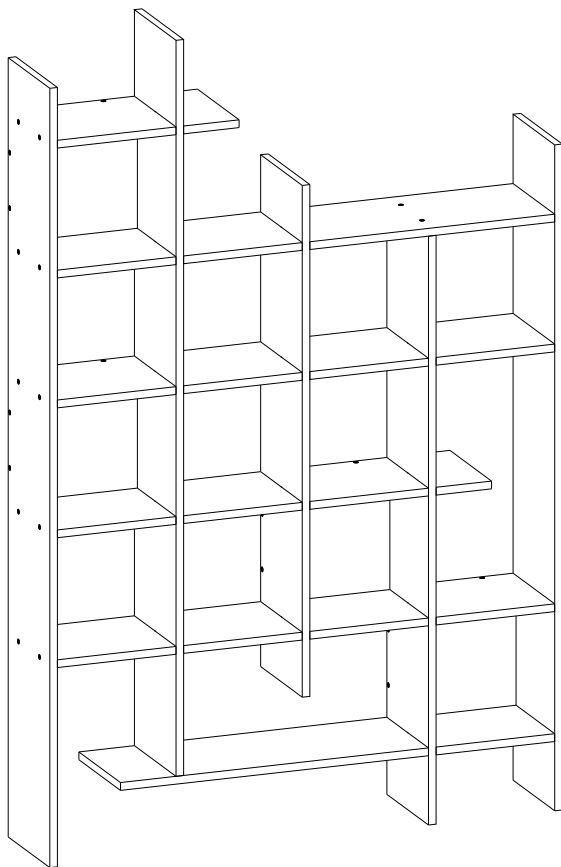

14.^{step}

