



GP037-0135,1

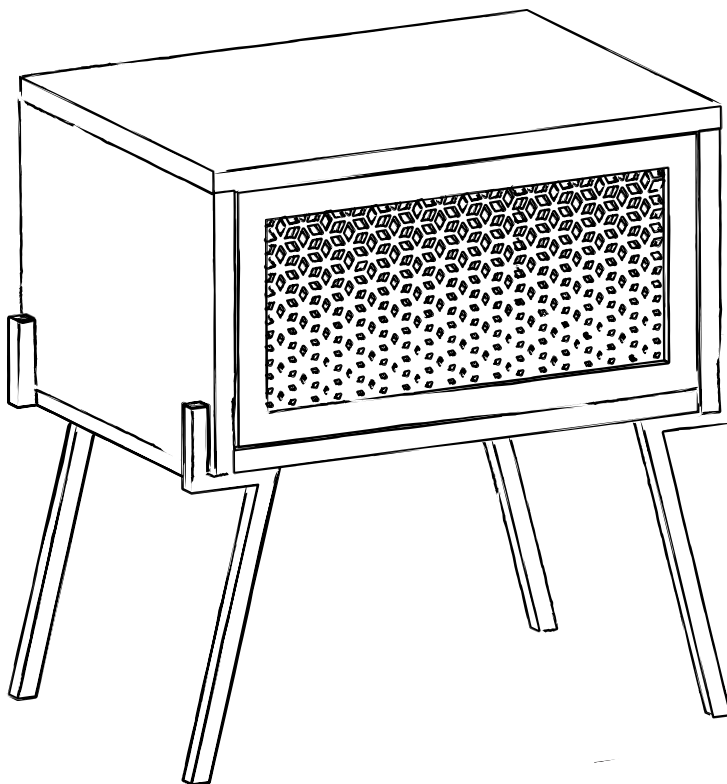


ATTENTION !!

Minifix is the main connection material used in our products.
Before starting assembly, please check the drawings below.

A04




A23

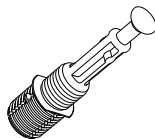


A22




A12

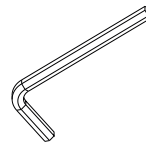


1

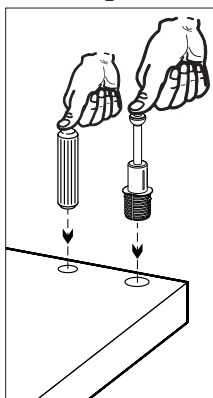


2

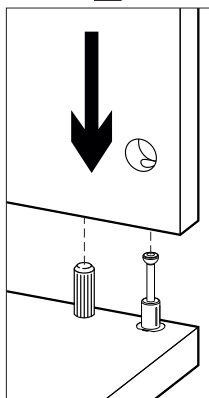

3

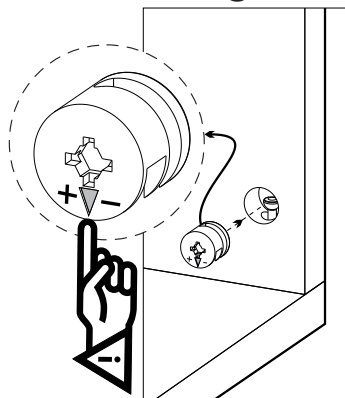



4

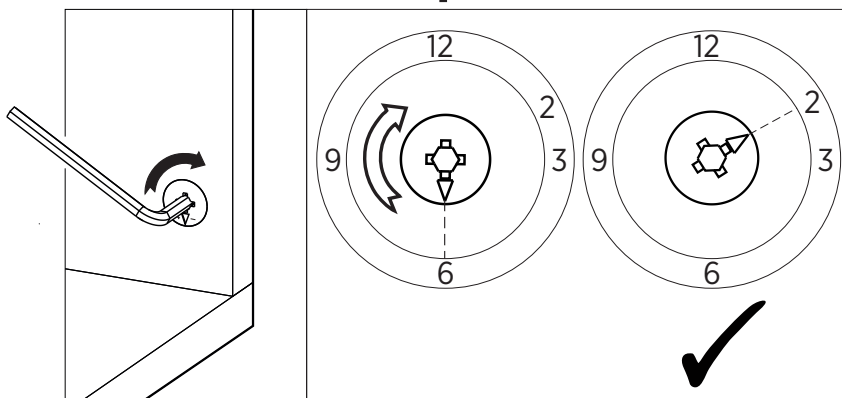

ATTENTION !!

Our products are screw system. Before you proceed with installation try to understand the following

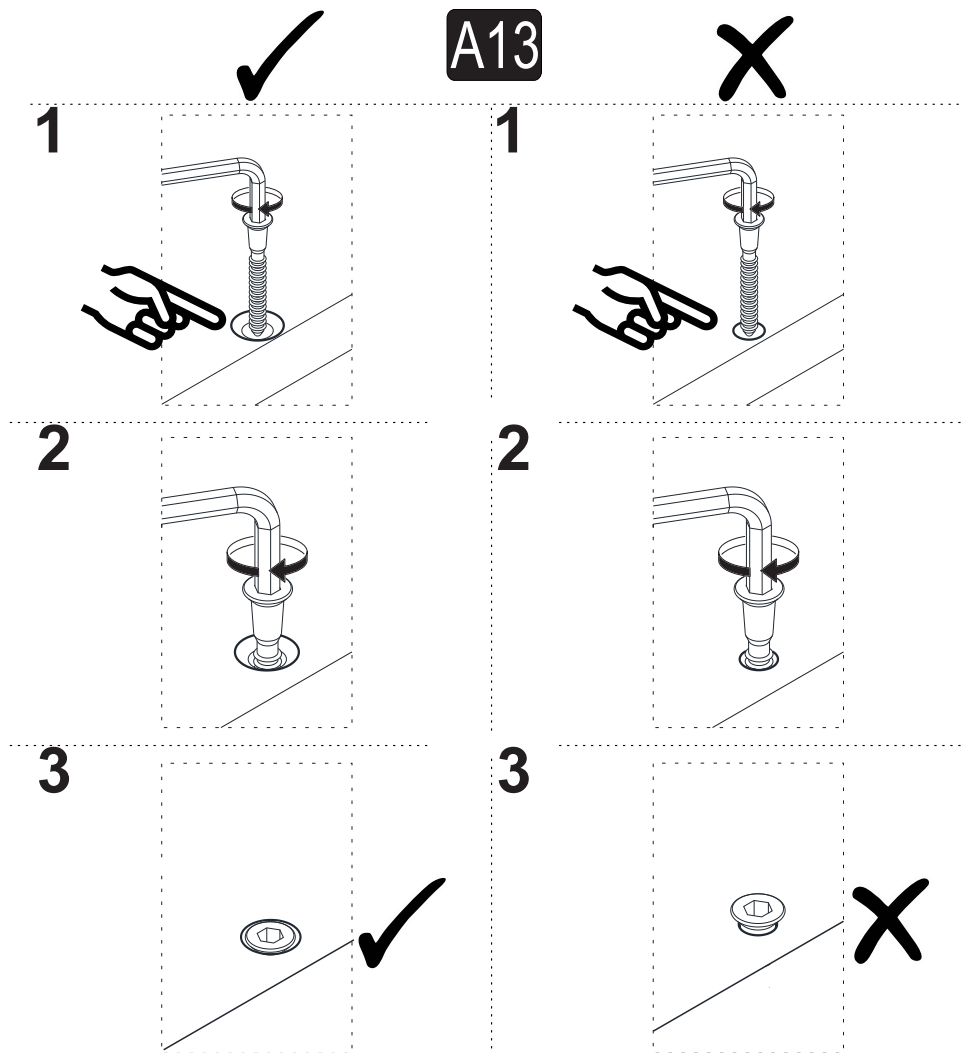
















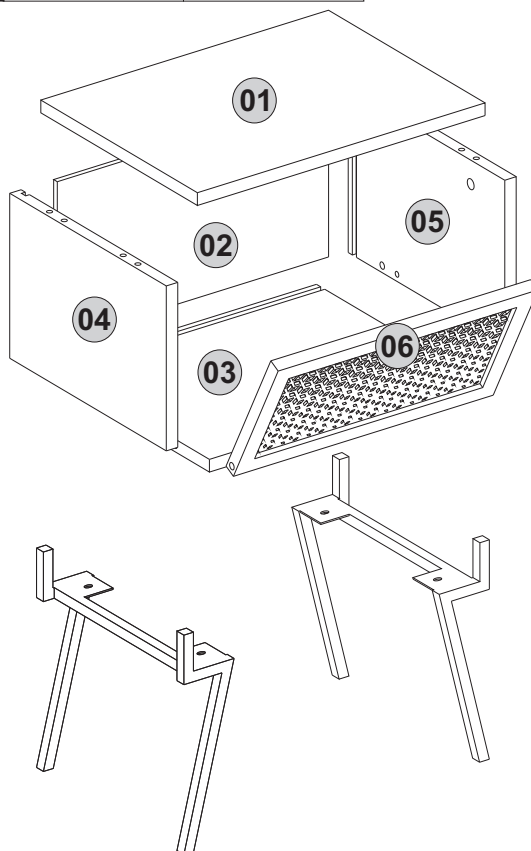
40MN

Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.




HARDWARE LIST


A22 Minifix kt8  8x	A23 Minifix M10  8x	A04 Ø8  8x	A12 Allen  1x	A06 18mm  C1-8x
B15 15 (black)/mm  4x	A80 bas ac k.  1x	A18 3,5x18  3x	A25 ARK.PL  3x	A65 Mil Montep  2x
Z60 NMA  2x	A82 bas ac k.  1x	A69 P.D.  4x		




1.^{step}

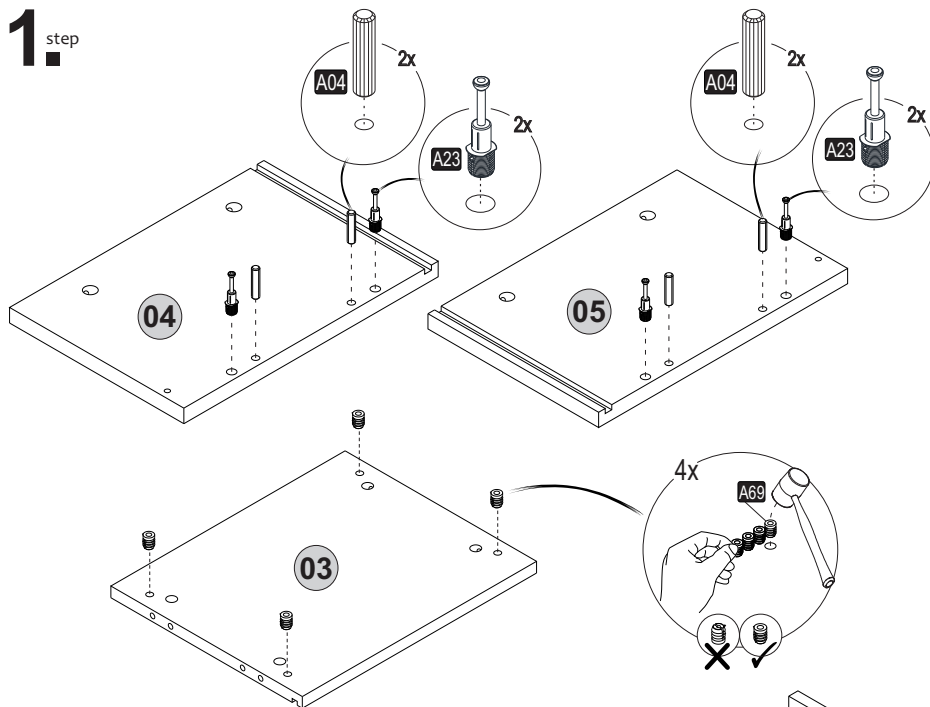


2.^{step}

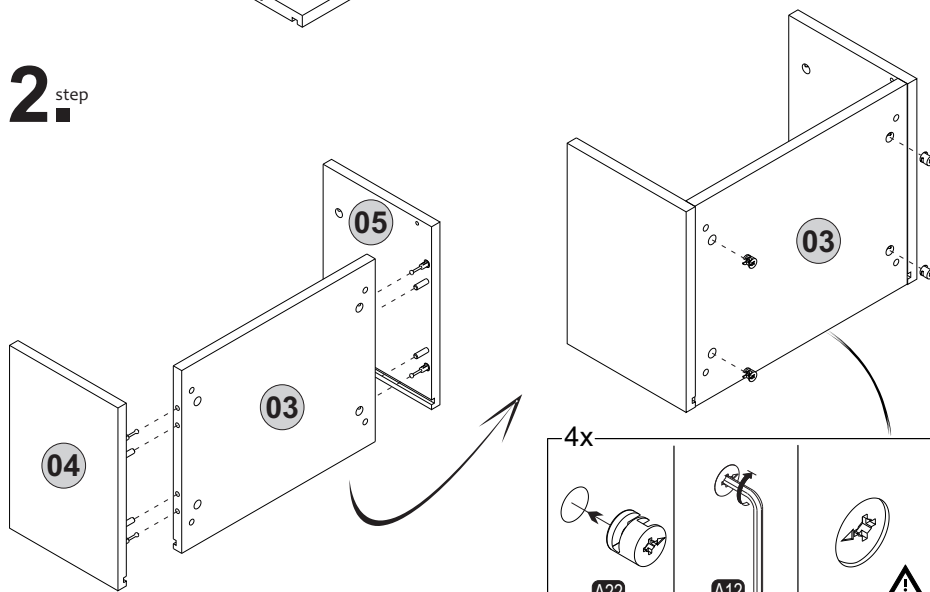


3._{step}

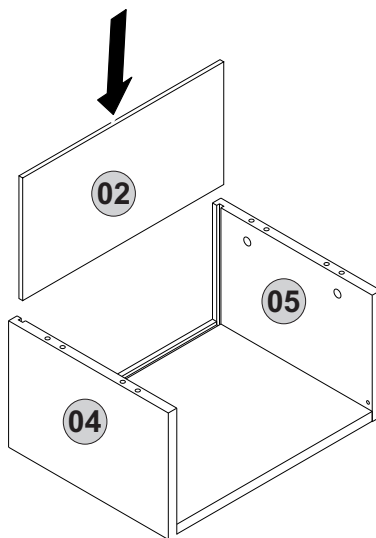

4._{step}

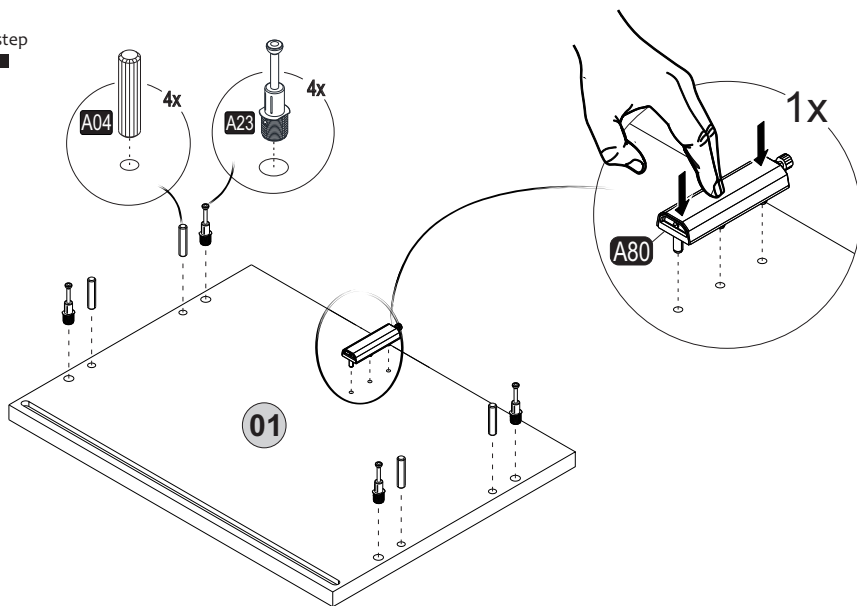

5._{step}

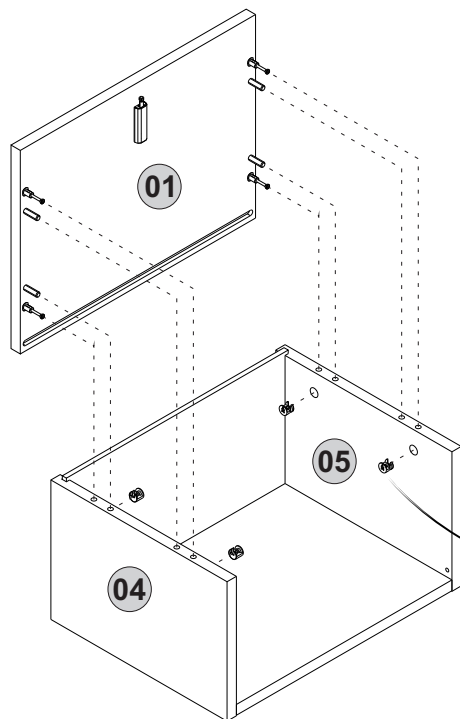


4x

A22

A12



6._{step}

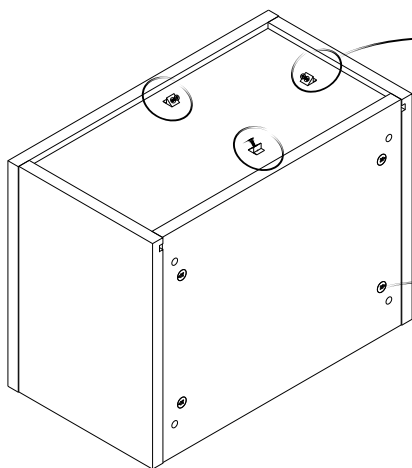


3x

A18


A25

A06


7.^{step}

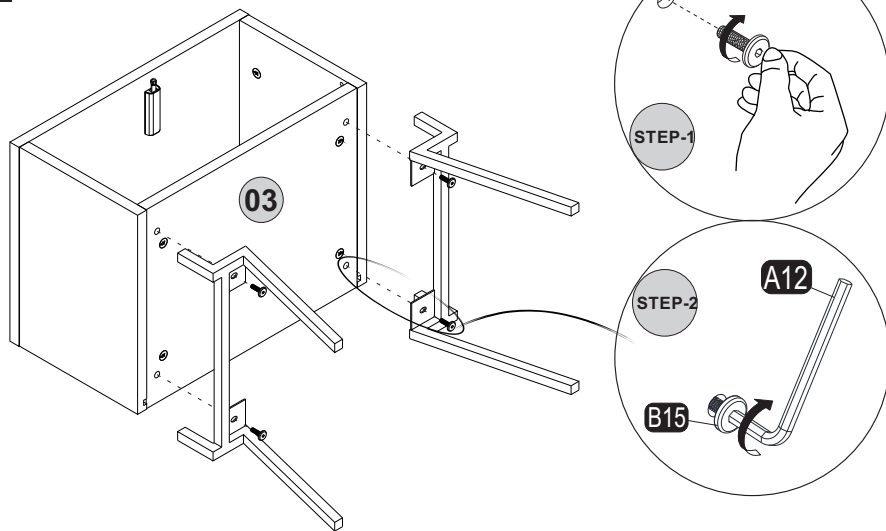

8.^{step}

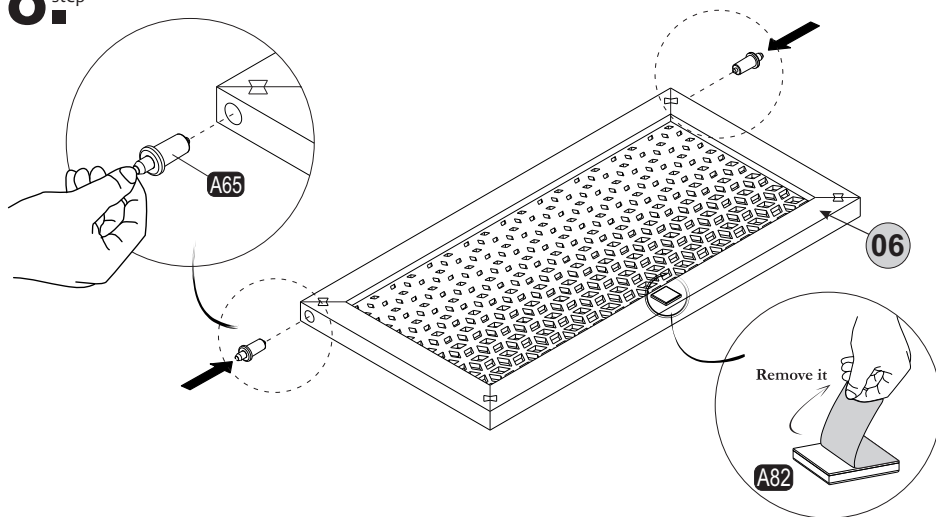

9.^{step}

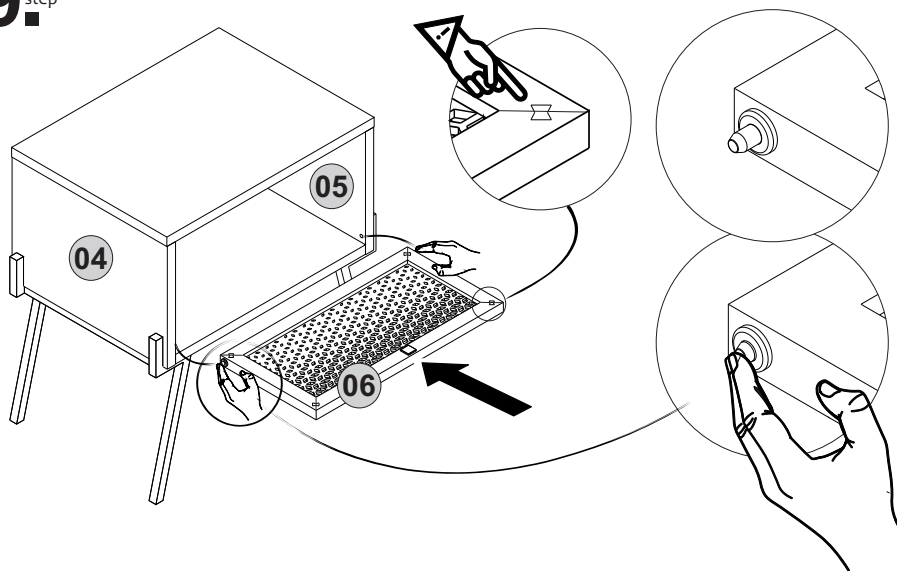

10.^{step}

