



GP037-0151,1

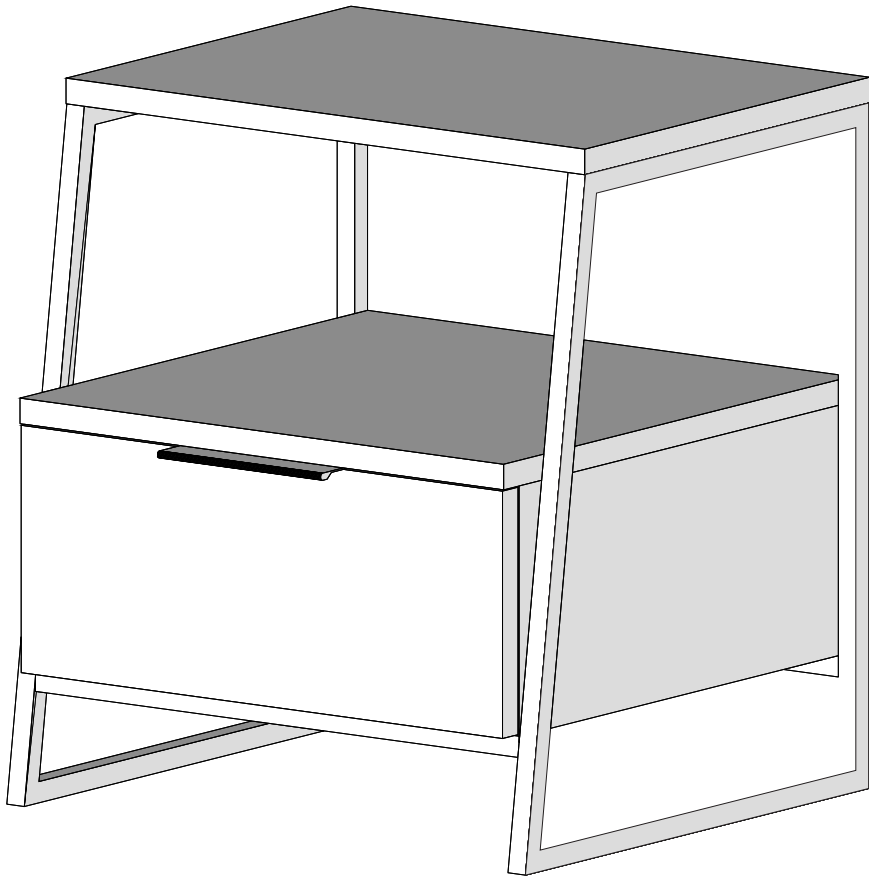


ATTENTION !!

Minifix is the main connection material used in our products.
Before starting assembly, please check the drawings below.

A04




A23

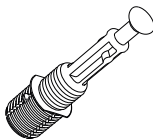


A22




A12

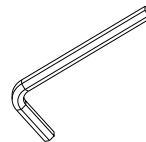


1

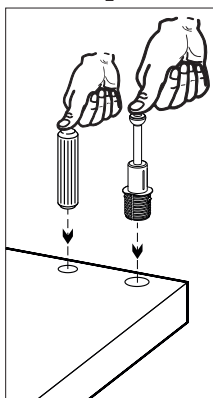


2

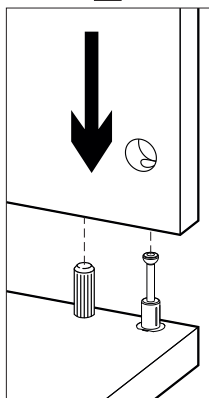

3

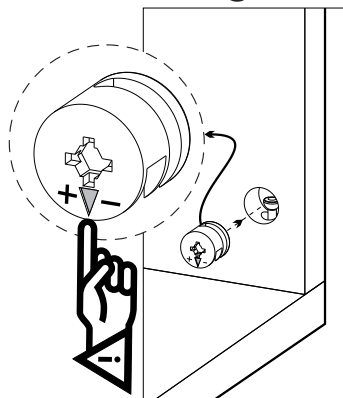


4

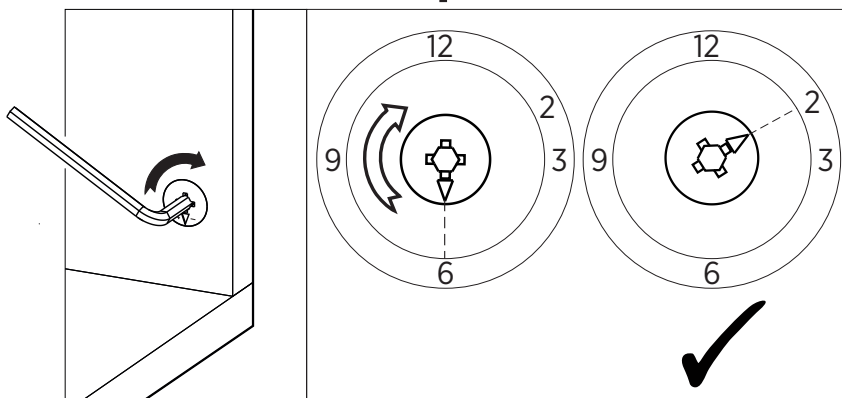

ATTENTION !!

Our products are screw system. Before you proceed with installation try to understand the following



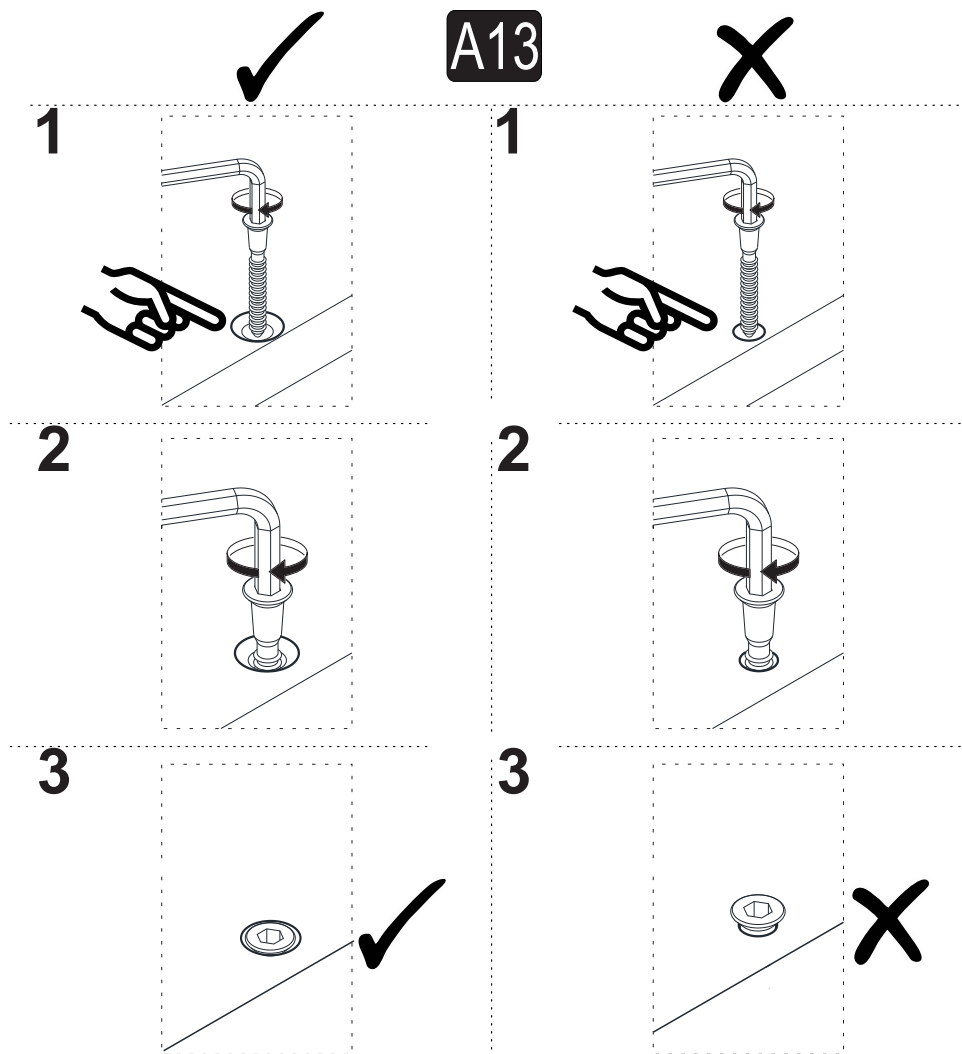


Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.




ACCESSORY LIST


B11  10 (black)/mm 4x	Z54  Pp1501 4x Allen	A22  Minifix k18 12x	A23  Minifix M10 12x	A04  Ø8 12x
B13  25 (black)/mm 8x	A12  1x	C20  Mtk(S) 2x	C17  Dmf(S) 1x	C14  Dm(S) 1x
A18  3,5x18 14x	Z51  K128mm (black) 1x	A06  18mm C1-12x	A69  P.D. 8x	

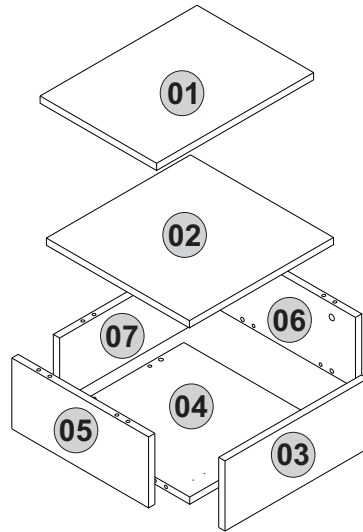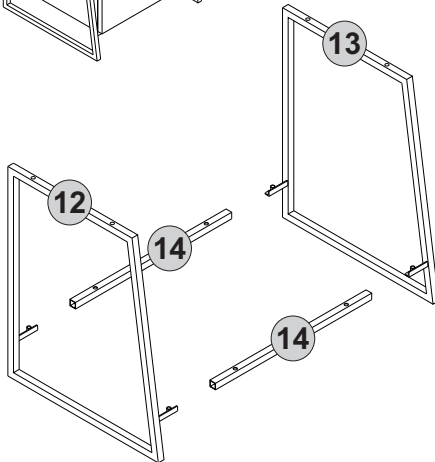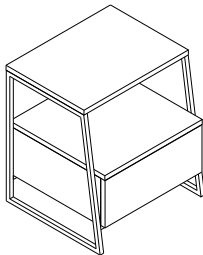




1._{step}

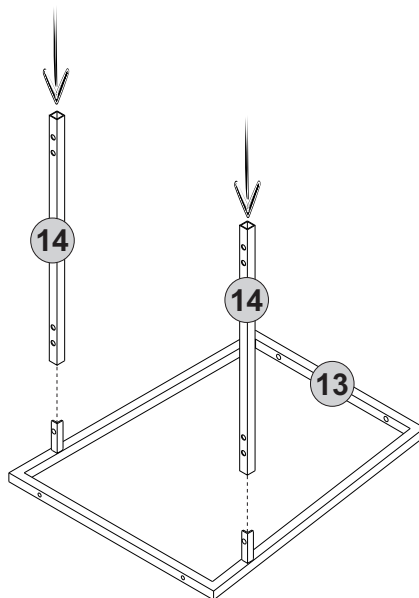



2._{step}

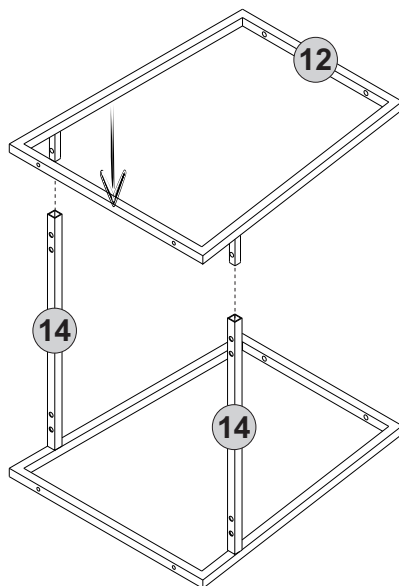


3. _{step}

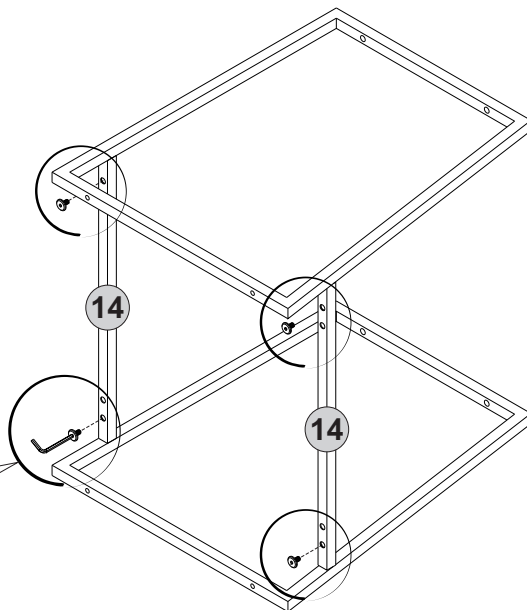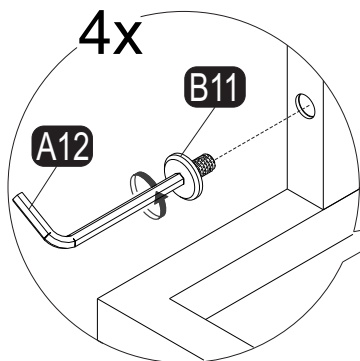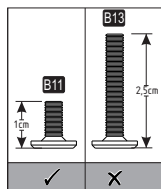


4. _{step}

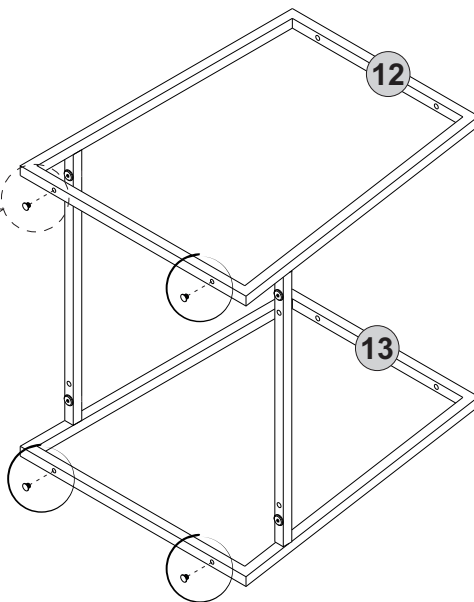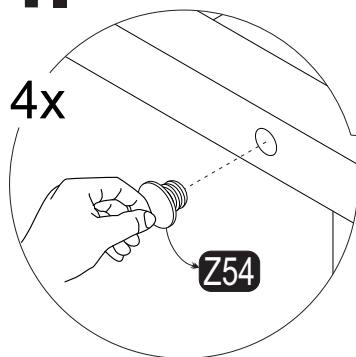


5.^{step}

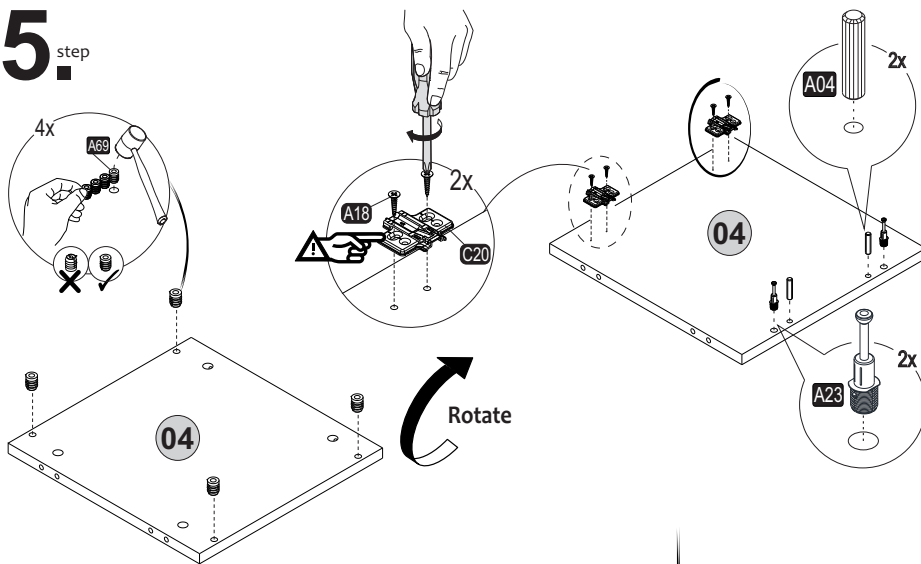


6.^{step}

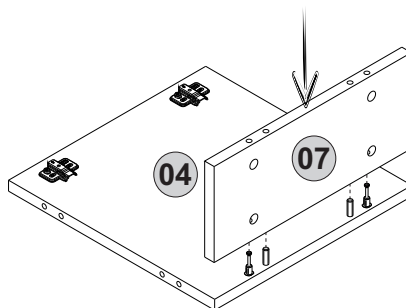


7.^{step}

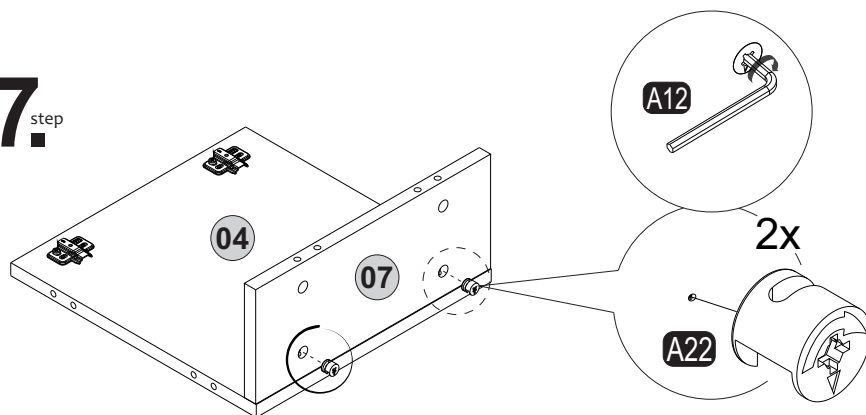


8^{step}

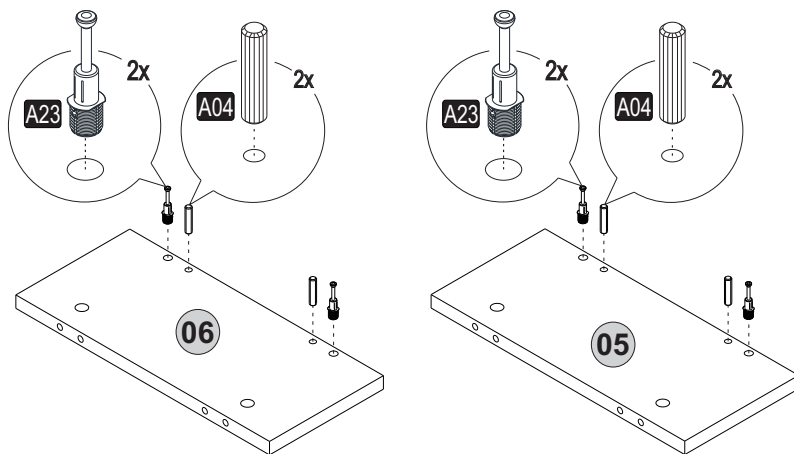


9^{step}

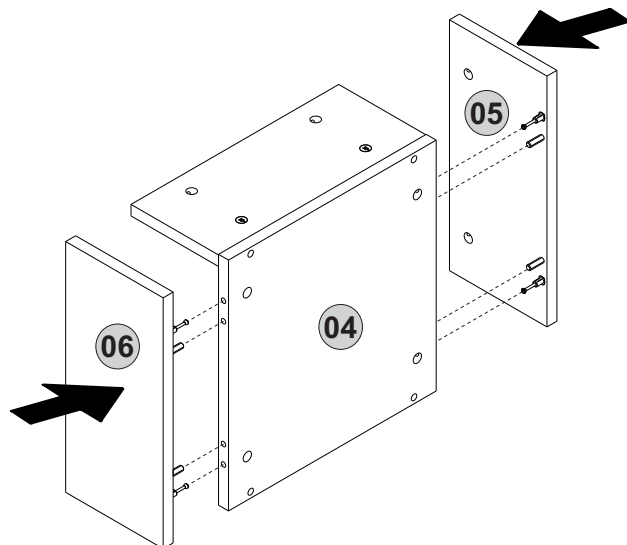


10.step

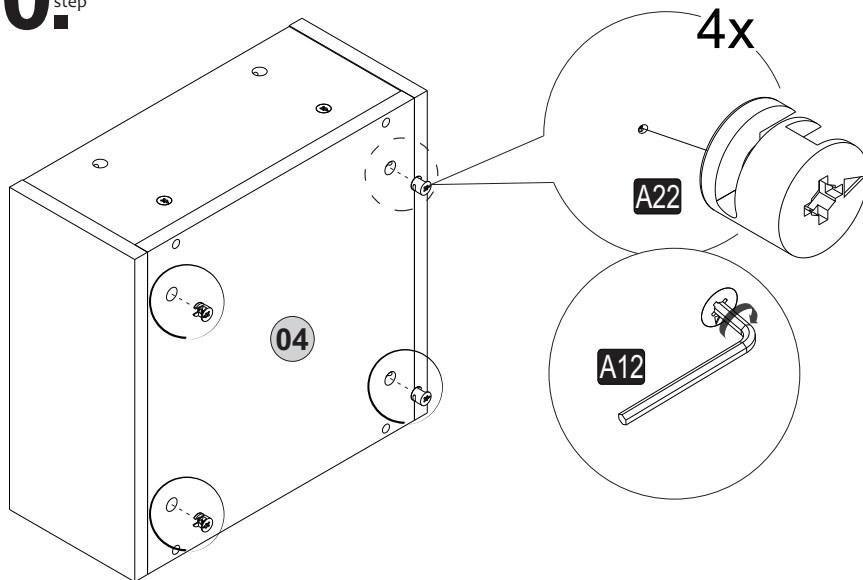


11.step

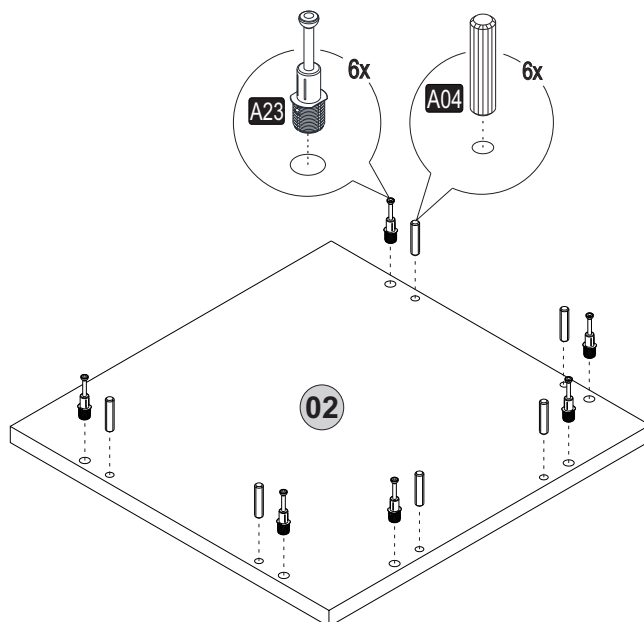





12._{step}

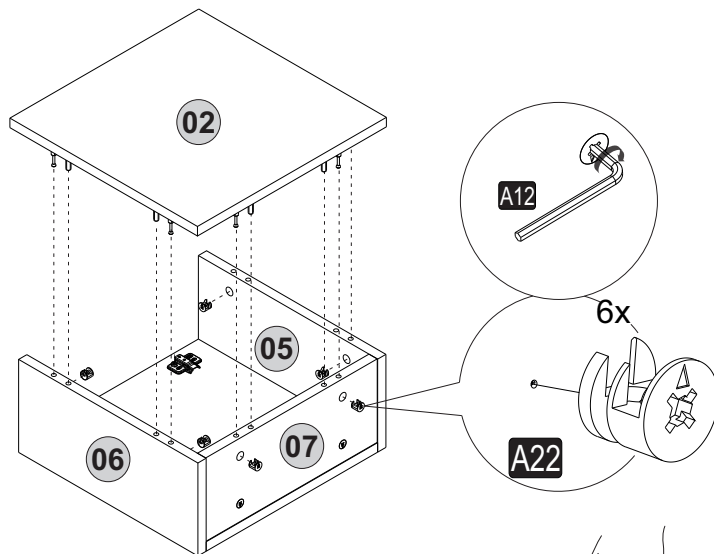


13._{step}

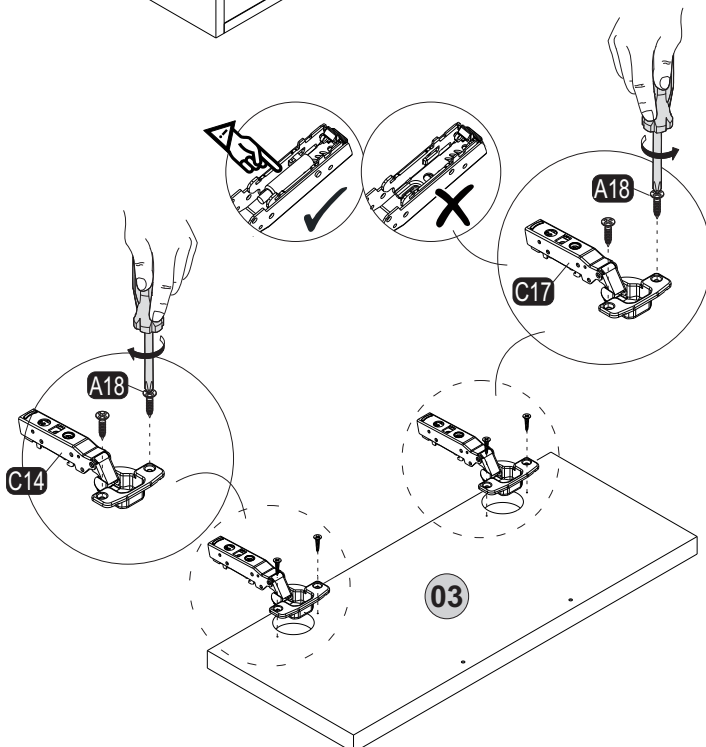


14.^{step}

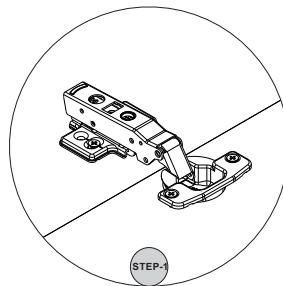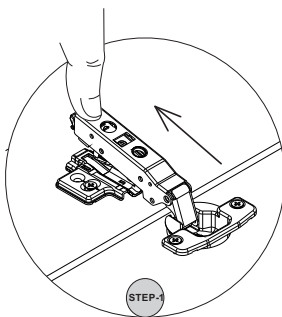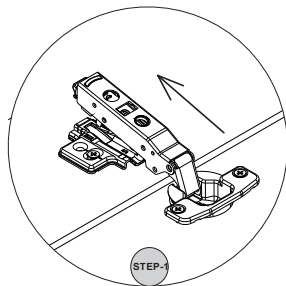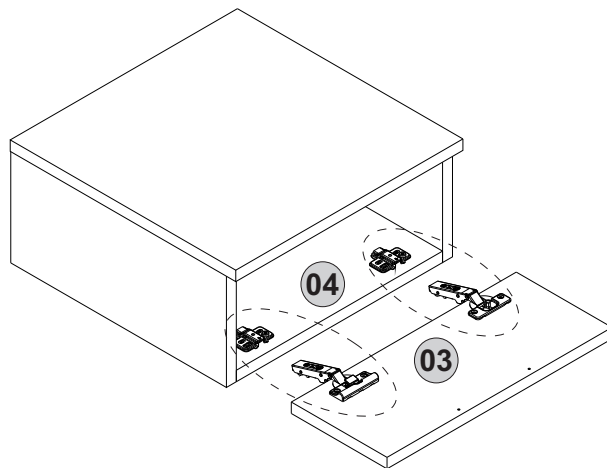



15._{step}

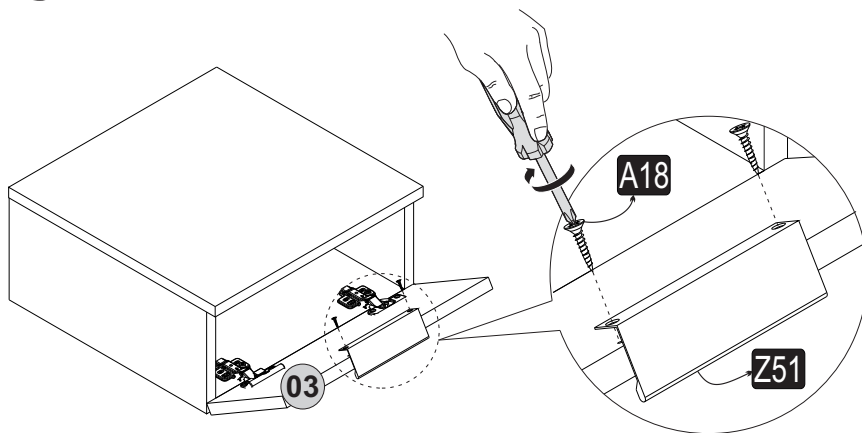



16._{step}

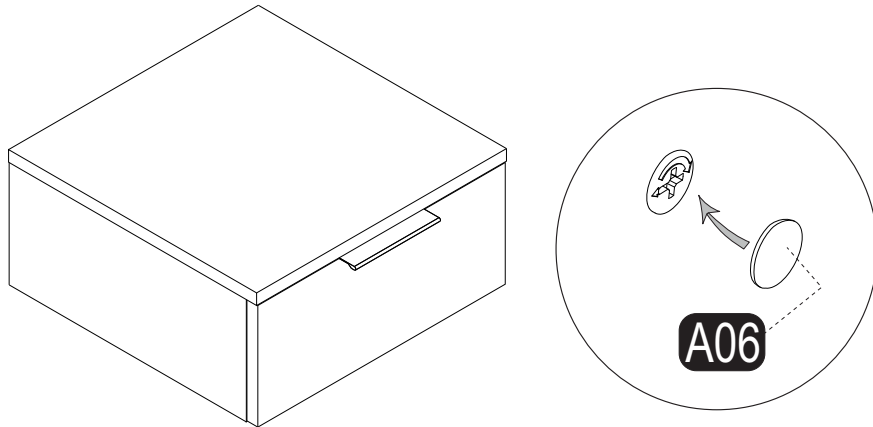

17.^{step}

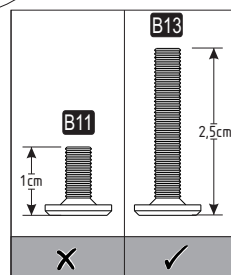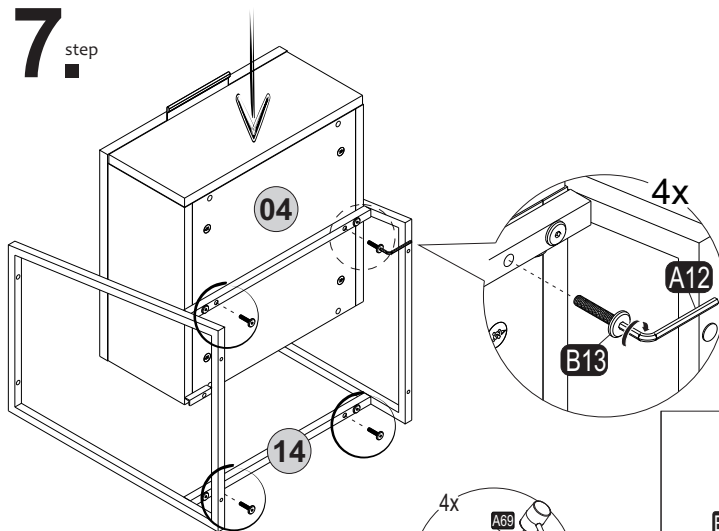

18.^{step}

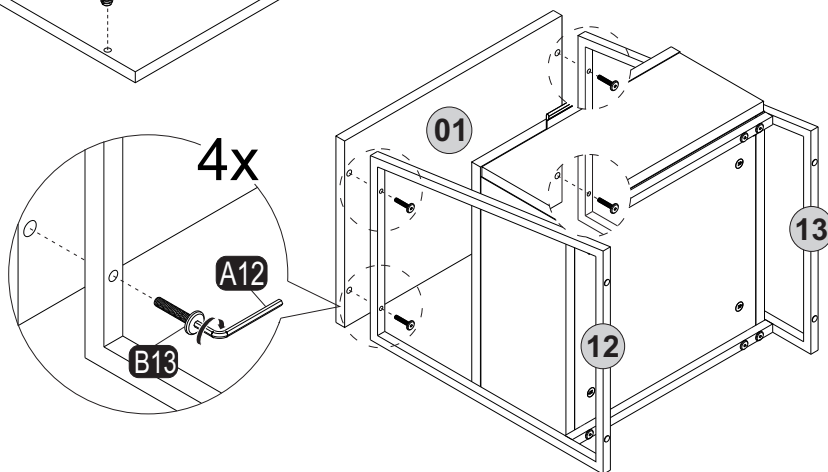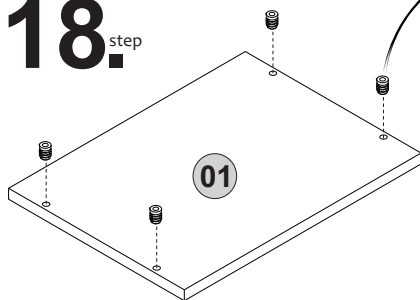

19.^{step}

